



PNWD

# Assembly Instructions


1533-CN

CHEST


SKU# 32615342

Manufactured for  
Rooms To Go

\* Remarks: Tipping Restraint kit provided must be install to solid woodback frame only. Do not install to mdf top panel or MDF back panel.

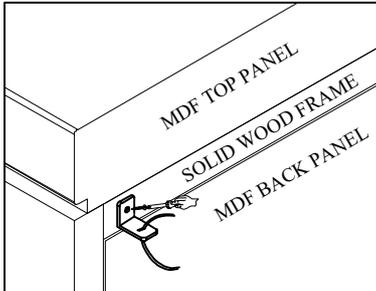

Tool Required: Philip screwdriver  
(not provided)

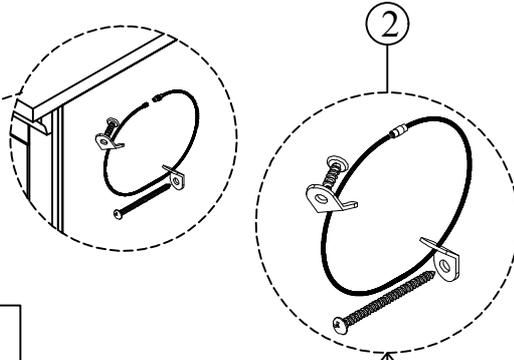


## PARTS LIST



1. Chest - 1 Pc



2. Anti-tip Restraint - 1 Pc

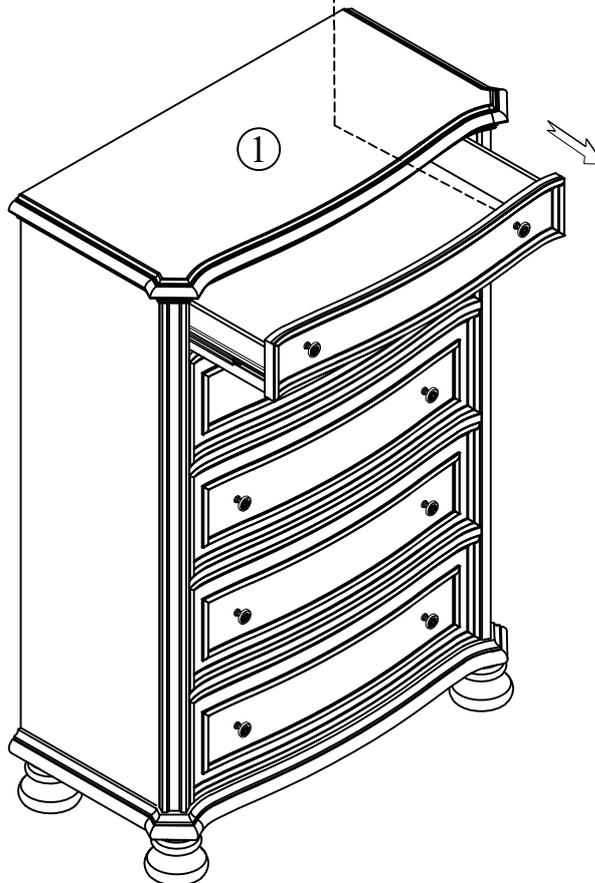

HARDWARE PACK LOCATION(S):

PNWD

1533-CN

CHEST

SKU# 32615342