

Assembly Instructions

JMSN 2412-1 - DRESSER - SKU#32124125

JMSN 2412-5 - NIGHTSTAND - SKU#32524123

JMSN 2412-6 - CHEST - SKU#32624125

Manufactured by Artefama for Rooms to Go

ANTI TIP HARDWARE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Α	Ø5/32 x 1 9/16"	02
В	Ø5/32 x 13/16"	02
С		02
D	OFO	02
E		01

Tools Required


Phillips screwdriver not supplied






PLEASE NOTE:


To avoid the possibility of the furniture tipping and injury, the Anti-tip hardware must be installed.

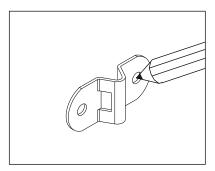


1. Mark the drilling hole location.

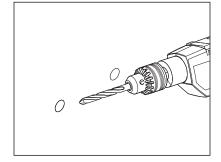


2. Drill the holes with an electric drill.

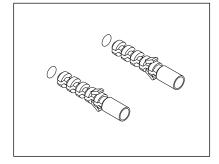


3. Insert the expansion bolts into the wall.

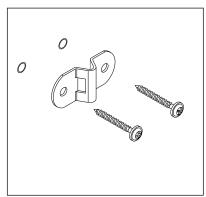

4. Attach the brackets to the wall with long screws.

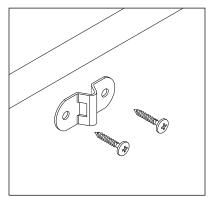

5. Attach the brackets to the furniture with short screws.

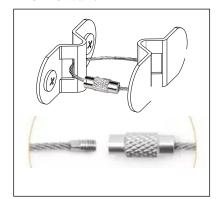

6. Connect the brackets with steel cable.

Hardware Pack Location(s): First Drawer inside

DRESSER - SKU#32124125 NIGHTSTAND - SKU#32524123 CHEST - SKU#32624125

Version 1 - 03/2025

Page 1