


ALAM PS07-05: NIGHTSTAND # SKU 32500705

Part List	No.	Description	Qty
Tart Dist	A	Nightstand	1 Pc

Hardware List	No.	Picture	Description	Dimension	Qty
	1	0	Screw	Ø8 x 50 mm	1 Pc
	2	<b>(1)</b>	Screw	Ø8 x 16 mm	1 Pc
	3		Metal Anchors	1.2 x 15 x 15 mm	2 Pcs
	4	0	Restrain Strap	5 x 7 x 250 mm	1 Pc
	5		Fisher	Ø6 x 40 mm	1 Pc

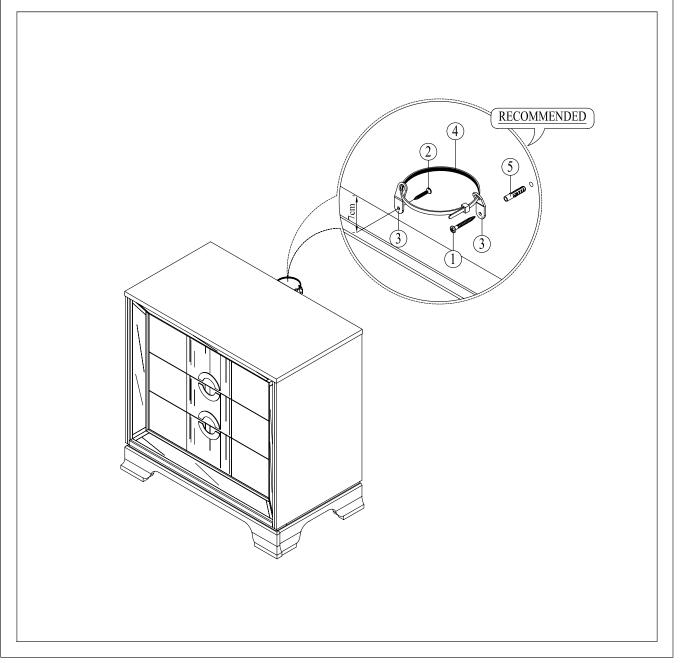




ALAM PS07-04 : CHEST # SKU 32600707

Part List	No.	Description	Qty
1 art List	A	Chest	1 Pc

	No.	Picture	Description	Dimension	Qty
Hardware List	1	0	Screw	Ø8 x 50 mm	1 Pc
	2	<b>(1)</b>	Screw	Ø8 x 16 mm	1 Pc
	3	I)	Metal Anchors	1.2 x 15 x 15 mm	2 Pcs
	4	0	Restrain Strap	5 x 7 x 250 mm	1 Pc
	5	C FALLS	Fisher	Ø6 x 40 mm	1 Pc

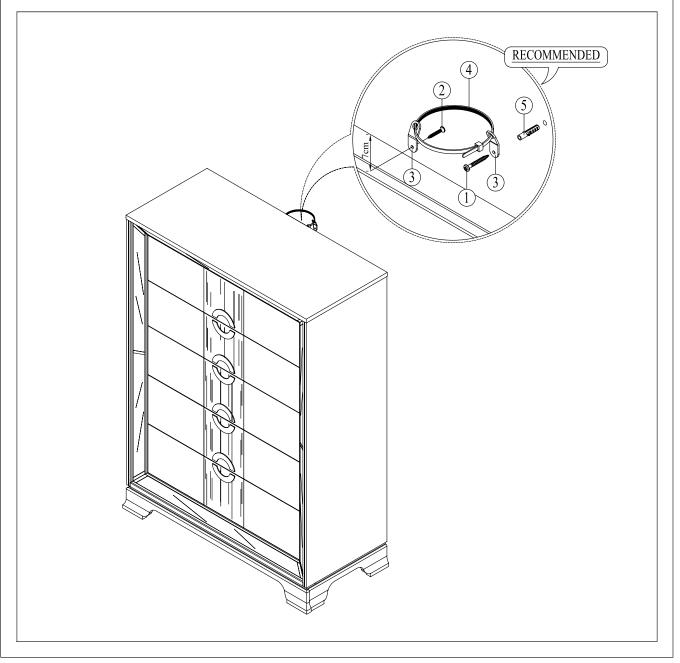




ALAM PS07-06: MEDIA CHEST # SKU 33600708

Part List	No.	Description	Qty
T art List	A	Media Chest	1 Pc

Hardware List	No.	Picture	Description	Dimension	Qty
	1	0	Screw	Ø8 x 50 mm	1 Pc
	2	0)	Screw	Ø8 x 16 mm	1 Pc
	3		Metal Anchors	1.2 x 15 x 15 mm	2 Pcs
	4	0	Restrain Strap	5 x 7 x 250 mm	1 Pc
	5		Fisher	Ø6 x 40 mm	1 Pc

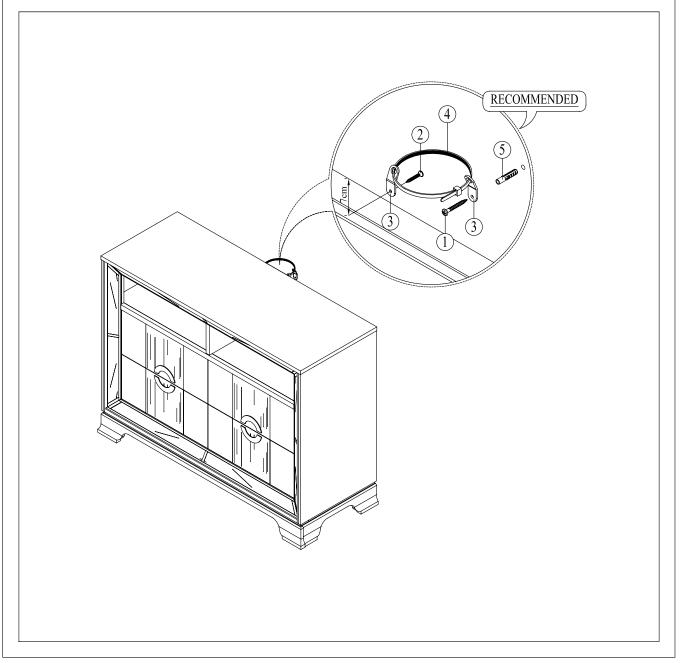




ALAM PS07-03 : DRESSER # SKU 32100707

Part List	No.	Description	Qty
T art List	A	Dresser	1 Pc

	No.	Picture	Description	Dimension	Qty
Hardware List	1	0	Screws	Ø8 x 50 mm	2 Pcs
	2	0	Screws	Ø8 x 16 mm	2 Pcs
	3	Ø.	Metal Anchors	1.2 x 15 x 15 mm	4 Pcs
	4	0	Restrain Straps	5 x 7 x 250 mm	2 Pcs
	5	( <u></u>	Fishers	Ø6 x 40 mm	2 Pcs

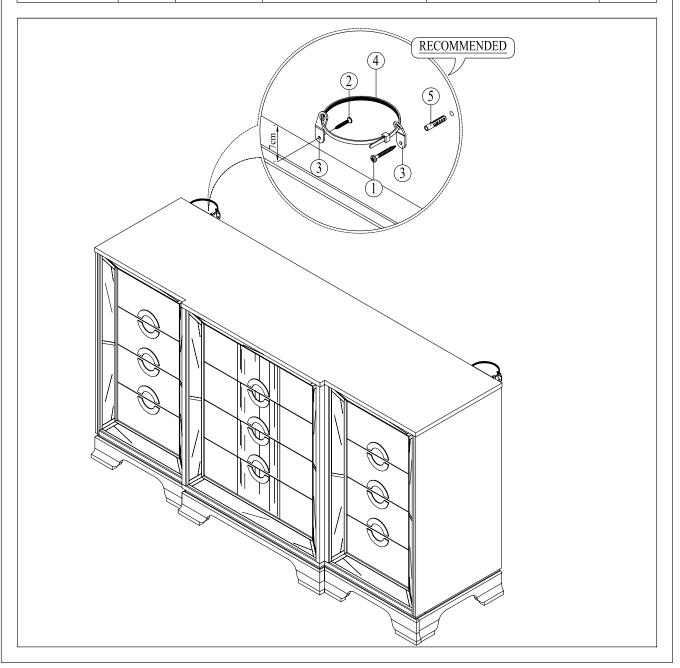






ALAM PS07-03 : DRESSER # SKU 32100707 ALAM PS07-02 : MIRROR # SKU 32200709

	No.	Description	Qty
Part List	A	Dresser	1 Pc
	В	Mirror	1 Pc
	С	Mirror Supports	2 Pcs

	No.	Picture	Description	Dimension	Qty
Hardware List	1	<b></b>	Bolts	M6 x 35 mm	8 Pcs
	2	0	Lock Washers	Ø14 / Ø7 x 1.6 mm	8 Pcs
	3	0	Flat Washers	Ø18 / Ø6 x 1 mm	8 Pcs
	4		Allen Key	4 x 60 mm	1 Pc

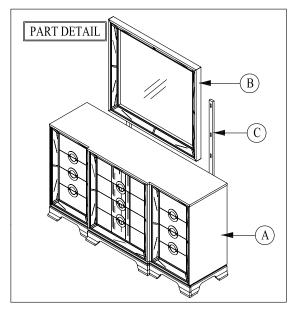

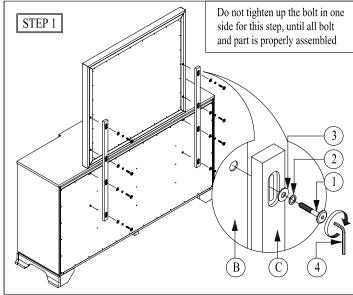

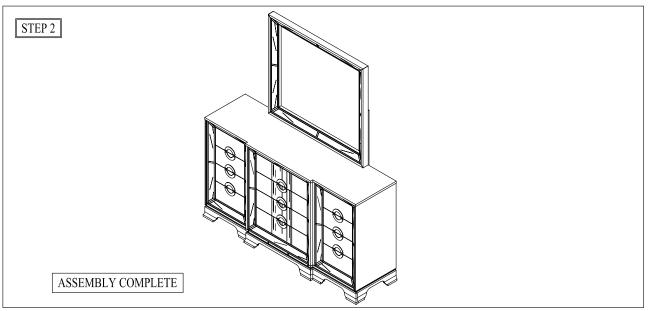




ALAM PS07-07 : QN HDBD # SKU 32300701 ALAM PS07-09 : QN FB WSLT # SKU 32700709 ALAM PS07-10 : QK WD RLS # SKU 32900703


Headboard	No.	Description	Qty
	A	Headboard	1 Pc
Heauboaru	В	Legs (L - R)	2 Pcs
	С	Stretcher	1 Pc
	D	Footboard	1 Pc
Footboard	Е	Slats	4 Pcs
rootboard	F	Regular Leg Supports	4 Pcs
	G	Storage Leg Supports	4 Pcs


Siderail	H	Siderails	2 Pcs
----------	---	-----------	-------


Hardware List	No.	Picture	Description	Dimension	Qty
	1	7	Screws	Ø8 x 32 mm	8 Pcs
	2	<b>—</b> @	Bolts	M6 x 1 x 45 mm	8 Pcs
	3	<b>ම</b>	Lock Washers	Ø6 x Ø14 mm	8 Pcs
	4	0	Flat Washers	Ø6 x Ø18 mm	8 Pcs
	5		Allen Key	4 x 60 mm	1 Pc
	6		Dowels	Ø10 x 40 mm	4 Pcs
	7	<		Phillip Headscrew Driver ( not included )	

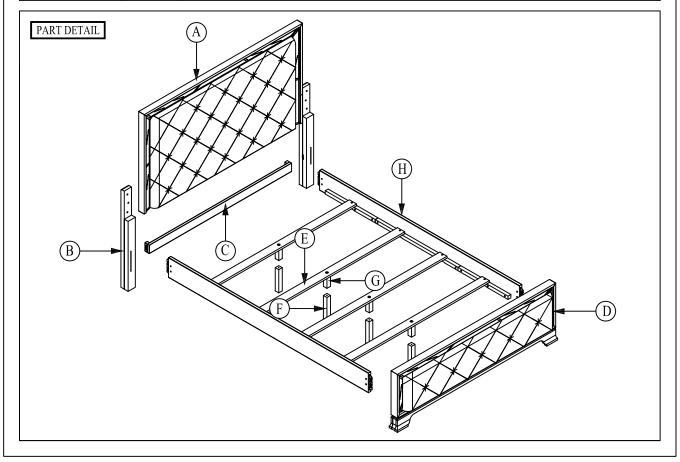





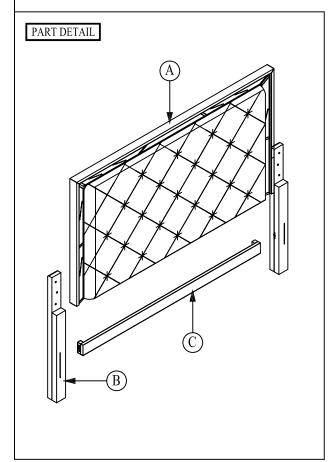


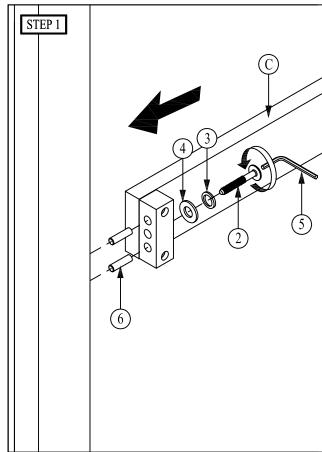


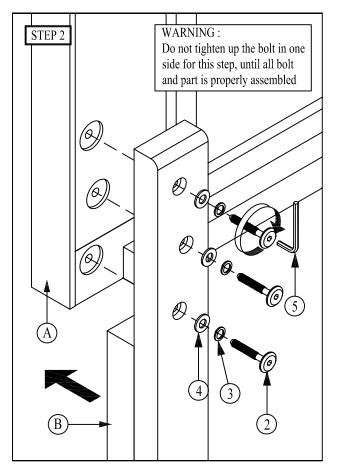

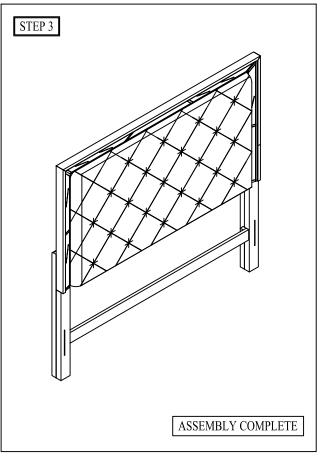




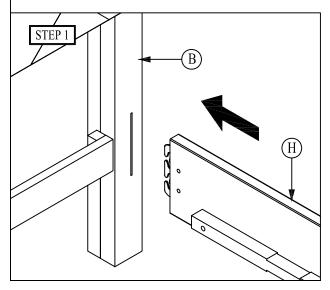

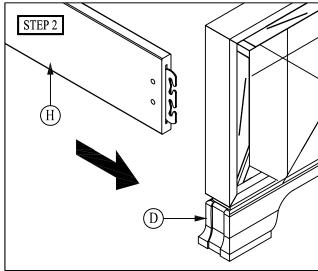


Attach Regular Siderail ( H ) to Leg ( B )

Attach Regular Siderail (  ${\rm H}$  ) to Footboard (  ${\rm D}$  )

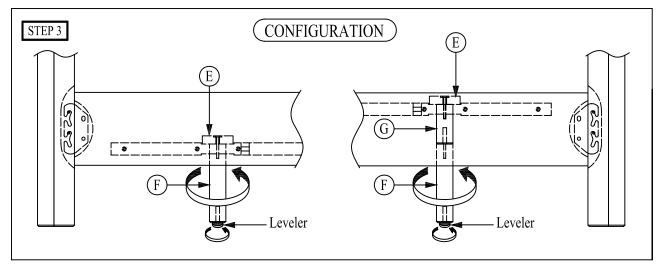


Attach the Hook on Regular Siderail with cleat on low position Under the cleat in the up configuration diagram

Tighten Leg Support (F) to Slat (E)

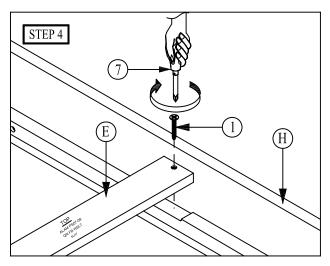

Attach Slats (E) to Siderail (H) using screw (1) with screw driver (7) follow pre-drill on the slats.

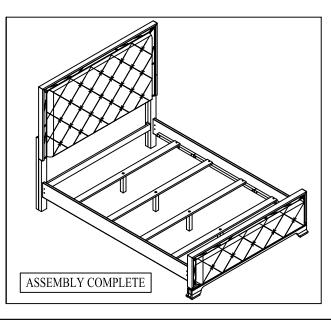




ALAM PS07-11 : KG HDBD # SKU 32400703 ALAM PS07-13 : KG FB WSLT # SKU 32800701 ALAM PS07-10 : QK WD RLS # SKU 32900703


Headboard	No.	Description	Qty
	A	Headboard	1 Pc
	В	Legs (L - R)	2 Pcs
	С	Stretcher	1 Pc
			-
Footboard	D	Footboard	1 Pc
	Е	Slats	4 Pcs
	F	Regular Leg Supports	4 Pcs
	G	Storage Leg Supports	4 Pcs


Siderail	Н	Siderails	2 Pcs
----------	---	-----------	-------


Hardware List	No.	Picture	Description	Dimension	Qty
	1	7	Screws	Ø8 x 32 mm	8 Pcs
	2		Bolts	M6 x 1 x 45 mm	8 Pcs
	3	<b>ම</b>	Lock Washers	Ø6 x Ø14 mm	8 Pcs
	4	0	Flat Washers	Ø6 x Ø18 mm	8 Pcs
	5		Allen Key	4 x 60 mm	1 Pc
	6		Dowels	Ø10 x 40 mm	4 Pcs
	7	<		Phillip Headscrew Driver ( not included )	

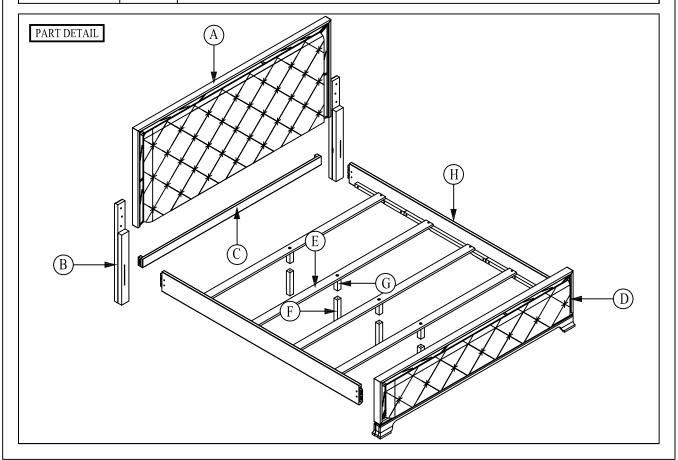



### ALAM PS07-11: KG HDBD # SKU 32400703

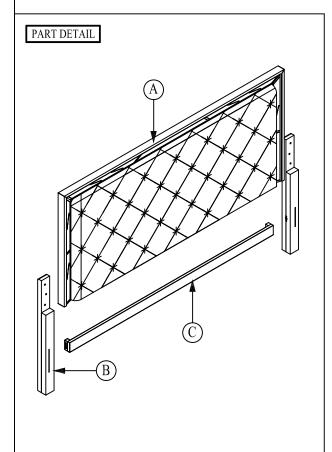


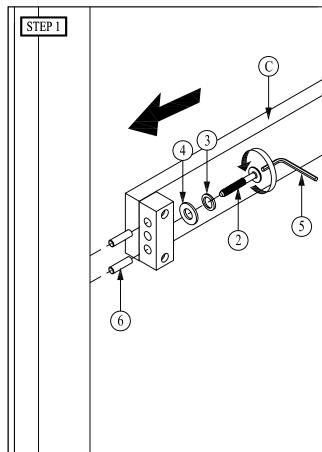


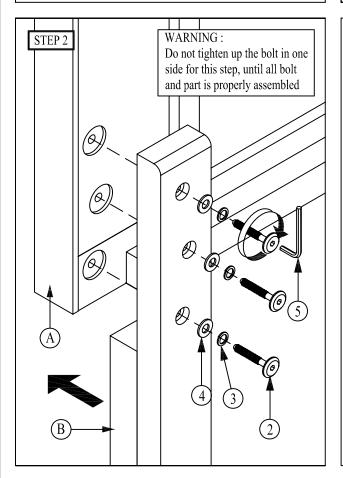

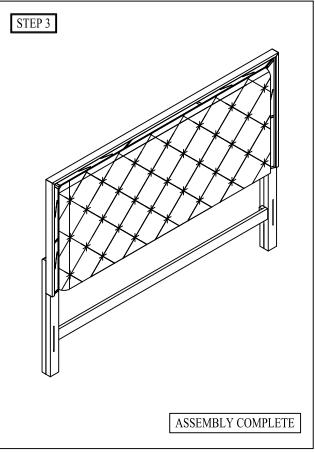




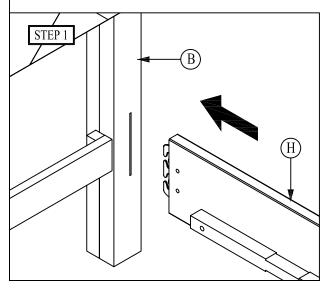

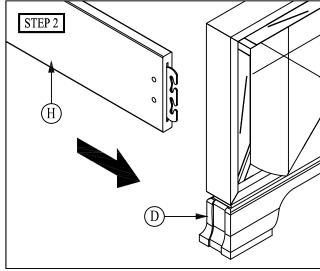


Attach Regular Siderail ( H ) to Leg ( B )

Attach Regular Siderail (  ${\rm H}$  ) to Footboard (  ${\rm D}$  )

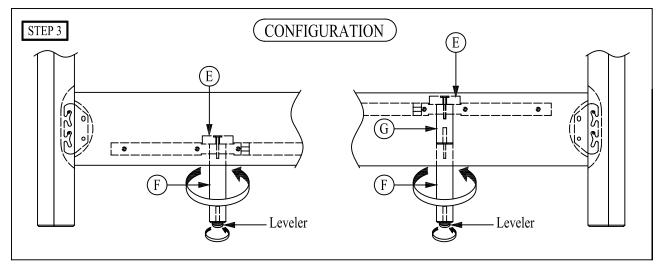

Attach the Hook on Regular Siderail with cleat on low position Under the cleat in the up configuration diagram

Tighten Leg Support (F) to Slat (E)

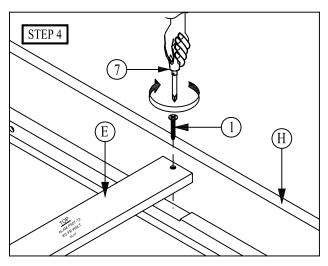

Attach Slats (E) to Siderail (H) using screw (1) with screw driver (7) follow pre-drill on the slats.

