


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

\*\*\*Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.

No.	PART LIST		Q'TY
A	DRESSER		1 PC


No.	HARDWARE LIST		Q'TY
1		Furniture tipping restraint	1 SET

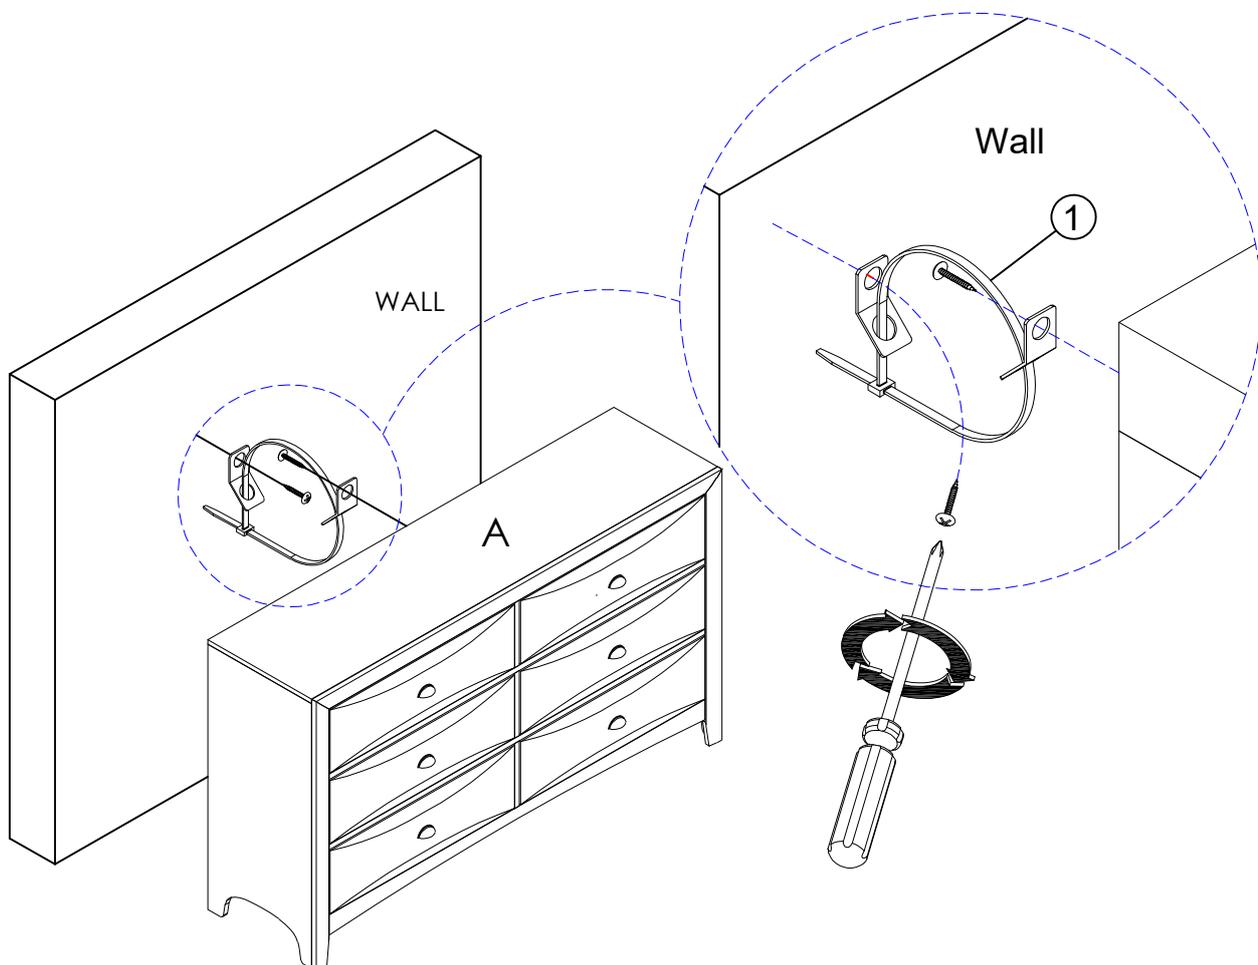

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

\*\*\*Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.


No.	PARST LIST		Q'TY
A	DRESSER		1 PC

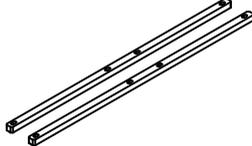No.	PARST LIST		Q'TY
B	MIRROR		1 PC
C	SUPPORT BAR		2 PCS

Step1 . Attach support Bars (C) to back of Dresser . Loosely fasten with flat washers, lock washers and bolt (1).

Step 2 . Place the Mirror onto the Dresser gently . Assembly the Mirror to Support Bars (C) with flat washers , lock washers and bolts (1) . Fully tighten all bolts using allen wrench (2) .

No.	HARDWARE LIST		Q'TY
1		BOLT 1/4 x 20 x 1-3/8"	8 PCS
		LOCK WASHER 1/4" x 11 x 2mm	8 PCS
		FLAT WASHER 1/4" x 19 x 2mm	8 PCS
2		ALLEN WRENCH (4mm)	1 PC

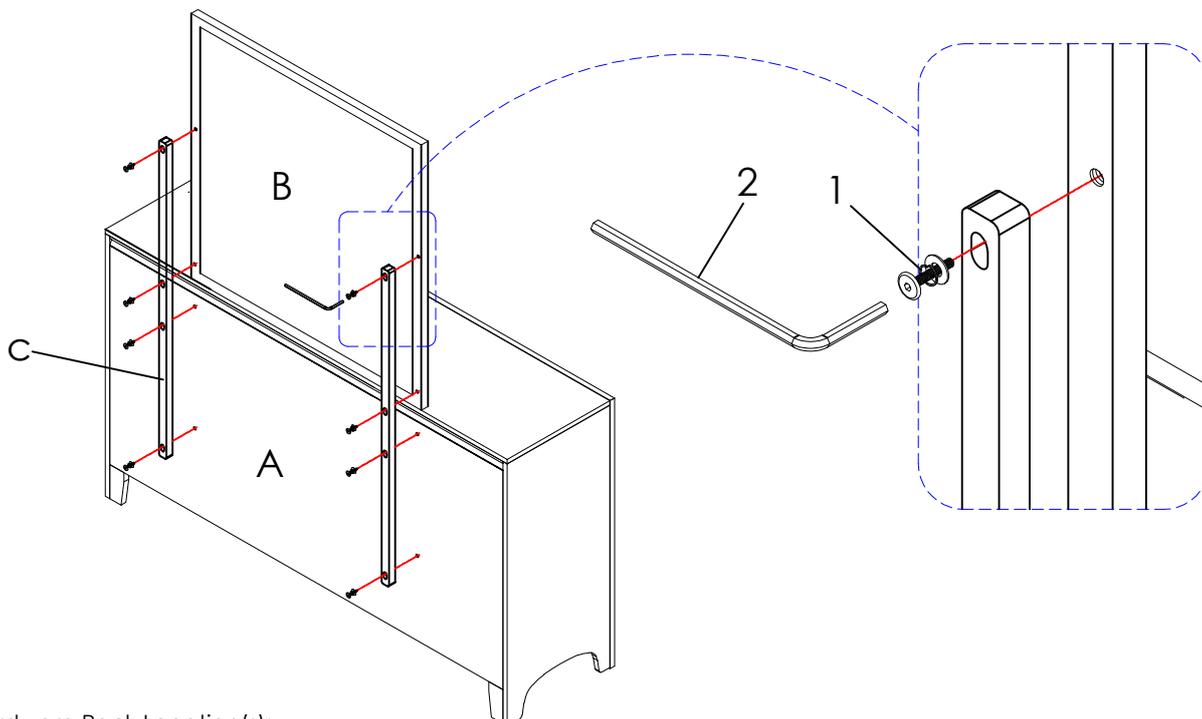


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

\*\*\*Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.

No.	PART LIST		Q'TY
A	NIGHTSTAND		1 PC

No.	HARDWARE LIST		Q'TY
1		Furniture tipping restraint	1 SET

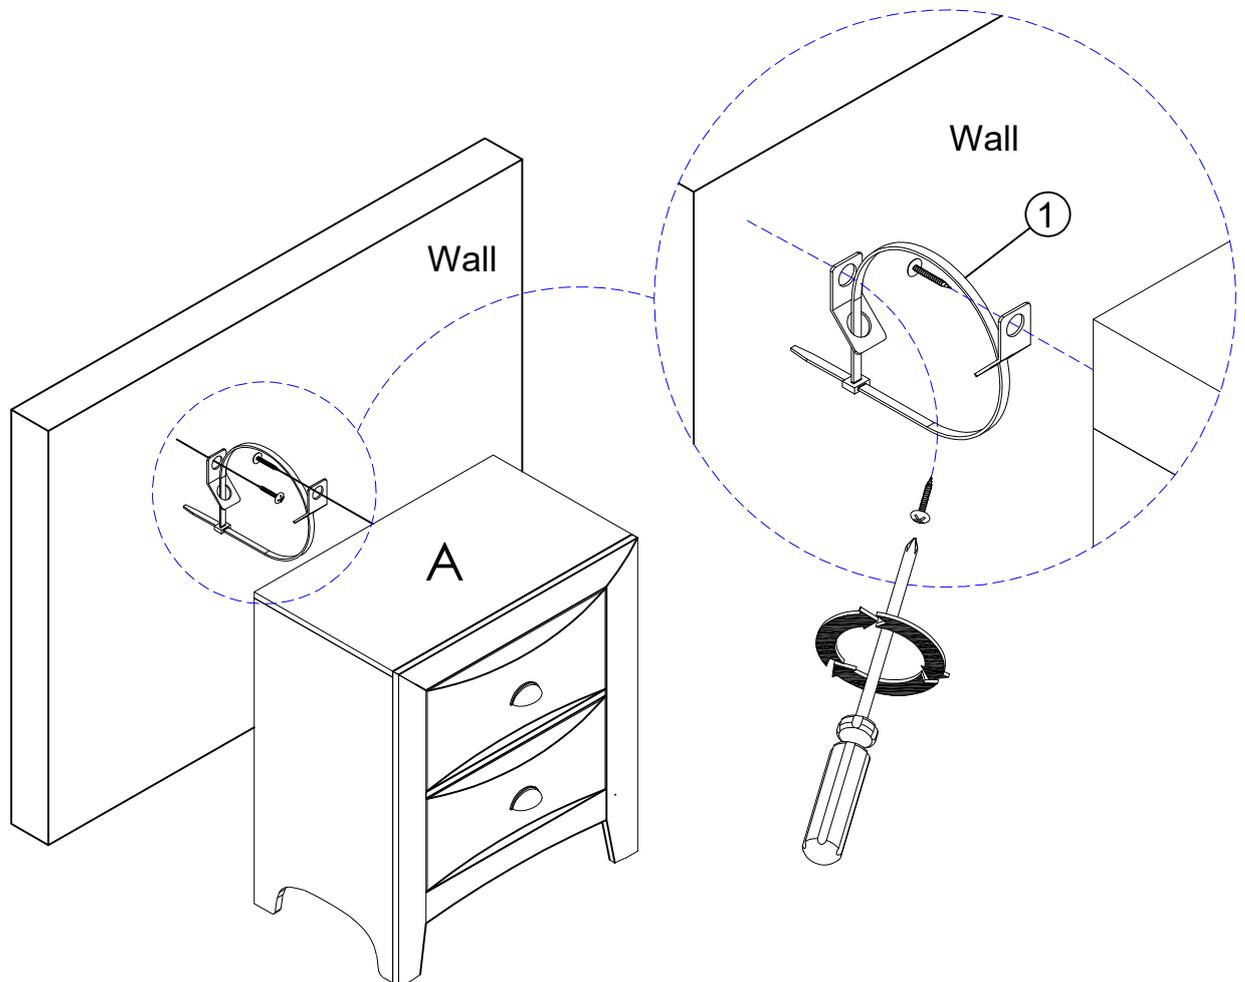



Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

\*\*\*Assemble the product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.

No.	PART LIST		Q'TY
A	CHEST		1 PC

No.	HARDWARE LIST		Q'TY
1		Furniture tipping restraint	1 SET

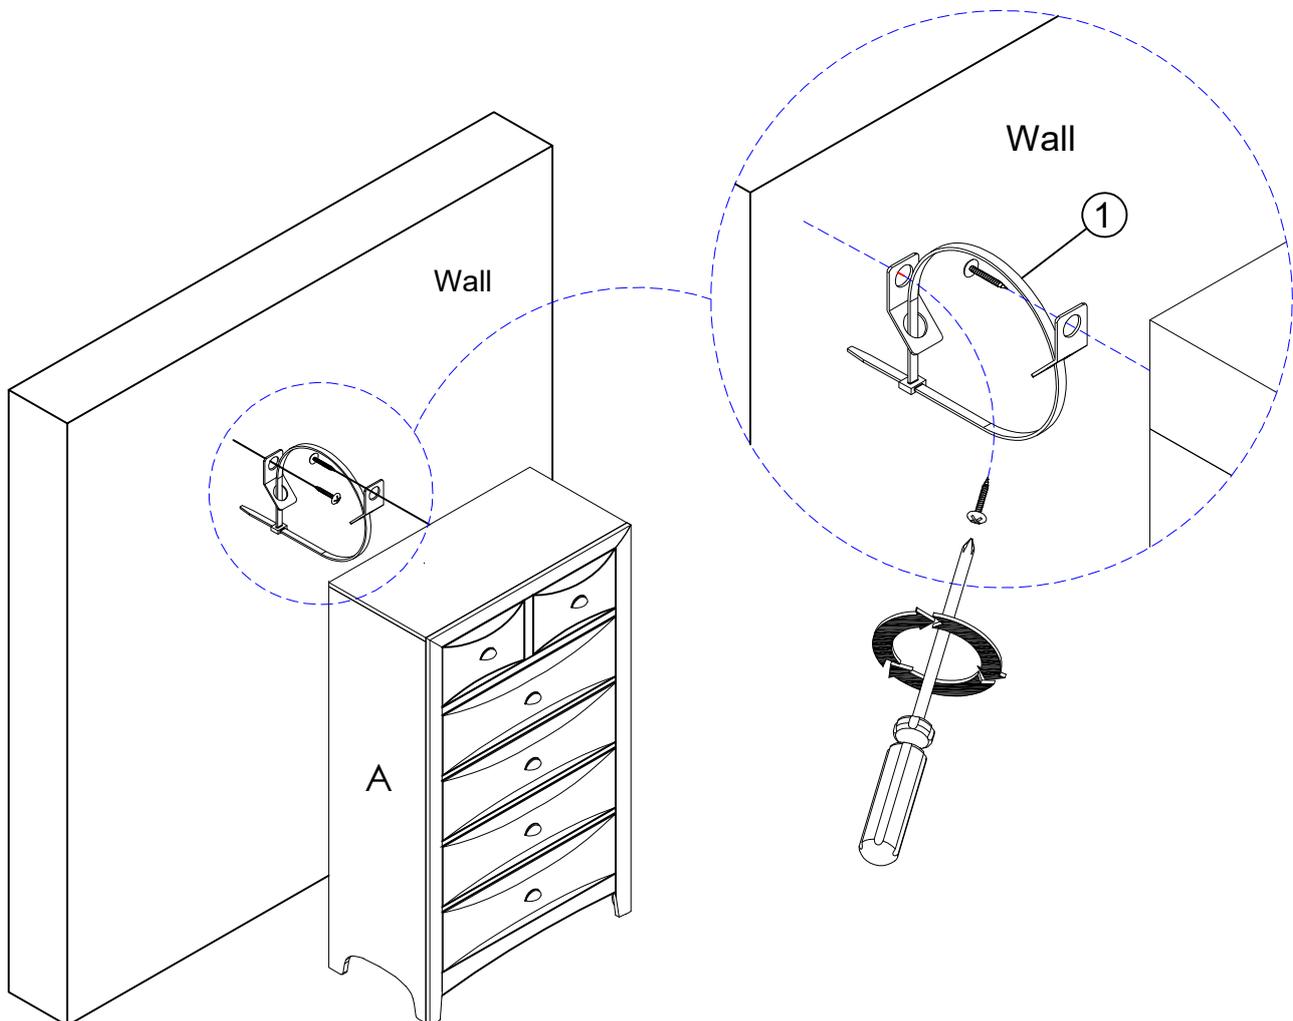

No.	PART LIST		Q'TY
A	HEADBOARD		1 PC
B	LEFT LEG		1 PC
C	RIGHT LEG		1 PC
D	STRETCHER		1 PC
E	FOOTBOARD		1 PC
F	SLAT		5 PCS
G	CENTER LEG		5 PCS
H	SUPPORT LEG		5 PCS
I	SIDE RAIL		2 PCS

### HARDWARE PACKED IN HEADBOARD


No.	HARDWARE LIST		Q'TY
1		BOLT 5/16" x 18 x 2"	8 SET
		LOCK WASHER 5/16" x 11 x 2mm	
		FLAT WASHER 5/16" x 19 x 2mm	
2		ALLEN WRENCH (4mm)	1 PC

### HARDWARE PACKED IN FOOTBOARD

No.	HARDWARE LIST		Q'TY
3		SCREW 25mm	10 PCS


Step 1 . Attach headboard left leg (B) to headboard and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .


Step 2 . Attach headboard right leg (C) to headboard and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .

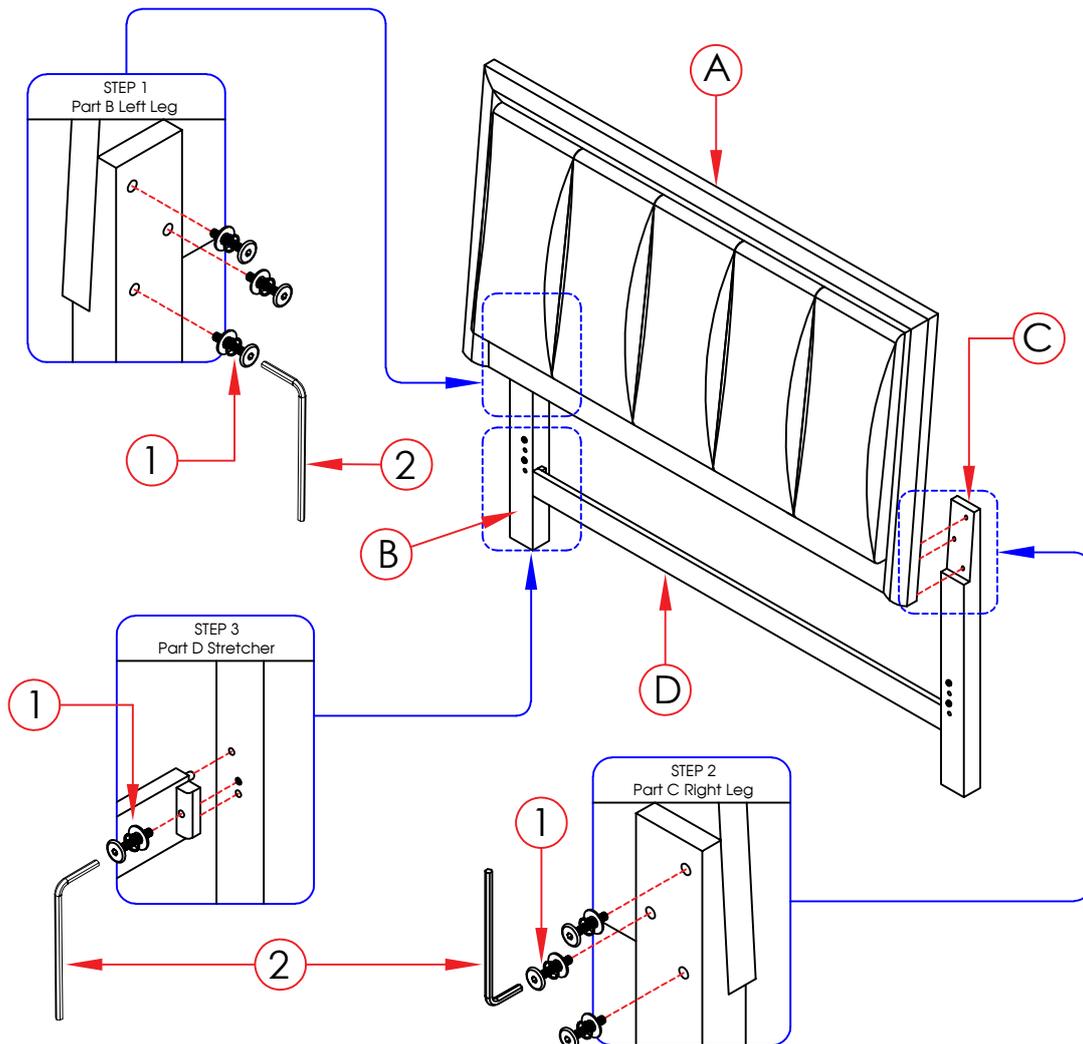

Step 3 . Attach the headboard Stretcher (D) to headboard leg and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .

Step 4 . Using allen wrench (2) to loose the bolts from the headboard & footboard legs.  
Step 5 . Attach the side rails (I) to headboard and footboard.  
Step 6 . Tighten all the bolts using allen wrench (2).


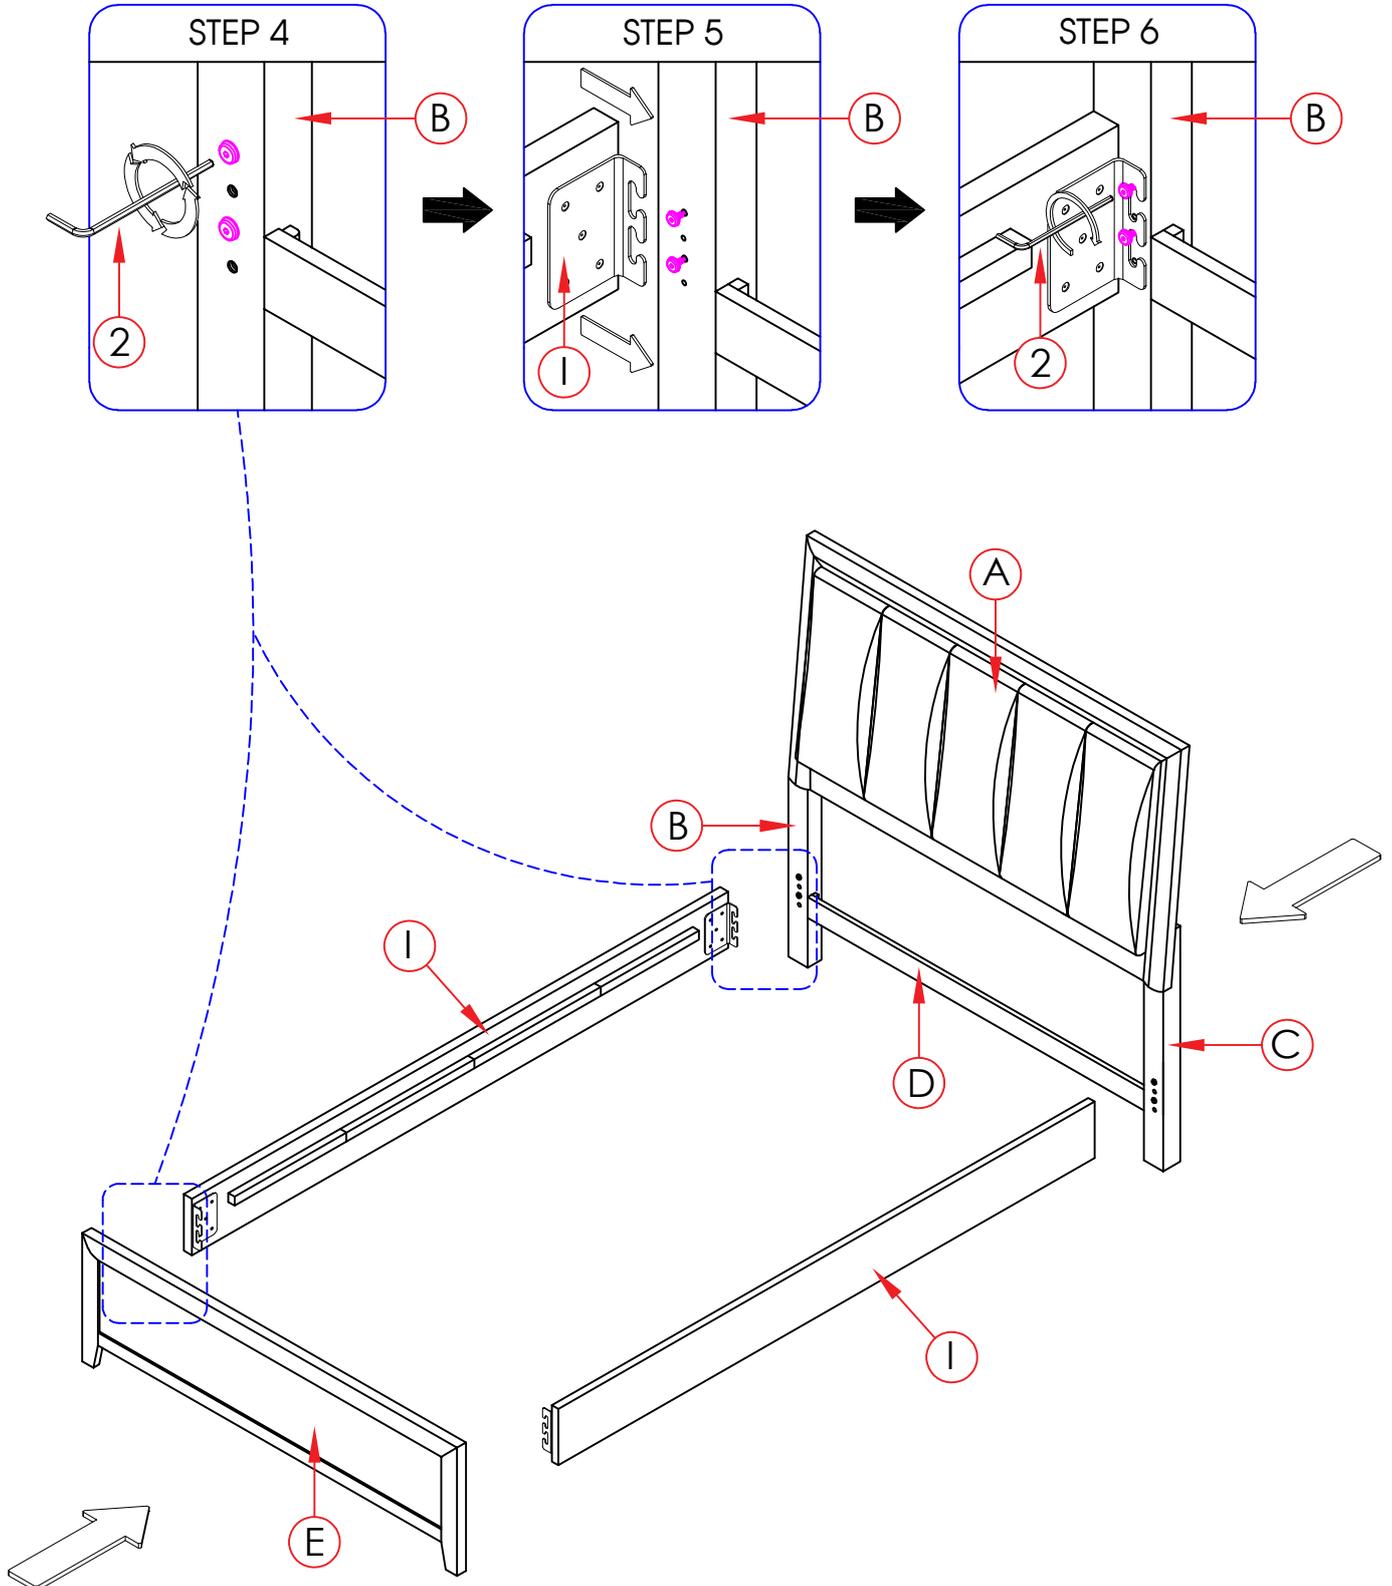


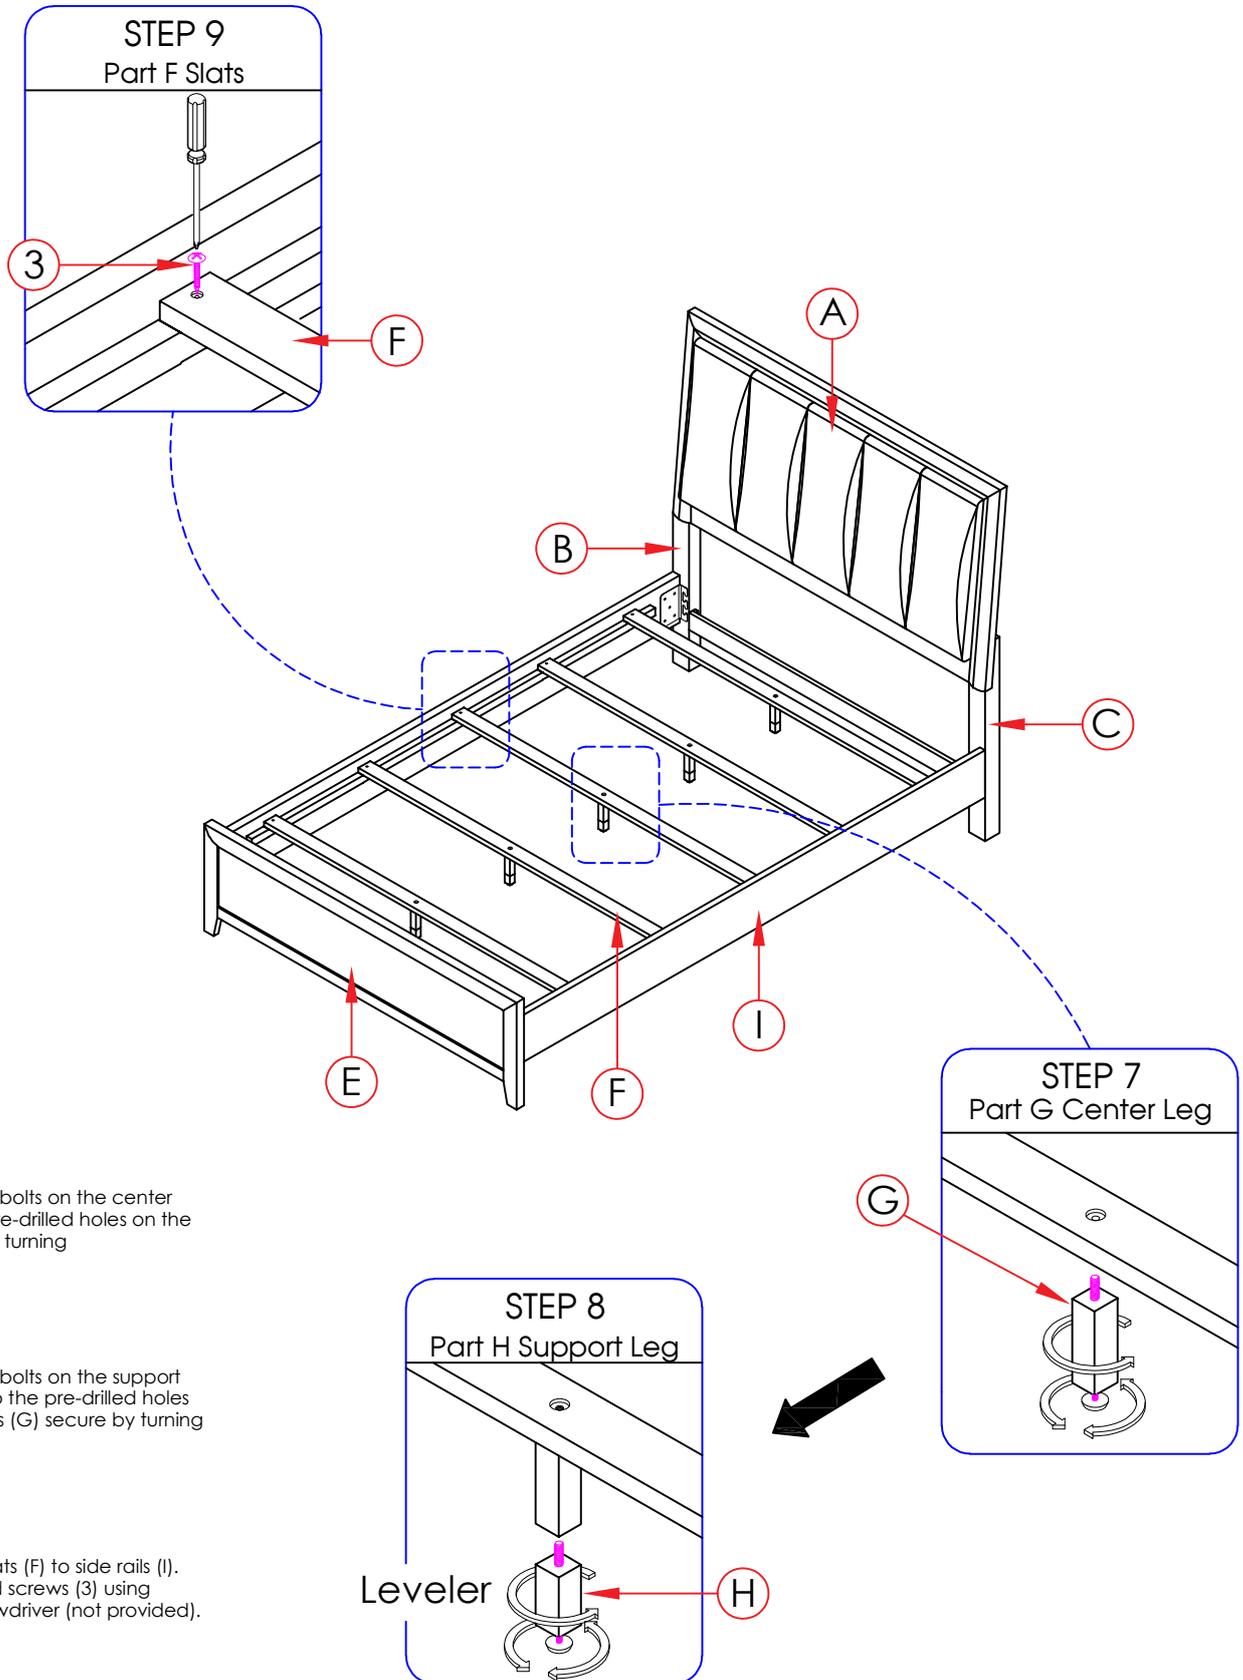

Step 7 . Insert the bolts on the center leg (G) into the pre-drilled holes on the slats (F) secure by turning clockwise.

Step 8 . Insert the bolts on the support center leg (H) into the pre-drilled holes on the center legs (G) secure by turning clockwise.

Step 9 . Attach slats (F) to side rails (I). Secure with wood screws (3) using philips head screwdriver (not provided).

No.	PART LIST		Q'TY
A	HEADBOARD		1 PC
B	LEFT LEG		1 PC
C	RIGHT LEG		1 PC
D	STRETCHER		1 PC
E	FOOTBOARD		1 PC
F	SLAT		5 PCS
G	CENTER LEG		10 PCS
H	SUPPORT LEG		10 PCS
I	SIDE RAIL		2 PCS

### HARDWARE PACKED IN HEADBOARD


No.	HARDWARE LIST		Q'TY
1		BOLT 5/16" x 18 x 2"	8 SET
		LOCK WASHER 5/16" x 11 x 2mm	
		FLAT WASHER 5/16" x 19 x 2mm	
2		ALLEN WRENCH (4mm)	1 PC

### HARDWARE PACKED IN FOOTBOARD

No.	HARDWARE LIST		Q'TY
3		SCREW 25mm	10 PCS

Step 1 . Attach headboard left leg (B) to headboard and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .




Step 2 . Attach headboard right leg (C) to headboard and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .

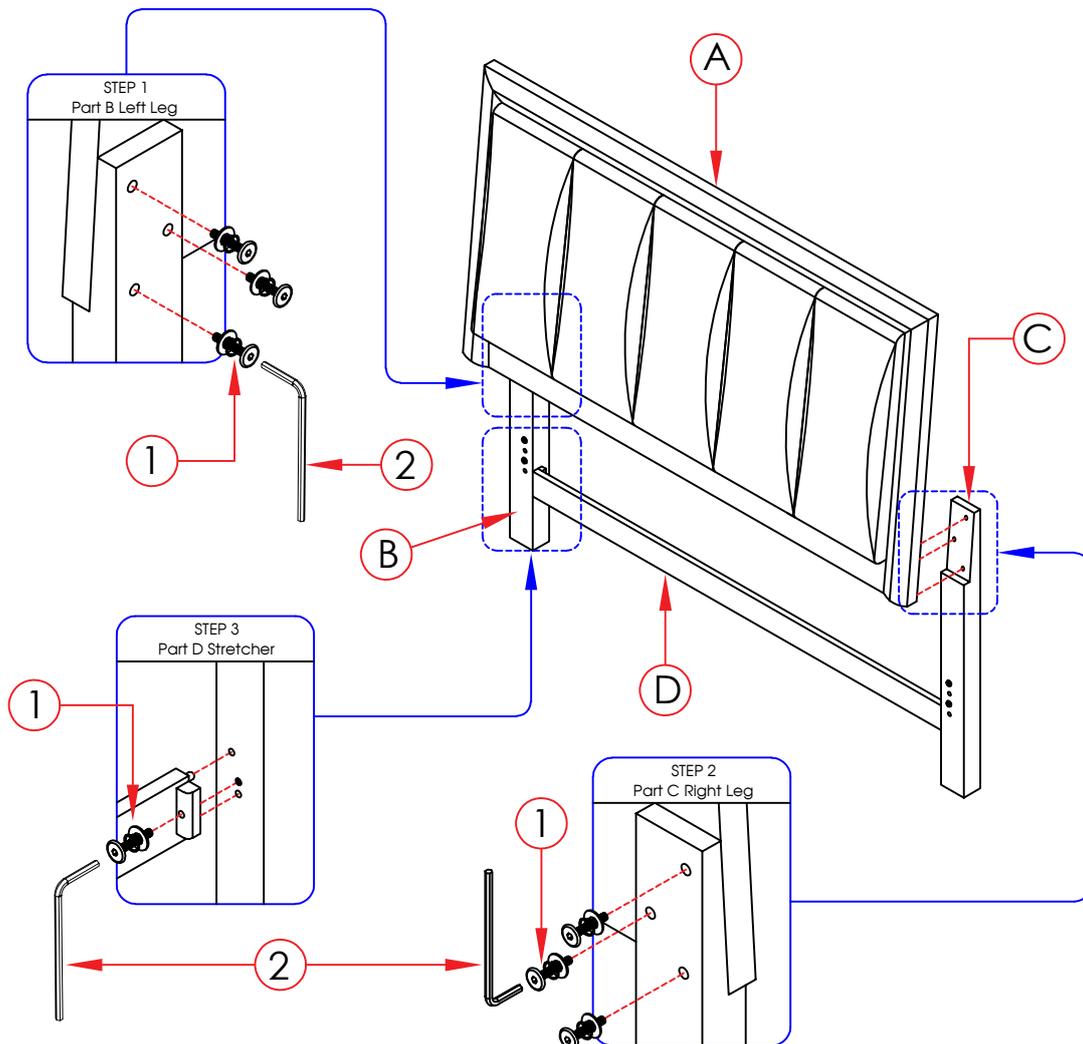

Step 3 . Attach the headboard Stretcher (D) to headboard leg and secure with flat washers, lock washers and bolts (1) using allen wrench (2) .



## ASSEMBLY INSTRUCTION

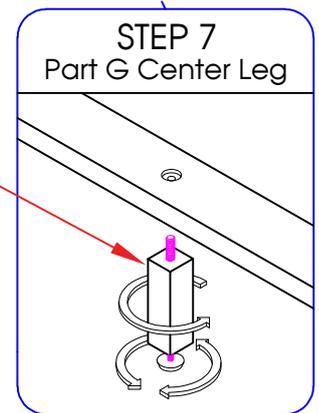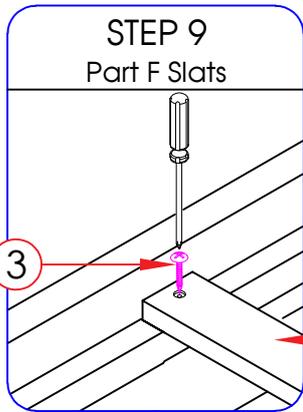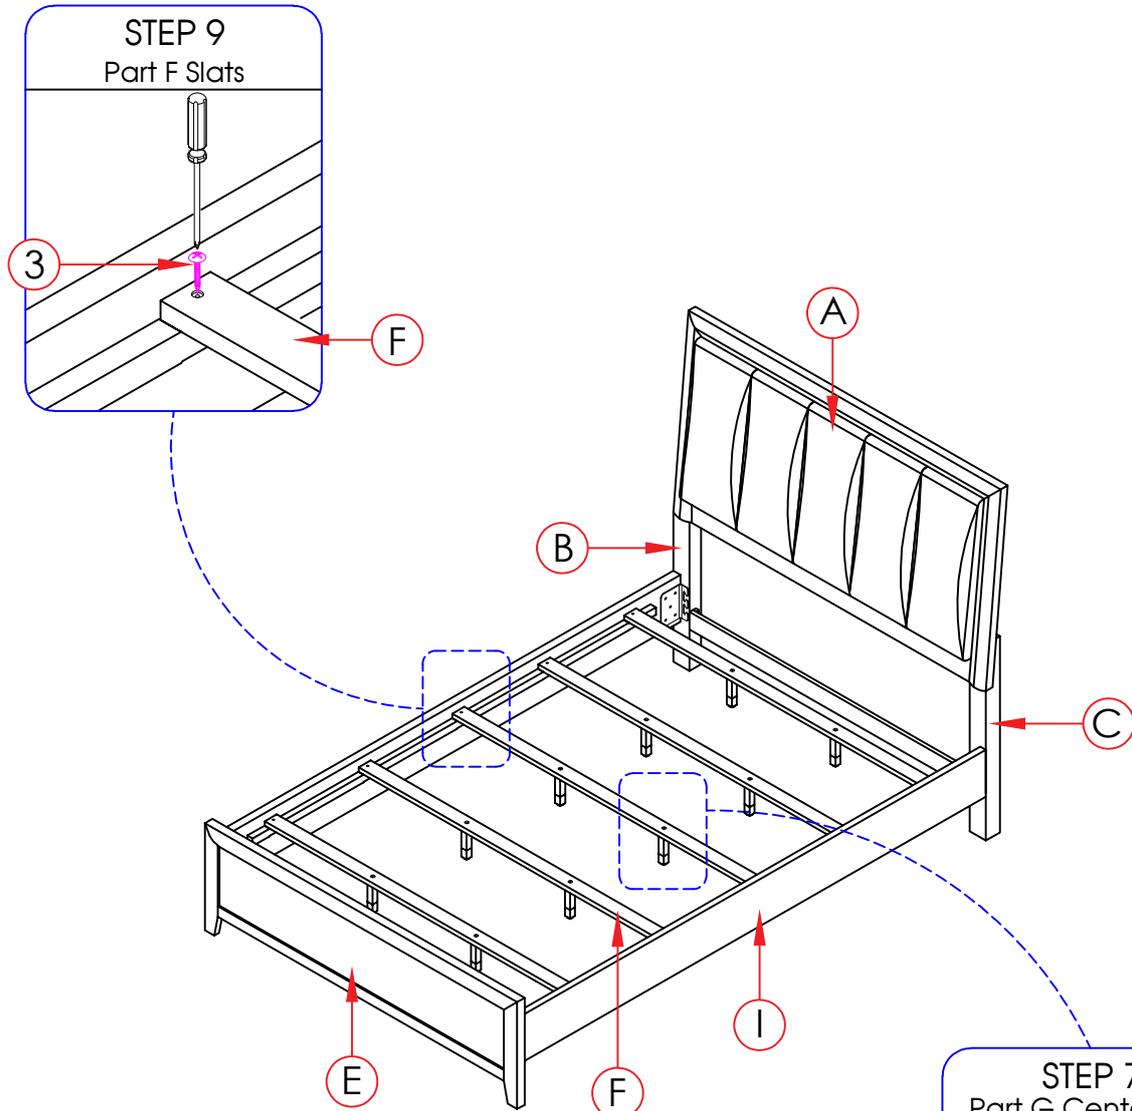

Step 7 . Insert the bolts on the center leg (G) into the pre-drilled holes on the slats (F) secure by turning clockwise.

Step 8 . Insert the bolts on the support center leg (H) into the pre-drilled holes on the center legs (G) secure by turning clockwise.

Step 9 . Attach slats (F) to side rails (I). Secure with wood screws (3) using philips head screwdriver (not provided).

