




ASSEMBLY INSTRUCTIONS

PHOM 3827-250 : QN WOVEN POSTER HDBD/FTBD # SKU 33338270
PHOM 3827-251 : QN WOVEN POSTER CANOPY & POST # SKU 33738278
PHOM 3827-20R : QN/KG PANEL & POSTER SIDE RAILS # SKU 32938271





PHOM 3827-260 : KG WOVEN POSTER HDBD/FTBD # SKU 33438272
PHOM 3827-261 : KG WOVEN POSTER CANOPY & POST # SKU 33838270
PHOM 3827-20R : QN/KG PANEL & POSTER SIDE RAILS # SKU 32938271

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
Identify and count all parts and compare with the Hardware List below.
Tools Required for assembly: Phillips Screwdriver (not provided)





Headboard	No.	Description			Q'ty
	A	Headboard			1 Pc
	B	Poster Leg (L - R)			2 Pcs
	C	Strecher			1 Pc
	D	Short Canopy			2 Pcs
Footboard	E	Footboard			1 Pc
	F	Poster Leg (L - R)			2 Pcs
	G	Slats			5 Pcs
	H	Regular Leg Support			5 Pcs
	I	Leg Extensions			5 Pcs
Siderail	J	Siderails			2 Pcs
	K	Long Canopy			2 Pcs
Hardware List	No.	Picture	Description	Dimension	Q'ty
	1		Bolt w/ Stopper	Ø5/16 x 18 x 2"	18 Pcs
	2		Bolt w/ Stopper	Ø5/16 x 18 x 1"	8 Pcs
	3		Lock Washer	5/16"	52 Pcs
	4		Flat Washer	Ø8 x Ø18 x 1 mm	52 Pcs
	5		Allen Key	5 x 70 mm	1 Pc
	6		Screw	Ø8 x 1"	10 Pcs
Tools Required for Assembly	7	 Phillips Screwdriver (NOT PROVIDED)			

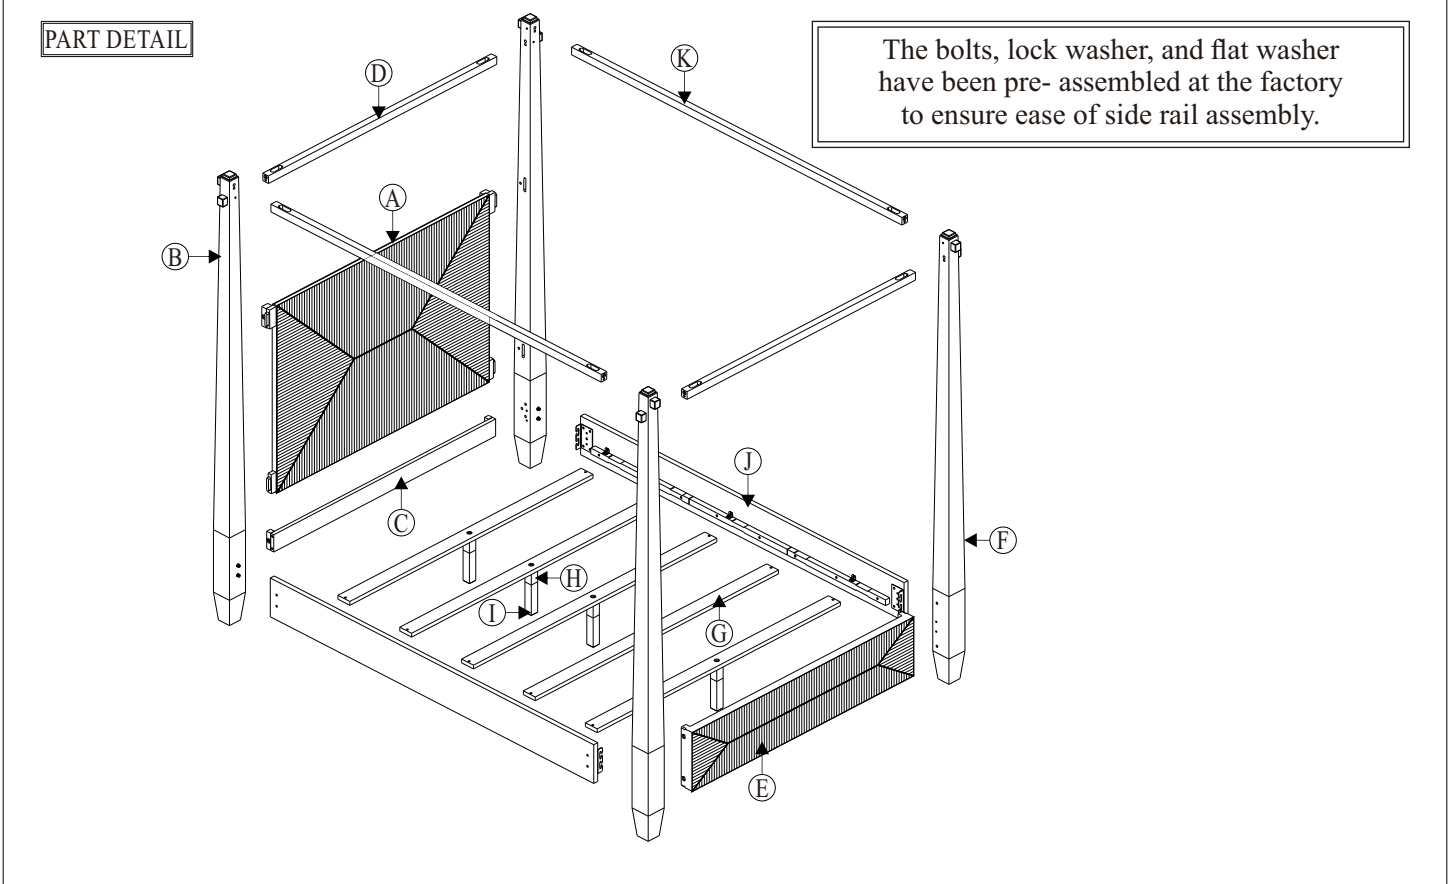



ASSEMBLY STEP

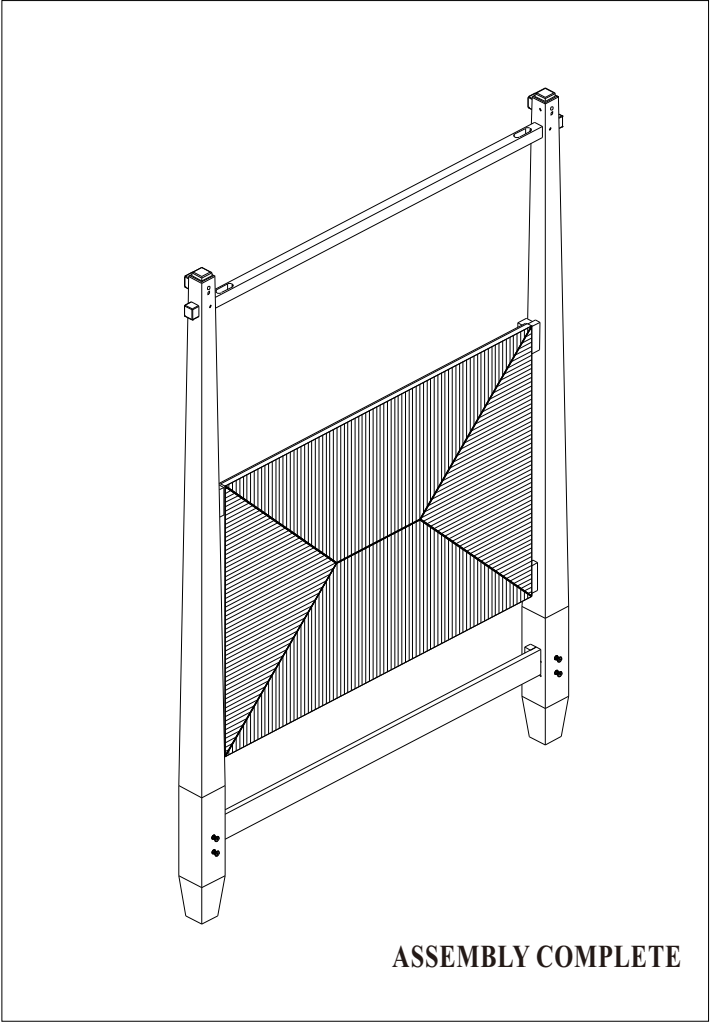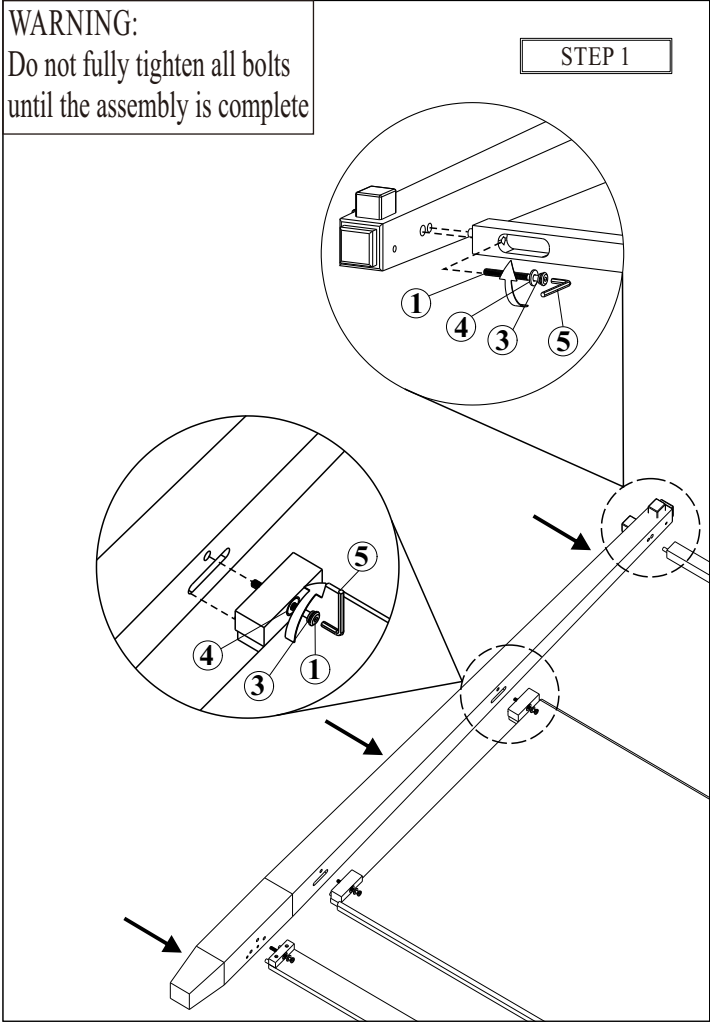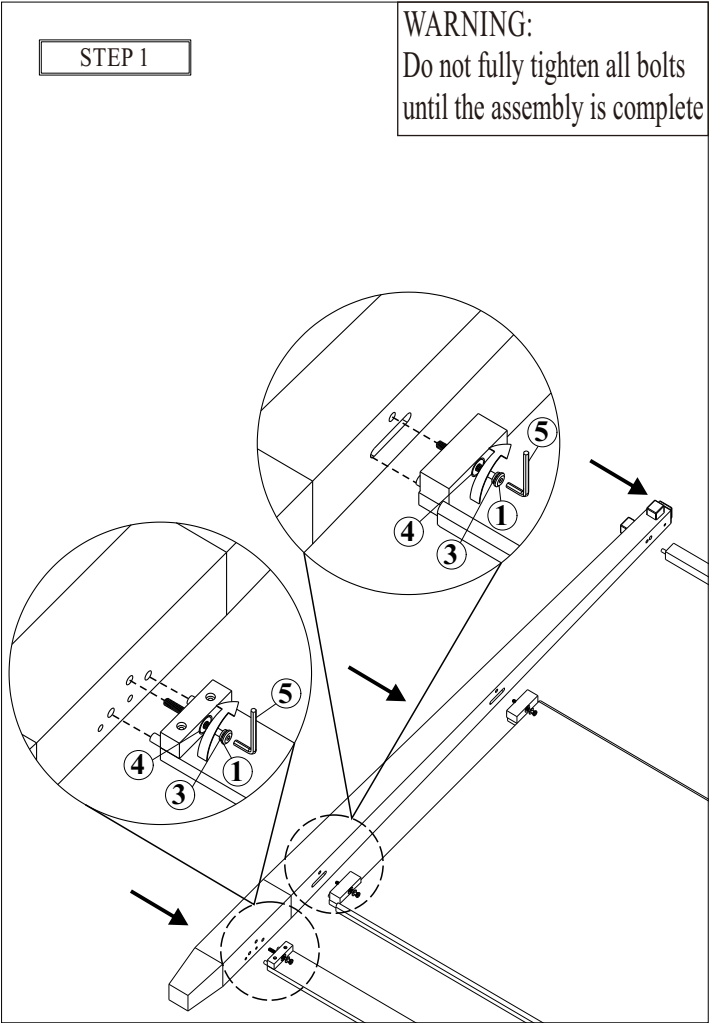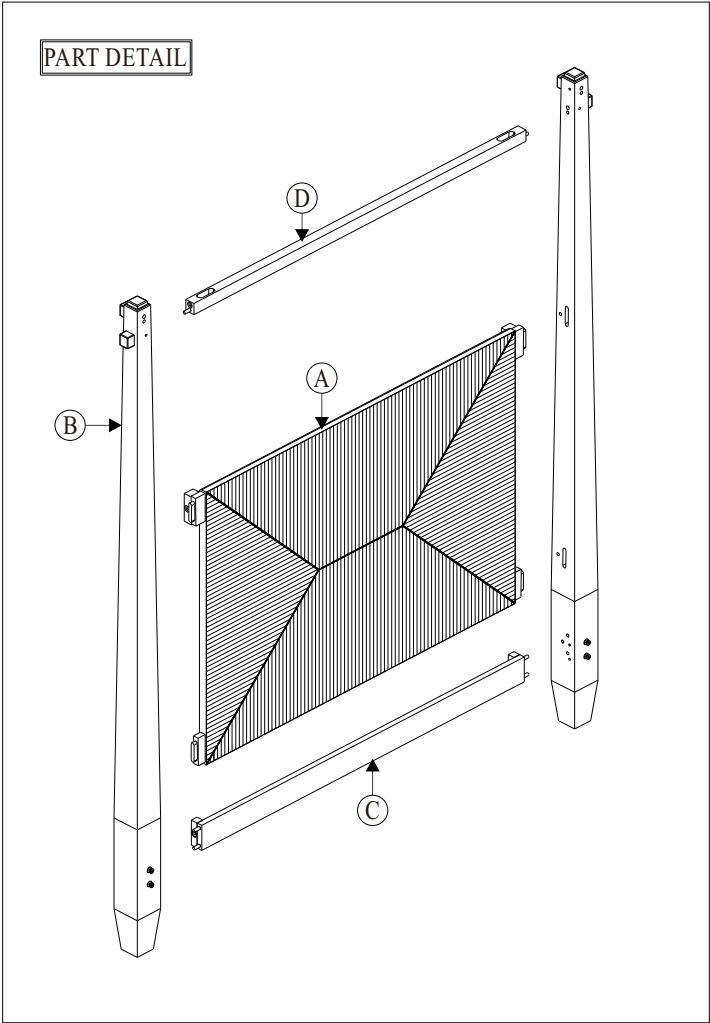


ASSEMBLY STEP

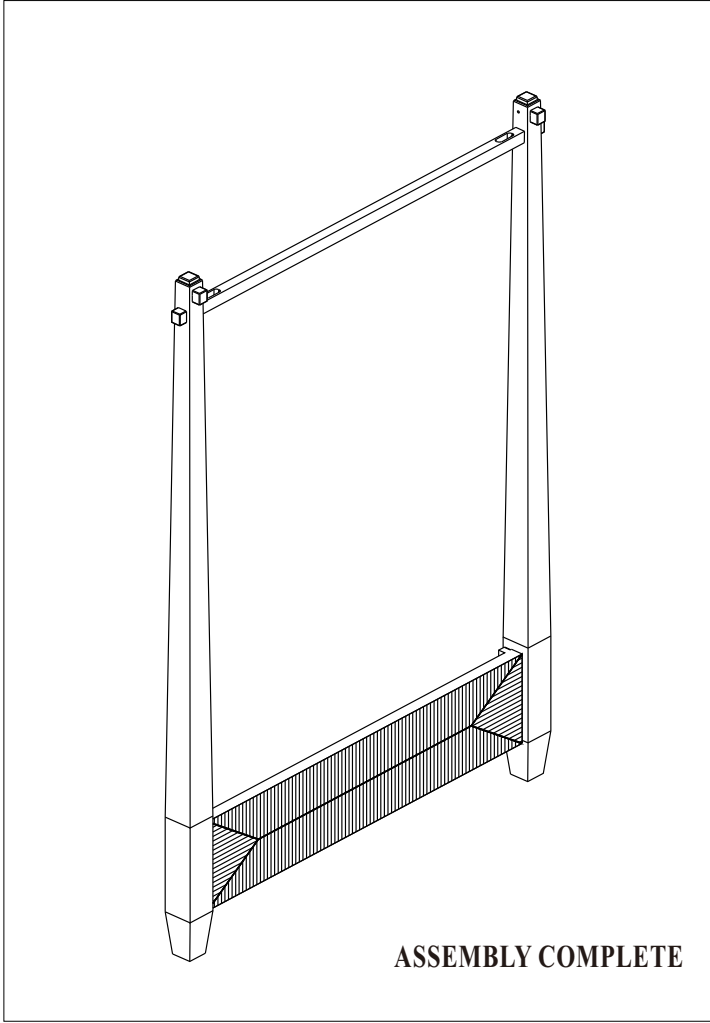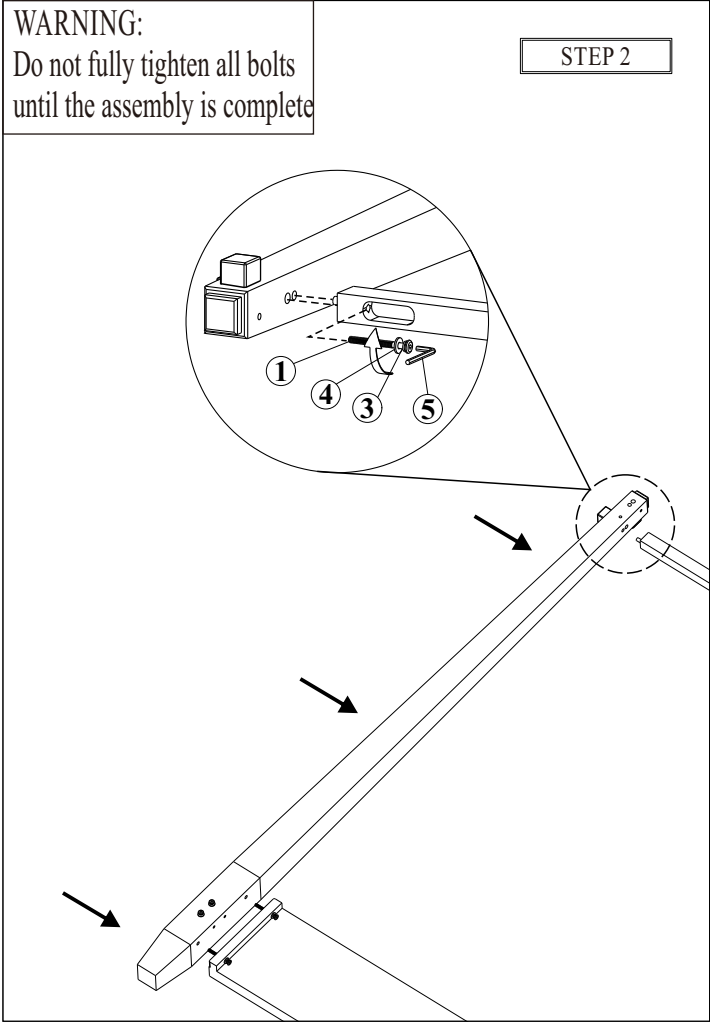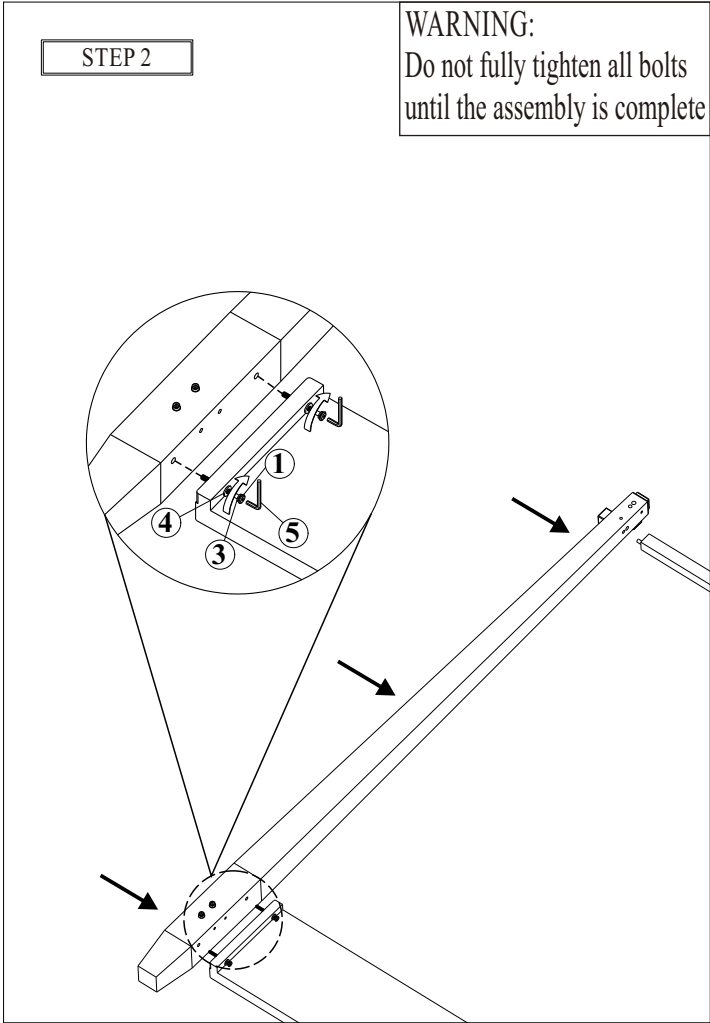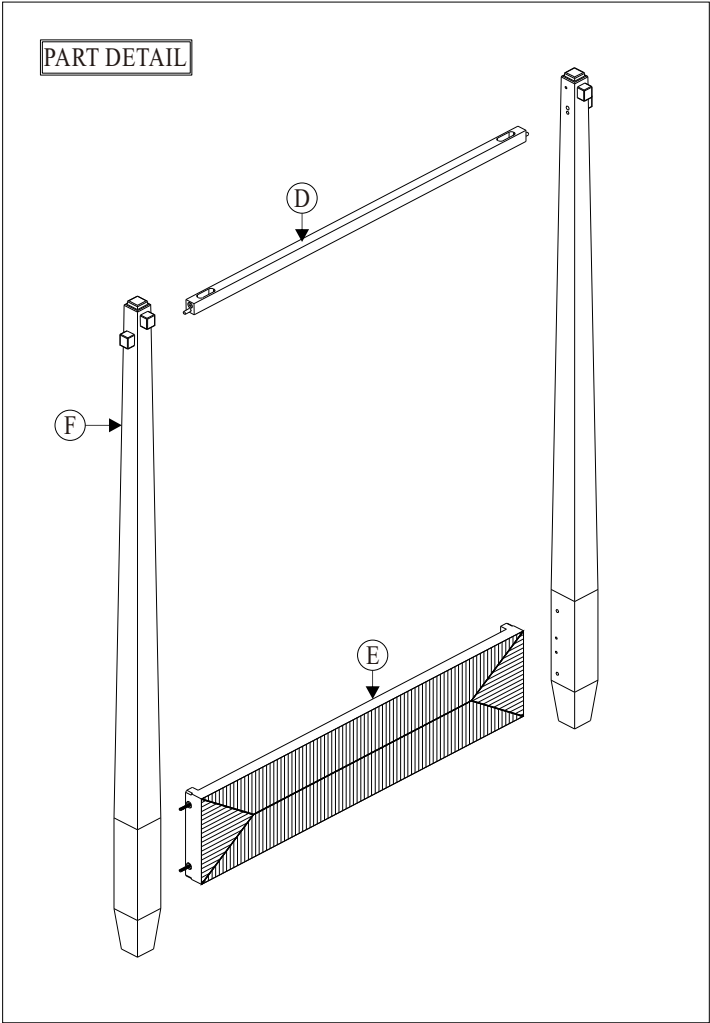


ASSEMBLY STEP

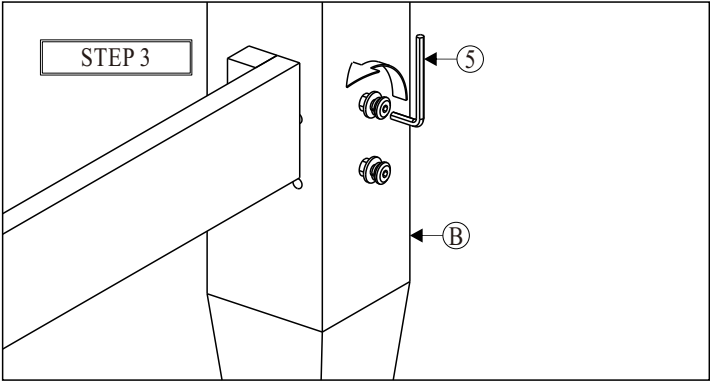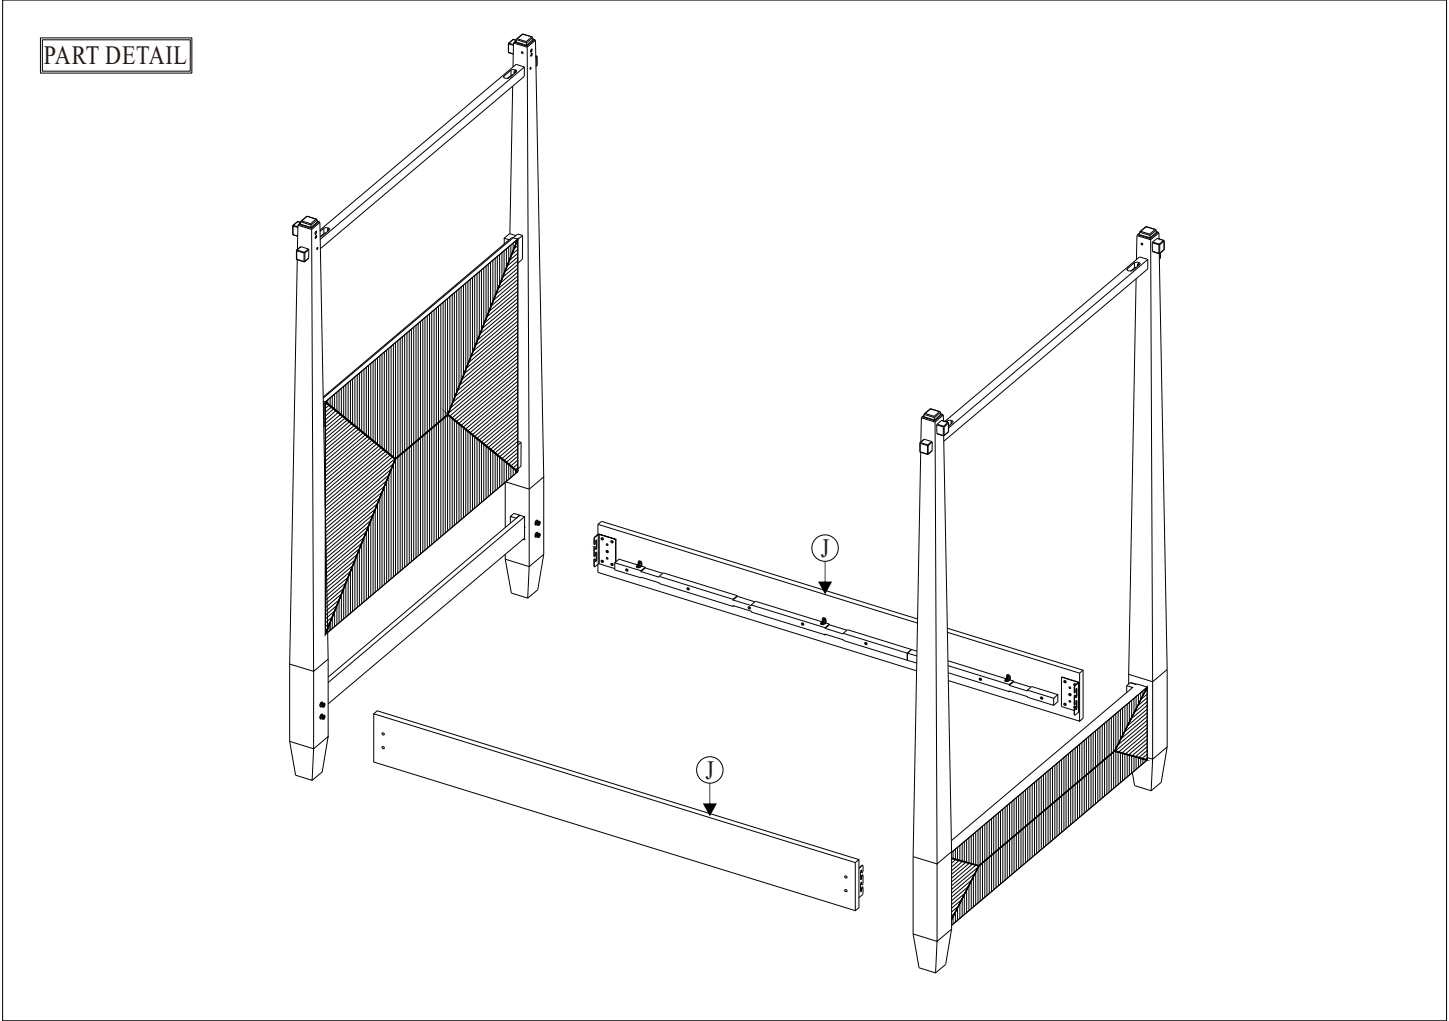


Slightly Loose the Bolt on the Poster Leg HB (B)

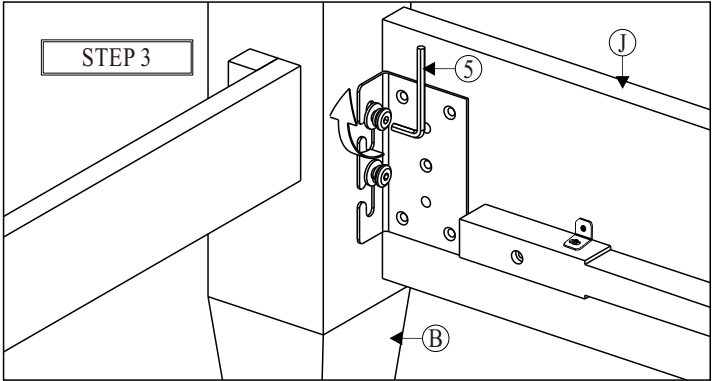

Attach Siderail (J) to Poster Leg HB (B)

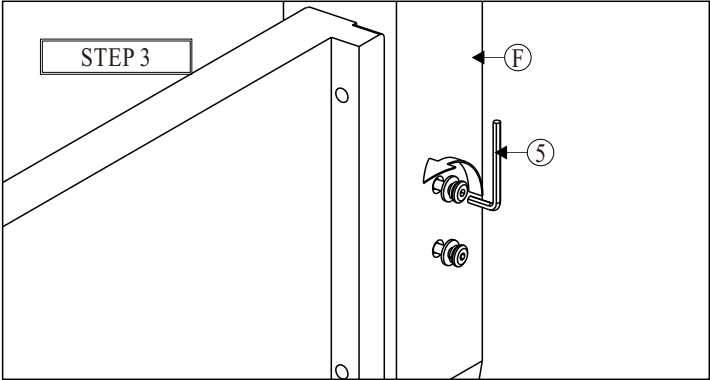


Slightly Loose the Bolt on the Poster Leg FB (F)

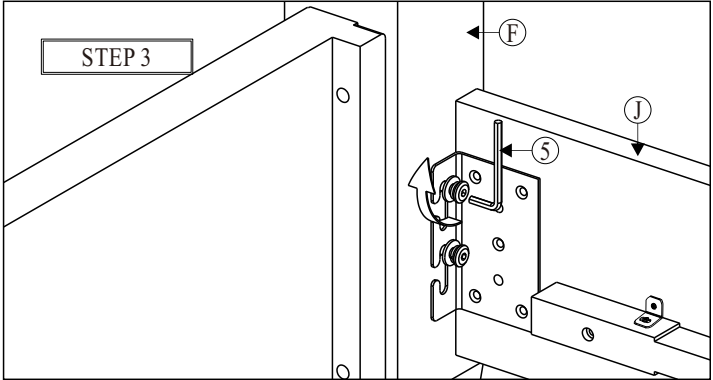

Attach Siderail (J) to Poster Leg FB (F)


ASSEMBLY STEP

PART DETAIL

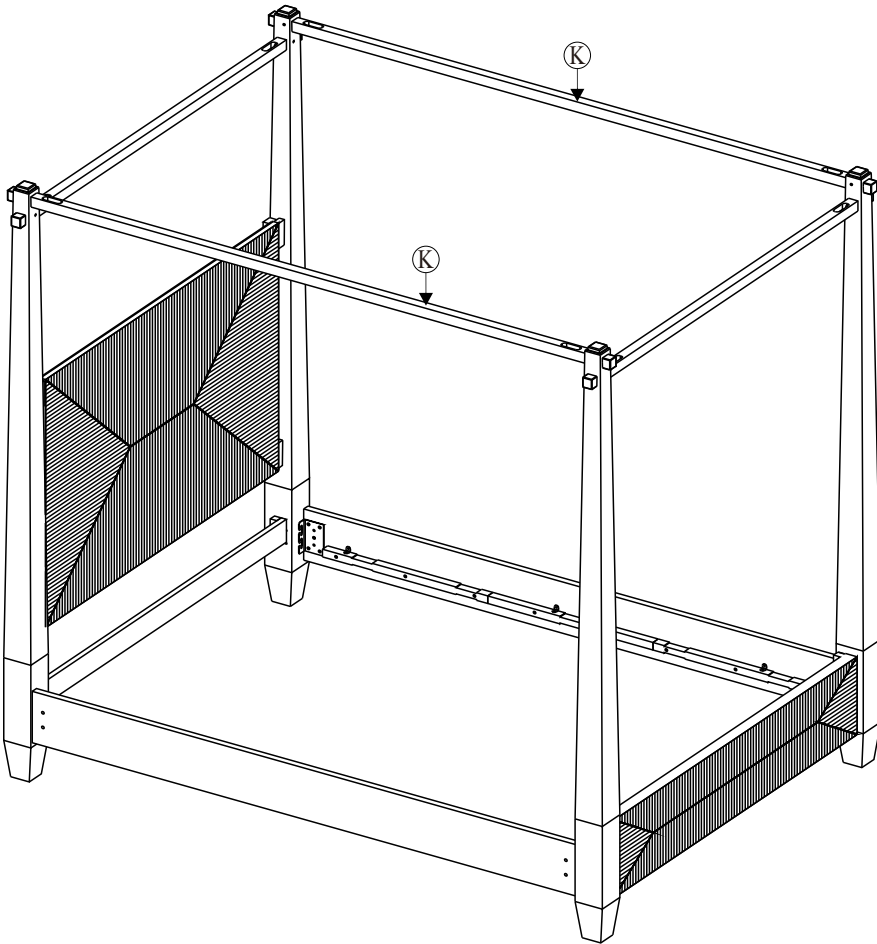

WARNING:
Do not fully tighten all bolts
until the assembly is complete


STEP 4

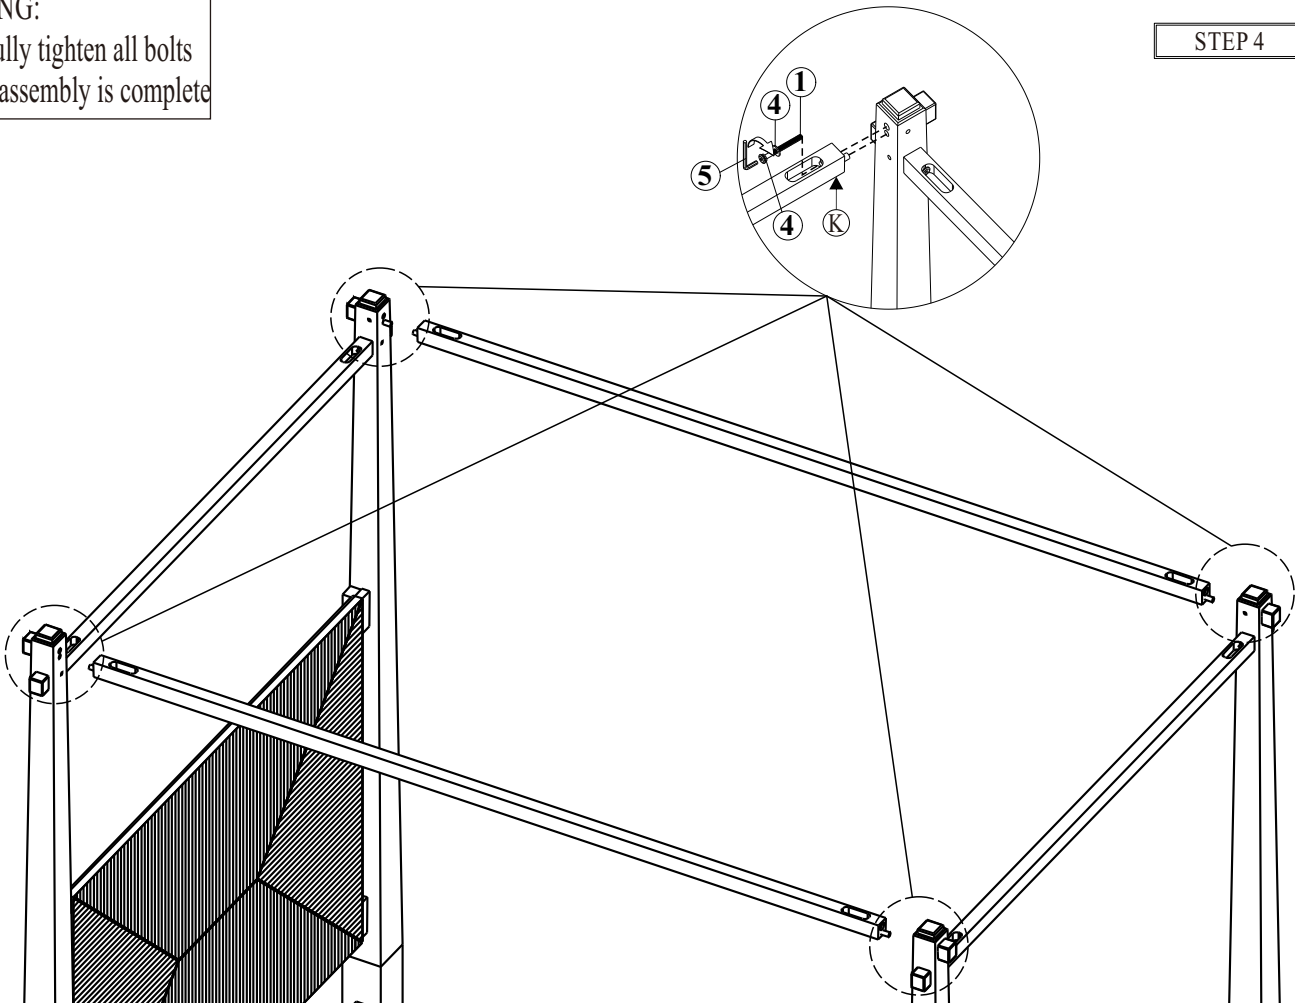

PHOM 3827-250 : QN WOVEN POSTER HDBD/FTBD # SKU 33338270
PHOM 3827-251 : QN WOVEN POSTER CANOPY & POST # SKU 33738278
PHOM 3827-20R : QN/KG PANEL & POSTER SIDE RAILS # SKU 32938271


PHOM 3827-260 : KG WOVEN POSTER HDBD/FTBD # SKU 33438272
PHOM 3827-261 : KG WOVEN POSTER CANOPY & POST # SKU 33838270
PHOM 3827-20R : QN/KG PANEL & POSTER SIDE RAILS # SKU 32938271

ASSEMBLY STEP

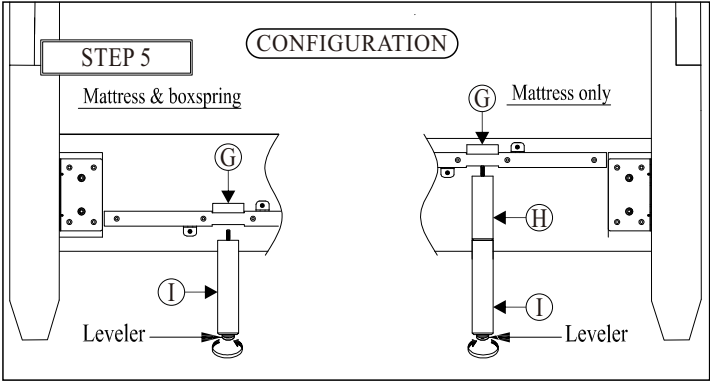

Tighten leg support (I) to Slat (G)

Tighten leg ext (H) to Slat (G)

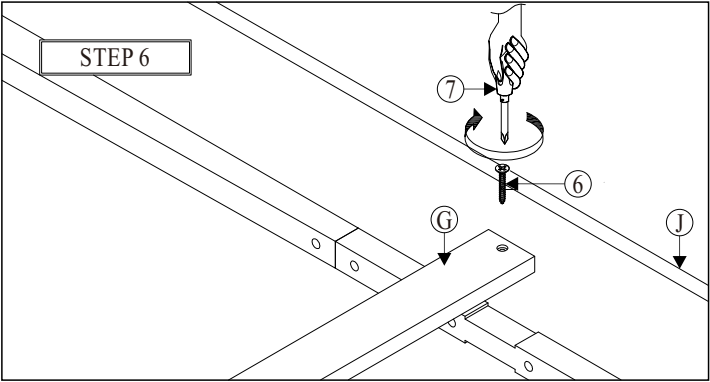

Attach Slats (G) to Siderails (J) using screw (6) with screw driver (7) follow pre-drill on the slats

