






Assembly Instructions




TIMI 3021-351 1 Drawer Nightstand SKU: 33530216


Manufactured by TIMI for Rooms To Go

VERSION 1.0 - 2024/03/28

HARDWARE LIST					
STEP	NO.	DESCRIPTION		SKETCH	Q'TY
1	A	Allen key	4 mm		1 pc
1	B	Allen bolt w/ threaded washer	1/4"x20x1-1/4" (Head diameter Ø12mm)		12 pcs
2	C	Metal cap	Ø18x6mm		12 pcs
3	D	Furniture tipping restraint			1 set


TOOLS REQUIRED (NOT PROVIDED)	
PHILLIPS SCREWDRIVER	

PART	PICTURE	DESCRIPTION	Q'TY
PART LIST			
1		Nightstand top	1 pc
2		Bottom shelf	1 pc
3		Acrylic side panel	2 pcs

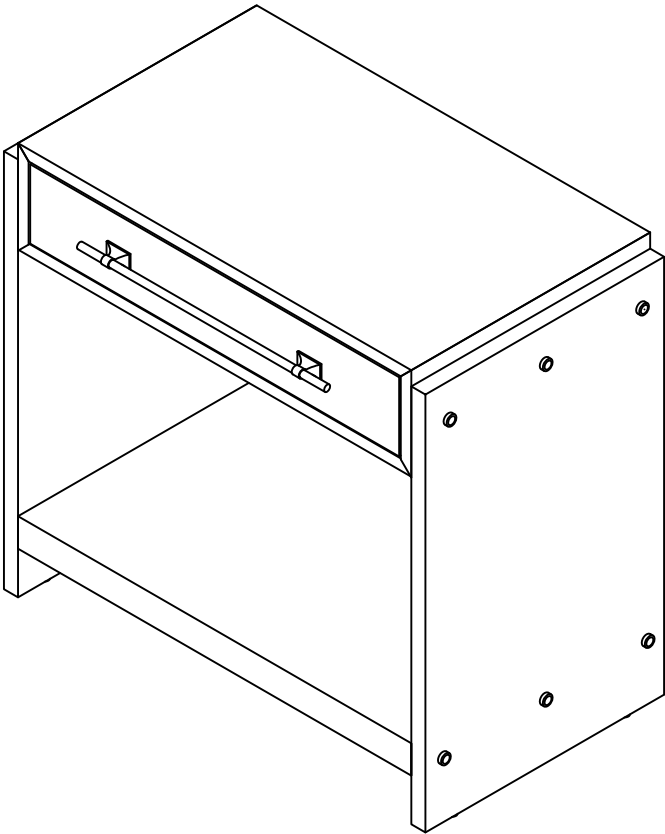

Hardware Pack Location(s):

TIMI 3021-351 1 Drawer Nightstand SKU: 33530216

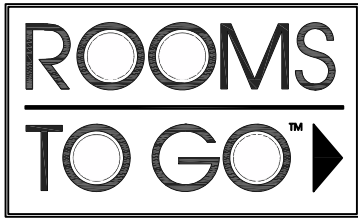

Assembly Instructions


TIMI 3021-351 1 Drawer Nightstand SKU: 33530216

Manufactured by TIMI for Rooms To Go

VERSION 1.0 - 2024/03/28


***** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during assembly.**

STEP 1

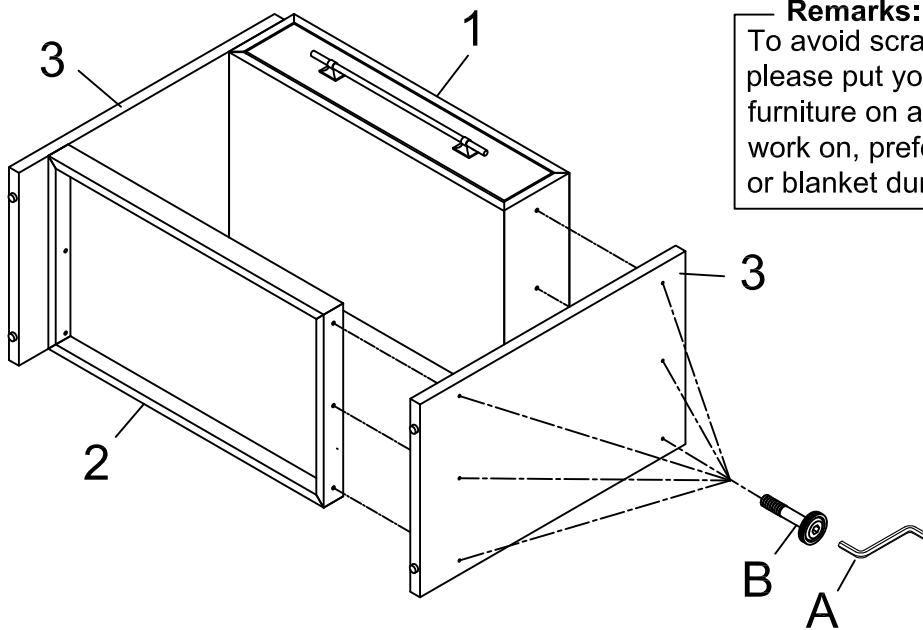


Assemble the Acrylic side panels (3) to the Nightstand Top (1) and Bottom shelf (2).

STEP 2

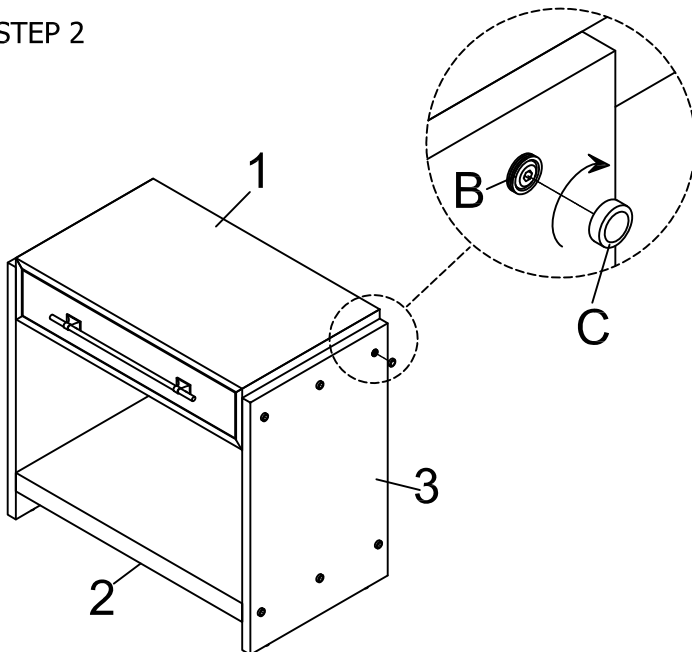

Assemble the metal caps (C) to the Allen bolts (B) on the Acrylic Side panel (3)

STEP 3

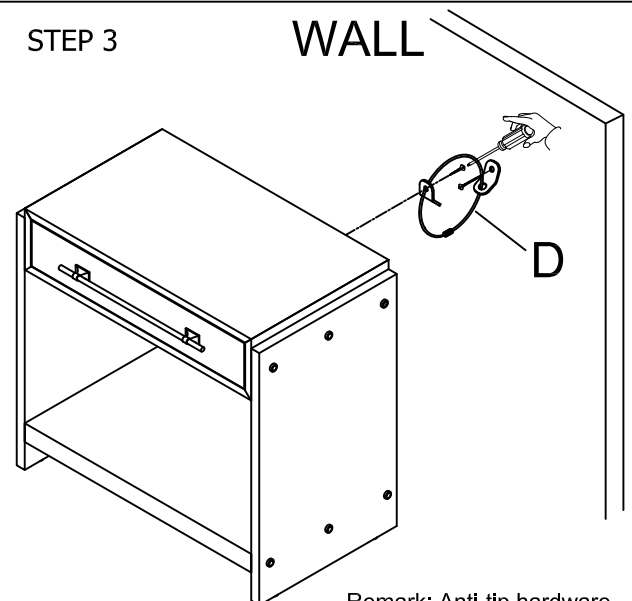

Remark: Anti-tip hardware - customer assembly required.