


Assembly Instruction


2697-01: Drawer Dresser



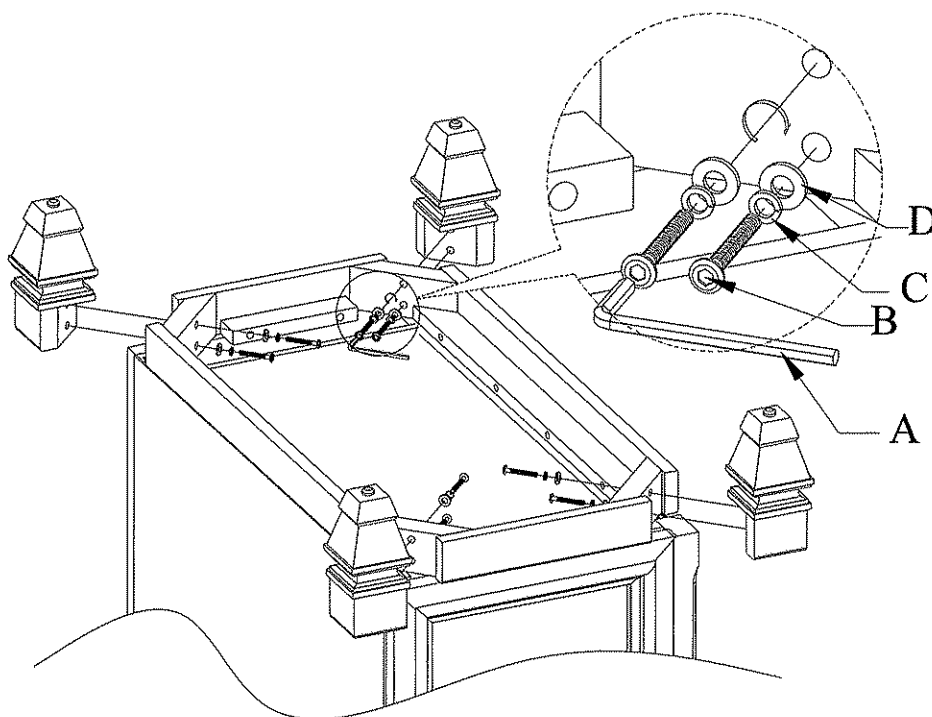

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

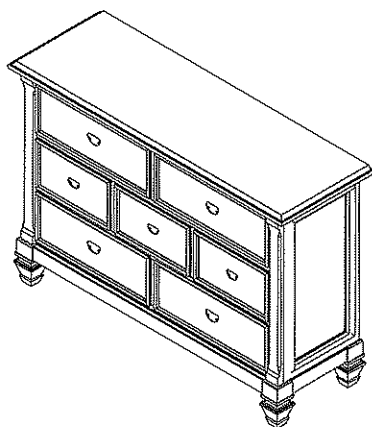

Attach legs by bolts.




Code	Hardware		Q'TY
A	Allen Key 4x74x29mm		1 Pc
B	Bolt 1/4"x11.5x50mm		8Pcs
C	Spring Washer 1/4"x11x2mm		8Pcs
D	Flat Washer 1/4"x18x2mm		8Pcs

Assembly Instruction


2697-02: Photo Mirror



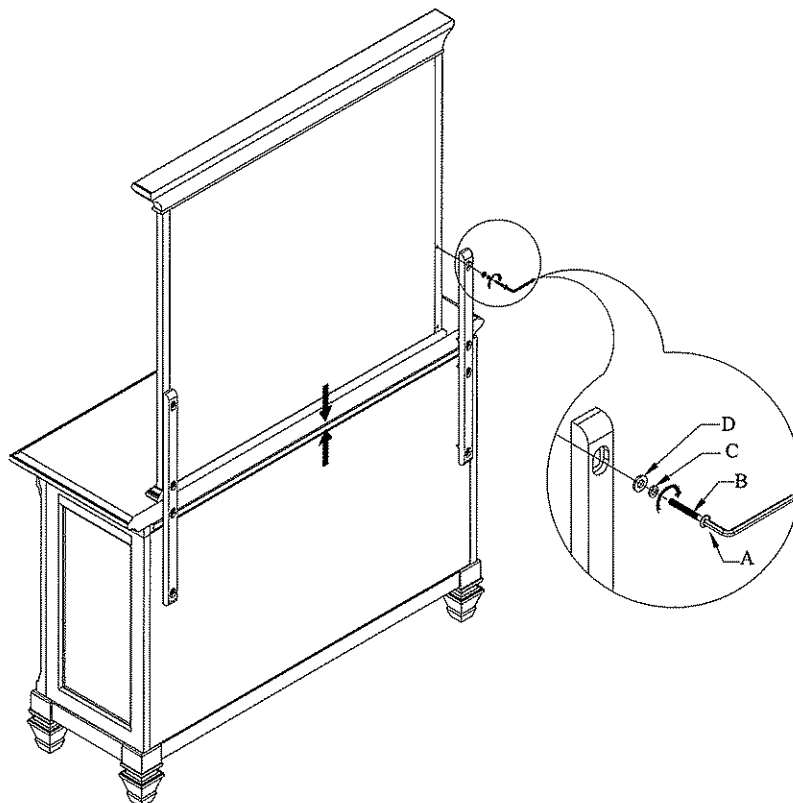

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

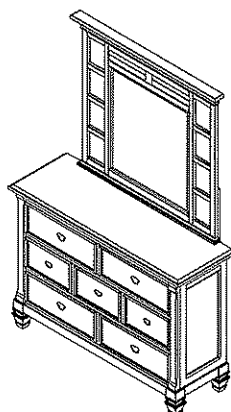

Attach support bars to Mirror
and Dresser by Bolts.




Code	Hardware	Q'TY
A	Allen Key 4x74x29mm 	1 Pc
B	Bolt 1/4"x11.5x38mm 	8Pcs
C	Spring Washer 1/4"x11x2mm 	8Pcs
D	Flat Washer 1/4"x18x2mm 	8Pcs

Assembly Instruction


2697-11: Chest



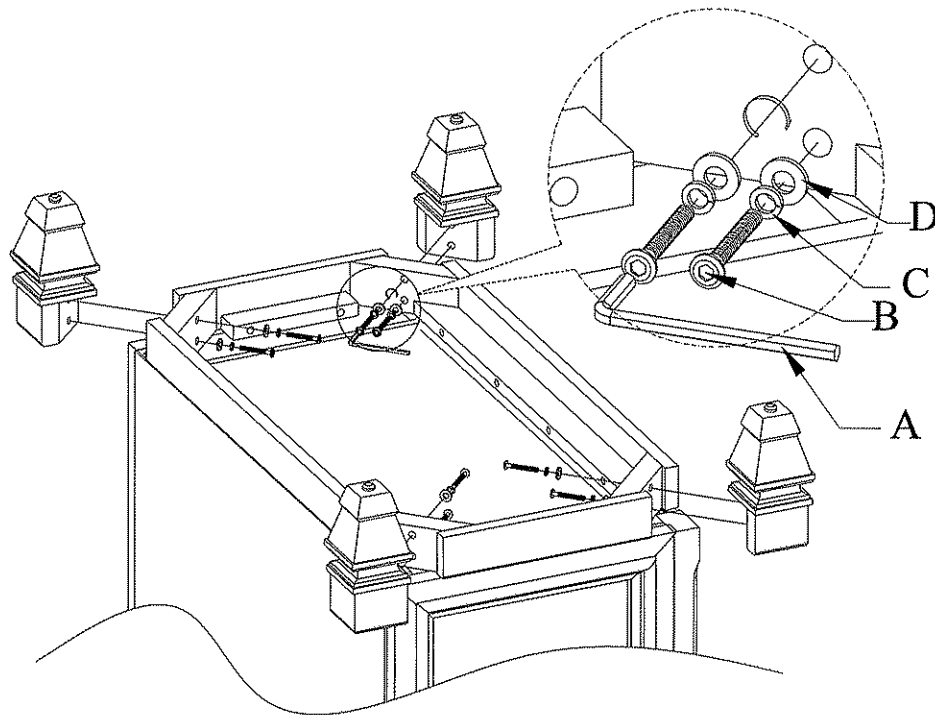

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

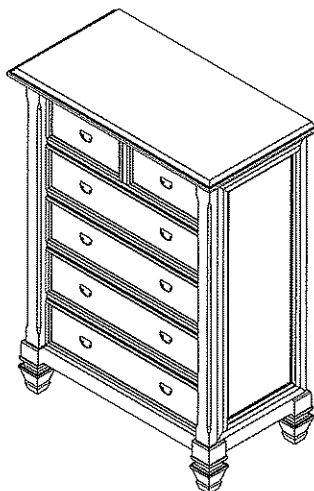

Attach legs by bolts.




Code	Hardware	Q'TY
A	Allen Key 4x74x29mm 	1 Pc
B	Bolt 1/4"x11.5x50mm 	8Pcs
C	Spring Washer 1/4"x11x2mm 	8Pcs
D	Flat Washer 1/4"x18x2mm 	8 Pcs

Assembly Instruction


2697-17F/27F: 3/3 or 4/6 Post Bed Footboard

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

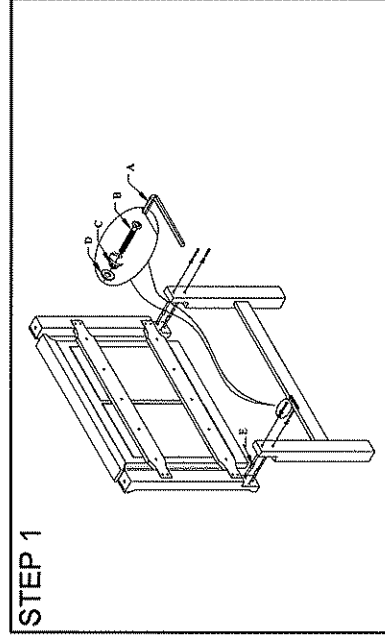


Fix leg frame to the Headboard panel from back.

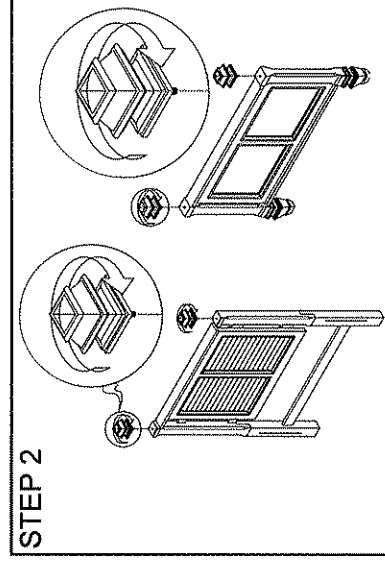


Attach post molding to HB and FB.

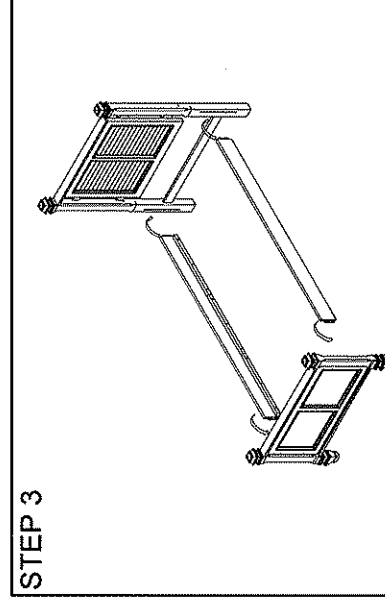

Hang the side rails.

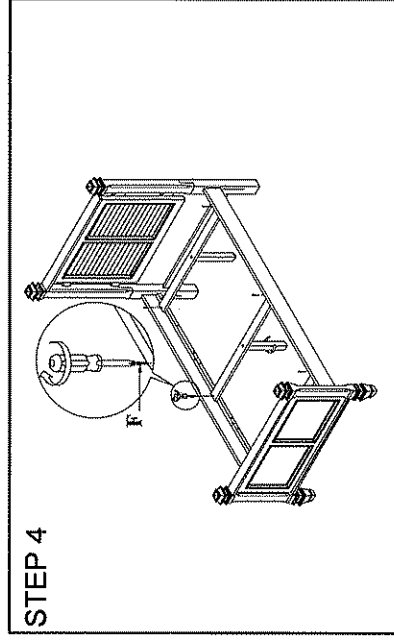

Compose the slats & support legs.

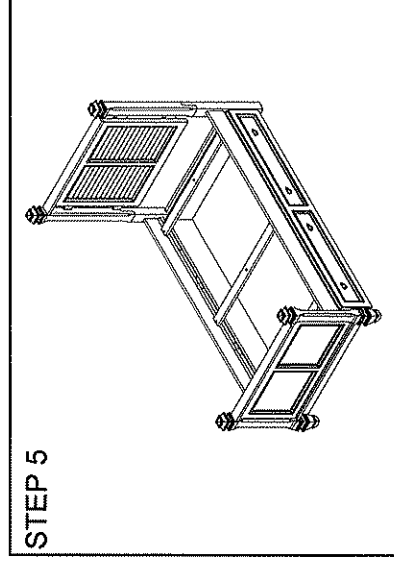

Put trundle unit underneath.
Note: Pls do not attach support legs.


Code	Hardware	Q'TY
A	Allen Key 4x74x29mm	1 Pc
B	Bolt 1/4"x11.5x50mm	4Pcs
C	Spring Washer 1/4"x1x2mm	4Pcs
D	Flat Washer 1/4"x18x2mm	4 Pcs
E	Wooden Dowel	4 Pcs
F	Screw :8*30mm	6 Pcs

Assembly Instruction


2697-35: Entertainment

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

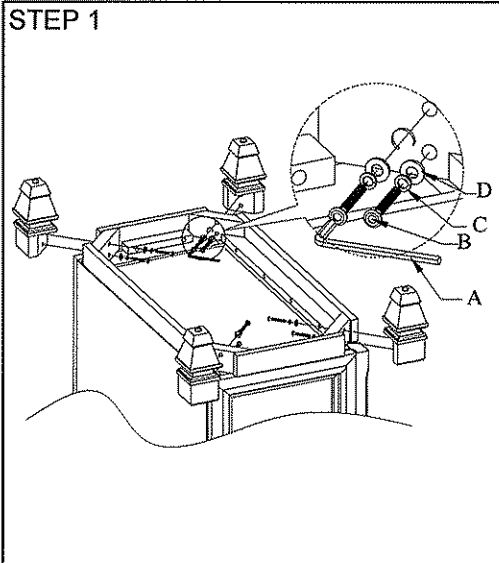


Attach legs by bolts.

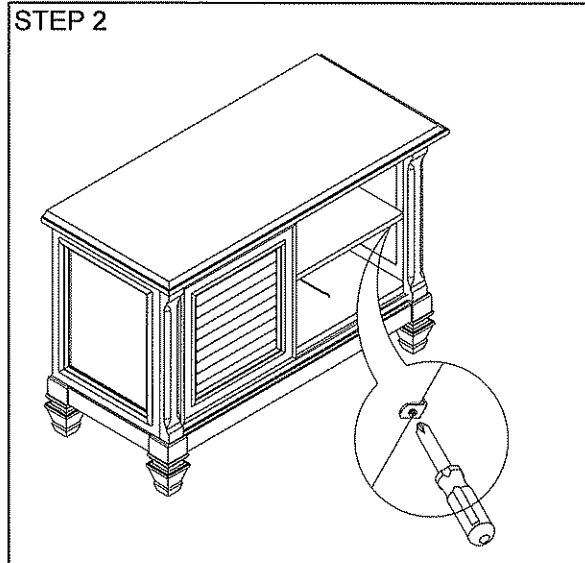






Unfix the removable shelf .

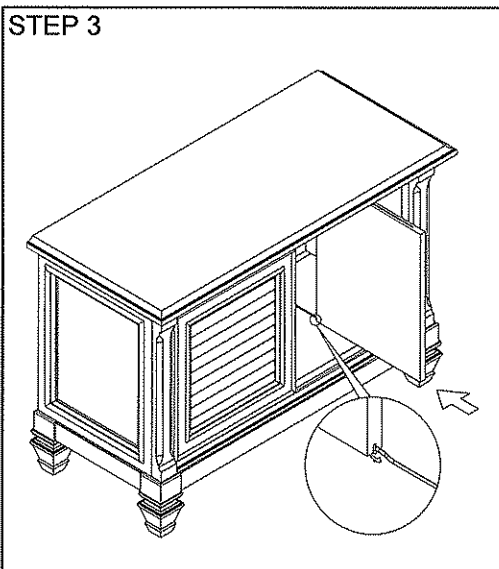Note: The shelf is fixed for shipping. If you like to change the direction, please follow from step 2.

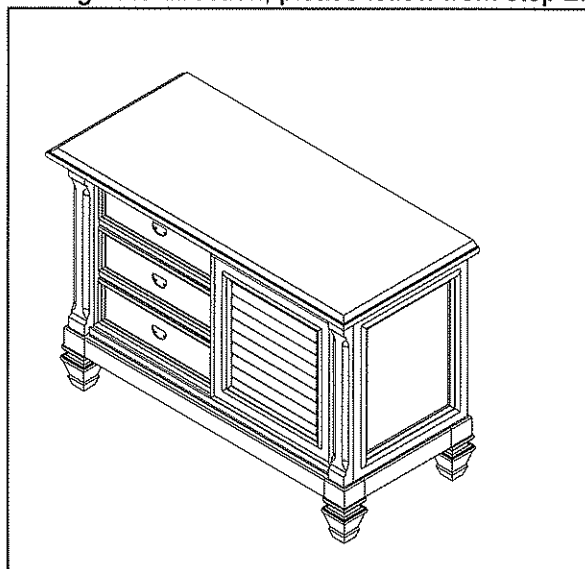

Put removable shelf in vertical along with metal track.




Code	Hardware	Q'TY
A	Allen Key 4x74x29mm 	1 Pc
B	Bolt 1/4"x11.5x50mm 	8Pcs
C	Spring Washer 1/4"x11x2mm 	8Pcs
D	Flat Washer 1/4"x18x2mm 	8Pcs

Assembly Instruction


2697-36: Nightstand



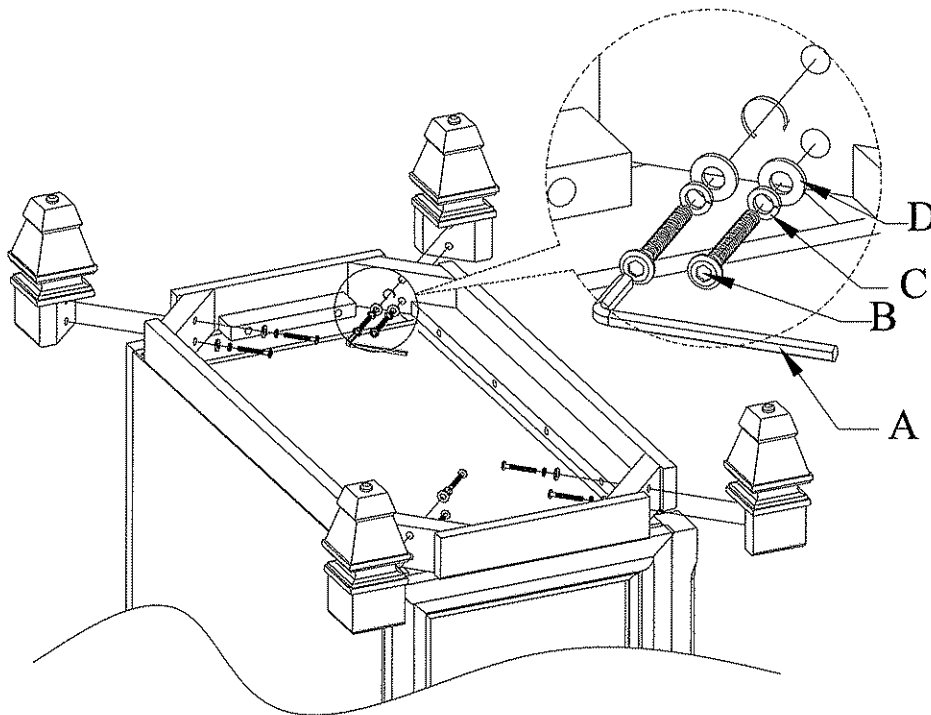

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

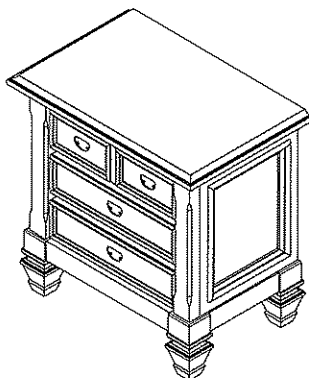

Attach legs by bolts.



Code	Hardware	Q'TY
A	Allen Key 4x74x29mm 	1 Pc
B	Bolt 1/4"x11.5x50mm 	8Pcs
C	Spring Washer 1/4"x11x2mm 	8Pcs
D	Flat Washer 1/4"x18x2mm 	8 Pcs


Assembly Instruction

2697-37: Day Bed Bookcase(Top & Side)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 1

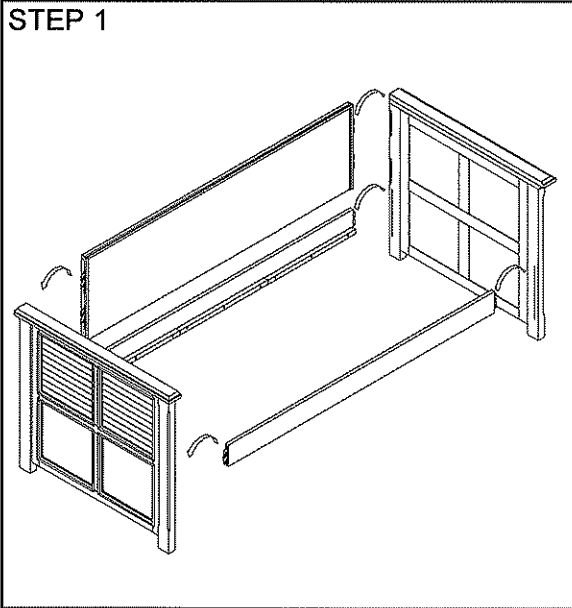

Hang the side rails and back panel together.


STEP 2

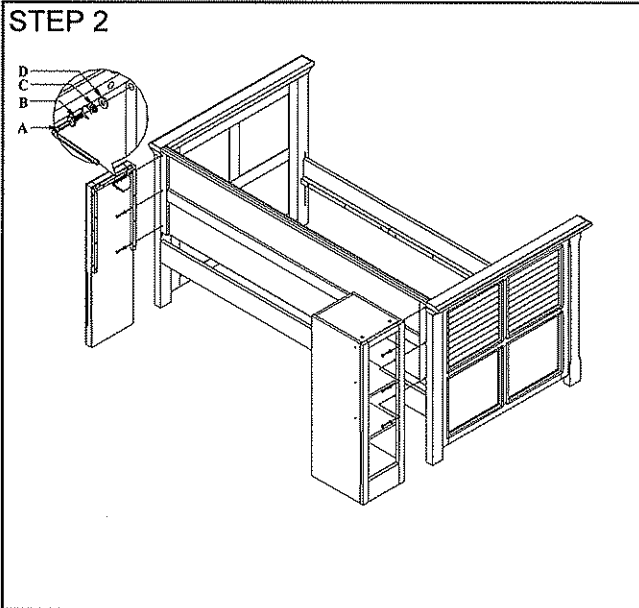

Attach side pier&panel to both ends from back.


Note: Please do not compose slats and support Legs.

STEP 3

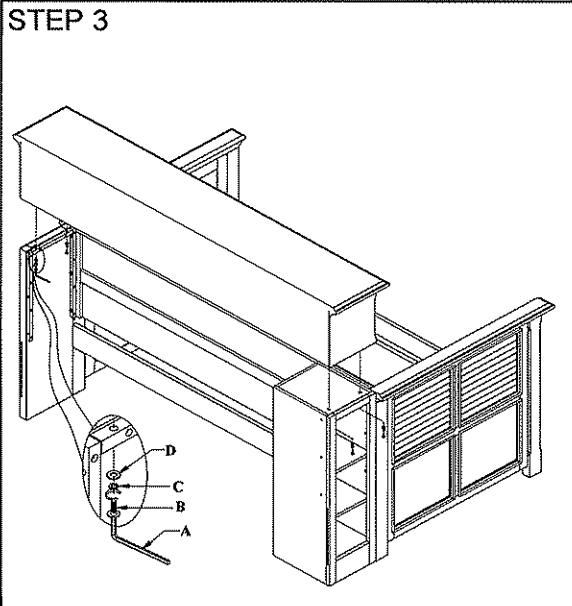

Put top pier on side pier and panel.

STEP 4

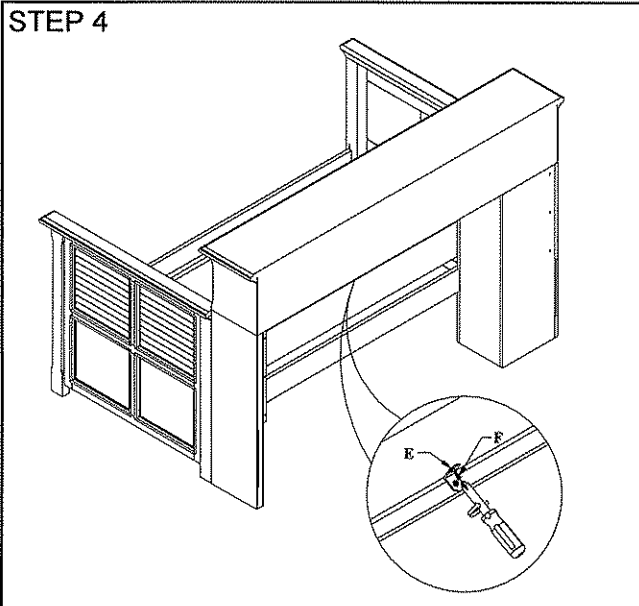

Attach metal bracket in the middle of back panel and bottom of top pier.


Assembly Instruction

2697-37: Day Bed Bookcase(Top & Side)

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 5

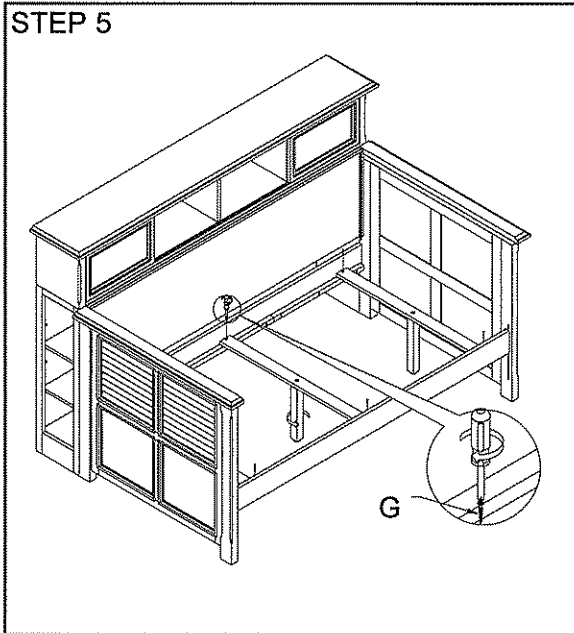


Compose the slats & support legs.

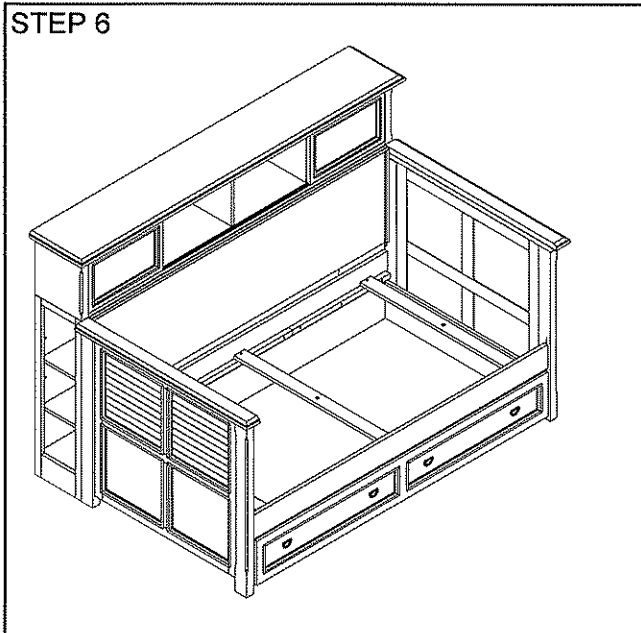






STEP 6



Put trundle unit underneath.

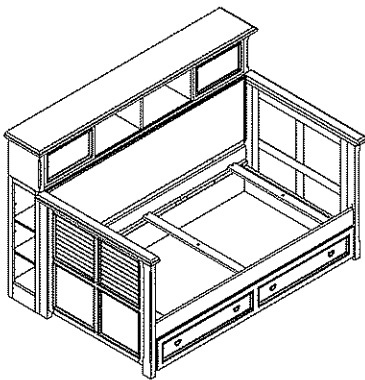Note: Please do not attach support legs.



Code	Hardware	Q'TY
A	Allen Key 4x74x29mm 	1 Pc
B	Bolt 1/4"x11.5x32mm 	10Pcs
C	Spring Washer 1/4"x11x2mm 	10Pcs
D	Flat Washer 1/4"x18x2mm 	10 Pcs
E	Metal Braket 	1 Pcs
F	Screw:#6*15mm 	2 Pcs
G	Screw :8*30mm 	6 Pcs


Assembly Instruction

2697-39: Day Bed Ends

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

STEP 1

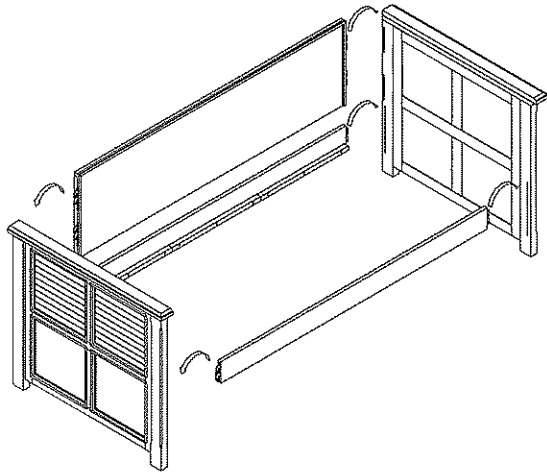


Hang the side rails and back panel together.

STEP 2

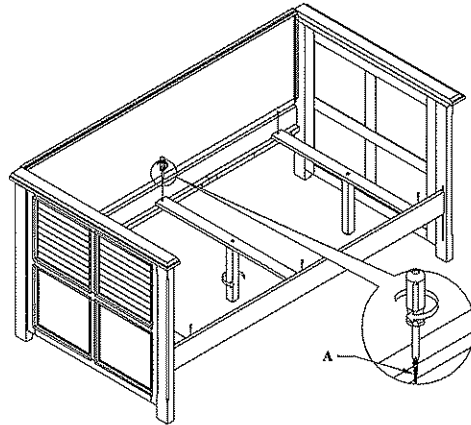

Compose the slats & support legs.


Code	Hardware	Q'TY
A	Screw :8*30mm 	6 Pcs

Assembly Instruction


2697-44: Desk

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

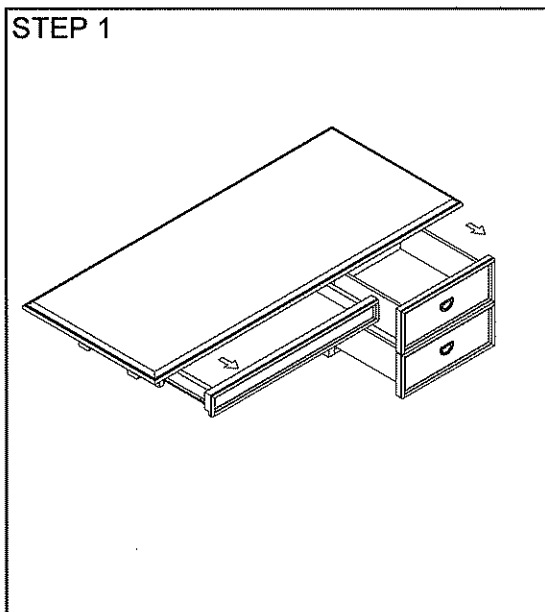


Put out the drawers.

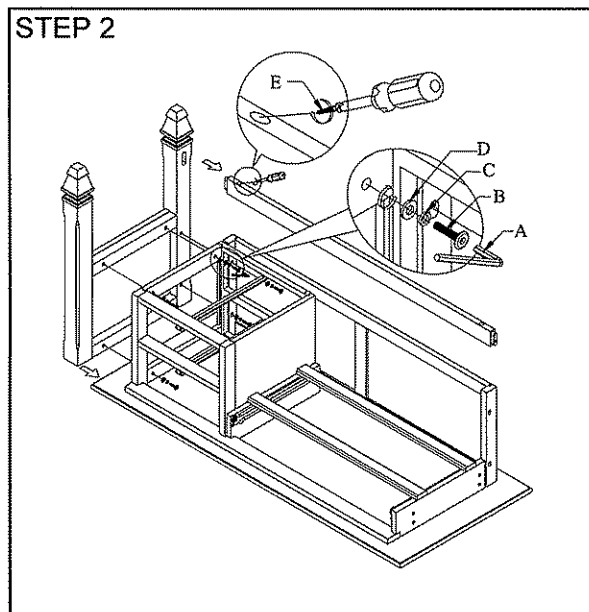

Attach the leg to the desk top from one side, fasten bottom rail to leg by screw.

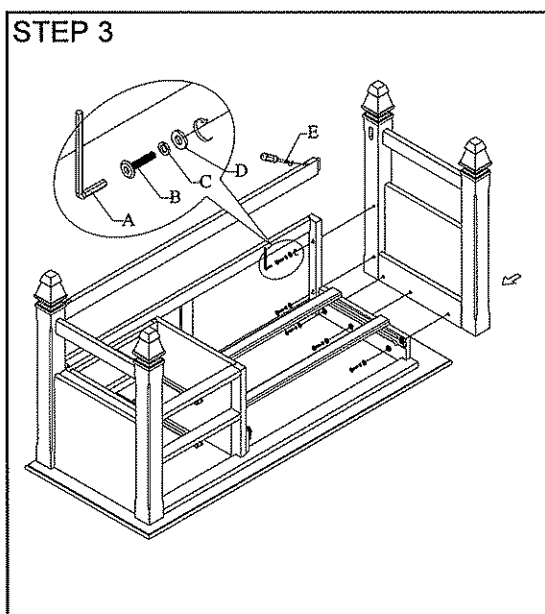

Connect the bottom rail with legs by bolts.
Note: Do not tighten all screws and bolts until the bottom rail is fully assembly.

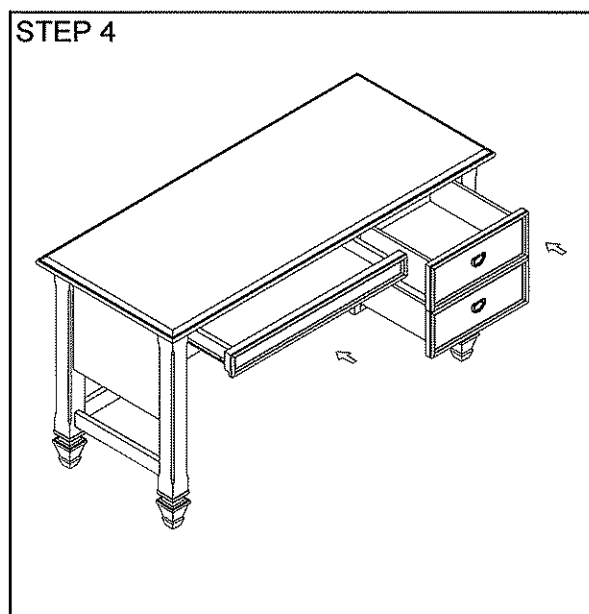

Put in the drawers.


Assembly Instruction

2697-44: Desk


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.





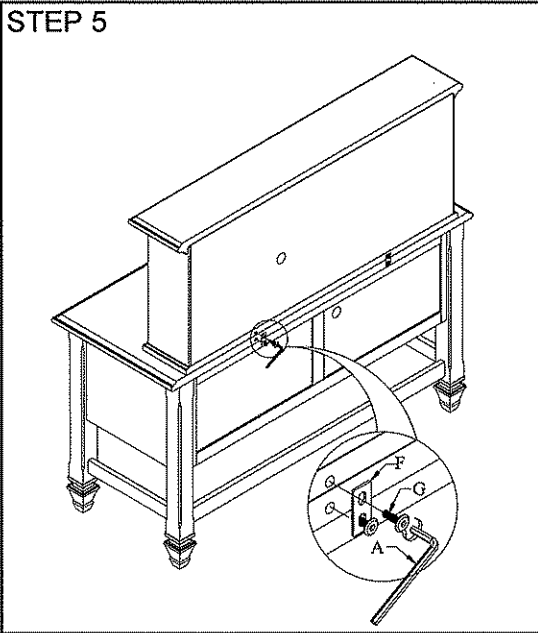


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

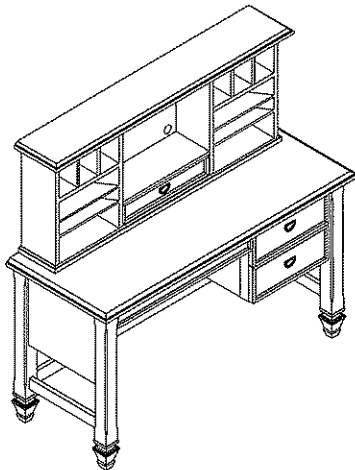STEP 5



Attach Metal Bracket to desk and Hutch.




Code	Hardware	Q'TY
A	Allen Key 4x74x29mm 	1 Pc
B	Bolt 1/4"x11.5x38mm 	11 Pcs
C	Spring Washer 1/4"x11x2mm 	11Pcs
D	Flat Washer 1/4"x18x2mm 	11 Pcs
E	Screw :8*38mm 	2Pcs
F	Metal Bracket 	2 Pcs
G	Bolt 1/4"x15x19mm 	4 Pcs

Assembly Instruction

2697-46F/47F: 3/3 or 4/6 Bookcase Footboard

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

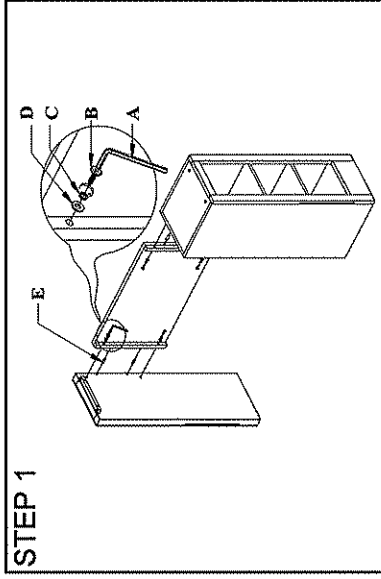

STEP 1


Fix back panel on side pier and panel.

Note: It is workble when you put side pier either right or left.

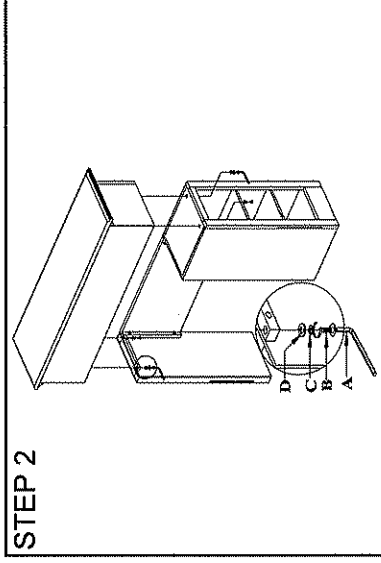


STEP 2

Attach top pier on side pier and panel.

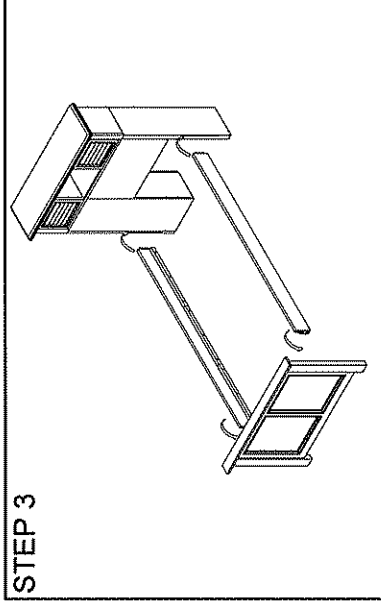


STEP 3

Hang the side rails.

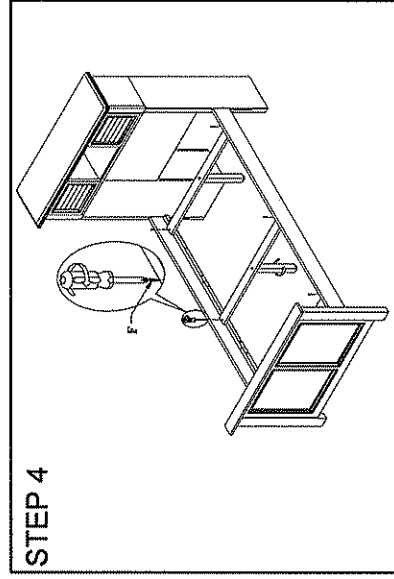

STEP 4

Compose the slats & support legs.

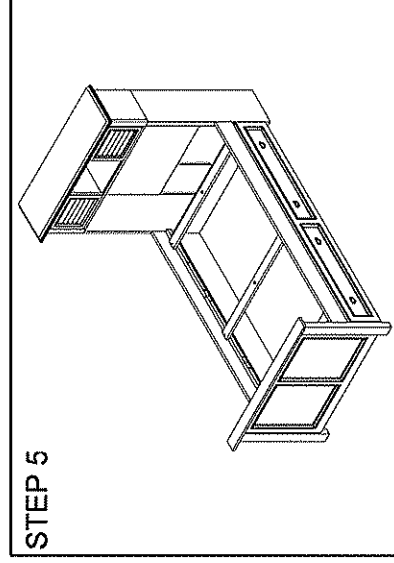

STEP 5

Put trundle unit underneath.

Note: Please do not attach support legs.

Code	Hardware	Q'TY
A	Allen Key 4x74x29mm	1 Pc
B	Bolt 1/4"x11.5x32mm	8Pcs
C	Spring Washer 1/4"x11x2mm	8Pcs
D	Flat Washer 1/4"x18x2mm	8 Pcs
E	Wooden Dowel	4 Pcs
F	Screw .8"x30mm	6 Pcs

Assembly Instructions


2697/2699/Red/Blue/Green-84: Storage Trundle Unit

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.


STEP 1

Attach the two bottom panel by metal plate, and attach the casters to the bottom of the storage trundle unit by screws.

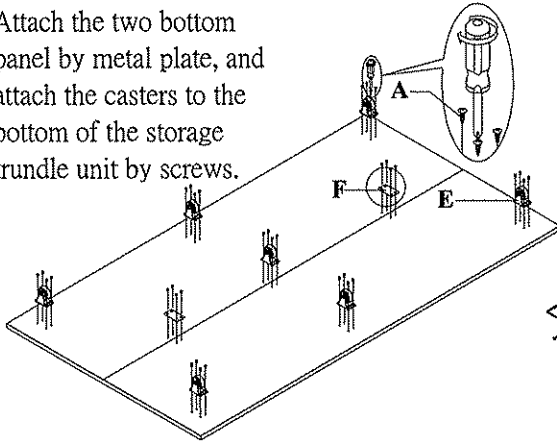



STEP 2

Assemble the front & back panels, and attach the side panels as shown.

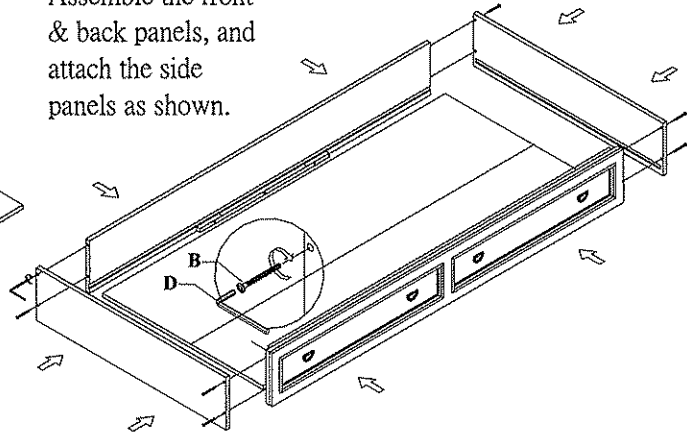



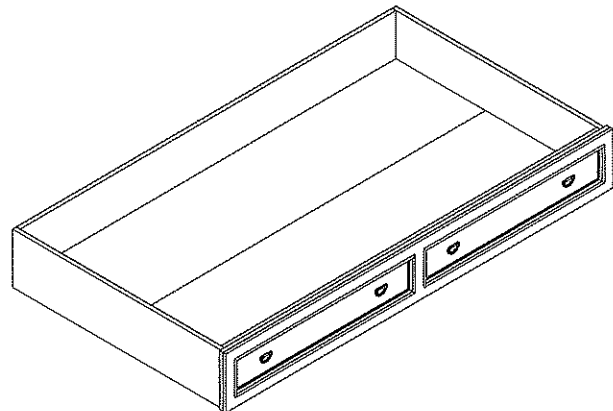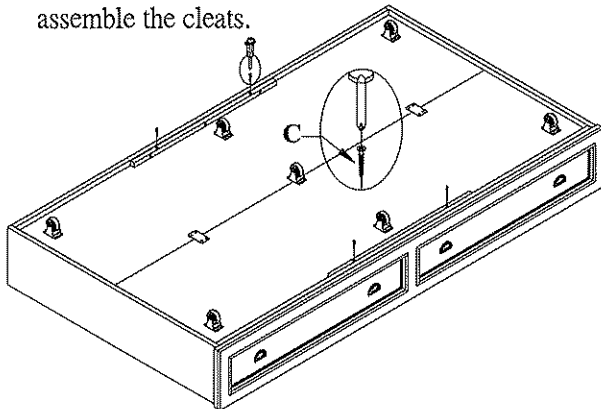



STEP 3

Turn the trundle upside down and assemble the cleats.



Assembly Completed

Step	Code	Hardware List	Q'TY
1	A	Screw :# 8*12mm 	36Pcs
1	E	Caster 58 x 40 x 64mm 	7Pcs
1	F	Metal plate 70*40*2mm 	2Pcs
2	B	Bolt $\frac{1}{4}$ "x20 x 2" 	8Pcs
2	D	Allen Key 4x74x29mm 	1Pc
3	C	Screw :# 8 * 30mm 	4Pcs