


PARTS LIST

- Read all the instructions, identify all components, and be sure you have all parts prior to assembly.
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.

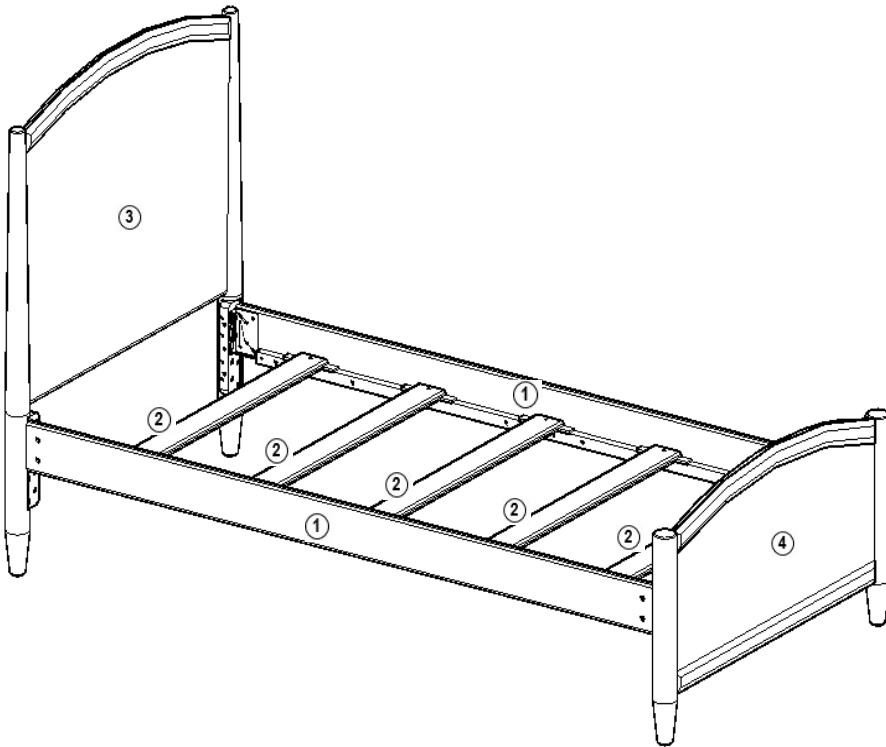

WARNING:

THE BED SLATS WILL NOT SUPPORT A MATTRESS ALONE, THIS BED REQUIRES A BOX SPRING OR BUNKIE BOARD. SOLD SEPARATELY

3411126P TWIN XL PANEL BED WHITE

RTG SKU #	STYLE #	ITEM DESCRIPTION
34611269	12W-115	TWIN PANEL HEADBOARD
34711261	12W-116	TWIN PANEL FOOTBOARD
35511268	12W-774	XL 2 PC SIDE RAILS
37011284	100-172	5 PC TWIN SLAT PACK

3411127P TWIN XL PANEL BED PINK

RTG SKU #	STYLE #	ITEM DESCRIPTION
34611271	12A-115	TWIN PANEL HEADBOARD
34711273	12A-116	TWIN PANEL FOOTBOARD
35511270	12A-774	XL 2 PC SIDE RAILS
37011284	100-172	5 PC TWIN SLAT PACK

3411123P TWIN XL PANEL BED IRON ORE


RTG SKU #	STYLE #	ITEM DESCRIPTION
34611233	12D-115	TWIN PANEL HEADBOARD
34711235	12D-116	TWIN PANEL FOOTBOARD
35511232	12D-774	XL 2 PC SIDE RAILS
37011284	100-172	5 PC TWIN SLAT PACK

3411124P TWIN XL POSTER BED SLATE BLUE

RTG SKU #	STYLE #	ITEM DESCRIPTION
34611245	12E-115	TWIN PANEL HEADBOARD
34711247	12E-116	TWIN PANEL FOOTBOARD
35511244	12E-774	XL 2 PC SIDE RAILS
37011284	100-172	5 PC TWIN SLAT PACK

3411125P TWIN XL POSTER BED LIGHT GRAY

RTG SKU #	STYLE #	ITEM DESCRIPTION
34611257	12G-115	TWIN PANEL HEADBOARD
34711259	12G-116	TWIN PANEL FOOTBOARD
35511256	12G-774	XL 2 PC SIDE RAILS
37011284	100-172	5 PC TWIN SLAT PACK


PARTS LIST		QTY	PARTS LIST		QTY	HARDWARE LIST		QTY	TOOLS NEEDED	
1		2 Pcs	3		1 Pc	A		10 Pcs	Phillips screwdriver (not included) 	
	XL Side rails					B		1 Pc	Allen wrench (included) 	
2		5 Pcs	4		1 Pc	C		8 Pcs		
						5/16"X20mm bolt Pre-assembled in headboard and footboard				

ASSEMBLY INSTRUCTIONS

THERE ARE TWO POSSIBLE SETTINGS, HIGH (FACTORY SETTINGS) AND LOW


STEP 1

 B

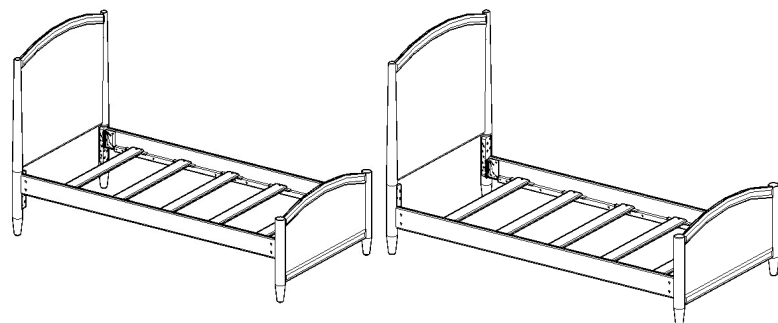



HIGH SETTING STEPS 1-4

LOW SETTING STEPS 6-9

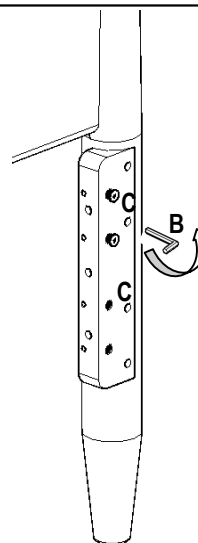

Loosen bolts in headboard & footboard posts (1/4" approx.)
Do not remove, BOLTS ARE PRE-ASSEMBLED.


STEP 2

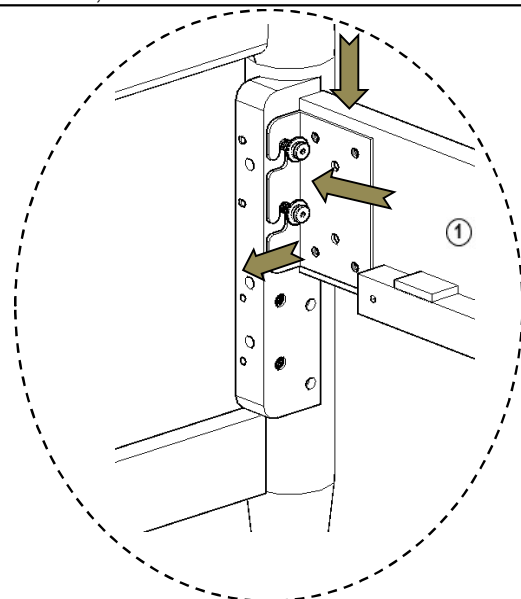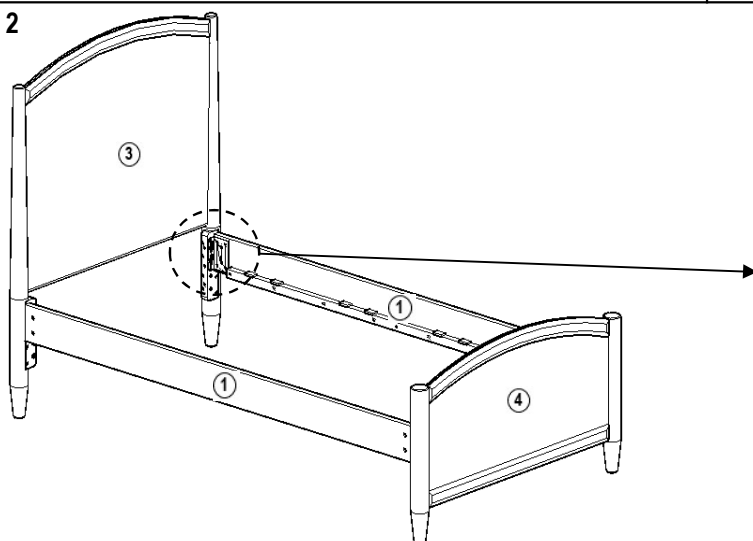

Assemble side rails

STEP 3

 B

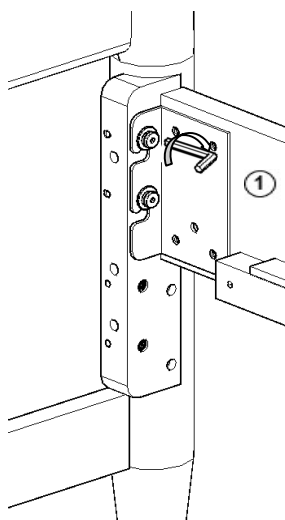


tighten all bolts

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 4


 A

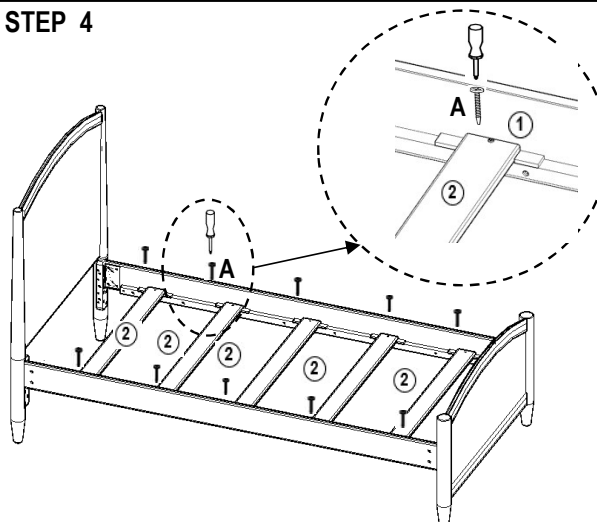Install slats, one on each space between the small blocks,
then fasten with 1 1/4" screws.

ASSEMBLY INSTRUCTIONS



STEP 5

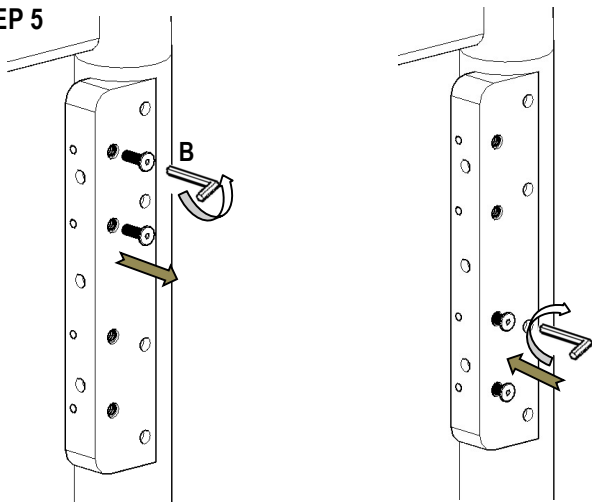

 B

Remove bolts from top setting then install in the lower setting, do not tighten, allow 1/4" space between post and bolt head, repeat for all posts.


STEP 6

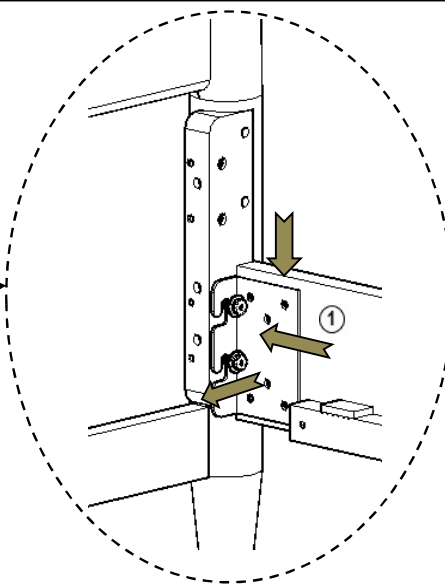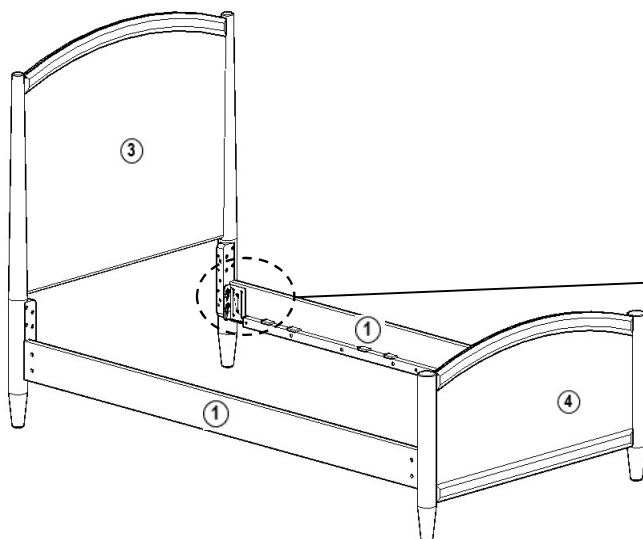


Assemble side rails

STEP 7

 B

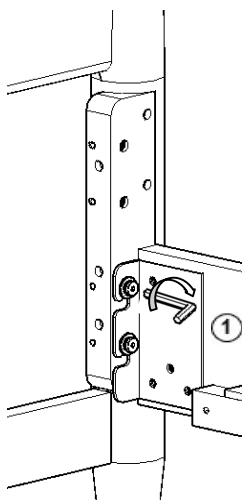

STEP 8

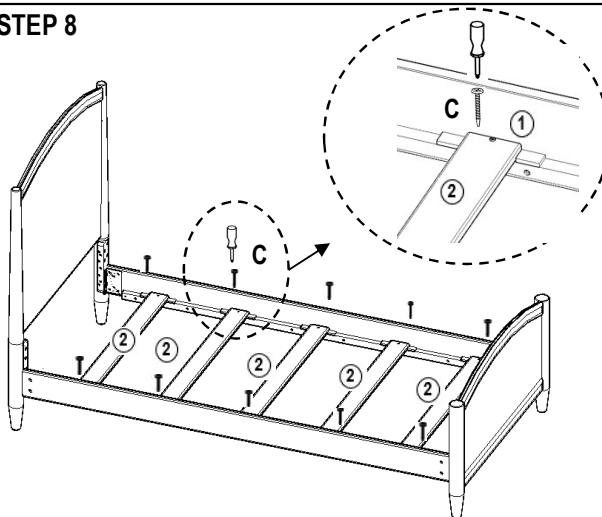

 C



tighten all bolts

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

Install slats, one on each space between the small blocks, then fasten with 1 1/4" screws.