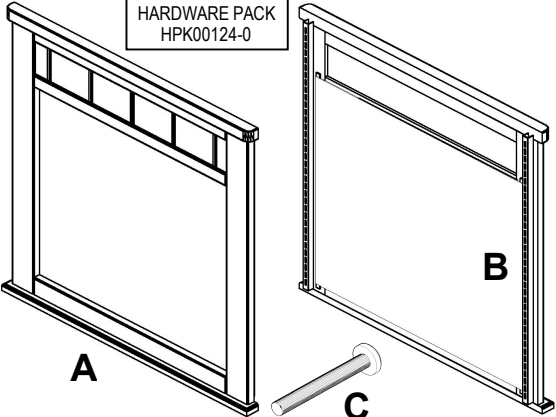
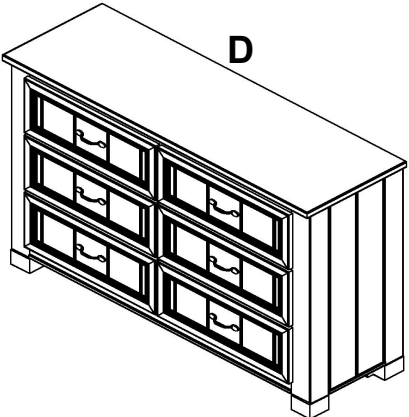


CANYON FURNITURE COMPANY
LANDSCAPE MIRROR ASSEMBLY INSTRUCTIONS (28-300)

LIST OF CONTENTS
COTTAGE COLORS COLLECTION

THANK YOU FOR YOUR PURCHASE ! PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST.

LANDSCAPE MIRROR BOX (28-300)	6 DRAWER DRESSER BOX (28-206)	TOOLS NEEDED
A.- (1) LANDSCAPE MIRROR B.- (2) 36" METAL SUPPORTS C.- (4) 1 1/4" SCREWS HARDWARE PACK (HPK00124-0) C.- (4) 1 1/4" SCREWS	D.- (1) 6 DRAWER DRESSER	PHILLIPS SCREWDRIVER (NOT INCLUDED)
		<div style="border: 1px dashed red; padding: 5px;"> <p>IMPORTANT NOTES : HANDLE THE MIRROR WITH CARE, GLASS IS FRAGILE. BEFORE YOU BEGIN YOUR PROJECT, COMPLETELY READ THE ASSEMBLY INSTRUCTIONS</p> </div>

6 DRAWER DRESSER WITH LANDSCAPE MIRROR ASSEMBLY

- 1.-UNPACK THE LANDSCAPE MIRROR (A) AND REMOVE THE 1 1/4" SCREWS&36" METAL SUPPORTS INSTALLED IN THE LANDSCAPE MIRROR,USING YOUR PHILLIPS SCREWDRIVER (**FIG.1**), THEN SLIDE DOWN BOTH 36" METAL SUPPORTS AND REPLACED CONNECTING USING REMOVAL SCREWS, **SEE FIG.2**.
- 2.- TAKE THE 6 DRAWER DRESSER (D) AND PLACE IT NEAR TO THE FINAL POSITION IN THE ROOM.
- 3.- CAREFULLY PLACE LANDSCAPE MIRROR ON THE 6 DRAWER DRESSER AND LINE UP CENTER, **SEE FIG.3**
- 4.- ATTACH THE 36" METAL SUPPORTS TO 6 DRW DRESSER,BY ALIGNING 36" METAL SUPPORTS WITH THE HOLES IN THE DRESSER, ATTACH WITH 1 1/4" SCREWS USING YOUR SCREWDRIVER TIGHT ALL SCREWS, **SEE FIG.3**

