




PARTS LIST

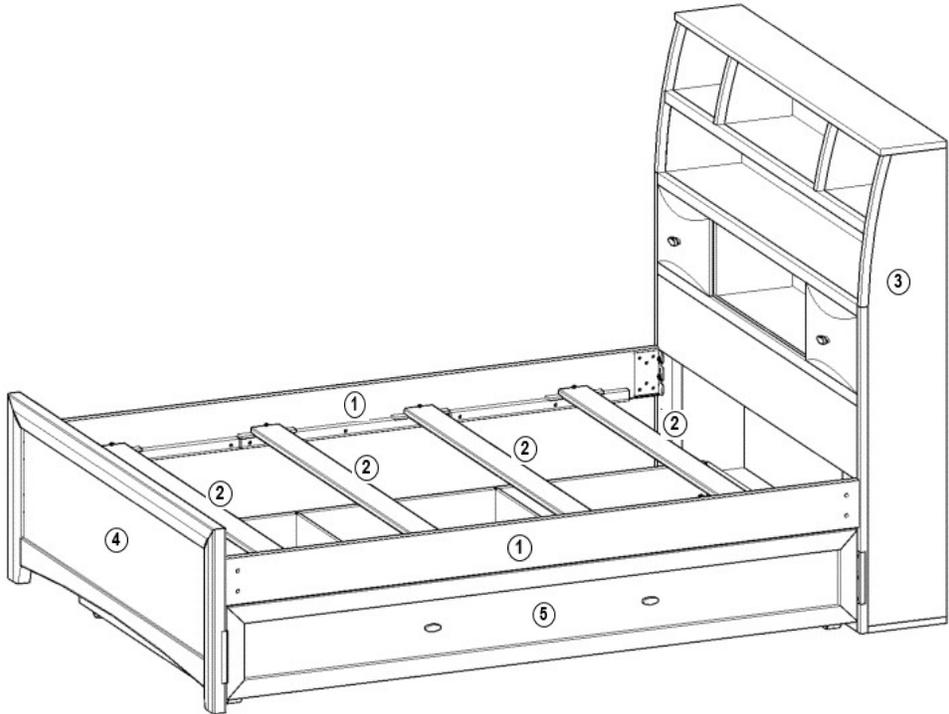

3432360P FULL BOOKCASE BED WALNUT		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35023605	3260814	FULL BOOKCASE HEADBOARD
35123607	3260815	FULL FOOTBOARD
35223609	3260771	2 PC. SIDE RAILS
38100234	100-646	FULL SLAT PACK (4)
35323601	3260744	TRUNDLE BED OPTIONAL


3431326P FULL BOOKCASE BED WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35013262	3261814	FULL BOOKCASE HEADBOARD
35113264	3261815	FULL FOOTBOARD
35213266	3261771	2 PC. SIDE RAILS
38100234	100-646	FULL SLAT PACK (4)
35313268	3261744	TRUNDLE BED OPTIONAL

WARNING:
THE BED SLATS WILL NOT SUPPORT A MATTRESS ALONE, THIS BED REQUIRES A BOX SPRING OR BUNKIE BOARD. SOLD SEPARATELY

PARTS LIST		QTY	PARTS LIST		QTY	HARDWARE LIST		QTY	TOOLS NEEDED	
1	 Side rails	2 Pcs	3	 Full bookcase headboard	1 Pc	A	 1 1/4" Screws	8 Pcs	Phillips screwdriver (not included) 	
2	 Full slats	4 Pcs	4	 Full footboard	1 Pc	B	 Allen wrench	1 Pc	Allen wrench (included) 	
			5	 Trundle bed (Optional)	1 Pc					

ASSEMBLY INSTRUCTIONS



THERE ARE TWO POSSIBLE SETTINGS, HIGH (FACTORY SETTINGS) AND LOW
IF YOU PURCHASE A TRUNDLE BED DO HIGH SETTINGS,
IF NOT DO LOW SETTINGS.

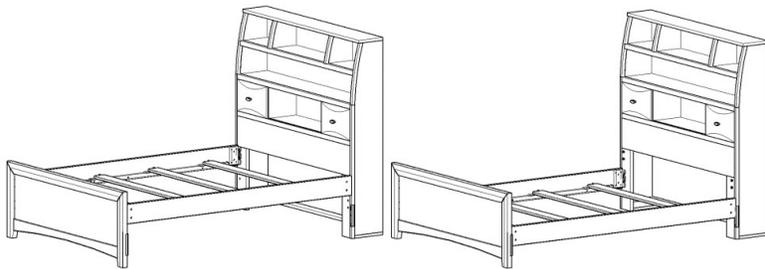

HIGH SETTING STEPS 1-5



LOW SETTING STEPS 6-9

STEP 1

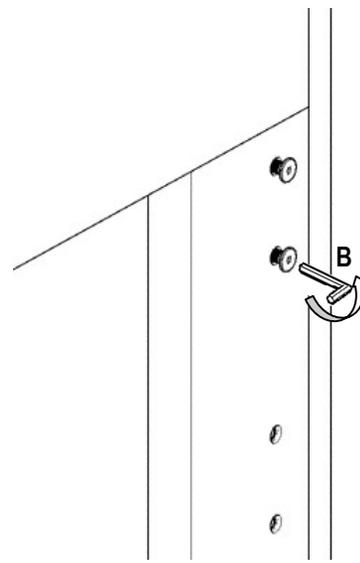


Loosen bolts in headboard & footboard posts (1/4" approx.)
Do not remove, **BOLTS ARE PRE-ASSEMBLED.**

STEP 2

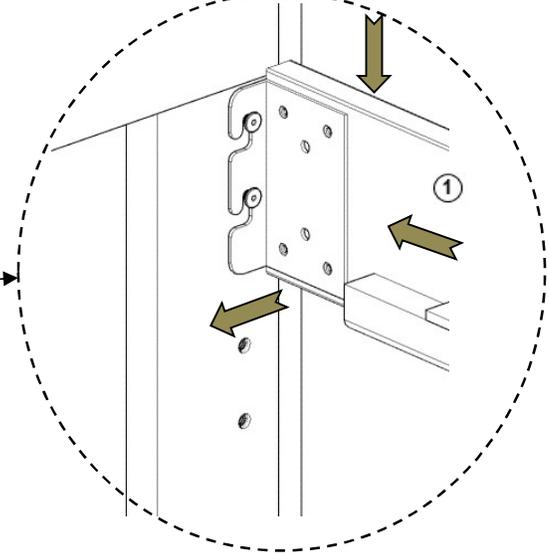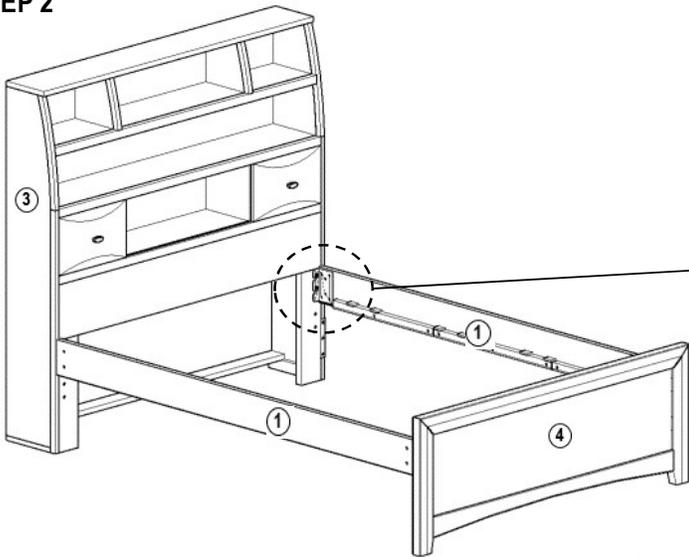

Assemble side rails



STEP 3

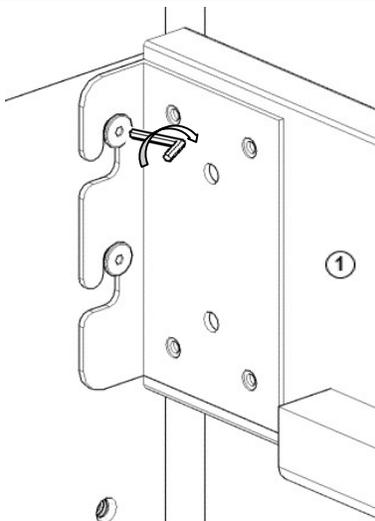

tighten all bolts

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

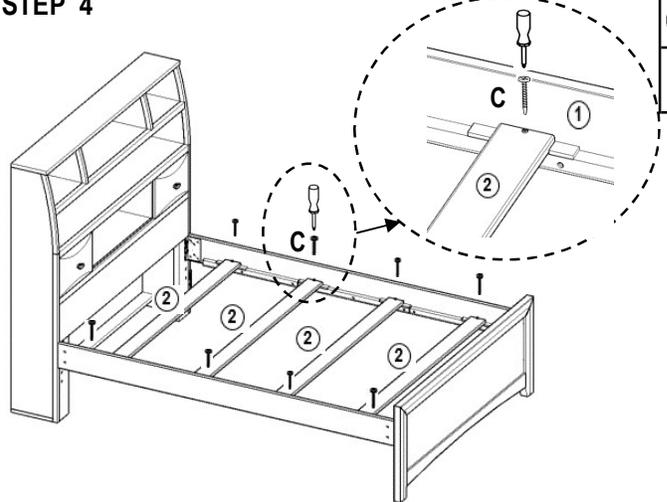

Install slats, one on each space between the small blocks,
then fasten with 1 1/4" screws.


ASSEMBLY INSTRUCTIONS

STEP 5

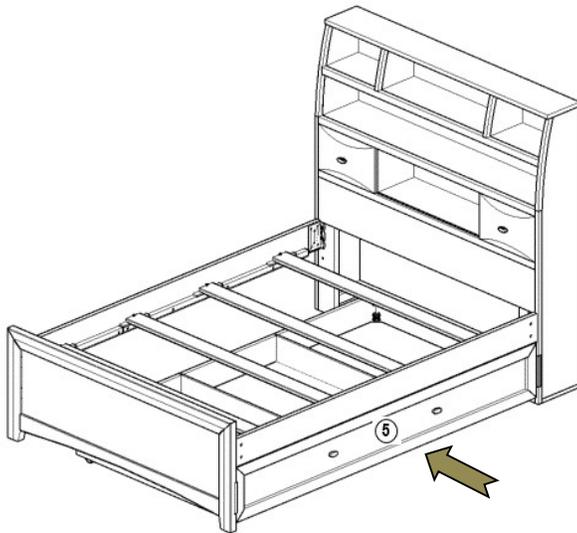



For **optional** Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.

STEP 6

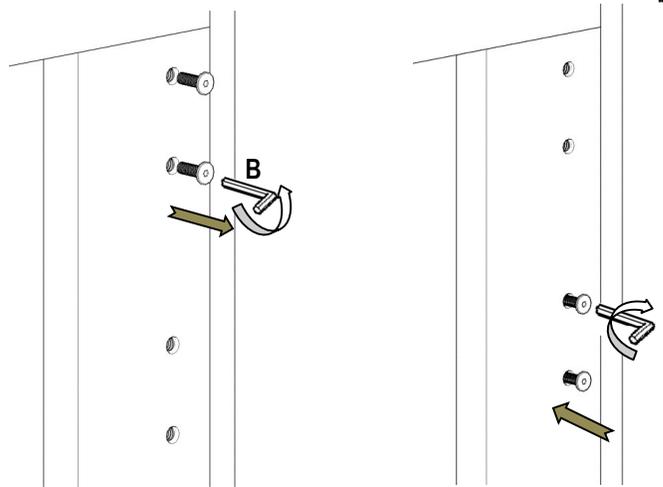


Remove bolts from top setting then install in the lower setting, do not tighten, allow 1/4" space between post and bolt head, repeat for all posts

STEP 7

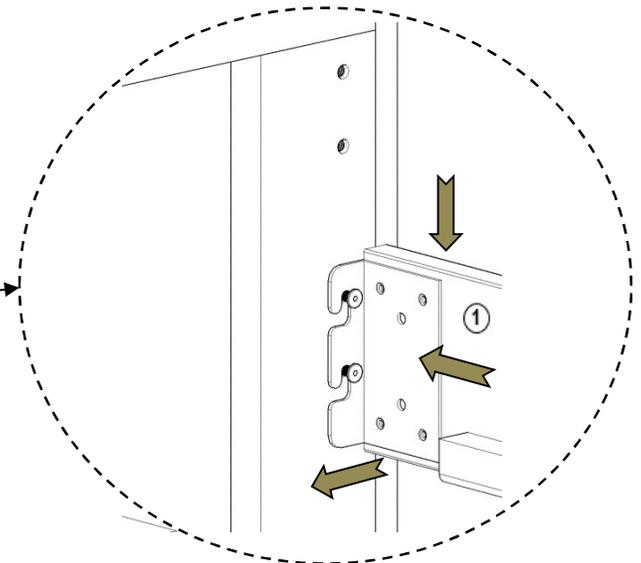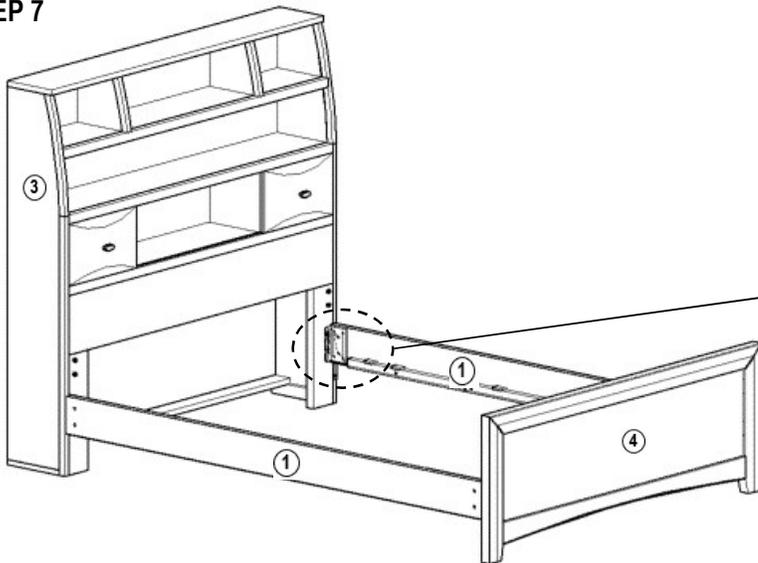

Assemble side rails


STEP 8

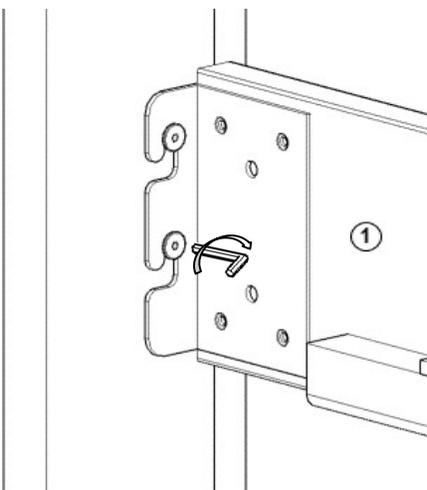

tighten all bolts

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 9

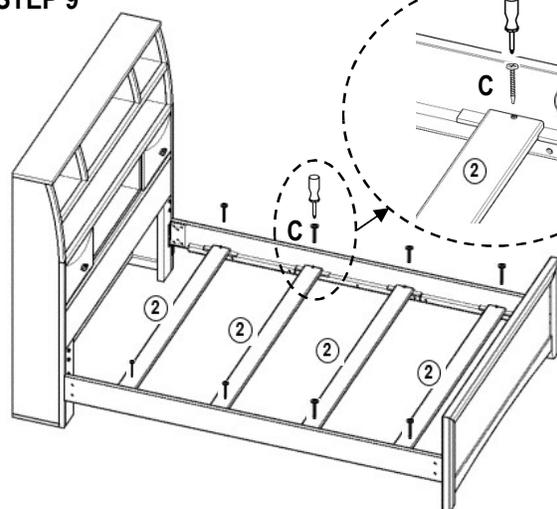

Install slats, one on each space between the small blocks, then fasten with 1 1/4" screws.