



ROOMS TO GO
KIDS
 Manufactured for Rooms to Go

SUGAR HOLLOW COLLECTION

THANK YOU FOR YOUR PURCHASE

- Read all the instructions, identify all components, and be sure you have all parts prior to assembly
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.

TWIN DAYBED

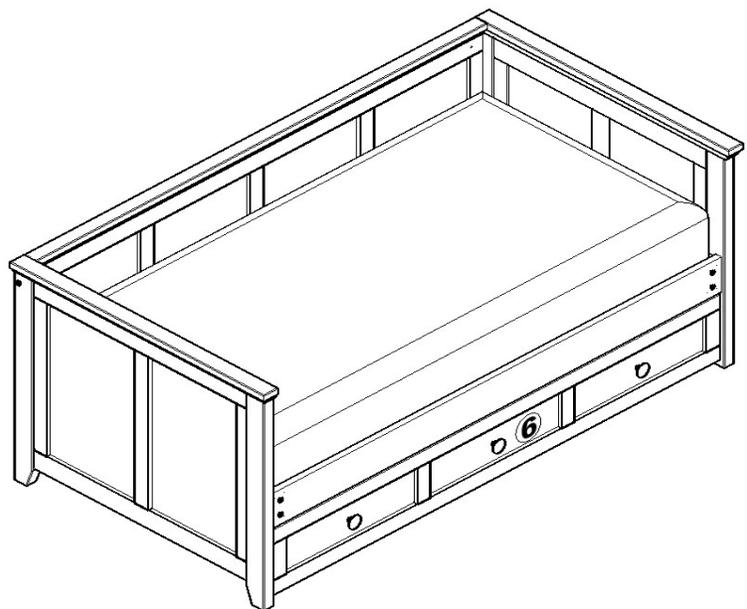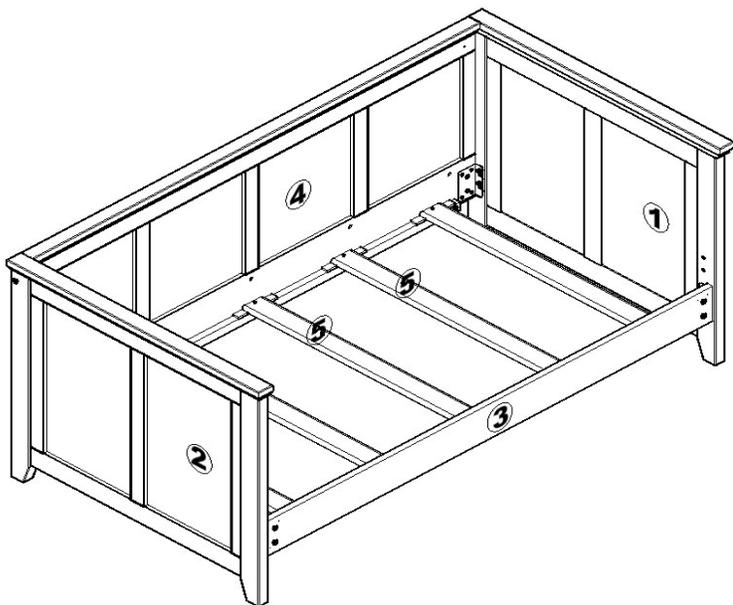

3431809P		TWIN DAYBED BLACK
RTG SKU #	STYLE #	ITEM DESCRIPTION
34918093	18B-113	TWIN DAYBED SIDE PANELS
35018096	18B-938	DAYBED BACK PANEL
35118098	18B-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
34818091	18B-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3431807P		TWIN DAYBED WHITE
RTG SKU #	STYLE #	ITEM DESCRIPTION
34918079	18W-113	TWIN DAYBED SIDE PANELS
35018072	18W-938	DAYBED BACK PANEL
35118074	18W-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
34818077	18W-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

TOOLS NEEDED



PHILLIPS SCREWDRIVER [NOT INCLUDED]


ALLEN WRENCH [INCLUDED]


**TWO PEOPLE ARE NEEDED TO ASSEMBLE
 DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
 ARE CONNECTED TOGETHER**


WARNING:
 THE BED SLATS WILL NOT SUPPORT A MATTRESS
 ALONE, THIS BED REQUIRES A BOX SPRING OR
 BUNKIE BOARD. SOLD SEPARATELY


PART LIST

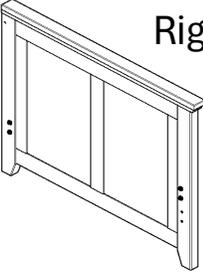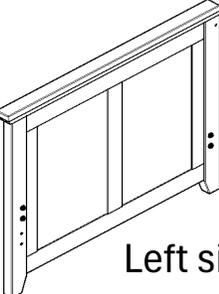[18-113] TWIN DAYBED SIDE PANELS	QTY
 <p>Right side</p> <p>1</p> <p>1 PCS</p>	
 <p>Left side</p> <p>2</p> <p>1 PCS</p>	

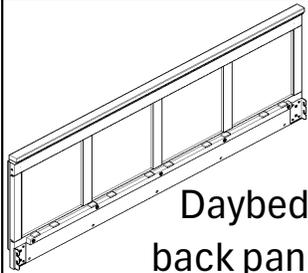
[18-938] DAYBED BACK PANEL	QTY
 <p>Daybed back panel</p> <p>4</p> <p>1 PCS</p>	


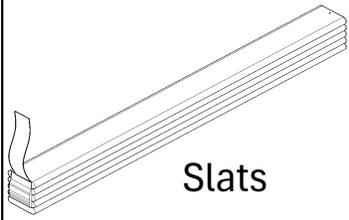
[100-172] 5 PCS TWIN SLAT PACK	QTY
 <p>Slats</p> <p>5</p> <p>1 SET</p>	

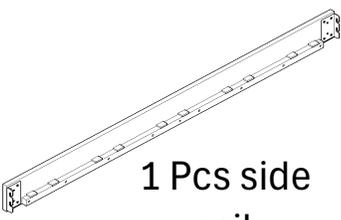
[18-772] 1PCS SIDE RAIL	QTY
 <p>1 Pcs side rail</p> <p>3</p> <p>1 PCS</p>	


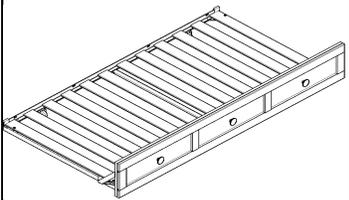
[18-745] TRUNDLE BED FRONT PANEL	QTY
 <p>OPTIONAL</p> <p>6</p> <p>1 PCS</p>	

HARDWARE LIST

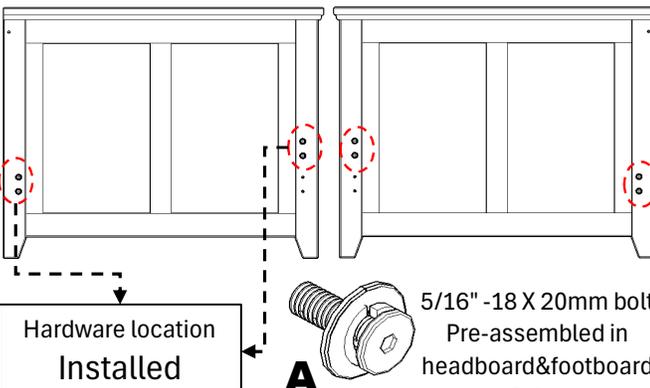[18-113] TWIN DAYBED SIDE PANELS	QTY
 <p>Hardware location Installed</p> <p>A</p> <p>5/16" -18 X 20mm bolt Pre-assembled in headboard&footboard (8 Pcs)</p>	

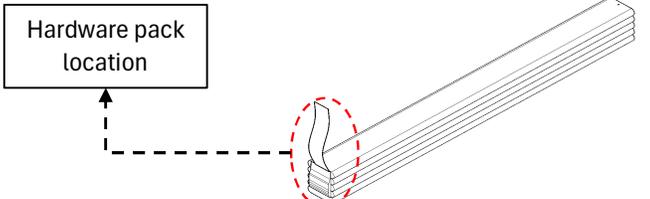
[100-172] HARDWARE PACK (1 SET)	QTY
 <p>6 X 1 1/4" Screw</p> <p>F</p> <p>10 PCS</p>	
 <p>Hardware pack location</p>	

[18-938] HARDWARE PACK (1 SET)	QTY
 <p>5/16" - 18 X 80mm bolt</p> <p>B</p> <p>2 PCS</p>	
 <p>5mm Allen wrench</p> <p>C</p> <p>1 PCS</p>	
 <p>4mm Allen wrench</p> <p>D</p> <p>1 PCS</p>	

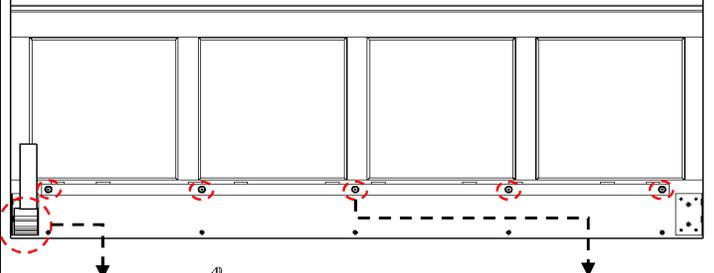 <p>Hardware pack location</p>	 <p>5/16" -18 X 50mm bolt Installed (5 Pcs)</p> <p>E</p>
--	--


ASSEMBLY INSTRUCTIONS

STEP 1-5

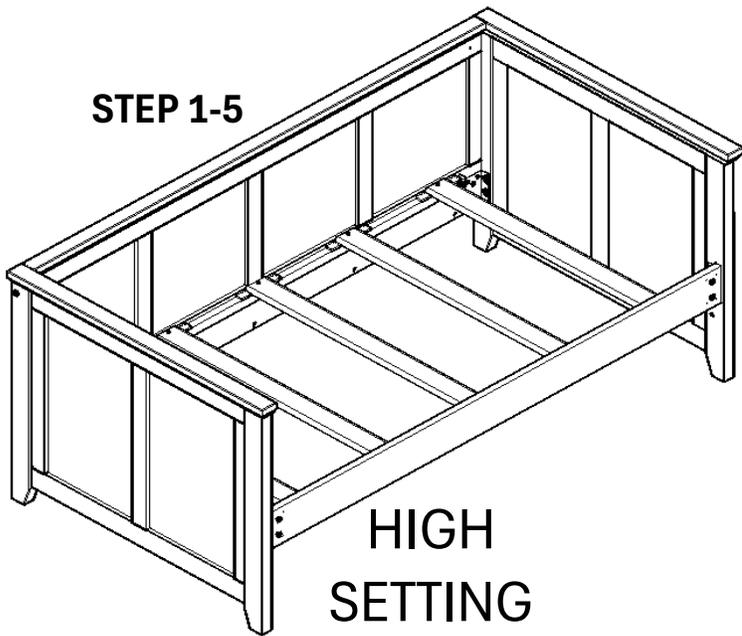

HIGH
SETTING

STEP 6-11



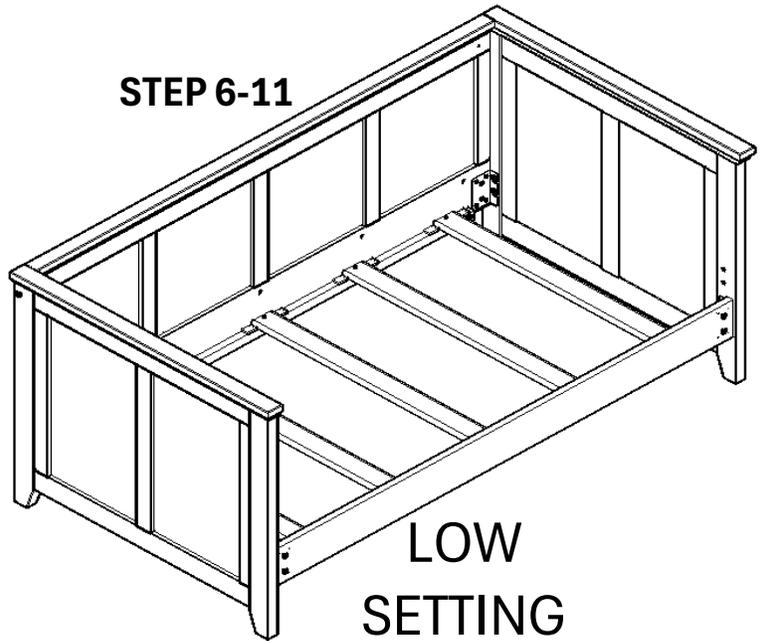


LOW
SETTING

THERE ARE TWO POSSIBLE SETTINGS, HIGH [Factory settings] AND LOW, IF YOU PURCHASE A TRUNDLE BED DO HIGH SETTINGS, IF NOT DO LOW SETTINGS.


STEP #1

HIGH SETTING

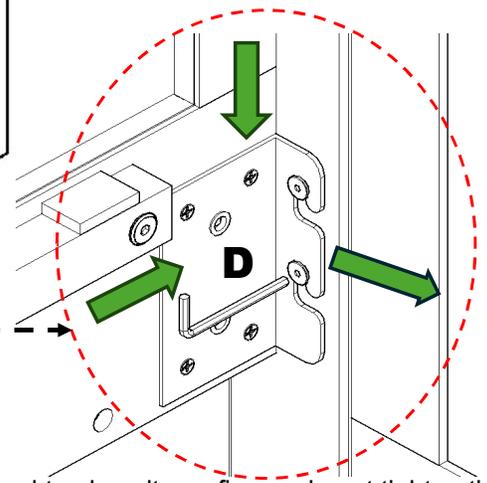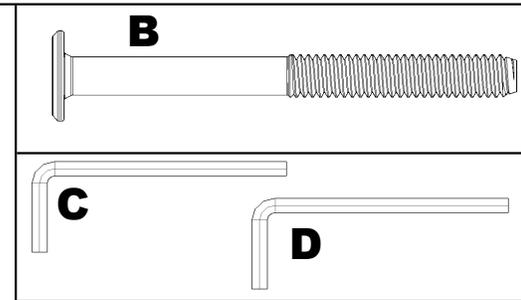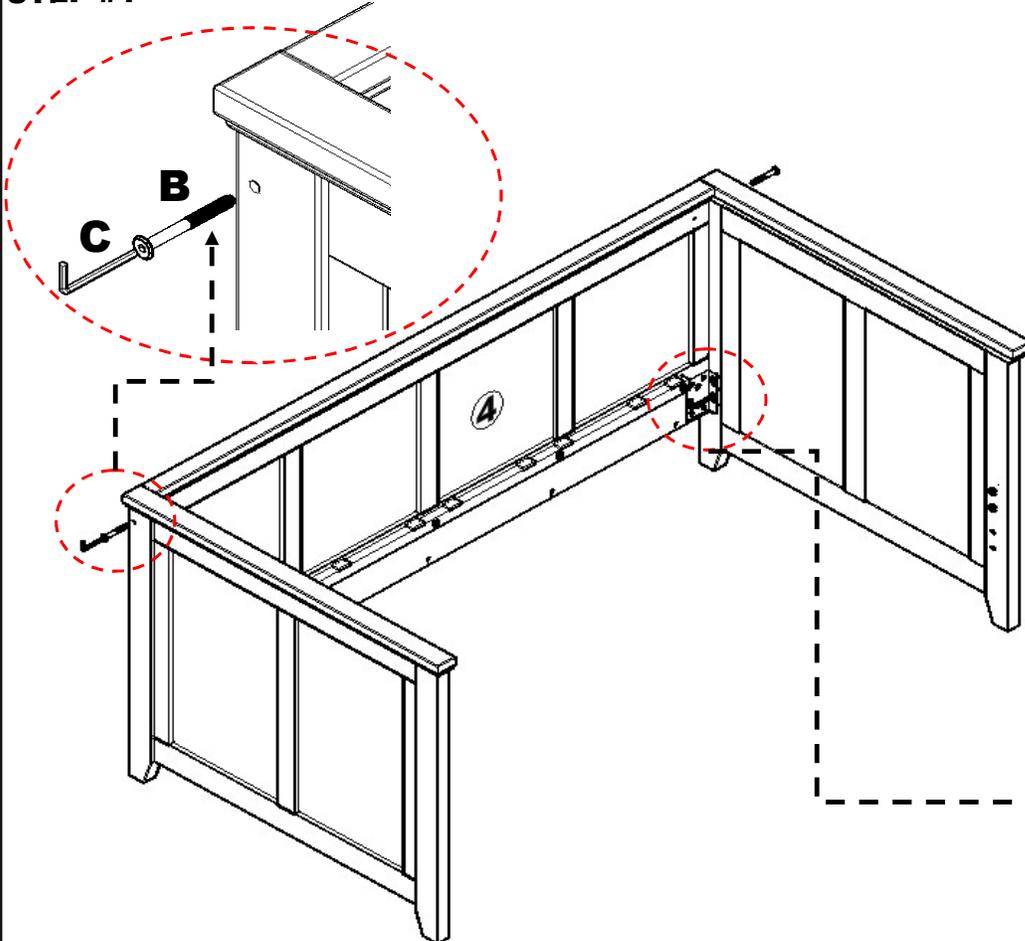


To assemble daybed back panel first loosen bolts 1/4" aprox. both side panels, proceed to place it see figure, do not tighten then assemble the long bolt in the back top side hole, then tighten all bolts.

STEP #2

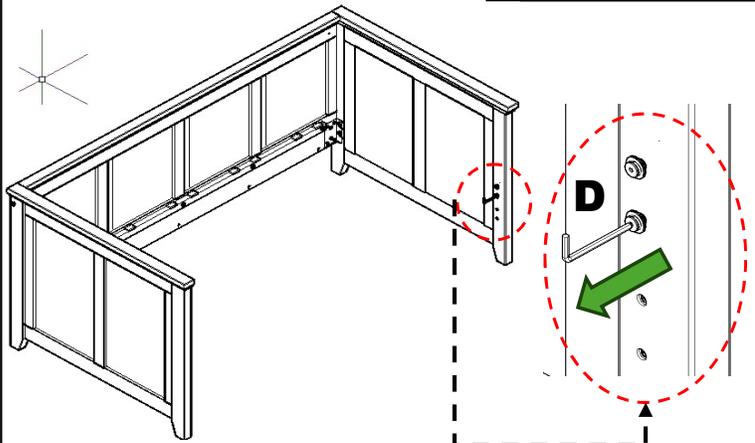




Loosen bolts in both side panels 1/4" aprox. Do not remove
BOLTS ARE PRE-ASSEMBLED.

STEP #3

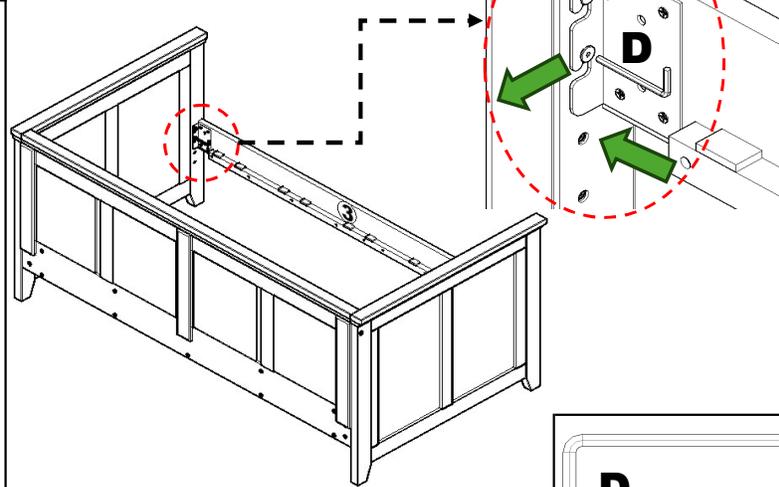


Assemble 1 pcs side rail.

STEP #4

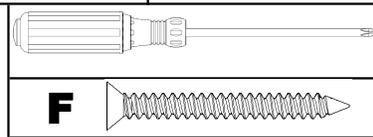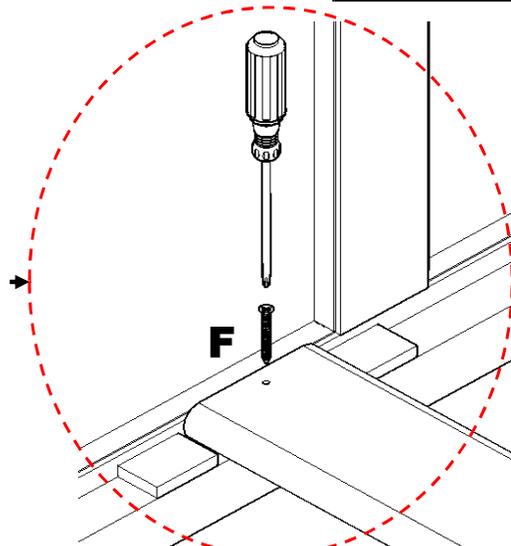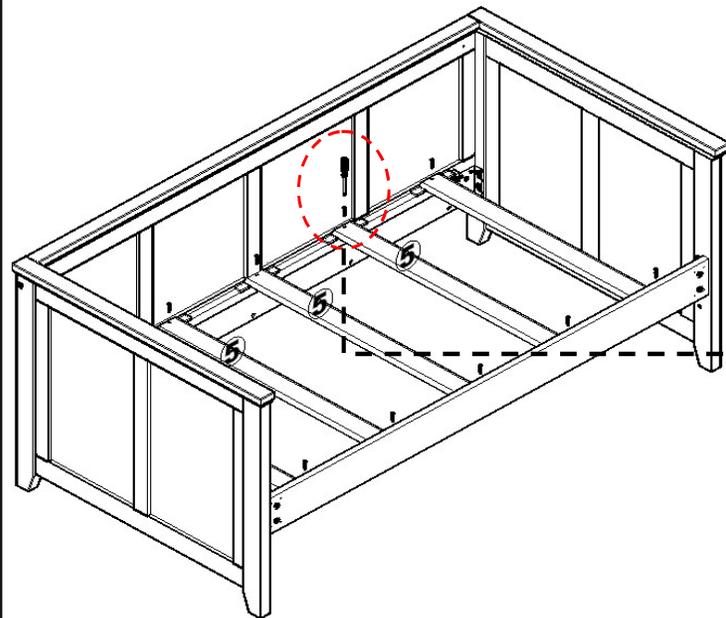

Install slats, one on each space between the small blocks and then fasten with 1 1/4" screws.


STEP #5

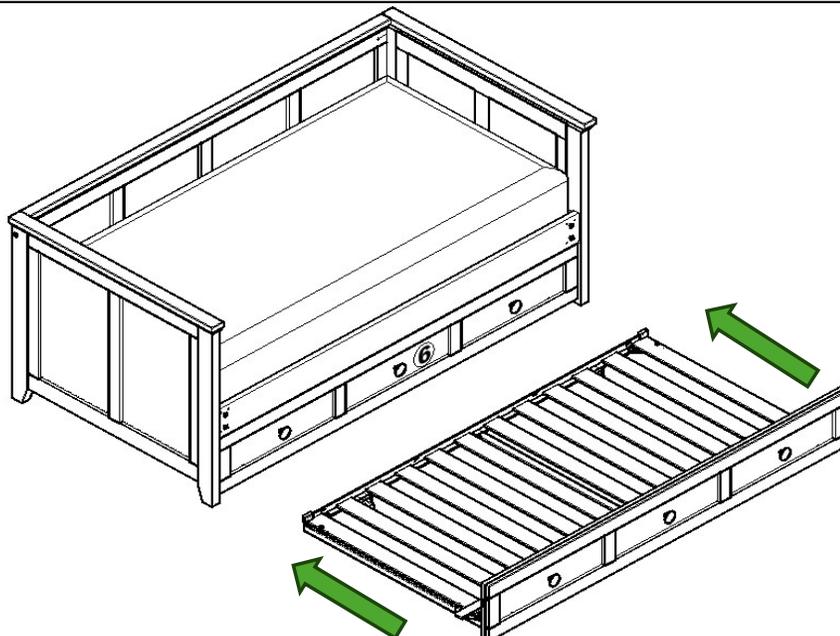

For **OPTIONAL** Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.


STEP #6

LOW SETTING

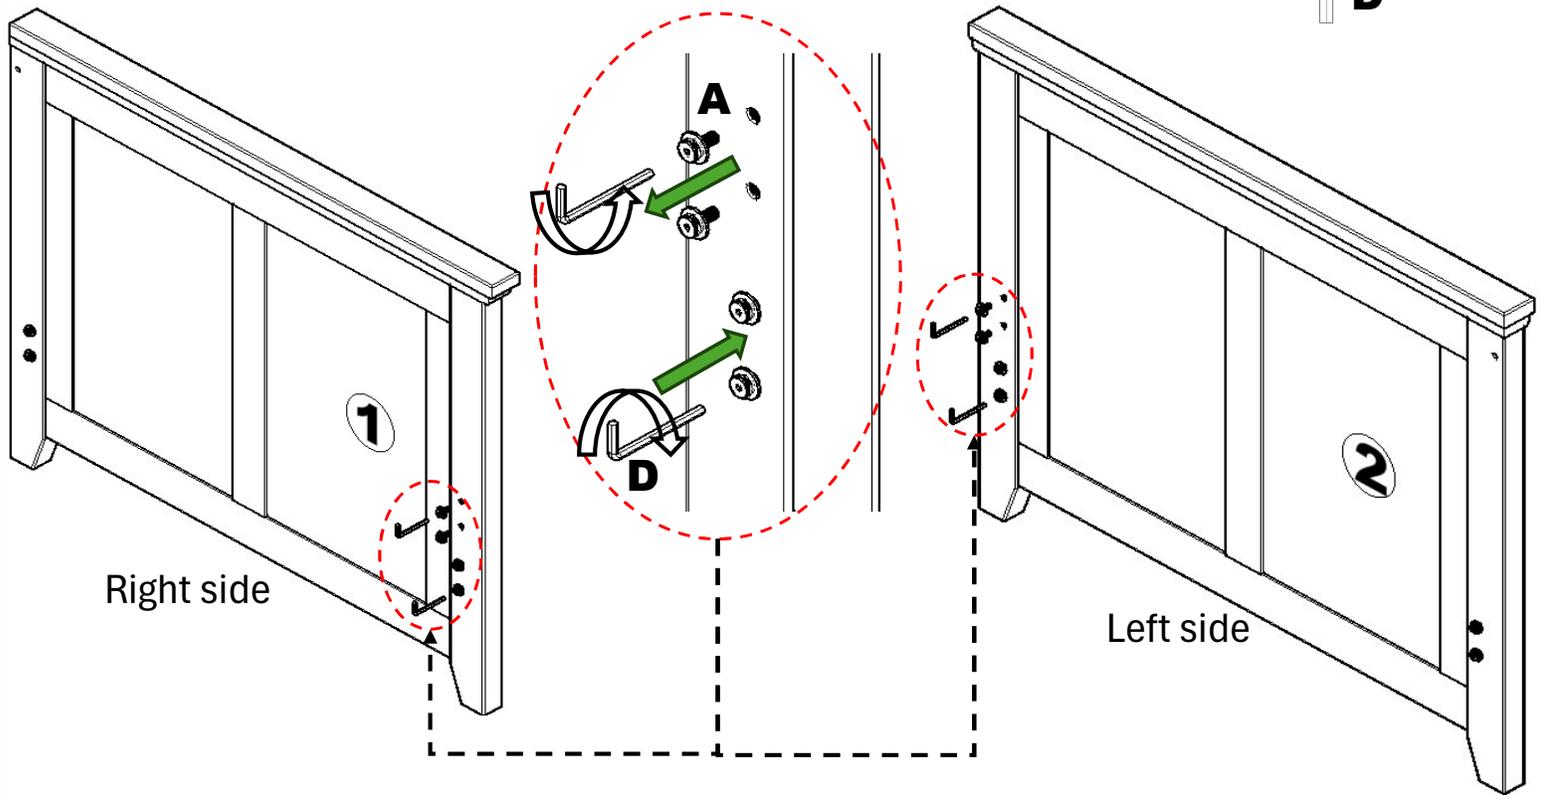


Remove bolts from top factory setting then installed in lower setting, see figure

STEP #7

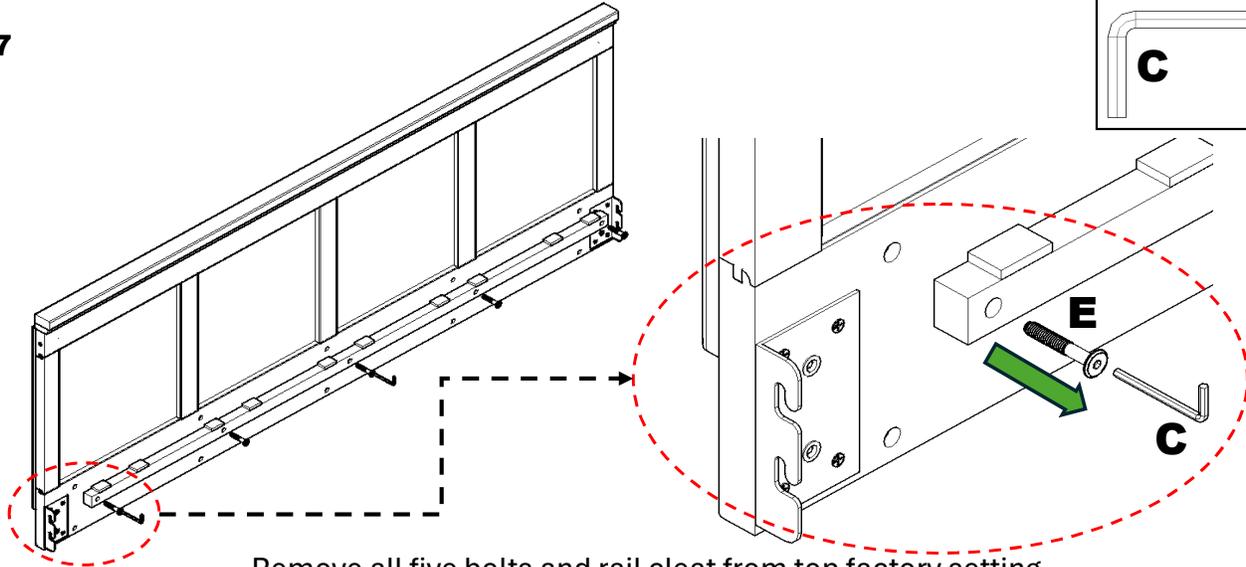


Remove all five bolts and rail cleat from top factory setting.

STEP #8

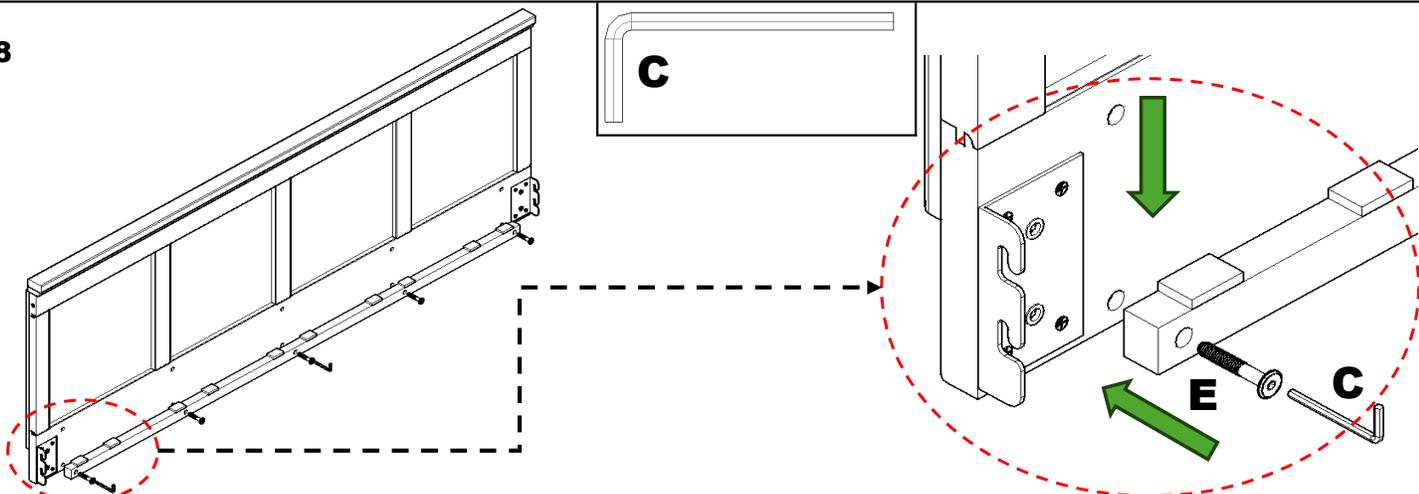


Assemble cleat in the low setting **MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY.**

STEP #9

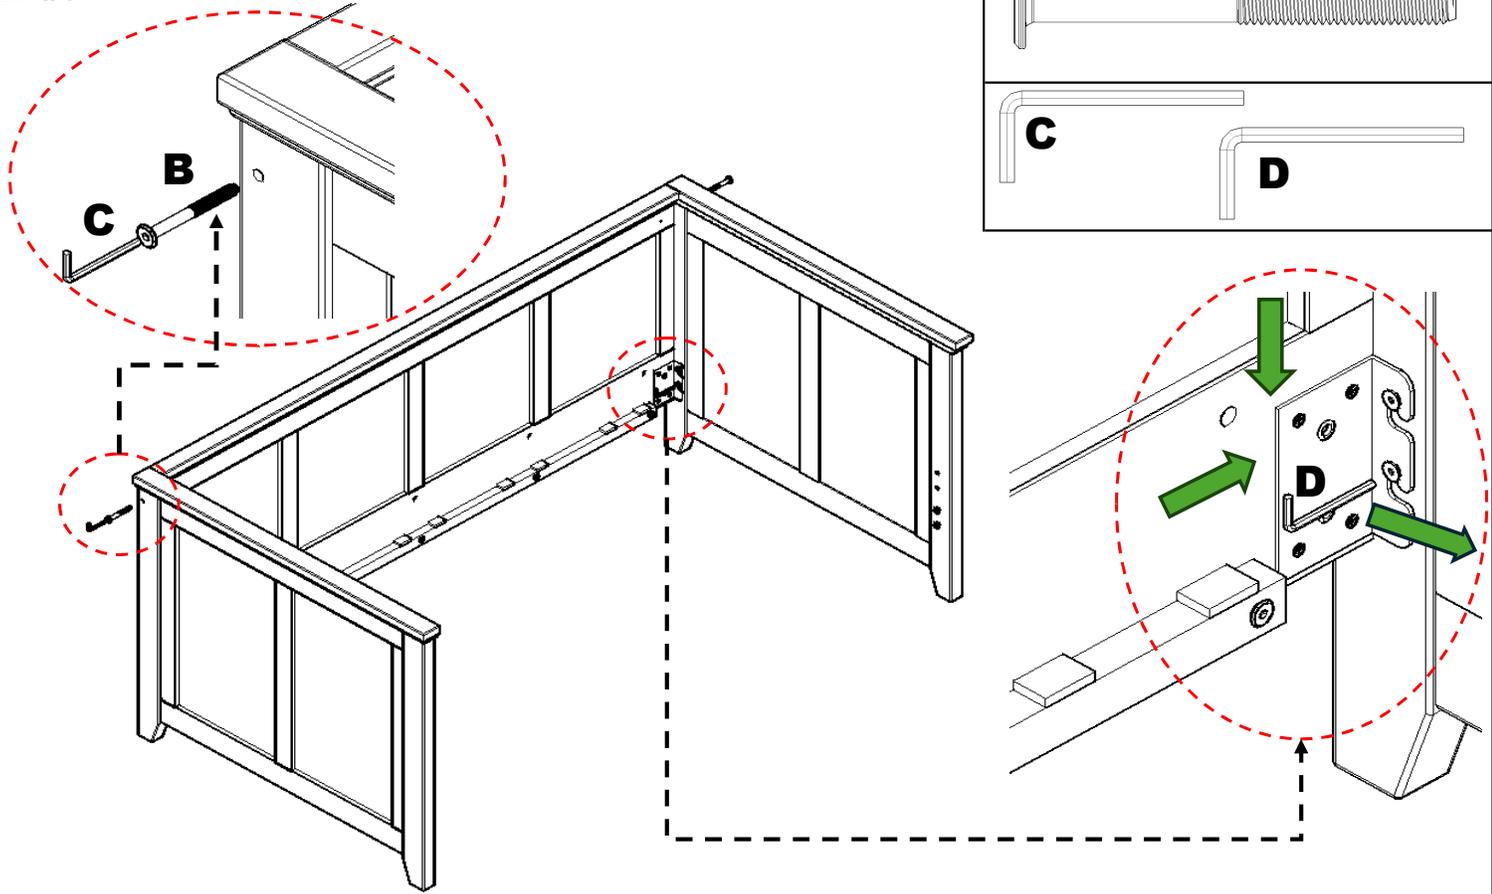

To assemble daybed back panel first loosen bolts 1/4" aprox. both side panels, proceed to place it see figure, do not tighten then assemble the long bolt in the back top side hole, then tighten all bolts.


STEP #10

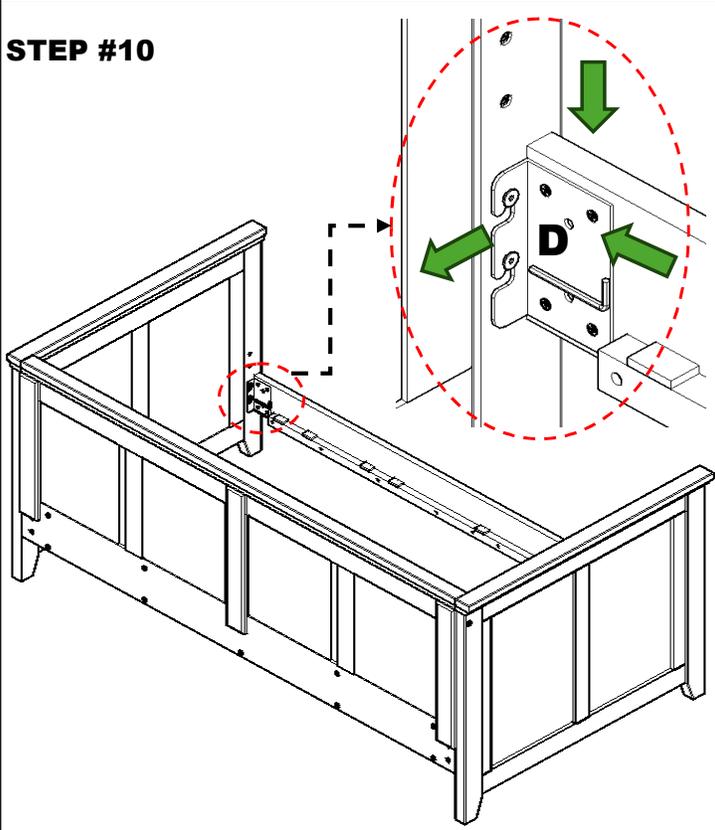

Assemble 1 pcs side rail.



STEP #11

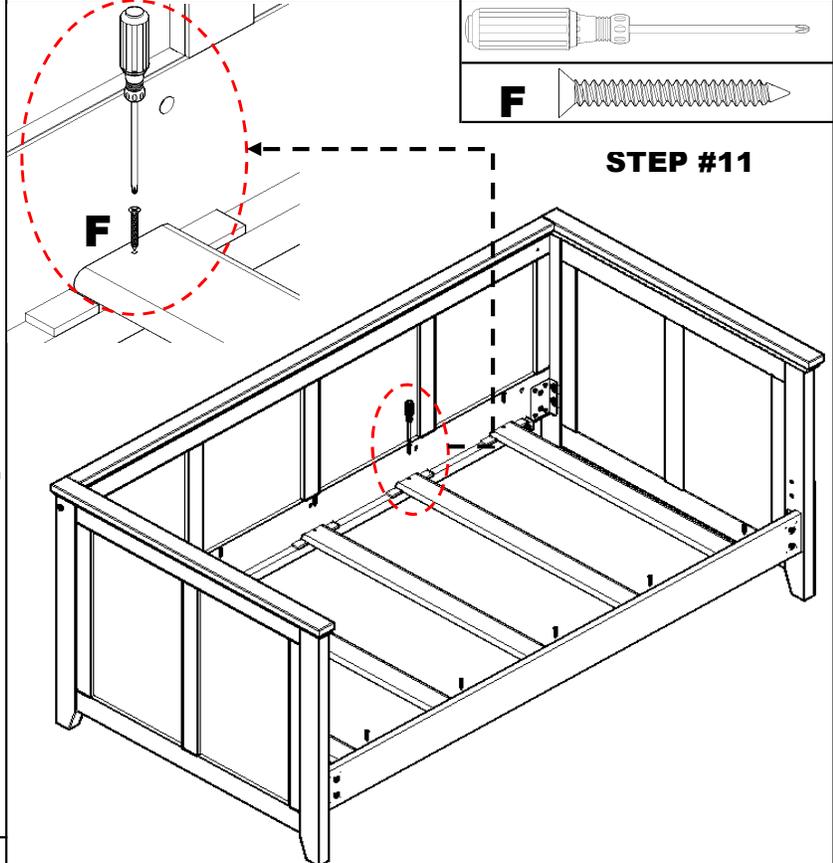

Install slats, one on each space between the small blocks and then fasten with 1 1/4" screws.