
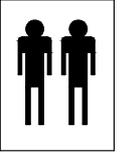


PARK PEAK  
5 DRAWER CHEST

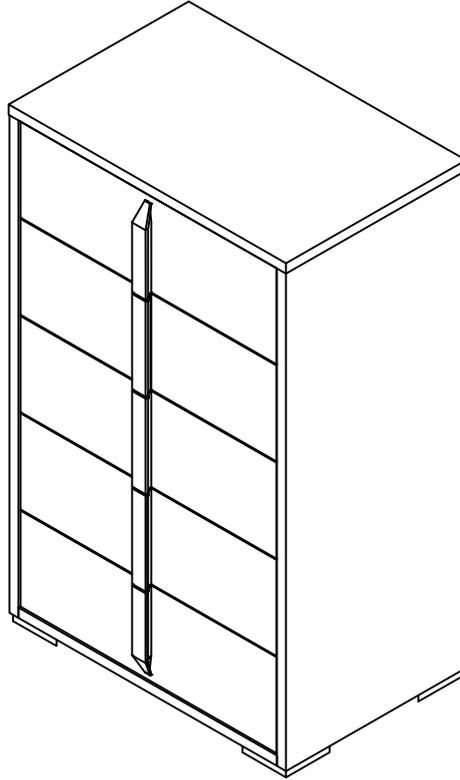


Anti Tip  
Hardware  
included

# FIBI

34374304 (WHITE)- STYLE: 7430



34374316 (METALLIC OSAGE)- STYLE: 7431

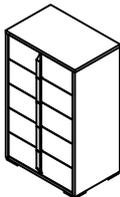NO.	Item description	IMAGE	QTY
1	5 DRAWER CHEST		1

DO NOT SUBSTITUTE PARTS. PLEASE CONTACT  
YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM)  
WITH SERVICE OR PARTS REPLACEMENT.



# Assembly Instructions

1 Rotate 90° twice counter-clockwise

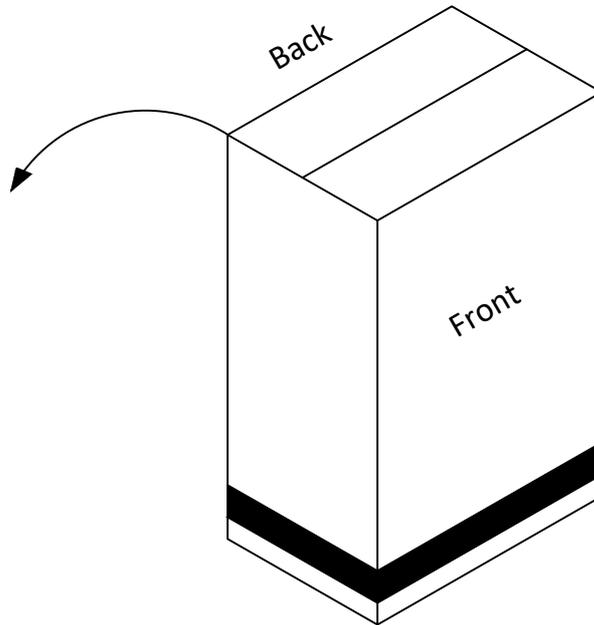


2 Open the carton using a cutter

Cutter  
not  
included

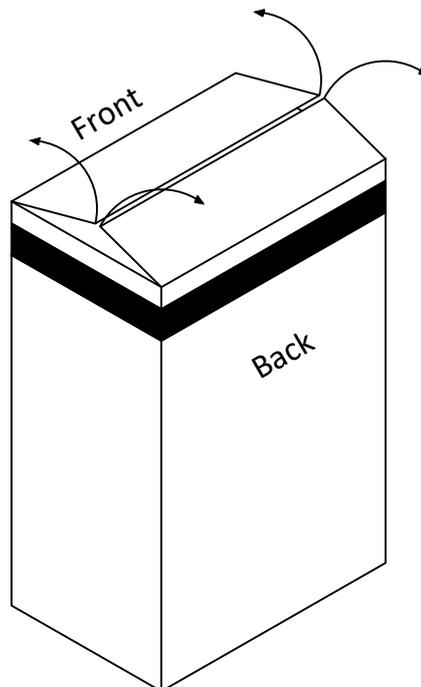



# Assembly Instructions

3 Open the carton fold



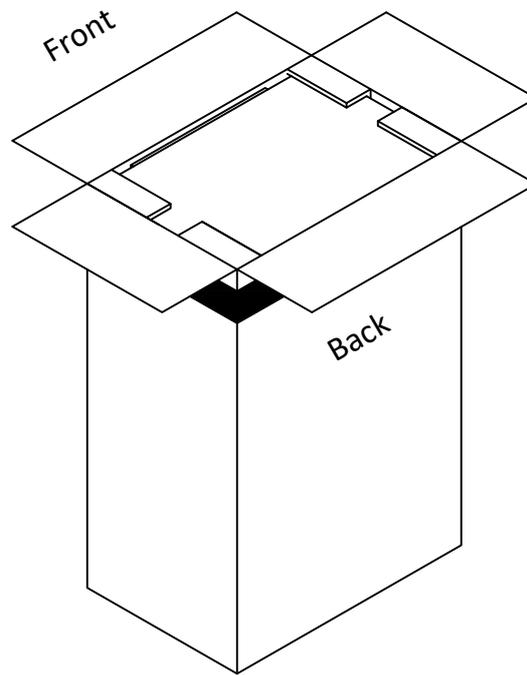


4 Rotate 90° twice -clockwise

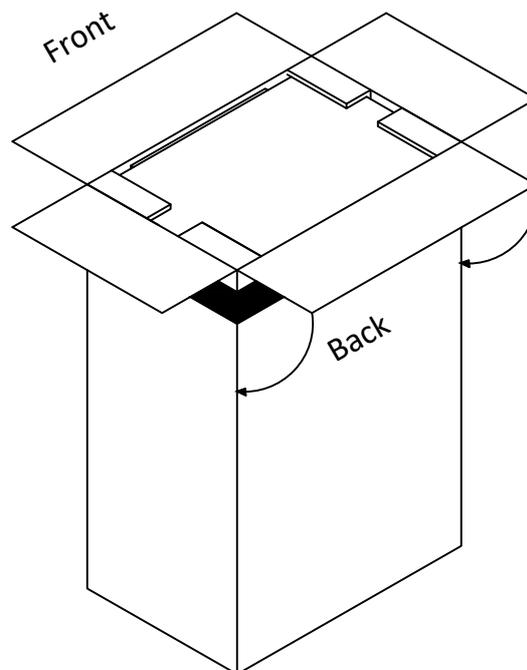


# Assembly Instructions


5 Lift the carton off

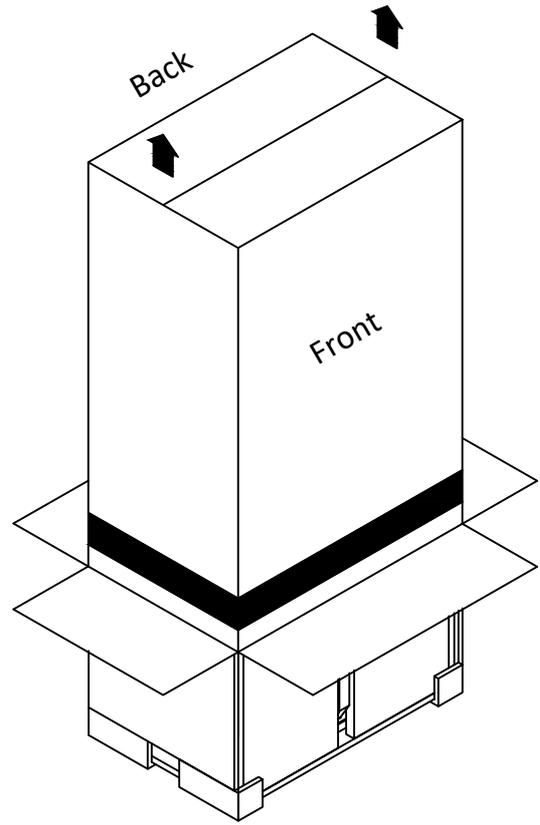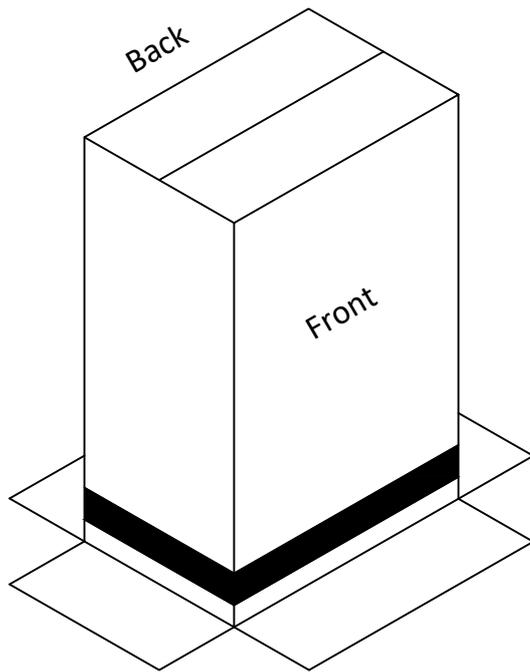

6 Remove all the packaging

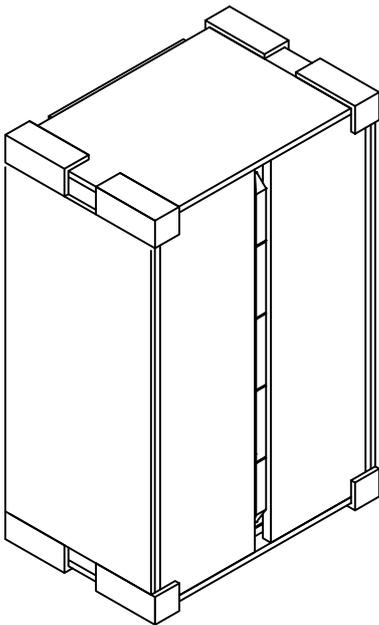


7 Chest ready to work

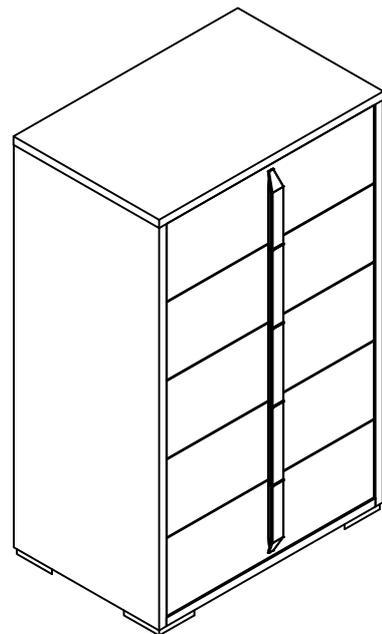

# Assembly Instructions

- 8 Determine desired location of furniture piece. Find wall stud behind furniture piece and position one bracket vertically on the stud approximately 1" below the top of furniture piece. Mark and drill pilot hole in the center of the stud with a 3/32" drill bit. Attach bracket to stud with the two 1 1/4" screws. (Figure 1)


Screwdriver  
Not  
Included

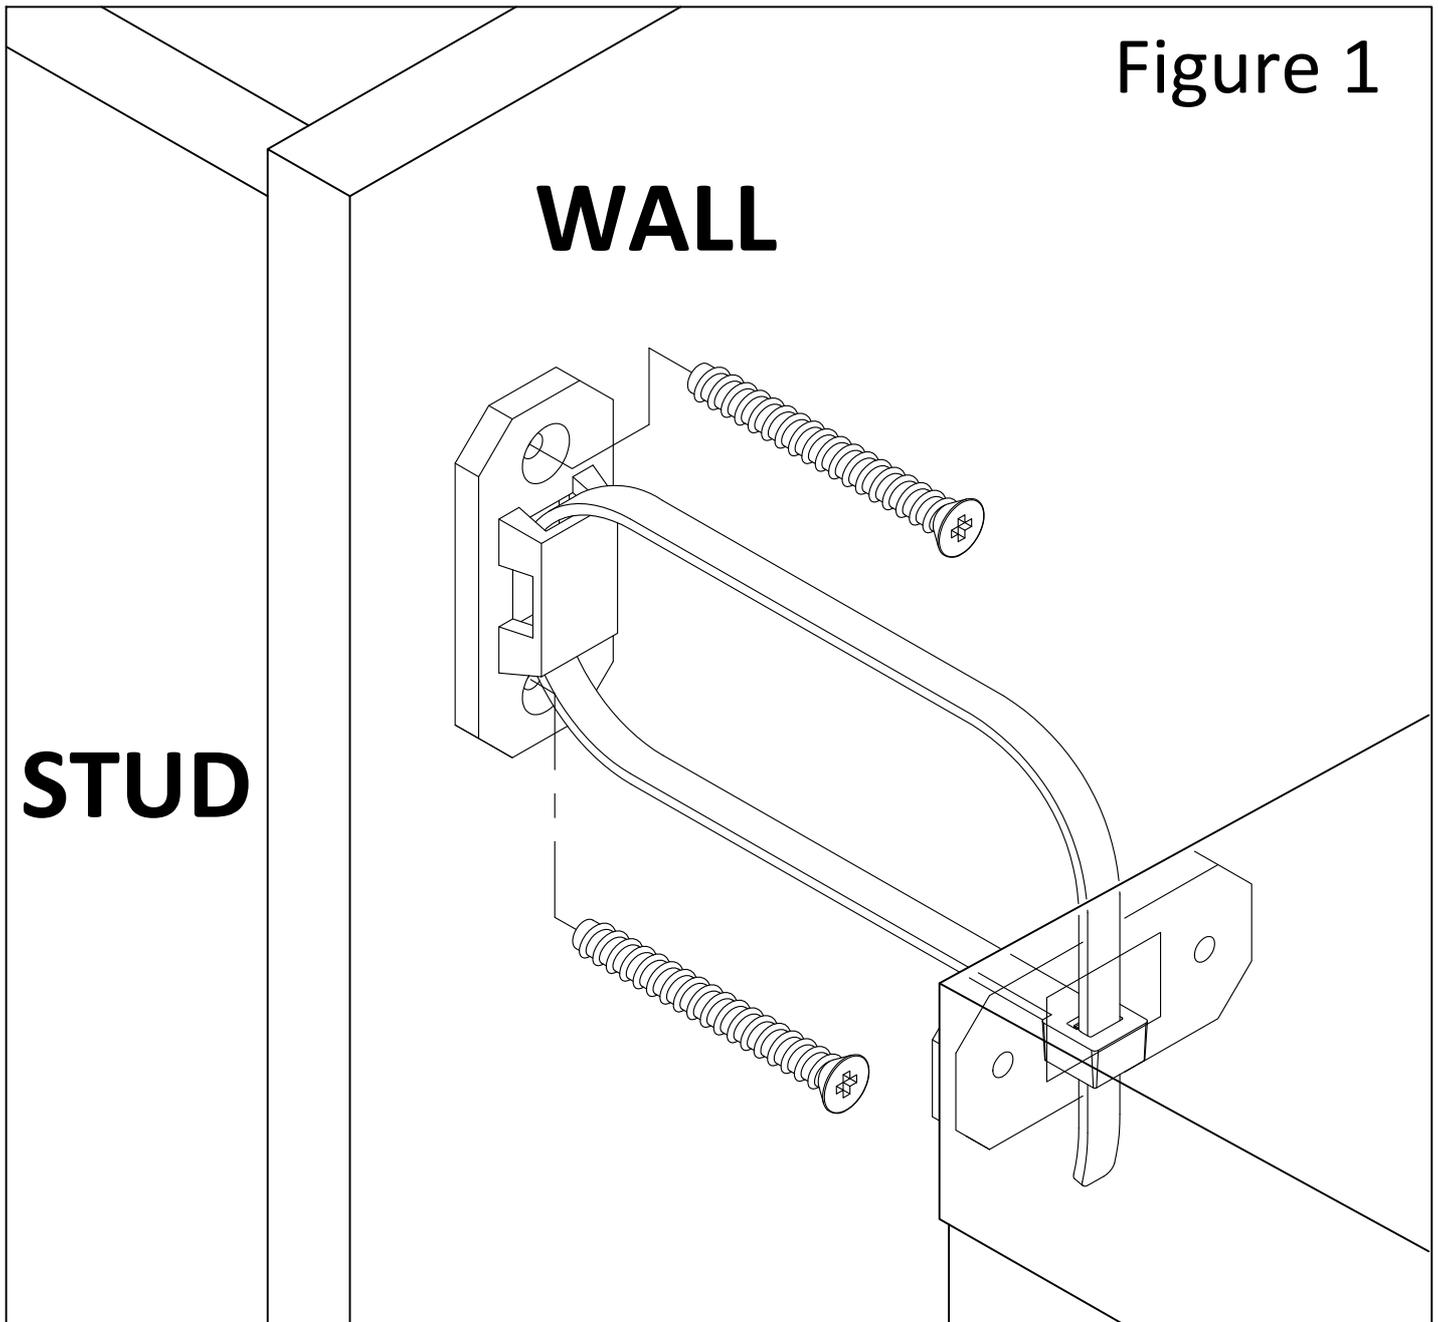

# Assembly Instructions

- 9 The second bracket will need to be attached horizontally to the top of furniture frame. Temporarily move furniture away from wall and place a bracket near top of frame. Mark and drill holes for screws with a 3/32" drill bit. Attach bracket to furniture piece with the two 3/4" screws. (Figure 2)

Move furniture piece into its final position, taking care to line up the wall bracket with furniture bracket. Thread the strap through the brackets as shown in the illustrations. Tighten strap until snug. Note: Do not overtighten.

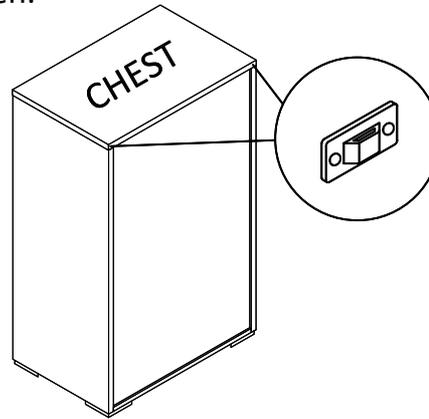

Screwdriver  
Not  
Included

