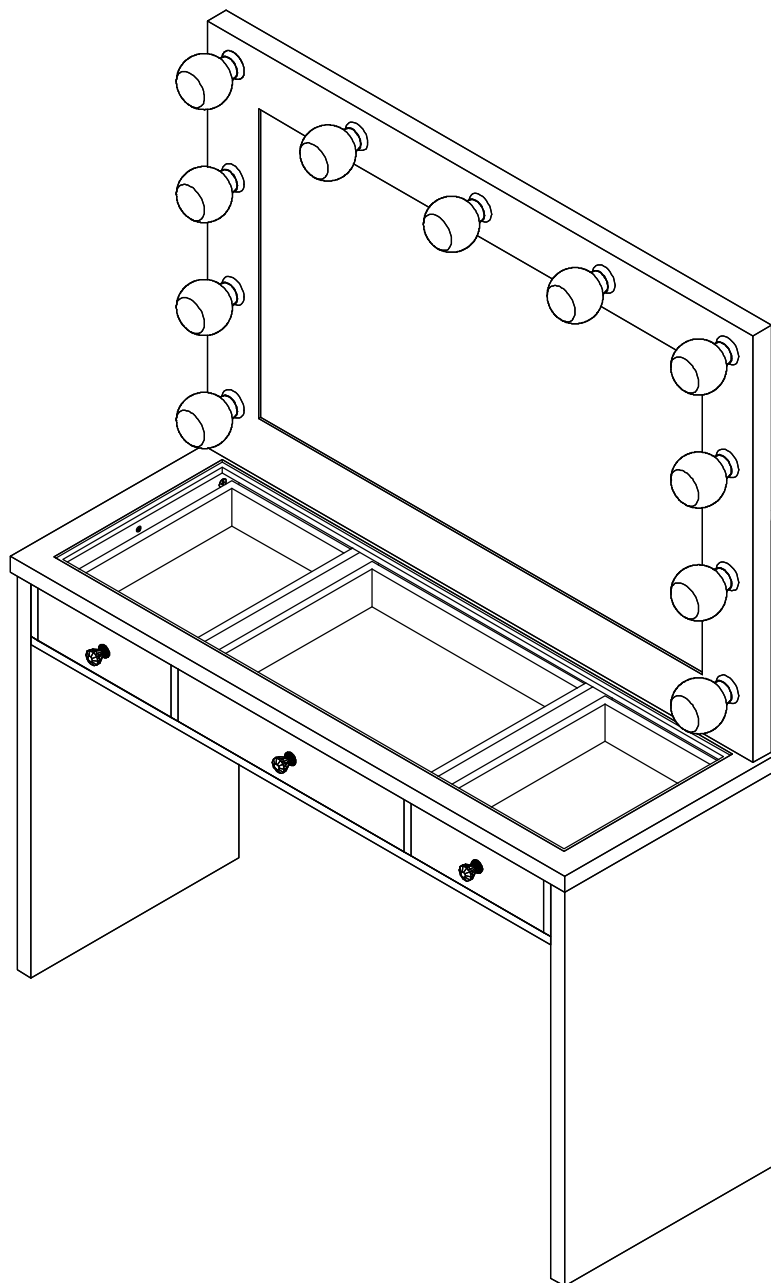


Ariana Vanity

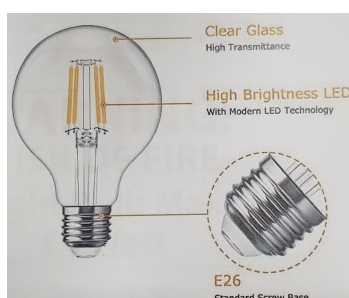
Item #: CVAR700VM-VB

ASSEMBLY INSTRUCTIONS



Recommendation: Replace clear 4W/6W LED filament bulb equivalent 40W/60W Incandescent.






WARNING:
RISK OF FIRE
LED LIGHT BULB
120V E26/MAX 25
WATT (Per Light Bulb)
















ASSEMBLY INSTRUCTIONS

Item #: CVAR700VM-VB

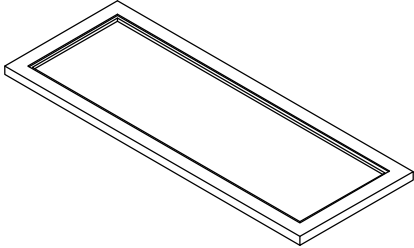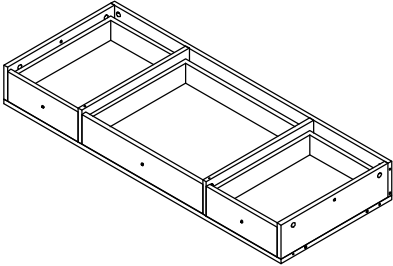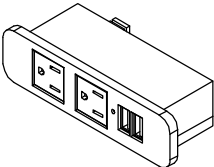Please identify and locate all assembly parts (see parts list) before discarding any packing materials.
Some parts may have become loose during transit.


PARTS LIST			
NO.	SKETCH	DESCRIPTION	QYT
1		VANITY TABLE TOP FRAME	1PC
2		VANITY TABLE DRAWER BOX	1PC
3		LEFT PANEL	1PC
4		RIGHT PANEL	1PC
5		POWER OUTLET	1PC

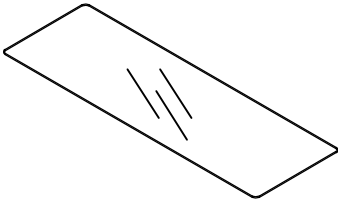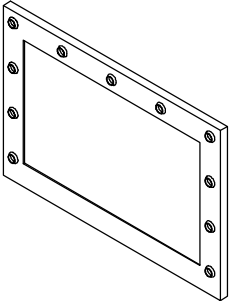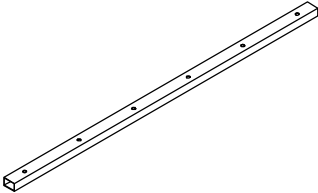NO.	SKETCH	DESCRIPTION	QYT
6		GLASS INSERT	1PC
7		MIRROR	1PC
8		CROSSBAR	2PCS
9		CAM-BOLT 38mm	12PCS
10		CAM-LOCK ø15mm	12PCS
11		WOOD DOWEL 8 x 30mm	10PCS

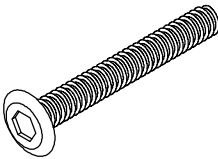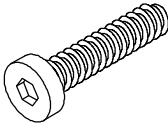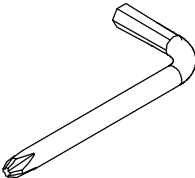NO.	SKETCH	DESCRIPTION	QYT
12		CAP 20 x 30mm	4PCS
13		SCREW 4 x 15mm	2PCS
14		LONG BOLT 1/4" x 35mm	12PCS
15		SHORT BOLT 1/4" x 25mm	2PCS
16		DRAWER BOLT 5/32" x 10mm	4PCS
17		GLUE	1PC
18		ALLEN KEY 4mm	1PC


NOTE: Do not tighten until each step is completed or instructed.

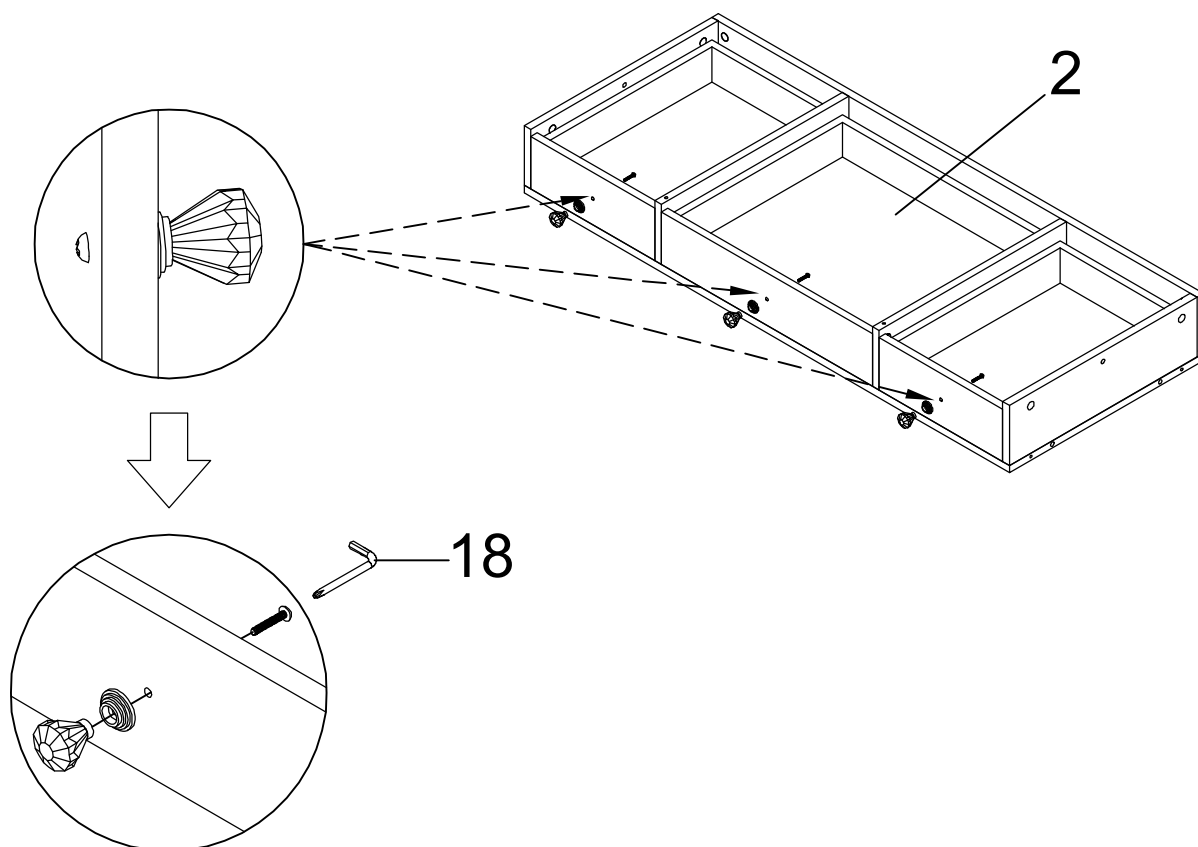Step 1: Install the Knob using Knob bolt with Allen Key (18).




Step 2: 1. Apply Glue (17) on Wood Dowel (11).

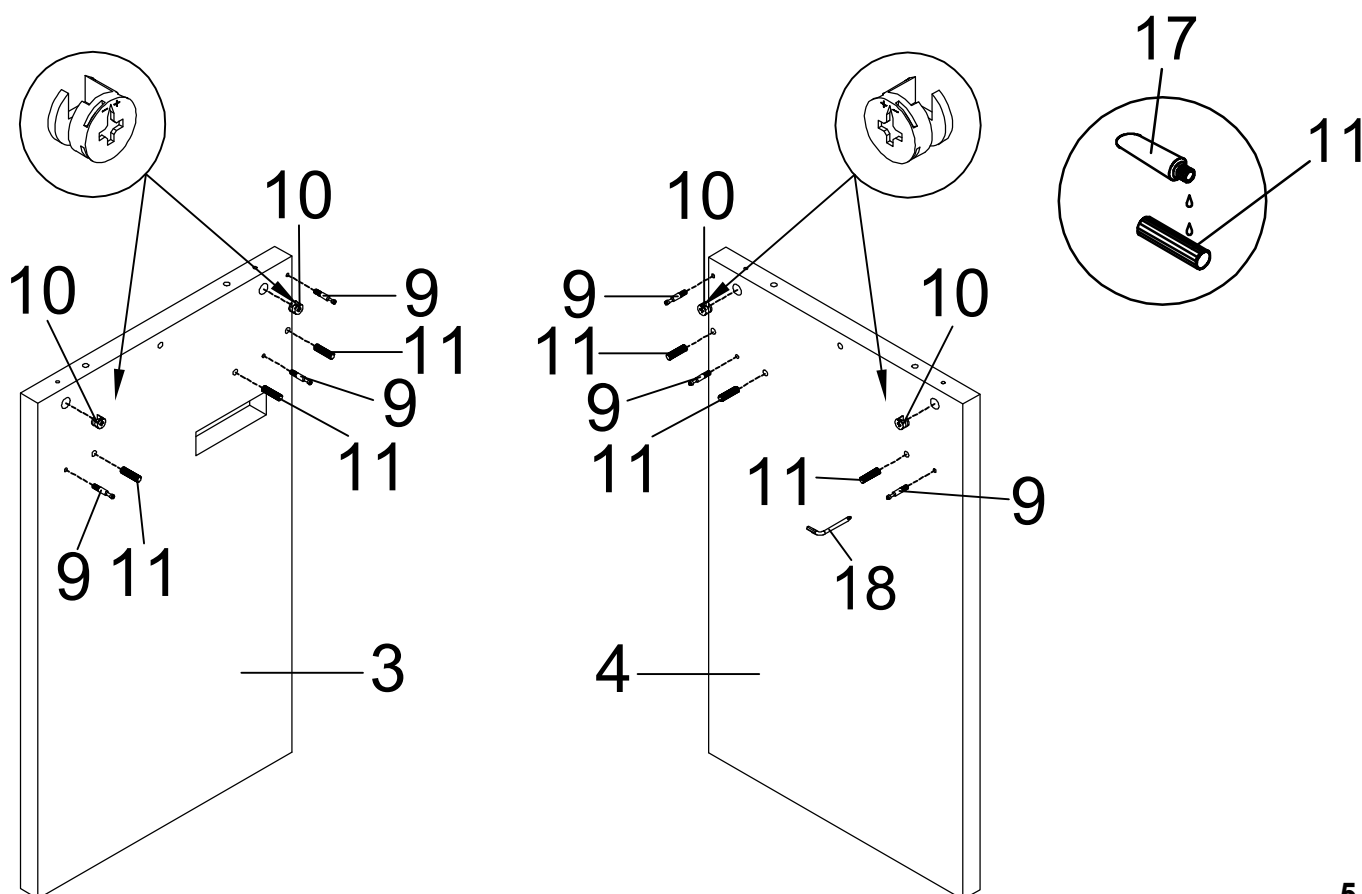
2. Install Cam-Bolt (9), Cam-Lock(10) and Wood Dowel (11) with Allen Key (18).



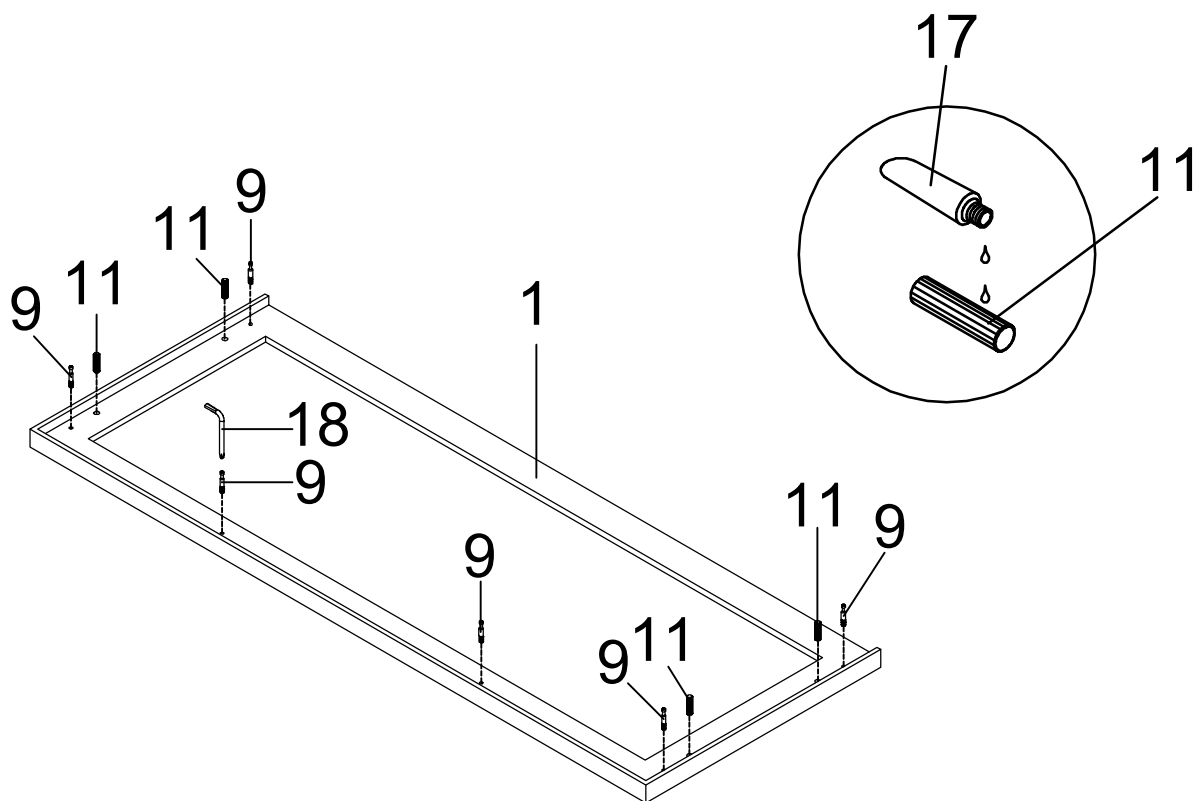- Step 3: 1. Turn the Vanity Table Top Frame (1) upside down on a protective surface.
2. Apply Glue (17) on Wood Dowel (11).
3. Install Cam-Bolt (9) and Wood Dowel (11) with Allen Key (18).




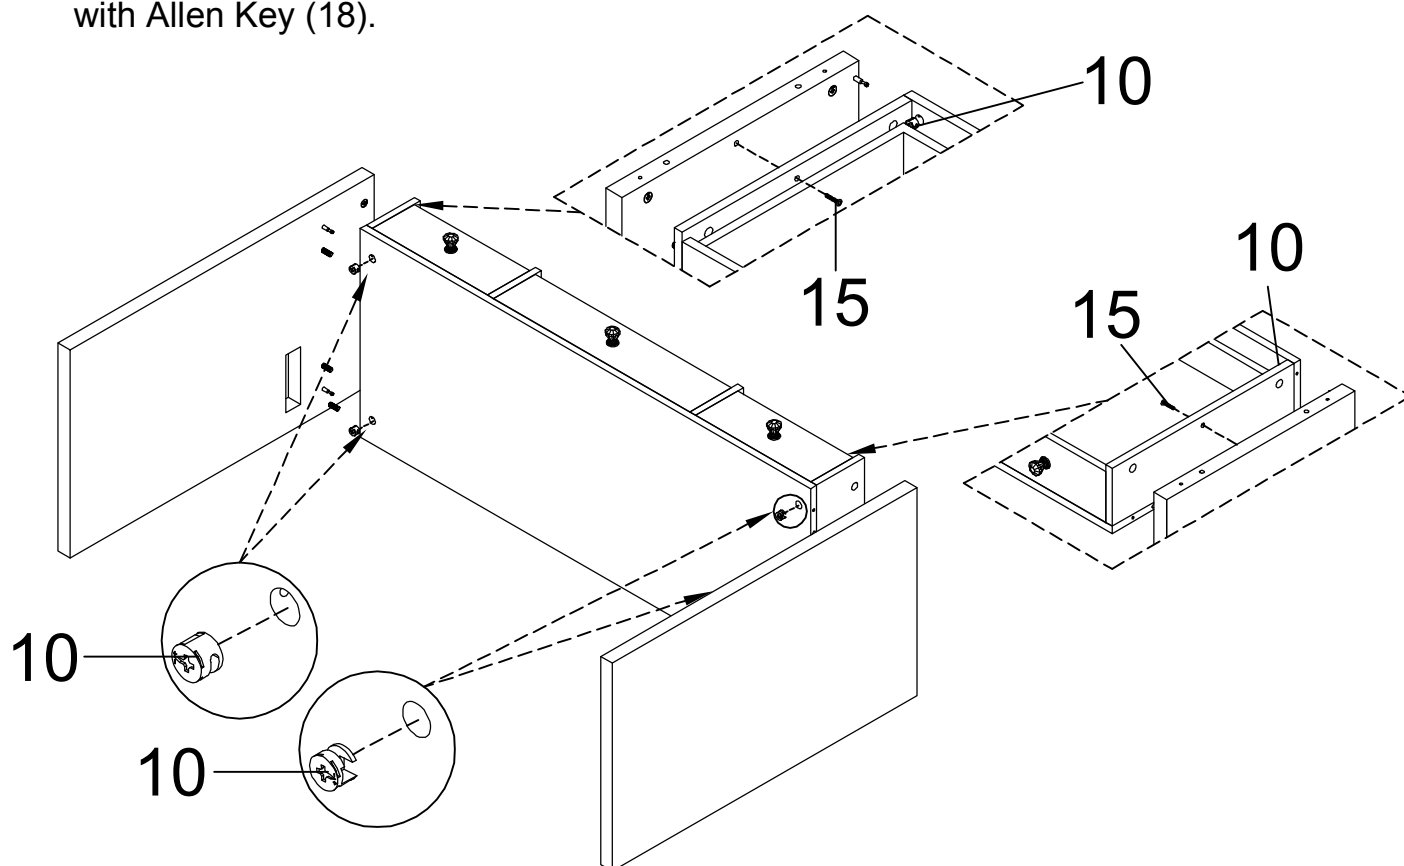- Step 4: 1. Wood Dowel (11) must be Glue (17) first.
2. Turn the assembly to upright position. Attach Left Panel (3) and Right Panel (4) to the Vanity Table Drawer Box (2), and tighten Cam-Lock (10) and Short Bolt (15) with Allen Key (18).



Step 5: 1. Wood Dowel (11) must be Glue (17) first.

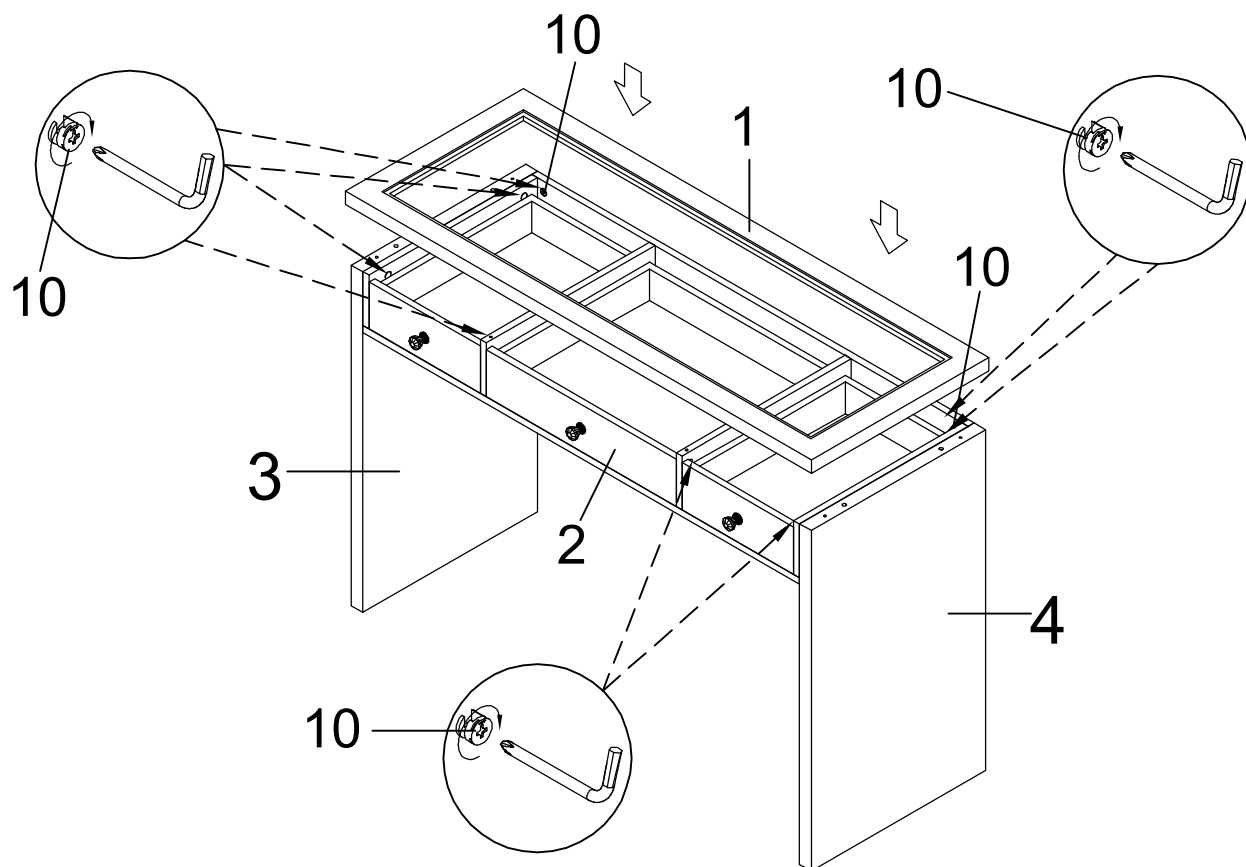
2. Turn the assembly to upright position. Attach the Vanity Table Top Frame (1) to the assembly, and tighten Cam-Lock (10) with Allen Key (18).



Step 6: 1. Place the Glass Insert (6) to the Vanity Table Top Frame (1).


2. Install Power Outlet (5) to the Left Panel (3) using Screw (13) with Allen Key (18).

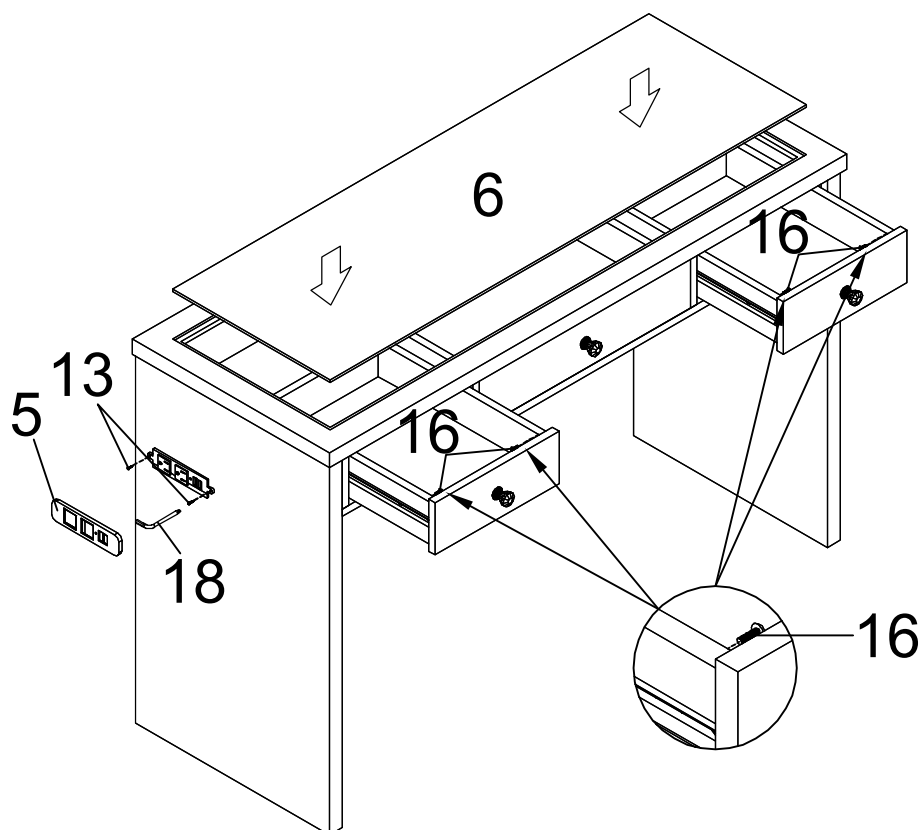3. Install Drawer Bolt (16) to Drawer.




Step 7: 1. Insert Cap (12) to the Crossbar (8).

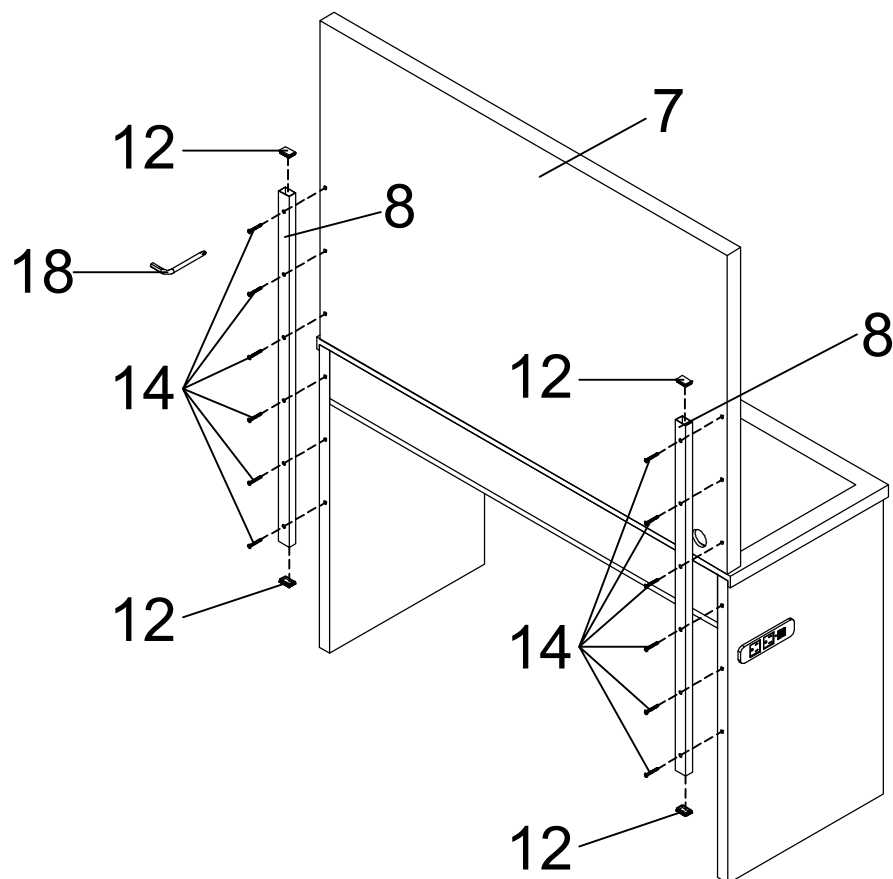2. Place Mirror (7) onto the Vanity table assembly. Secure Crossbar (8) to the back of the Mirror (7) and Vanity table assembly with Long Bolt (14) tighten with Allen Key (18).



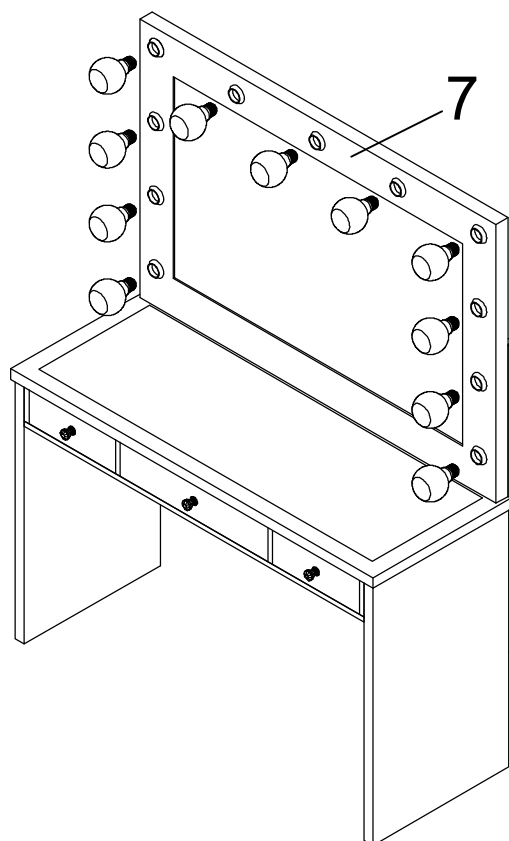Step 8: Install Light bulbs to the Mirror (7).



Complete. Congratulations on your assemble success.