



MODERN COLORS COLLECTION

THANK YOU FOR YOUR PURCHASE



WARNING DANGER

Failure to follow these warnings and assembly instructions could result in serious injury or death. To help prevent serious or fatal injuries from entrapment or falls:

- Read all instructions before assembling bunk bed and keep these instructions for future reference.
- Before each usage or assembly, inspect bunk bed for damaged hardware, loose joints, missing parts, or sharp edges. DO NOT Use bunk bed if any parts are missing or broken.
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.
- Follow the information on the warnings appearing on the upper bunk end structure and on the carton, DO NOT REMOVE WARNING LABEL FROM BED.
- Always use the recommended size mattress or mattress supports, or both to help prevent the likelihood of entrapment or falls.
- Ensure thickness of mattress and foundation combine does not exceed **10 inches (255mm)** and mattress surface is at least **5 inches (127mm)** below upper edge of guardrails.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Limit top bunk use to one person.
- Always use the ladder for entering and leaving the upper bunk.
- Use of night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- The use of water or sleep flotation mattress is prohibited.
- This bunk bed meets all the requirements of ASTM 1427-19.




STRANGULATION HAZARD:

Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts, and jump ropes.

CONFIGURATIONS

Choose your configuration, read all the instructions, identify all components, and be sure you have all parts prior to assembly

Reference page 3-6 for assembly steps

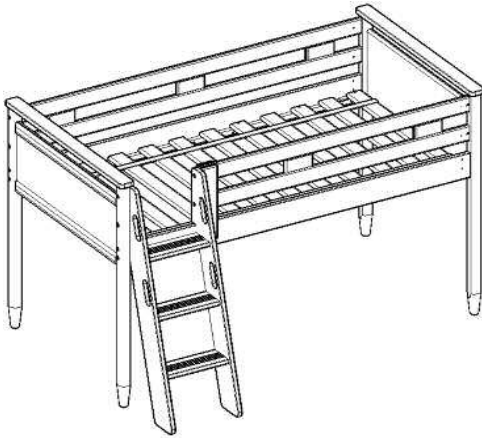

TWIN LOW LOFT BED WITH LADDER

3461123P IRON ORE 3461124P SLATE BLUE

3461125P LIGHT GRAY 3461126P WHITE 3461127P PINK

Reference page 7-10 for assembly steps



TWIN LOW LOFT W/LADDER, CHEST

3471123P IRON ORE 3471124P SLATE BLUE

3471125P LIGHT GRAY 3471126P WHITE 3471127P PINK

Reference page 11-14 for assembly steps



TWIN LOW LOFT W/LADDER, 2 CHEST

3481123P IRON ORE 3481124P SLATE BLUE

3481125P LIGHT GRAY 3481126P WHITE 3481127P PINK

Reference page 15-18 for assembly steps




TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE

3491123P IRON ORE 3491124P SLATE BLUE

3491125P LIGHT GRAY 3491126P WHITE 3491127P PINK

Reference page 19-23 for assembly steps

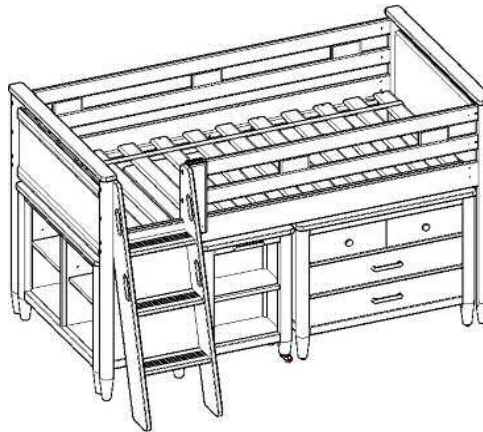


TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK

3501123P IRON ORE 3501124P SLATE BLUE

3501125P LIGHT GRAY 3501126P WHITE 3501127P PINK

Reference page 24-27 for assembly steps

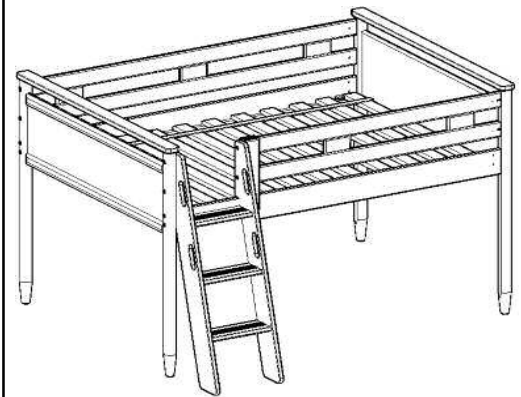

FULL LOW LOFT BED WITH LADDER

3571123P IRON ORE 3571124P SLATE BLUE

3571125P LIGHT GRAY 3571126P WHITE 3571127P PINK

Reference page 28-31 for assembly steps




FULL LOW LOFT W/LADDER, CHEST

3581123P IRON ORE 3581124P SLATE BLUE

3581125P LIGHT GRAY 3581126P WHITE 3581127P PINK

Reference page 32-35 for assembly steps

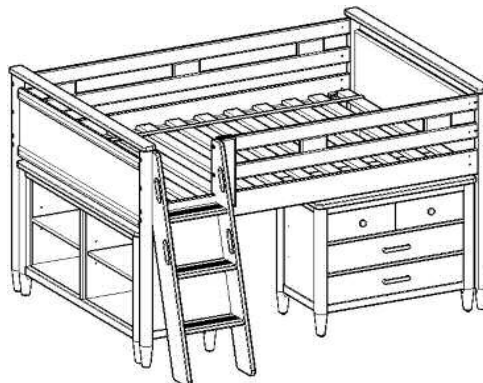


FULL LOW LOFT W/LADDER, CHEST, BOOKCASE

3591123P IRON ORE 3591124P SLATE BLUE

3591125P LIGHT GRAY 3591126P WHITE 3591127P PINK

Reference page 36-40 for assembly steps

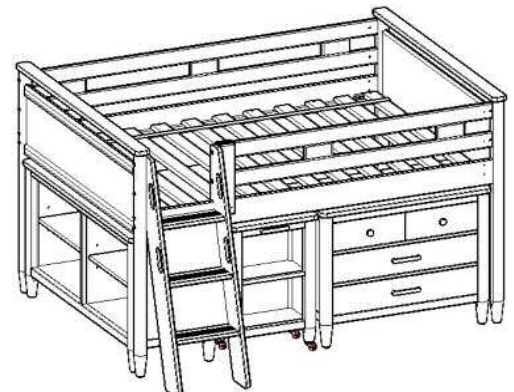


FULL LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK


3601123P IRON ORE 3601124P SLATE BLUE

3601125P LIGHT GRAY 3601126P WHITE 3601127P PINK

PARTS LIST

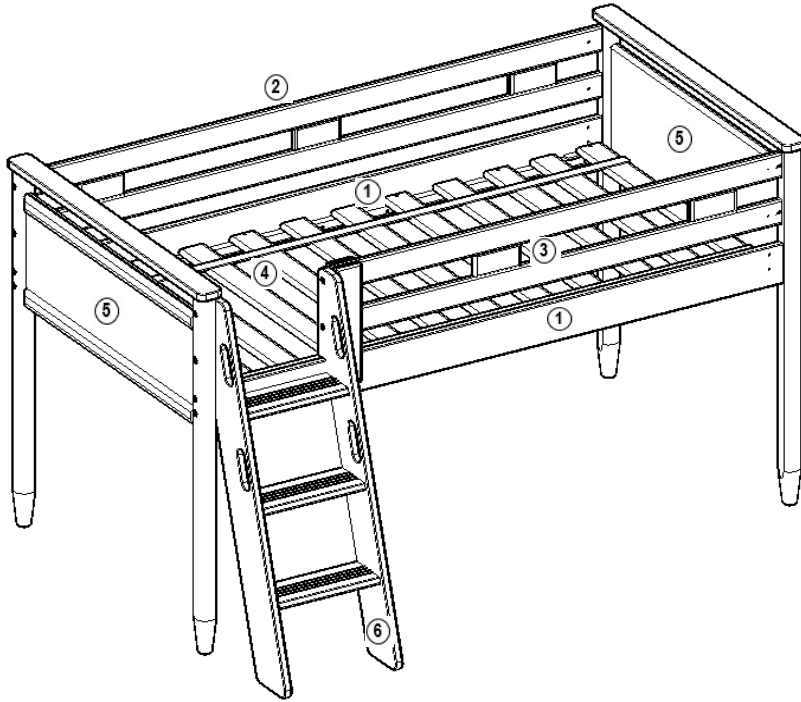

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs			
2		1 Pc			
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3461123P TWIN LOW LOFT BED WITH LADDER D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811238	12D-702	TWIN LOW LOFT BUNK END
35811238	12D-702	TWIN LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL

3461124P TWIN LOW LOFT BED WITH LADDER E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811240	12E-702	TWIN LOW LOFT BUNK END
35811240	12E-702	TWIN LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL

3461125P TWIN LOW LOFT BED WITH LADDER G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811252	12G-702	TWIN LOW LOFT BUNK END
35811252	12G-702	TWIN LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL

3461126P TWIN LOW LOFT BED WITH LADDER W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811264	12W-702	TWIN LOW LOFT BUNK END
35811264	12W-702	TWIN LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL

3461127P TWIN LOW LOFT BED WITH LADDER A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811276	12A-702	TWIN LOW LOFT BUNK END
35811276	12A-702	TWIN LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A 
5/16-18x80 mm bolt 14x


B 
5 mm allen wrench 1x

J 
4 mm allen wrench 1x

D 
5/16-18x40mm bolt 2x

E 
1/4-20x17 mm cup nut 2x

H 
1/4-20x70 mm conector 2x

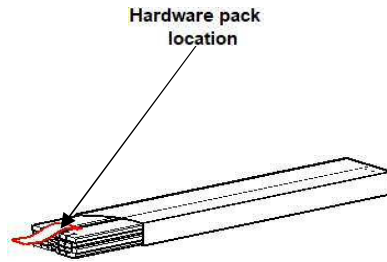

100-170 12 PC TWIN SLAT ROLL

C 
6 x 1 1/4" Screw 10x




ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

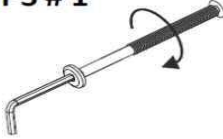

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

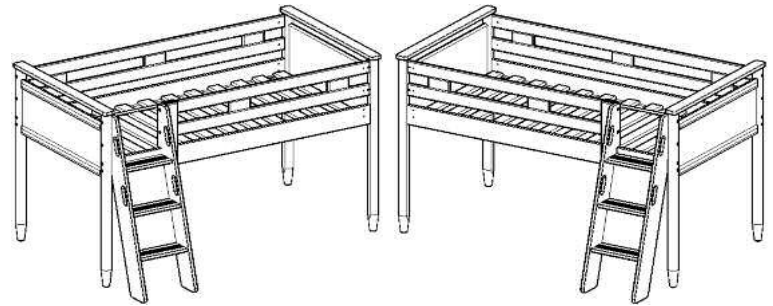

LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

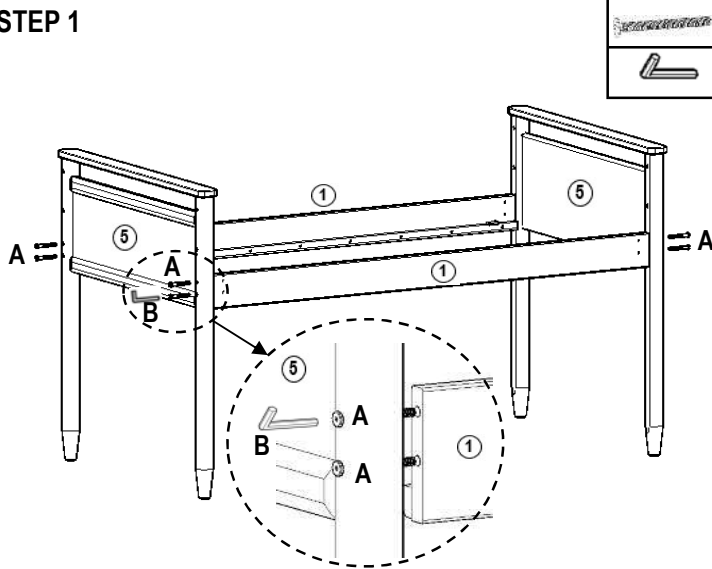


Assemble side rails.

STEP 2

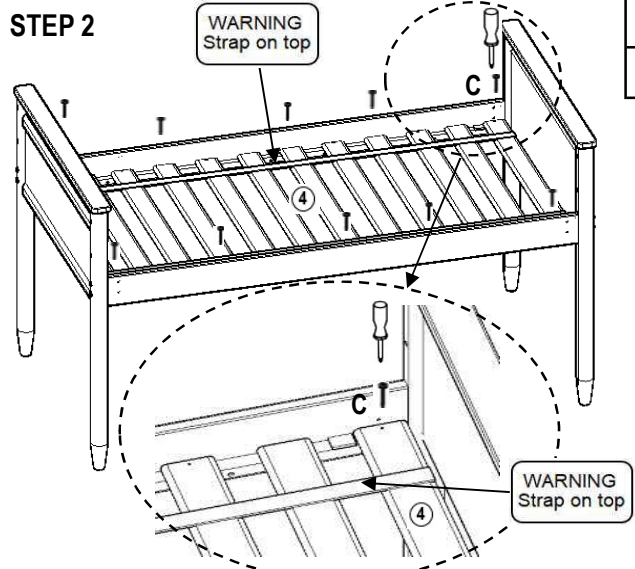


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

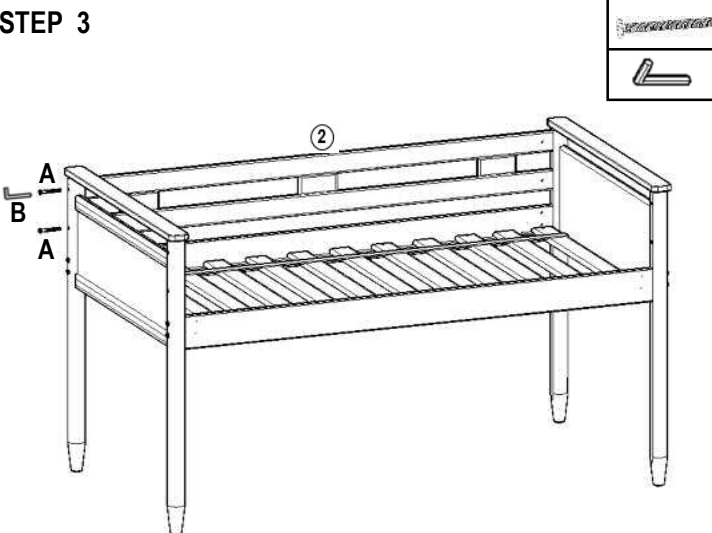

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

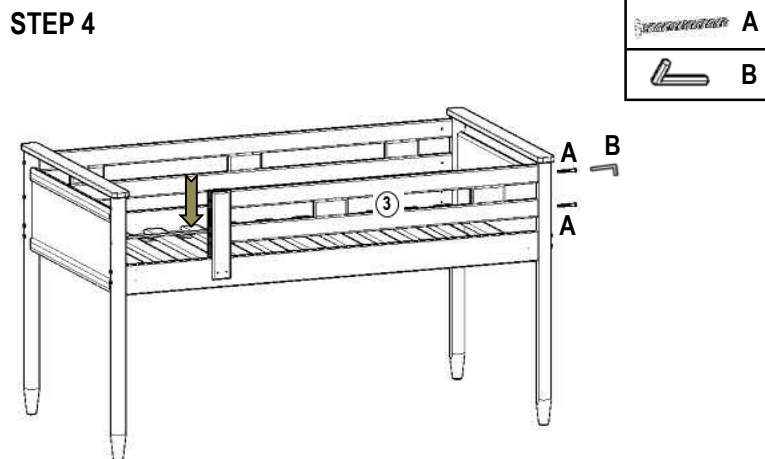

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


ASSEMBLY INSTRUCTIONS

STEP 5

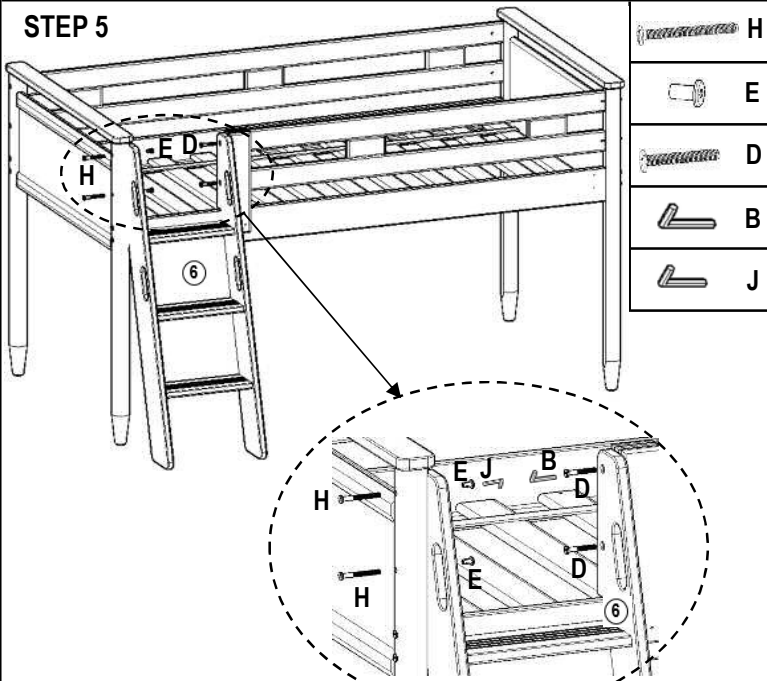

Install ladder per drawing

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

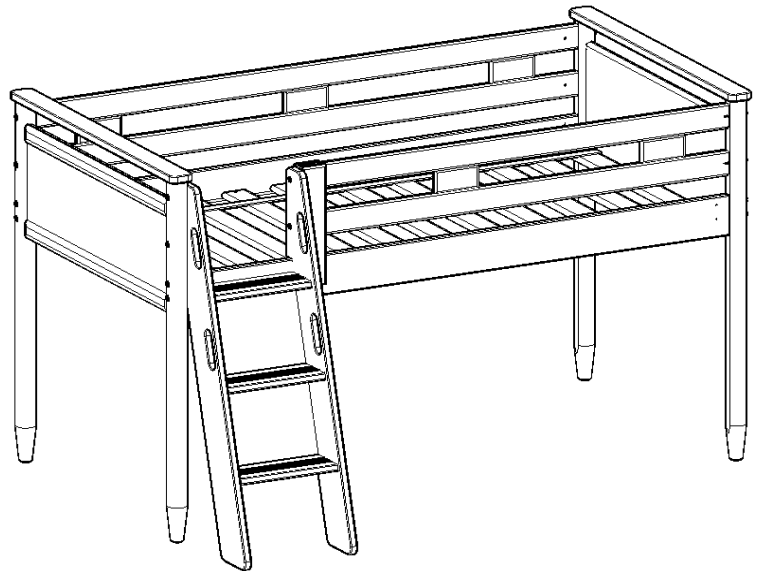

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide



Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

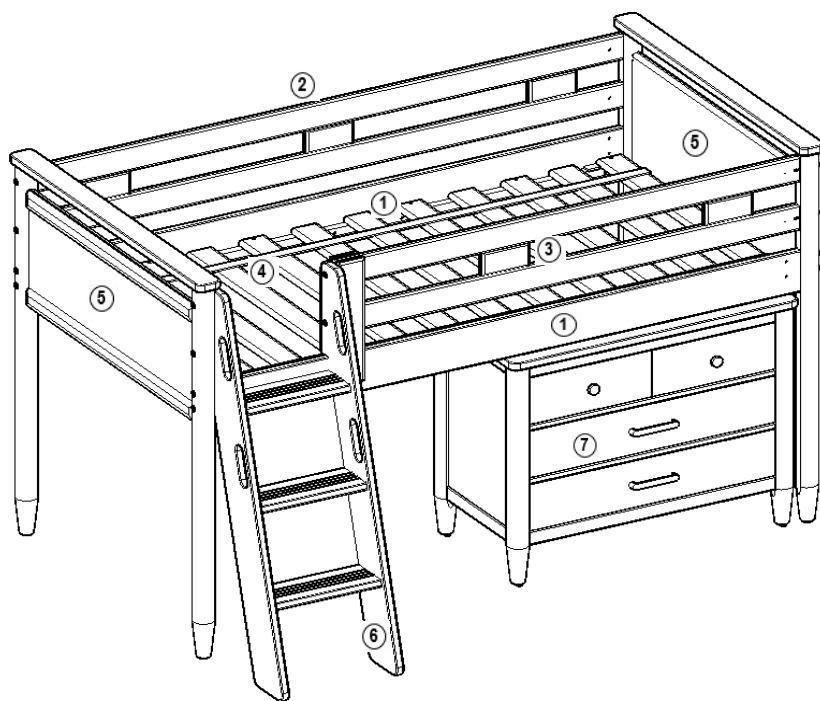

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pc
2		1 Pc			
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3471123P TWIN LOW LOFT W/LADDER, CHEST D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811238	12D-702	TWIN LOW LOFT BUNK END
35811238	12D-702	TWIN LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST

3471124P TWIN LOW LOFT W/LADDER, CHEST E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811240	12E-702	TWIN LOW LOFT BUNK END
35811240	12E-702	TWIN LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST

3471125P TWIN LOW LOFT W/LADDER, CHEST G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811252	12G-702	TWIN LOW LOFT BUNK END
35811252	12G-702	TWIN LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST

3471126P TWIN LOW LOFT W/LADDER, CHEST W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811264	12W-702	TWIN LOW LOFT BUNK END
35811264	12W-702	TWIN LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST

3471127P TWIN LOW LOFT W/LADDER, CHEST A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811276	12A-702	TWIN LOW LOFT BUNK END
35811276	12A-702	TWIN LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A 
5/16-18x80 mm bolt 14x


B 
5 mm allen wrench 1x

J 
4 mm allen wrench 1x

D 
5/16-18x40mm bolt 2x

E 
1/4-20x17 mm cup nut 2x

H 
1/4-20x70 mm conector 2x

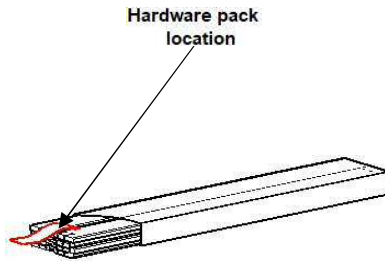

100-170 12 PC TWIN SLAT ROLL


C 
6 x 1 1/4" Screw 10x



12-403 CHEST

F 
Gold pulls 2x

G 
Gold knobs 2x

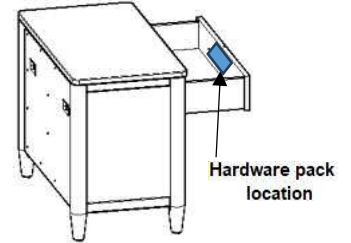


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening

TIPS # 1

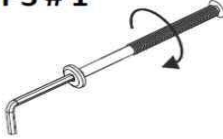

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM



LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

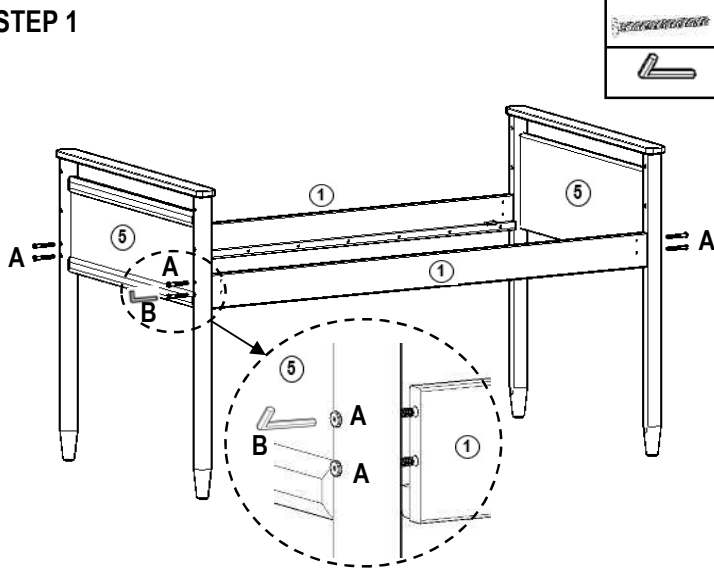


Assemble side rails.

STEP 2

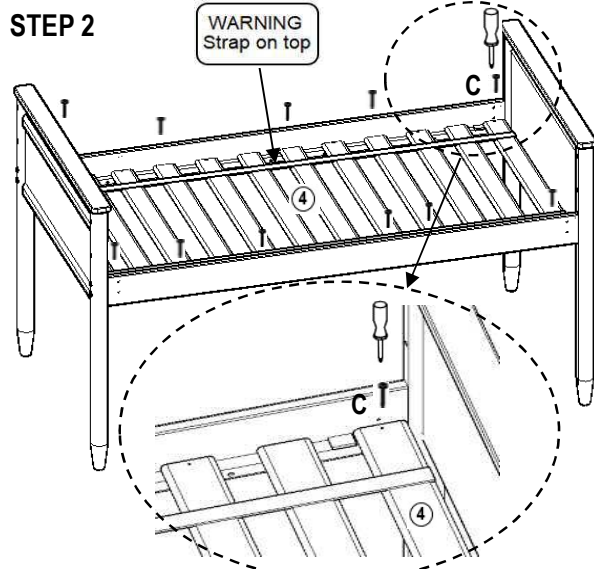


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

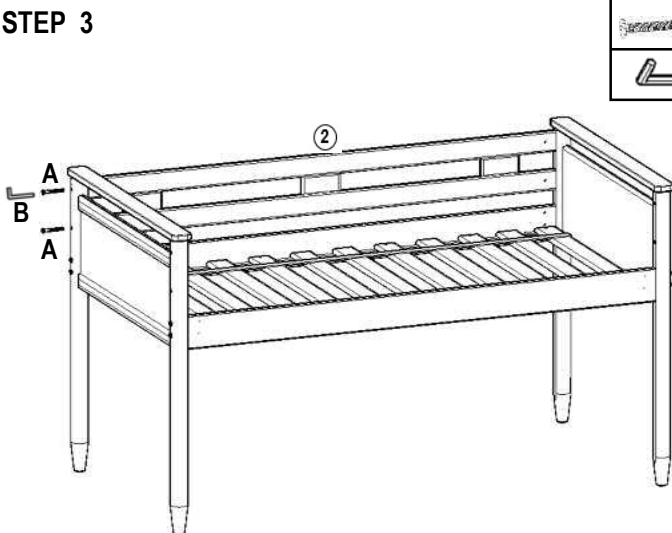

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

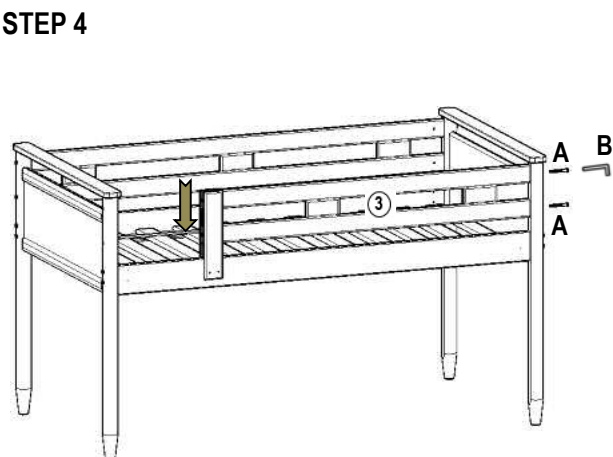

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

ASSEMBLY INSTRUCTIONS


STEP 5

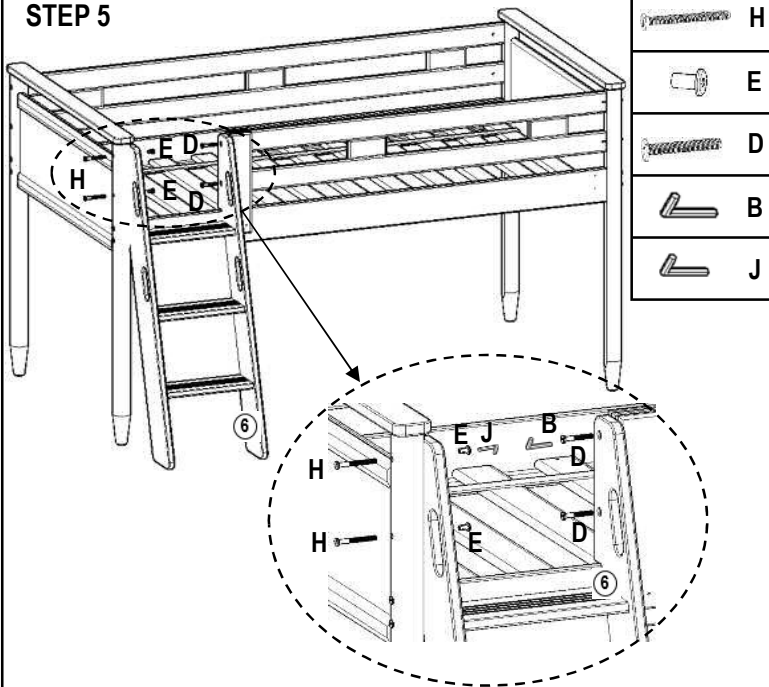

Install ladder per drawing

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

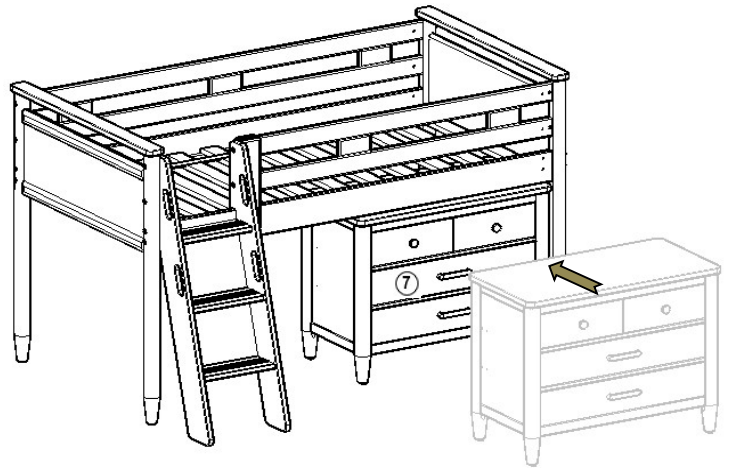

Slide 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide


Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

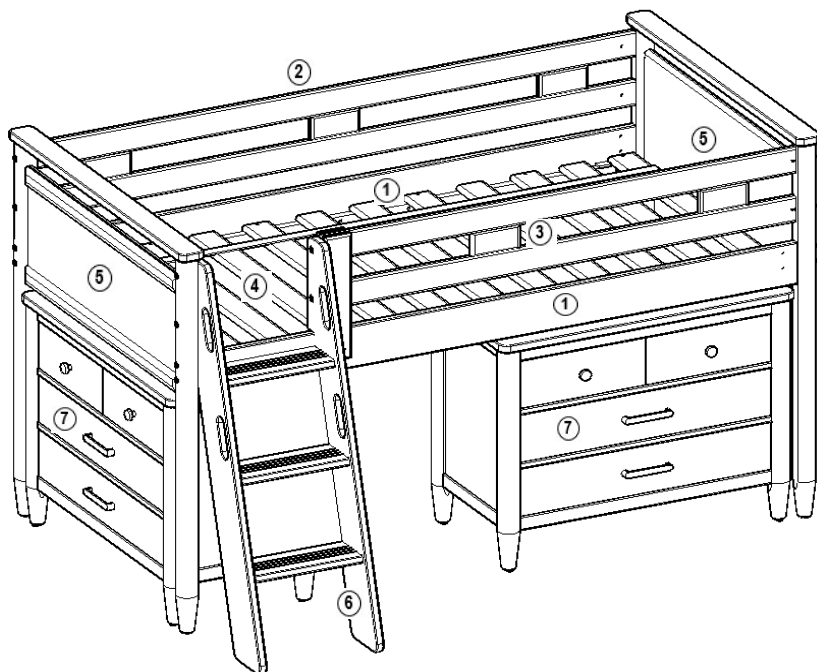

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		2 Pc
2		1 Pc			
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3481123P TWIN LOW LOFT W/LADDER, 2 CHEST D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811238	12D-702	TWIN LOW LOFT BUNK END
35811238	12D-702	TWIN LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36611235	12D-403	3 DRW CHEST

3481124P TWIN LOW LOFT W/LADDER, 2 CHEST E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811240	12E-702	TWIN LOW LOFT BUNK END
35811240	12E-702	TWIN LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36611247	12E-403	3 DRW CHEST

3481125P TWIN LOW LOFT W/LADDER, 2 CHEST G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811252	12G-702	TWIN LOW LOFT BUNK END
35811252	12G-702	TWIN LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36611259	12G-403	3 DRW CHEST

3481126P TWIN LOW LOFT W/LADDER, 2 CHEST W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811264	12W-702	TWIN LOW LOFT BUNK END
35811264	12W-702	TWIN LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36611261	12W-403	3 DRW CHEST

3481127P TWIN LOW LOFT W/LADDER, 2 CHEST A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811276	12A-702	TWIN LOW LOFT BUNK END
35811276	12A-702	TWIN LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A 
5/16-18x80 mm bolt 14x


B 
5 mm allen wrench 1x

J 
4 mm allen wrench 1x

D 
5/16-18x40mm bolt 2x

E 
1/4-20x17 mm cup nut 2x

H 
1/4-20x70 mm conector 2x

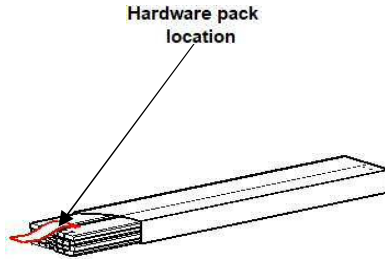

100-170 12 PC TWIN SLAT ROLL


C 
6 x 1 1/4" Screw 10x



12-403 CHEST

F 
Gold pulls 2x

G 
Gold knobs 2x

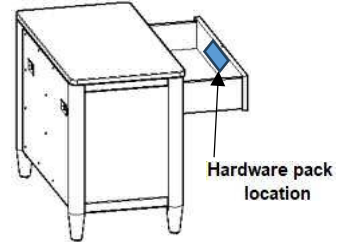


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening

TIPS # 1

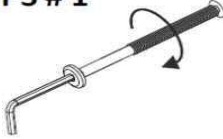

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM



LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

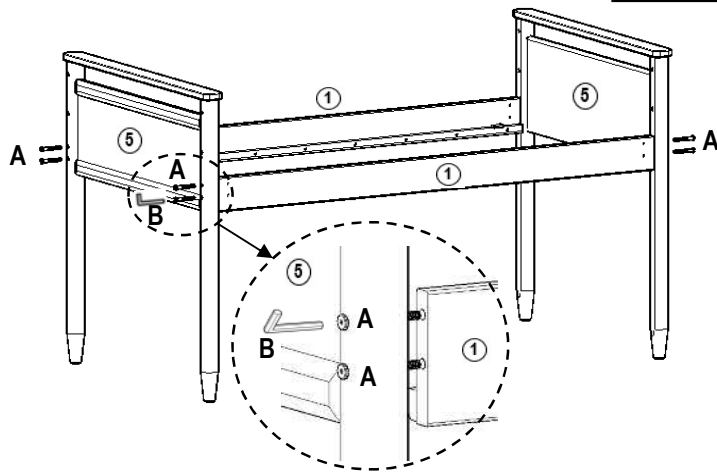


Assemble side rails.

STEP 2

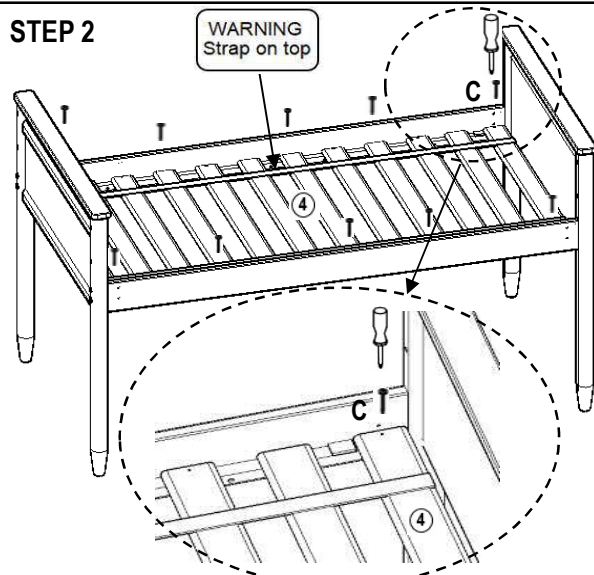


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

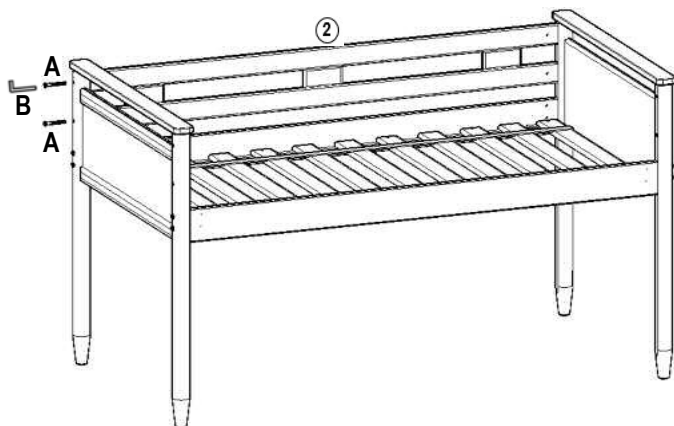

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

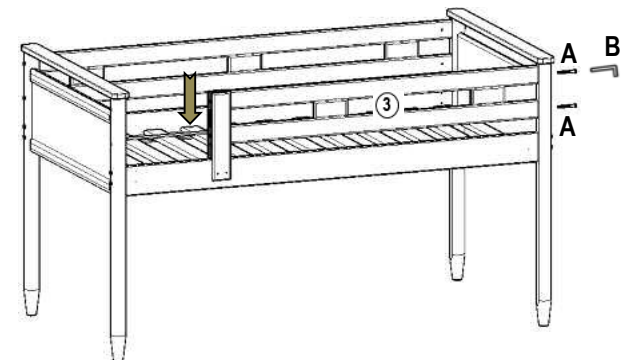

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

ASSEMBLY INSTRUCTIONS


STEP 5

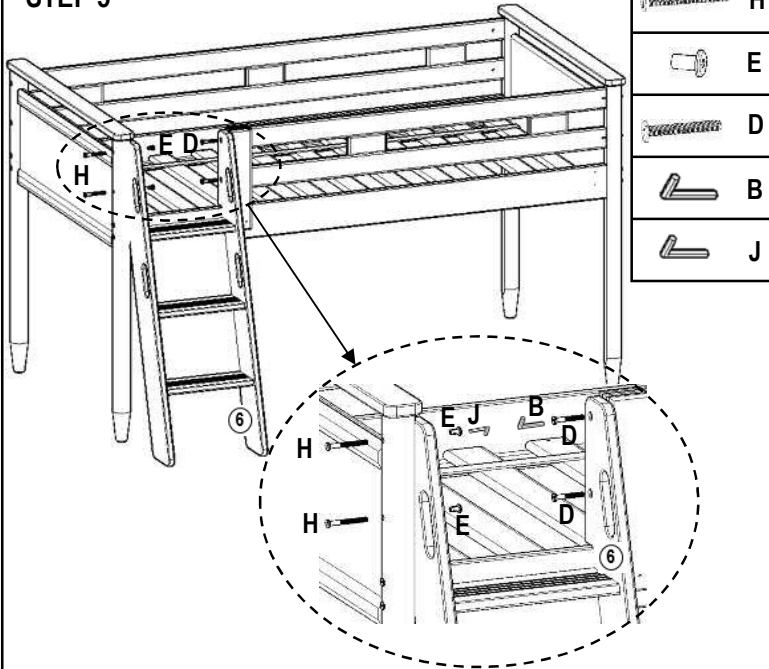

Install ladder per drawing


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

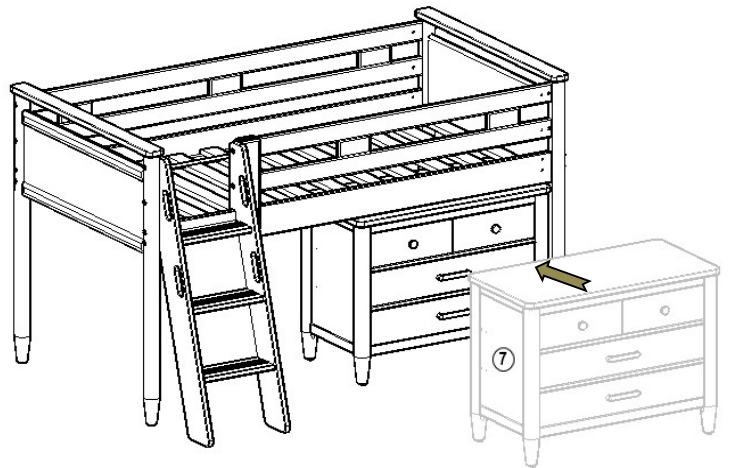

Slide 3 drw chest under loft bed

STEP 7

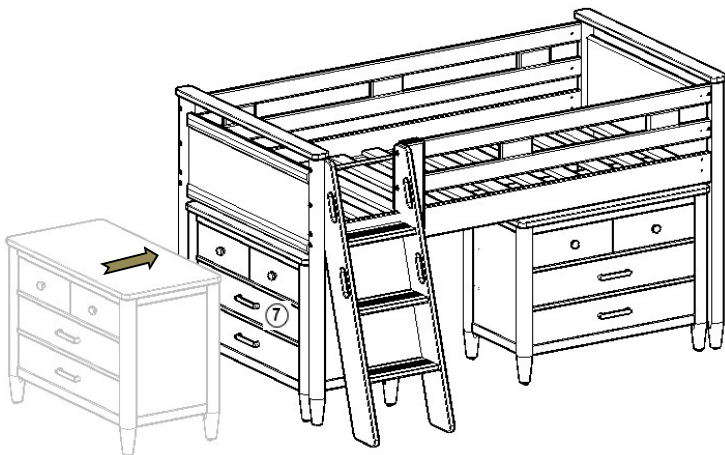

Slide 2nd 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide



Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

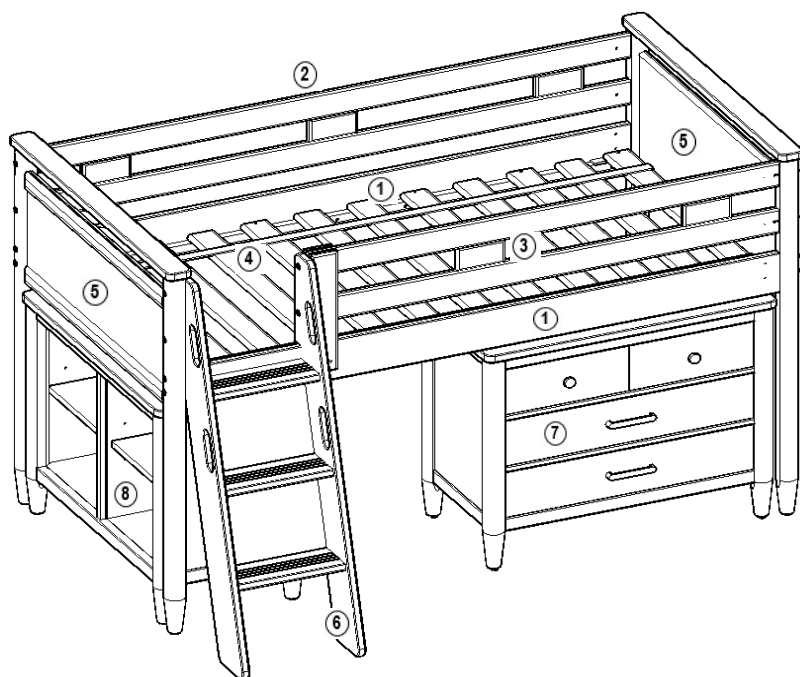

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pc
2		1 Pc	8		1 Pc
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3491123P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811238	12D-702	TWIN LOW LOFT BUNK END
35811238	12D-702	TWIN LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36811239	12D-761	37" BOOKCASE

3491124P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811240	12E-702	TWIN LOW LOFT BUNK END
35811240	12E-702	TWIN LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36811241	12E-761	37" BOOKCASE

3491125P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811252	12G-702	TWIN LOW LOFT BUNK END
35811252	12G-702	TWIN LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36811253	12G-761	37" BOOKCASE

3491126P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811264	12W-702	TWIN LOW LOFT BUNK END
35811264	12W-702	TWIN LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36811265	12W-761	37" BOOKCASE

3491127P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811276	12A-702	TWIN LOW LOFT BUNK END
35811276	12A-702	TWIN LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36811277	12A-761	37" BOOKCASE

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL




5/16-18x80 mm bolt 14x



5 mm allen wrench 1x



4 mm allen wrench 1x




5/16-18x40mm bolt 2x



1/4-20x17 mm cup nut 2x



1/4-20x70 mm conector 2x

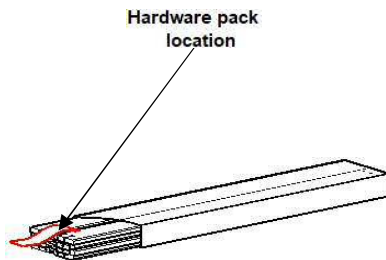


100-170 12 PC TWIN SLAT ROLL



6 x 1 1/4" Screw 10x

Hardware pack location




12-403 CHEST



Gold pulls 2x



Gold knobs 2x

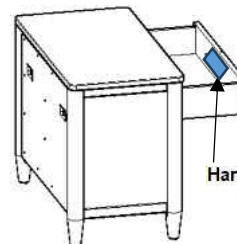


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening

TIPS # 1

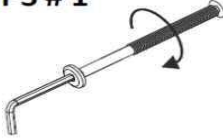

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM



LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

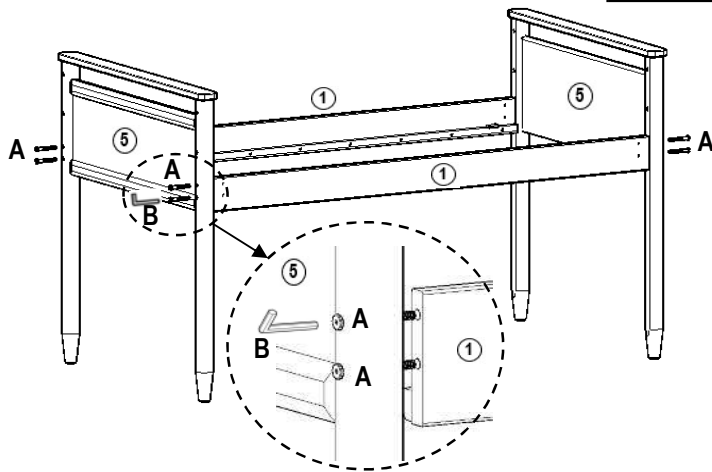


Assemble side rails.

STEP 2

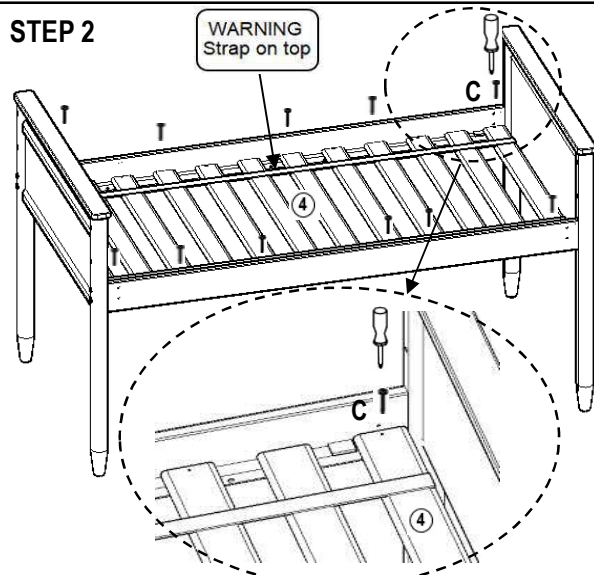


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

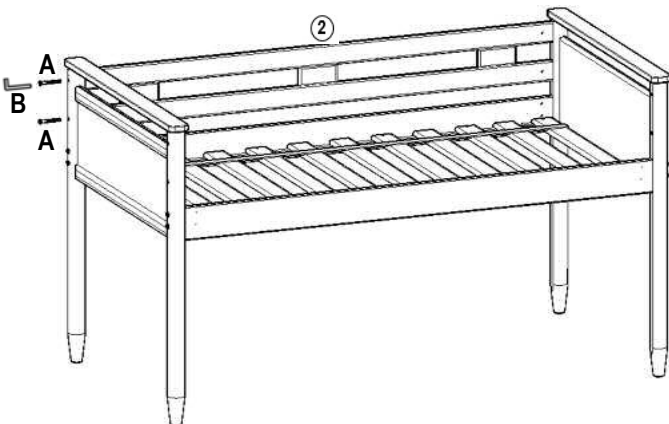

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

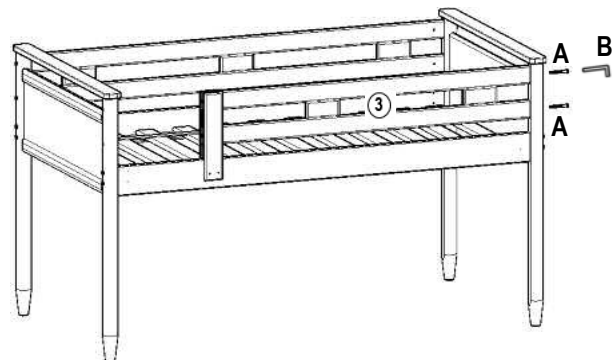

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


ASSEMBLY INSTRUCTIONS

STEP 5

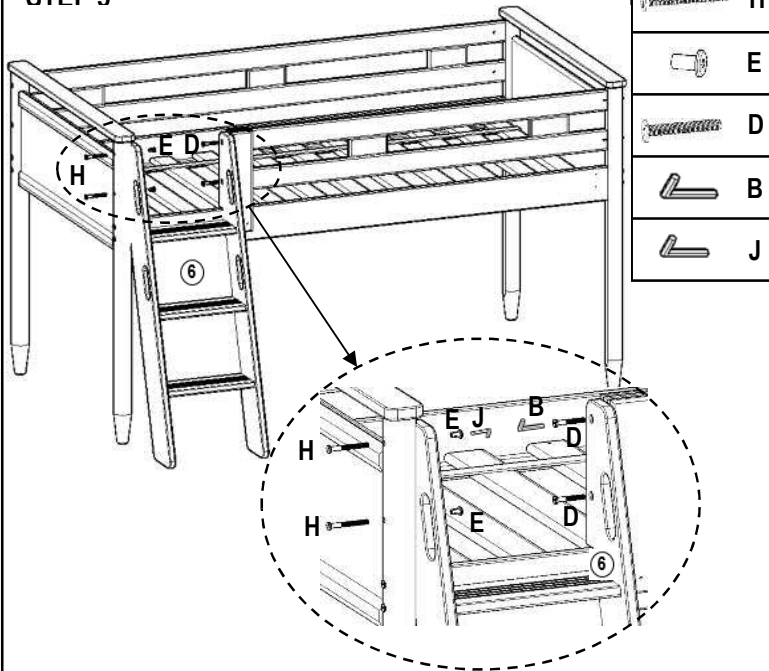


Install ladder per drawing

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

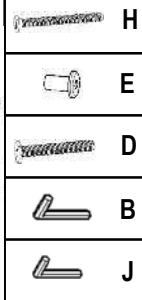


STEP 6

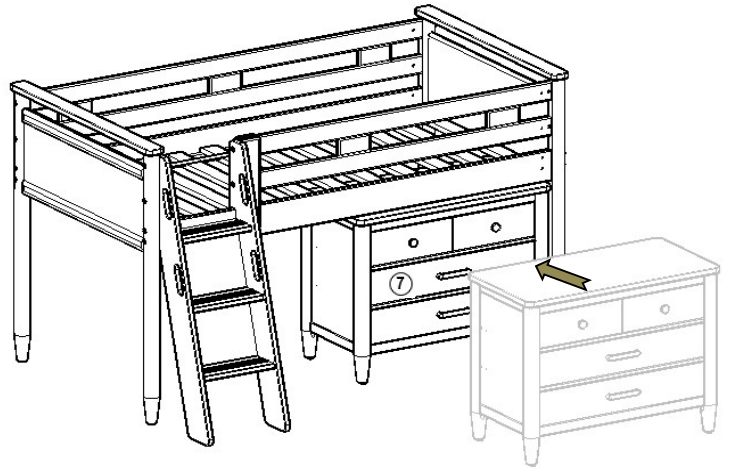

Slide 3 drw chest under loft bed

STEP 7

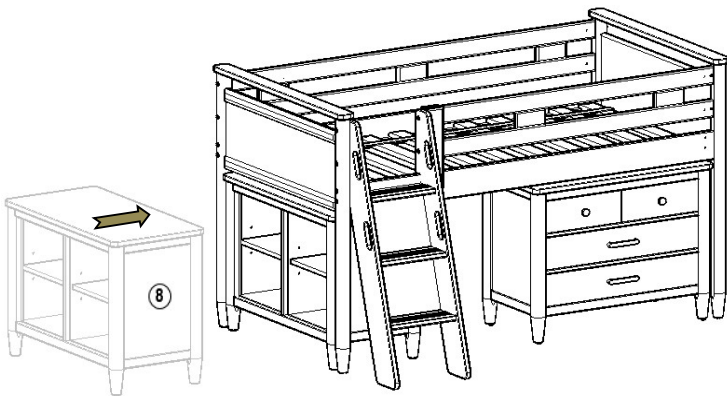

Slide bookcase under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide




Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

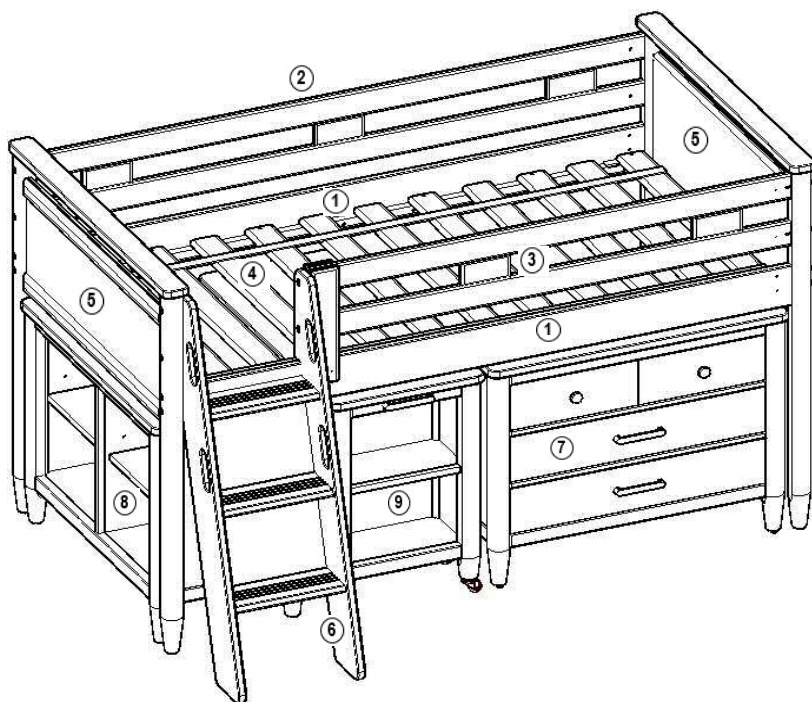

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pc
2		1 Pc	8		1 Pc
3		1 Pc	9		1 Pc
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3501123P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811238	12D-702	TWIN LOW LOFT BUNK END
35811238	12D-702	TWIN LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36811239	12D-761	37" BOOKCASE
36711237	12D-602	CASTER DESK

3501124P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811240	12E-702	TWIN LOW LOFT BUNK END
35811240	12E-702	TWIN LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36811241	12E-761	37" BOOKCASE
36711249	12E-602	CASTER DESK

3501125P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811252	12G-702	TWIN LOW LOFT BUNK END
35811252	12G-702	TWIN LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36811253	12G-761	37" BOOKCASE
36711251	12G-602	CASTER DESK

3501126P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811264	12W-702	TWIN LOW LOFT BUNK END
35811264	12W-702	TWIN LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36811265	12W-761	37" BOOKCASE
36711263	12W-602	CASTER DESK

3501127P TWIN LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
35811276	12A-702	TWIN LOW LOFT BUNK END
35811276	12A-702	TWIN LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36811277	12A-761	37" BOOKCASE
36711275	12A-602	CASTER DESK

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A

 5/16-18x80 mm bolt 14x

B

 5 mm allen wrench 1x

J

 4 mm allen wrench 1x

D


 5/16-18x40mm bolt 2x

E

 1/4-20x17 mm cup nut 2x

H

 1/4-20x70 mm conector 2x

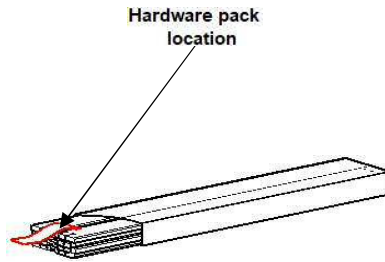

100-170 12 PC TWIN SLAT ROLL

C

 6 x 1 1/4" Screw 10x




12-403 CHEST

F

 Gold pulls 2x

G

 Gold knobs 2x

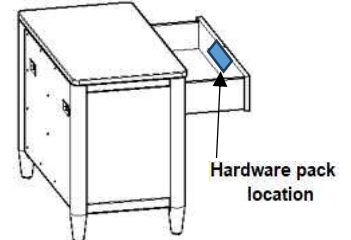

12-602 CASTER DESK

L


 Caster 6x

K

 Caster socket 6x

F

 Gold pulls 2x

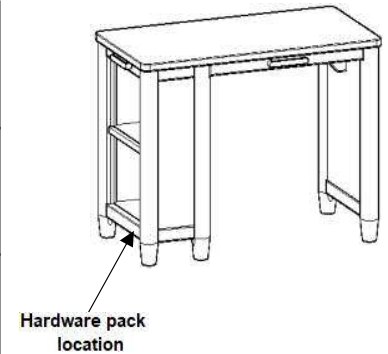


ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

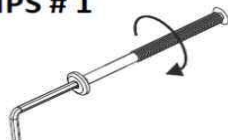

TIPS # 2

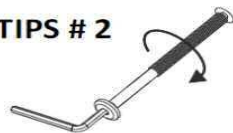


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

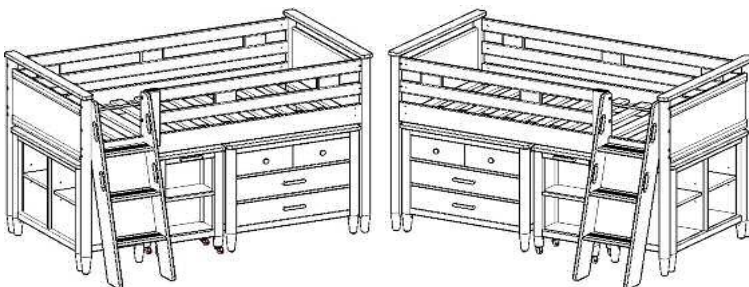

LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

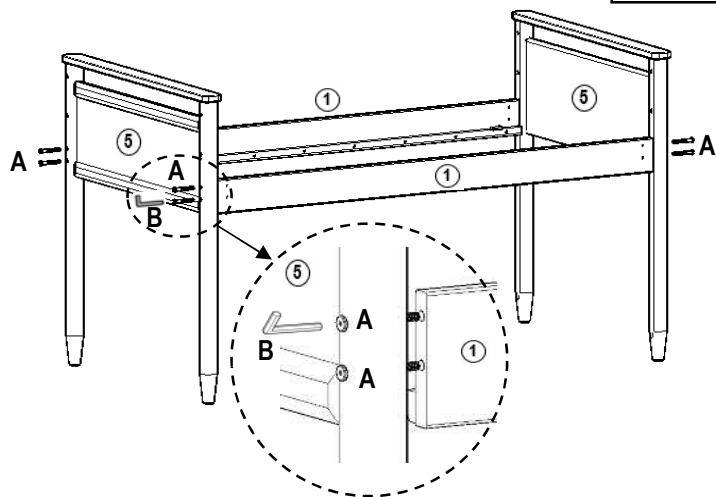


Assemble side rails.

STEP 2

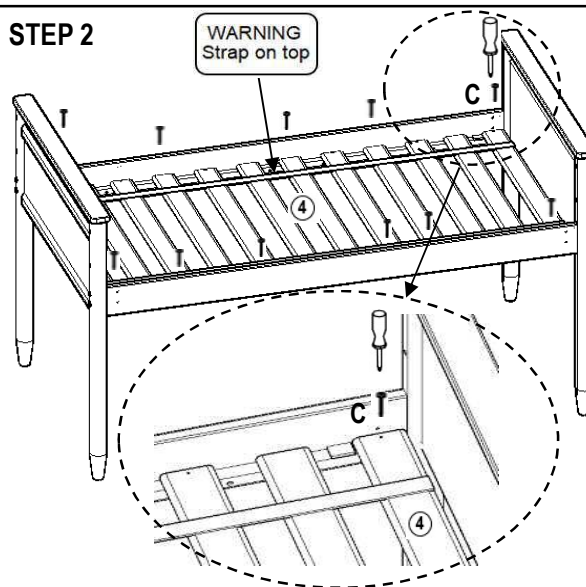


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

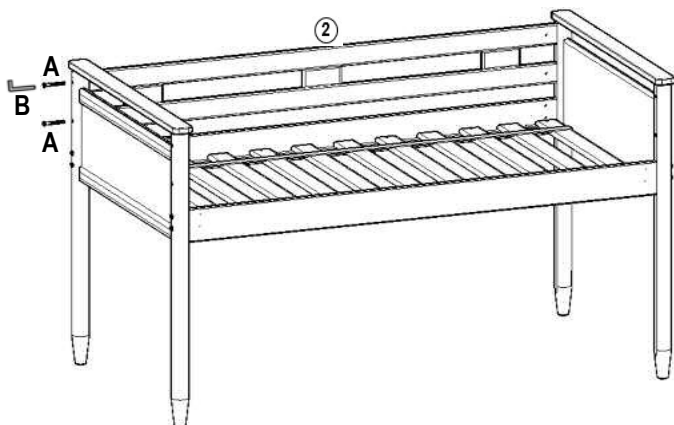

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

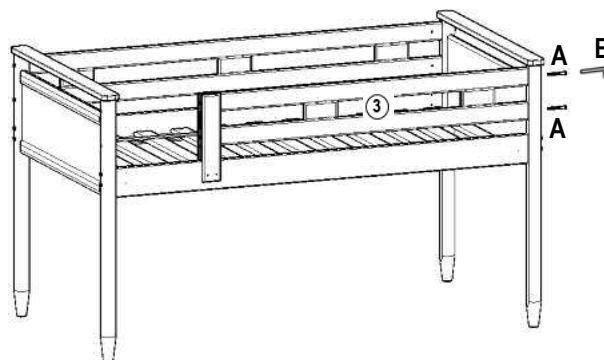

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

ASSEMBLY INSTRUCTIONS


STEP 5

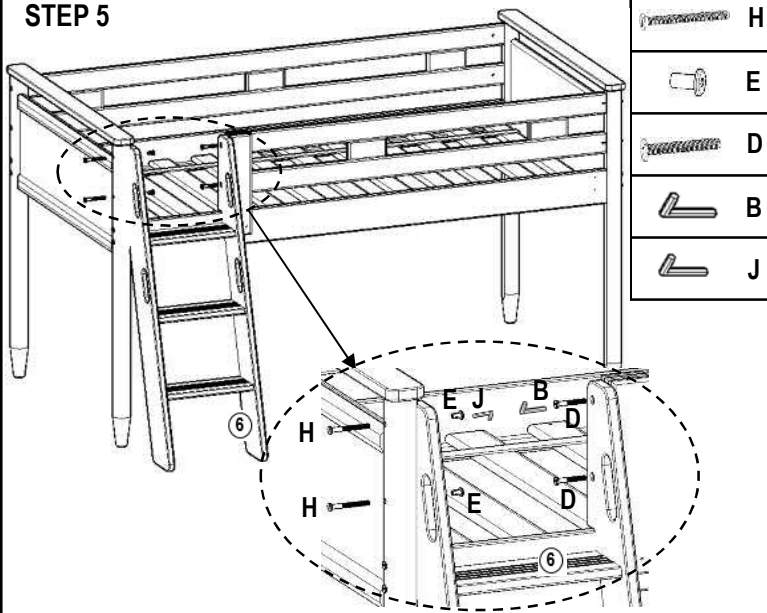

Install ladder per drawing


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

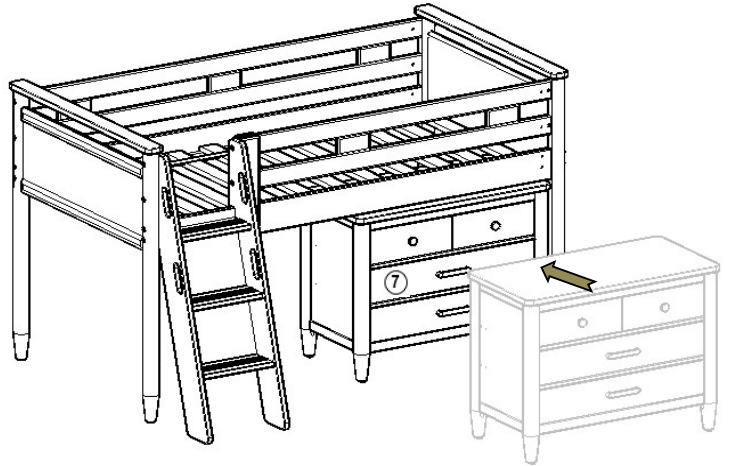


Slide 3 drw chest under loft bed

STEP 7

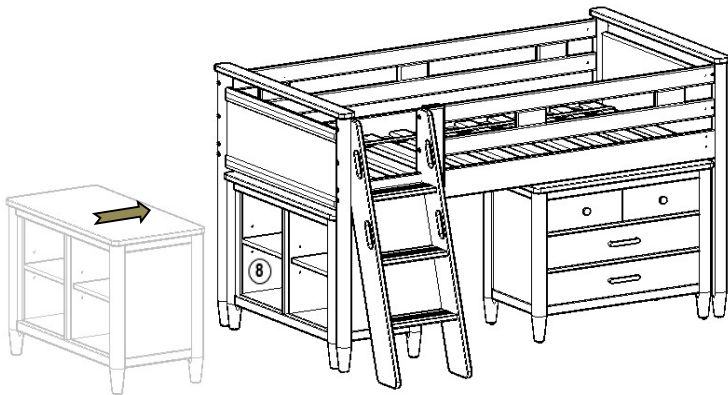


Slide bookcase under loft bed

STEP 8

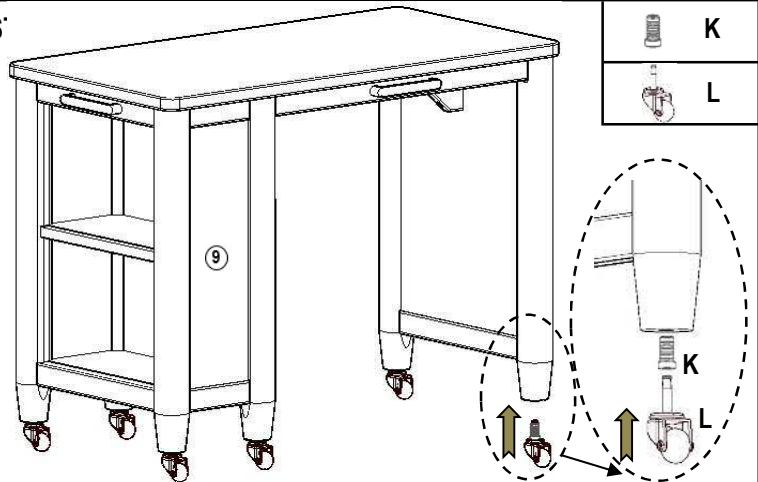

Install casters in all desk posts

STEP 9

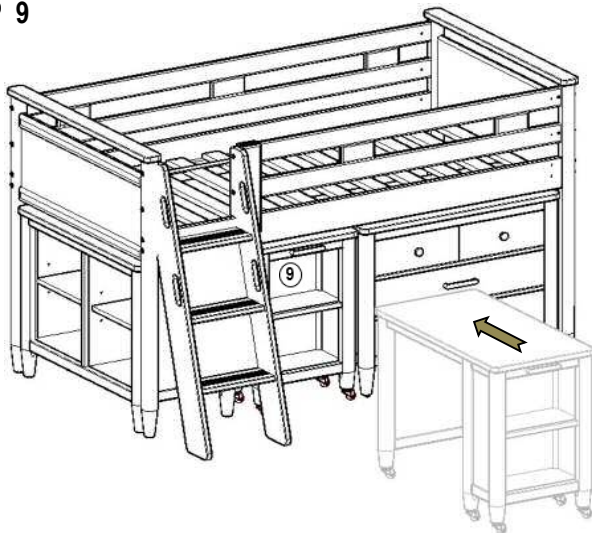

Slide caster desk under loft bed

ASSEMBLY INSTRUCTIONS

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide


Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

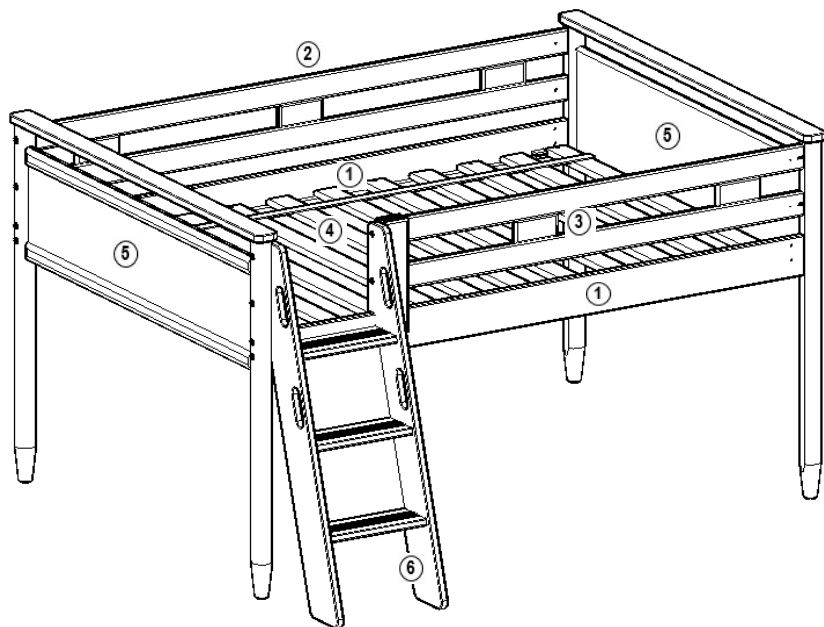

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs			
2		1 Pc			
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3571123P FULL LOW LOFT BED WITH LADDER D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011233	12D-703	FULL LOW LOFT BUNK END
36011233	12D-703	FULL LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL

3571124P FULL LOW LOFT BED WITH LADDER E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011245	12D-703	FULL LOW LOFT BUNK END
36011245	12D-703	FULL LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL

3571125P FULL LOW LOFT BED WITH LADDER G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011257	12D-703	FULL LOW LOFT BUNK END
36011257	12D-703	FULL LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL

3571126P FULL LOW LOFT BED WITH LADDER W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011269	12D-703	FULL LOW LOFT BUNK END
36011269	12D-703	FULL LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL

3571127P FULL LOW LOFT BED WITH LADDER A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011271	12D-703	FULL LOW LOFT BUNK END
36011271	12D-703	FULL LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A 
5/16-18x80 mm bolt 14x


B 
5 mm allen wrench 1x

J 
4 mm allen wrench 1x

D 
5/16-18x40mm bolt 2x

E 
1/4-20x17 mm cup nut 2x

H 
1/4-20x70 mm conector 2x

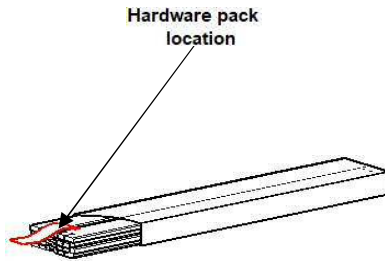

100-171 12 PC FULL SLAT ROLL

C 
6 x 1 1/4" Screw 10x




ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

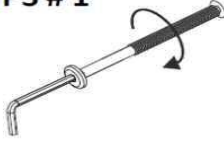

TIPS # 2

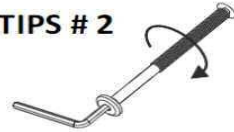


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

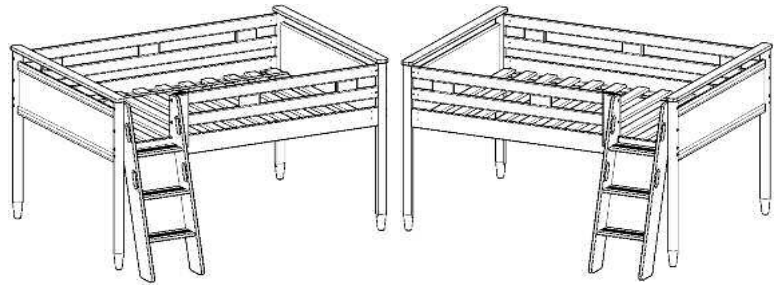

LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

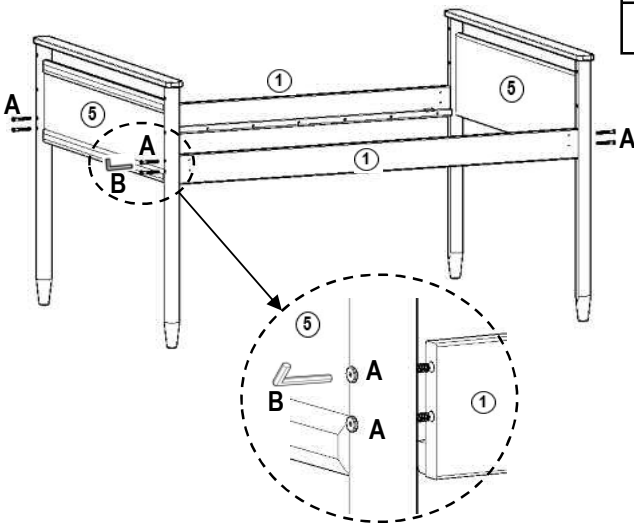


Assemble side rails.

STEP 2

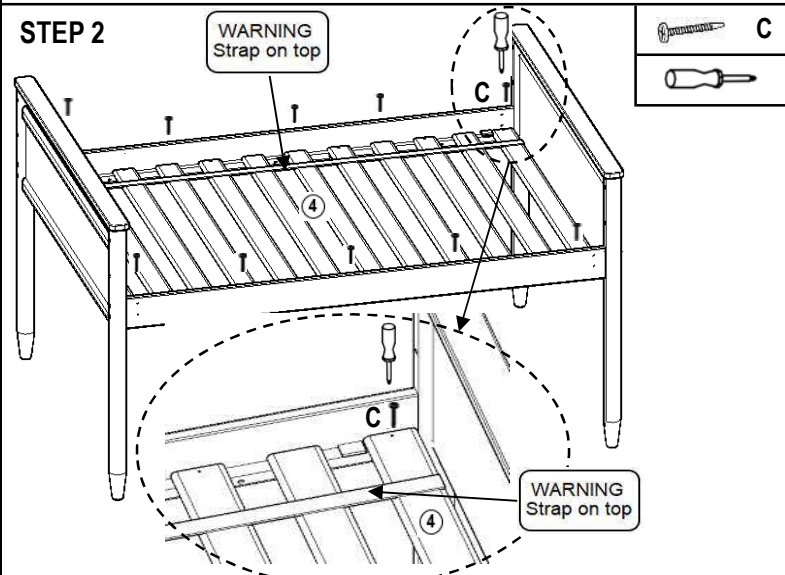


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

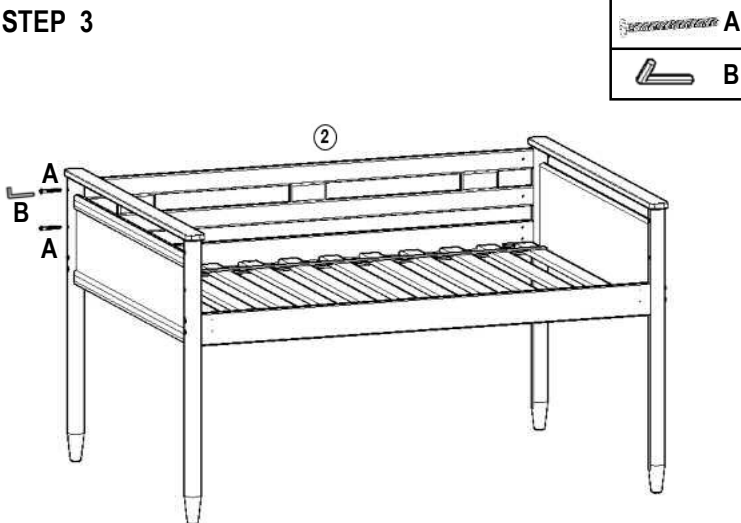

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

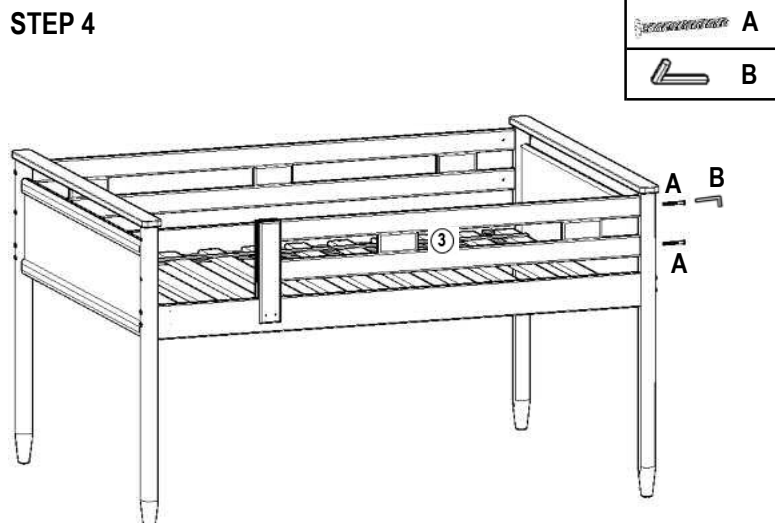

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

ASSEMBLY INSTRUCTIONS


STEP 5

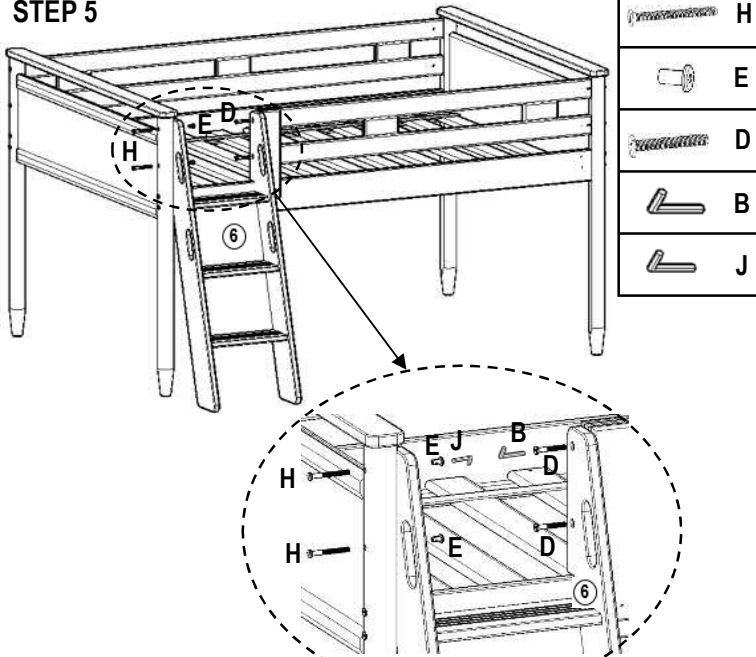

Install ladder per drawing

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

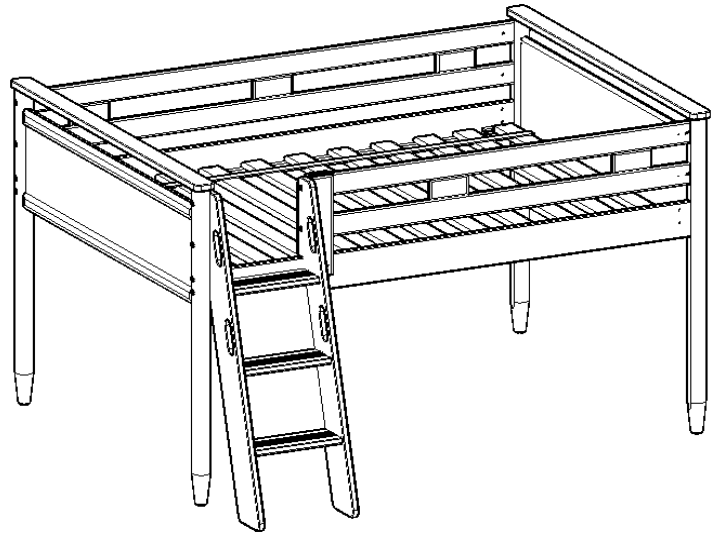

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide


Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

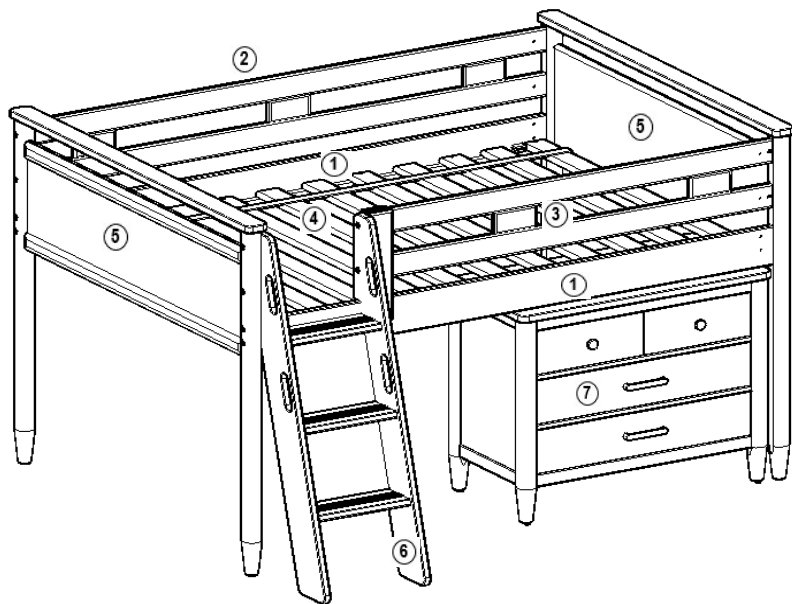

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pc
2		1 Pc			
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3581123P FULL LOW LOFT W/LADDER, CHEST D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011233	12D-703	FULL LOW LOFT BUNK END
36011233	12D-703	FULL LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST

3581124P FULL LOW LOFT W/LADDER, CHEST E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011245	12D-703	FULL LOW LOFT BUNK END
36011245	12D-703	FULL LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST

3581125P FULL LOW LOFT W/LADDER, CHEST G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011257	12D-703	FULL LOW LOFT BUNK END
36011257	12D-703	FULL LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST

3581126P FULL LOW LOFT W/LADDER, CHEST W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011269	12D-703	FULL LOW LOFT BUNK END
36011269	12D-703	FULL LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST

3581127P FULL LOW LOFT W/LADDER, CHEST A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011271	12D-703	FULL LOW LOFT BUNK END
36011271	12D-703	FULL LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A 
5/16-18x80 mm bolt 14x


B 
5 mm allen wrench 1x

J 
4 mm allen wrench 1x

D 
5/16-18x40mm bolt 2x


E 
1/4-20x17 mm cup nut 2x

H 
1/4-20x70 mm conector 2x

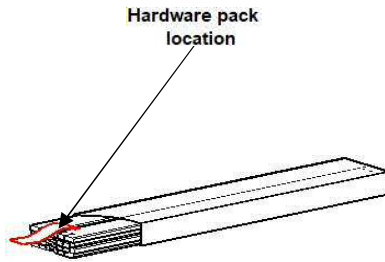

100-171 12 PC FULL SLAT ROLL


C 
6 x 1 1/4" Screw 10x

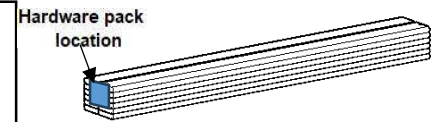

12-403 CHEST

F 
Gold pulls 2x

G 
Gold knobs 2x

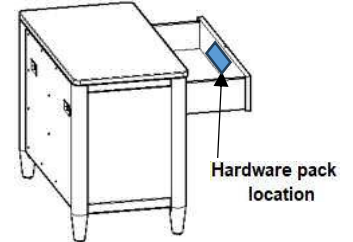


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening

TIPS # 1

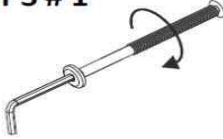

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM



LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

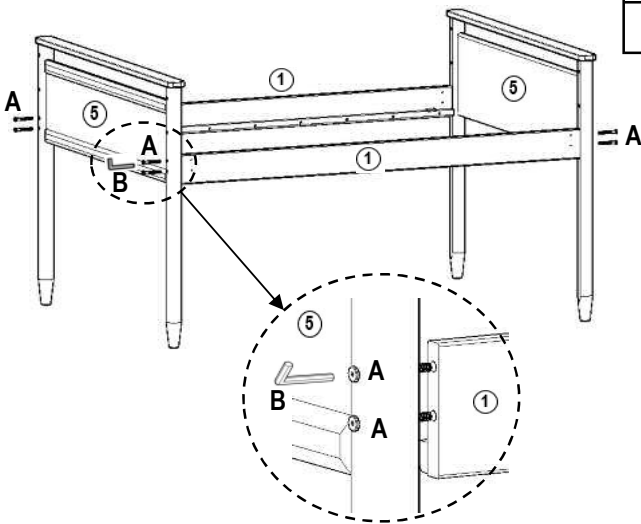


Assemble side rails.

STEP 2

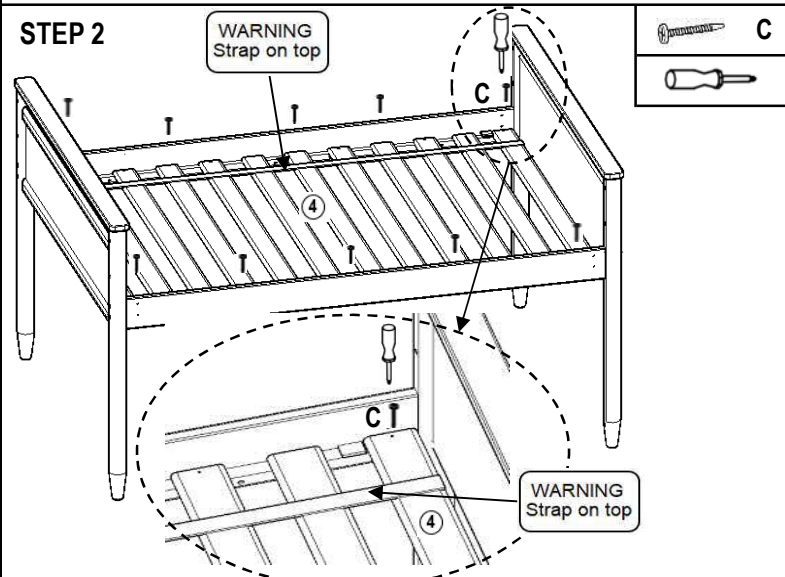


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

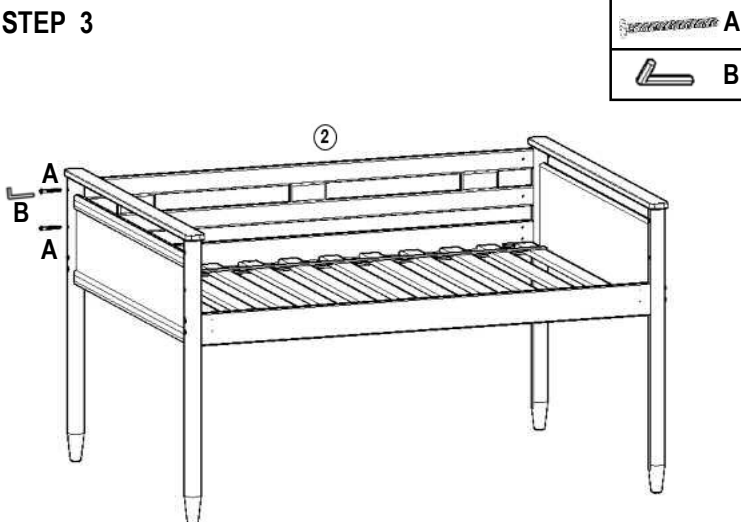


Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 4

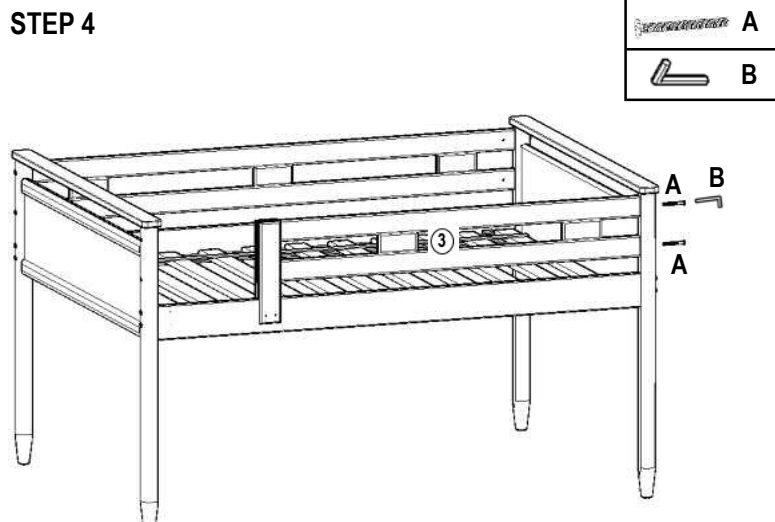

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


ASSEMBLY INSTRUCTIONS

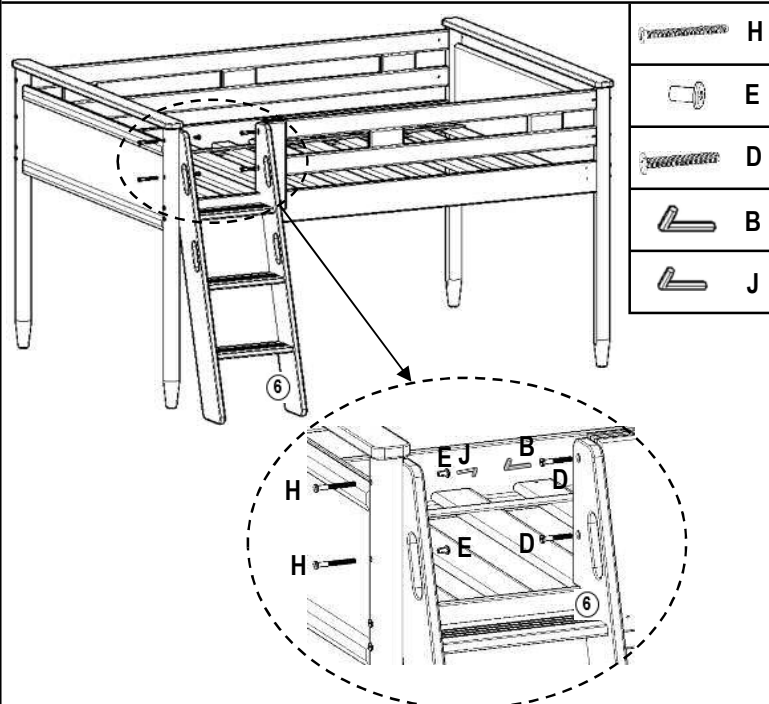

Install ladder per drawing

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

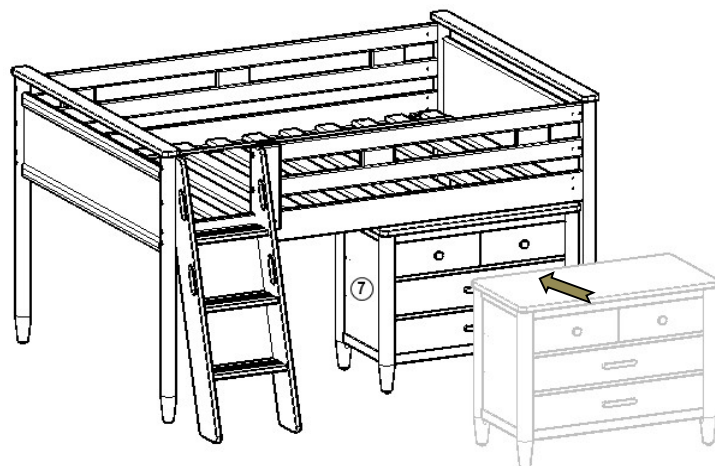

Slide 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide



Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

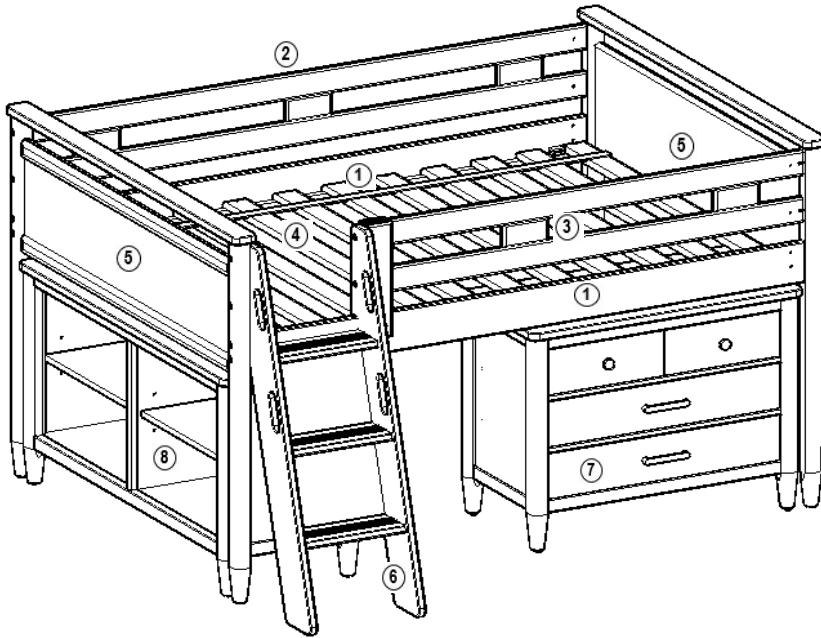

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pc
2		1 Pc	8		1 Pc
3		1 Pc			
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3591123P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011233	12D-703	FULL LOW LOFT BUNK END
36011233	12D-703	FULL LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST
36711237	12D-762	57" BOOKCASE

3591124P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011245	12D-703	FULL LOW LOFT BUNK END
36011245	12D-703	FULL LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST
36911243	12E-762	57" BOOKCASE

3591125P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011257	12D-703	FULL LOW LOFT BUNK END
36011257	12D-703	FULL LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST
36911255	12G-762	57" BOOKCASE

3591126P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011269	12D-703	FULL LOW LOFT BUNK END
36011269	12D-703	FULL LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST
36911267	12W-762	57" BOOKCASE

3591127P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011271	12D-703	FULL LOW LOFT BUNK END
36011271	12D-703	FULL LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST
36911279	12A-762	57" BOOKCASE

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A 
5/16-18x80 mm bolt 14x


B 
5 mm allen wrench 1x

J 
4 mm allen wrench 1x

D 
5/16-18x40mm bolt 2x

E 
1/4-20x17 mm cup nut 2x

H 
1/4-20x70 mm conector 2x

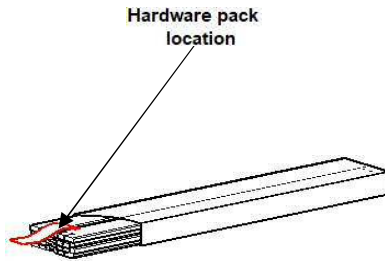

100-171 12 PC FULL SLAT ROLL


C 
6 x 1 1/4" Screw 10x



12-403 CHEST

F 
Gold pulls 2x

G 
Gold knobs 2x

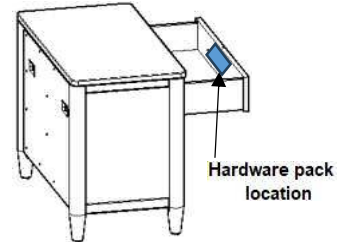


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening

TIPS # 1

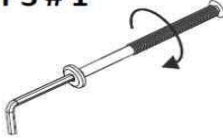

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM



LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

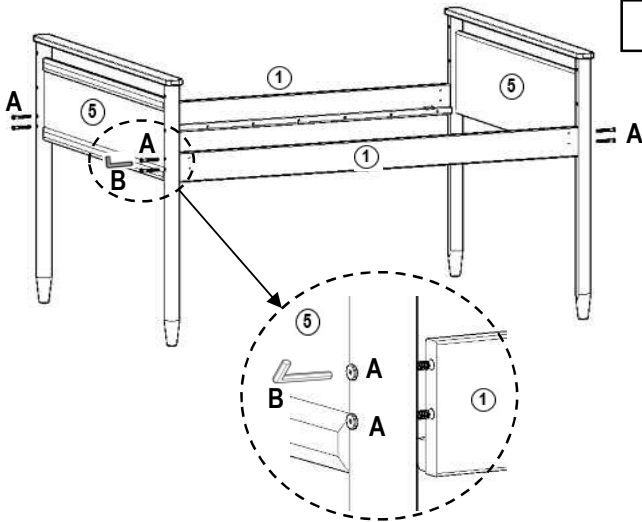


Assemble side rails.

STEP 2

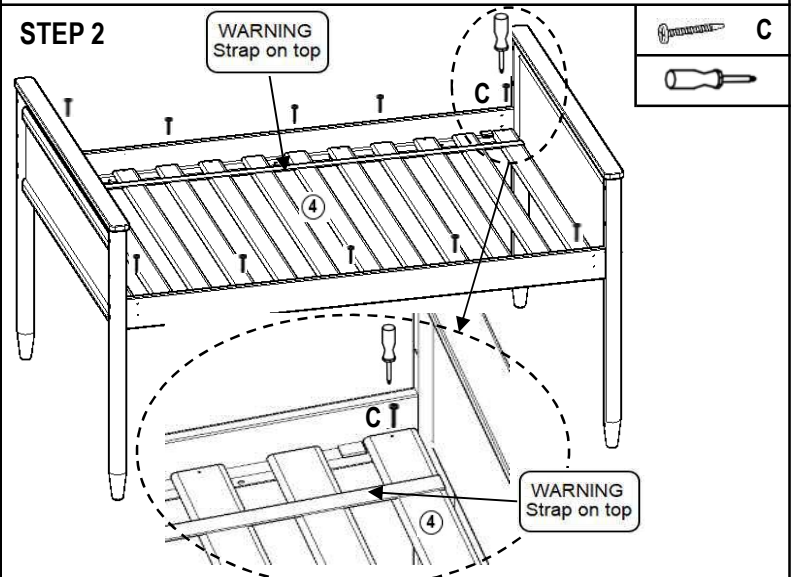


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

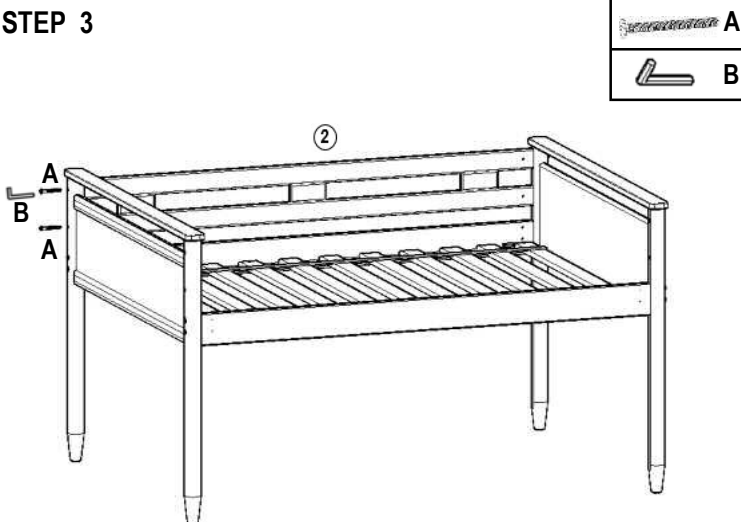

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

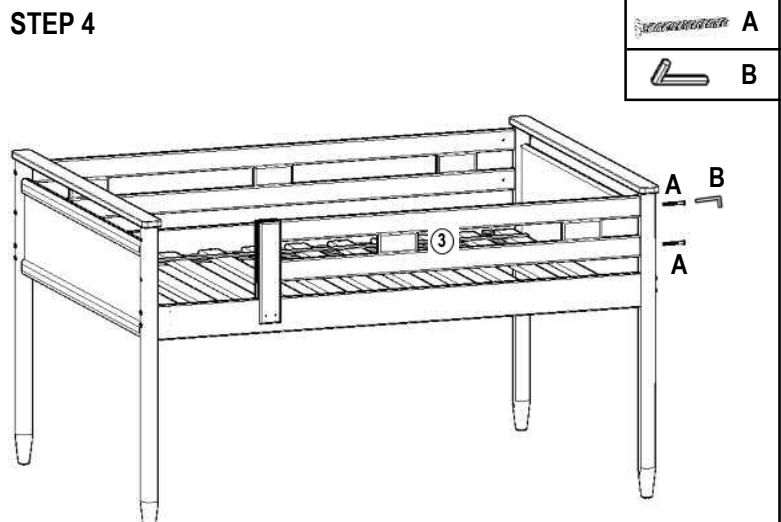

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

ASSEMBLY INSTRUCTIONS


STEP 5

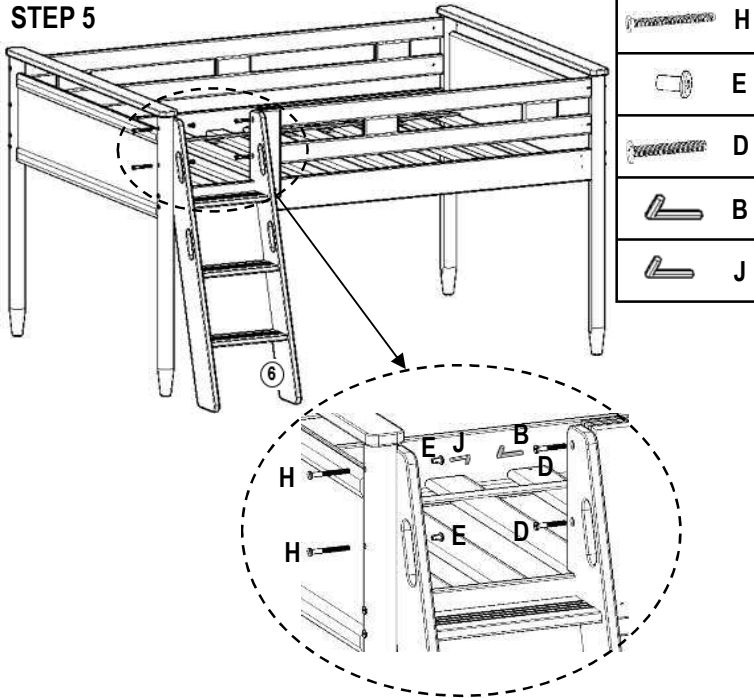

Install ladder per drawing


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

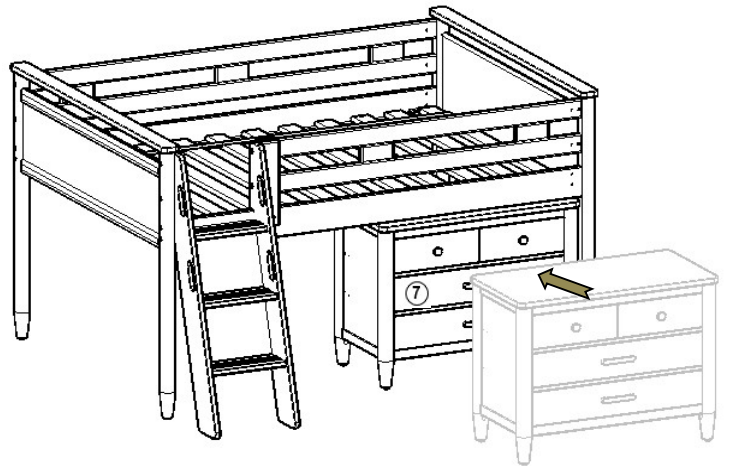

Slide 3 drw chest under loft bed

STEP 7

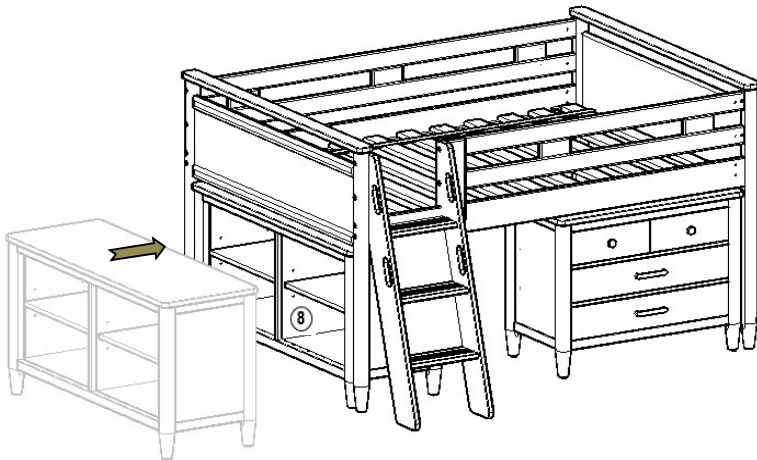

Slide bookcase under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide




Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

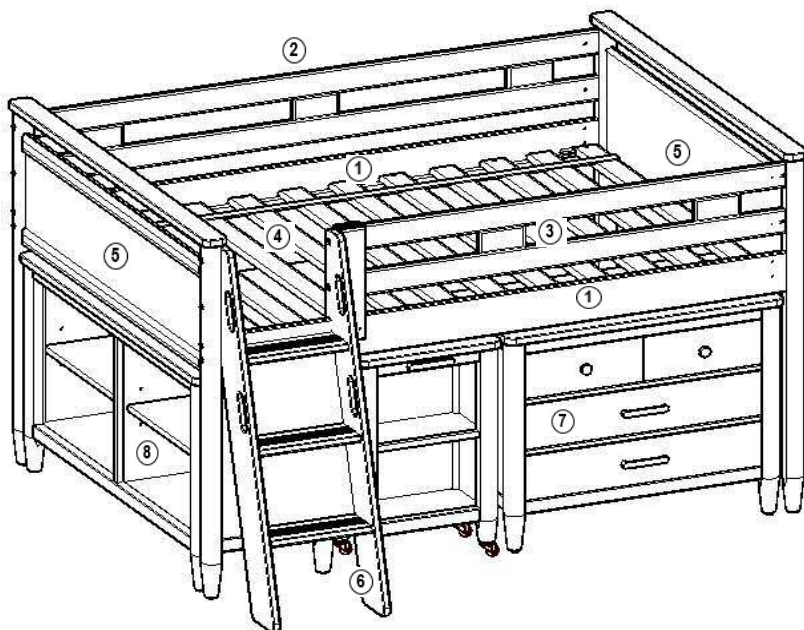

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pc
2		1 Pc	8		1 Pc
3		1 Pc	9		1 Pc
4		1 Pc			
5		2 Pcs			
6		1 Pc			

3601123P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011233	12D-703	FULL LOW LOFT BUNK END
36011233	12D-703	FULL LOW LOFT BUNK END
36311239	12D-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411231	12D-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST
36711237	12D-762	57" BOOKCASE
36711237	12D-602	CASTER DESK

3601124P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011245	12D-703	FULL LOW LOFT BUNK END
36011245	12D-703	FULL LOW LOFT BUNK END
36311241	12E-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411243	12E-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST
36911243	12E-762	57" BOOKCASE
36711249	12E-602	CASTER DESK

3601125P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011257	12D-703	FULL LOW LOFT BUNK END
36011257	12D-703	FULL LOW LOFT BUNK END
36311253	12G-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411255	12G-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST
36911255	12G-762	57" BOOKCASE
36711251	12G-602	CASTER DESK

3601126P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011269	12D-703	FULL LOW LOFT BUNK END
36011269	12D-703	FULL LOW LOFT BUNK END
36311265	12W-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411267	12W-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST
36911267	12W-762	57" BOOKCASE
36711263	12W-602	CASTER DESK

3601127P FULL LOW LOFT W/LADDER, CHEST, BOOKCASE, DESK A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36011271	12D-703	FULL LOW LOFT BUNK END
36011271	12D-703	FULL LOW LOFT BUNK END
36311277	12A-733	4 PC SIDE RAILS WITH 3/4 FRONT RAIL
36411279	12A-724	LOW LOFT LADDER
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST
36911279	12A-762	57" BOOKCASE
36711275	12A-602	CASTER DESK

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-733 4 PC SIDE RAILS WITH 3/4 FRONT RAIL

A

 5/16-18x80 mm bolt 14x

B

 5 mm allen wrench 1x

J

 4 mm allen wrench 1x

D

 5/16-18x40mm bolt 2x


E

 1/4-20x17 mm cup nut 2x

H

 1/4-20x70 mm conector 2x

Hardware pack
location



100-171 12 PC FULL SLAT ROLL

C

 6 x 1 1/4" Screw 10x

Hardware pack
location




12-403 CHEST

F

 Gold pulls 2x

G

 Gold knobs 2x

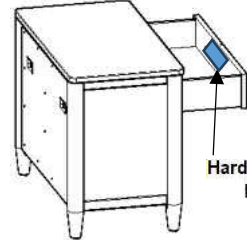

Hardware pack
location

12-602 CASTER DESK

L

 Caster 6x

K

 Caster socket 6x

F

 Gold pulls 2x




Hardware pack
location

ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening

TIPS # 1

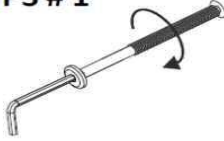

TIPS # 2

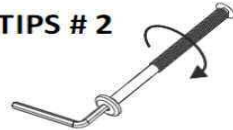


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM



LADDER ON THE LEFT


LADDER ON THE RIGHT

STEP 1

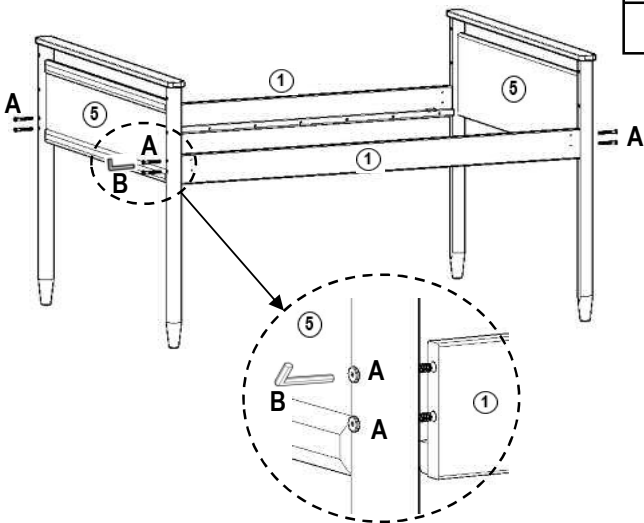


Assemble side rails.

STEP 2

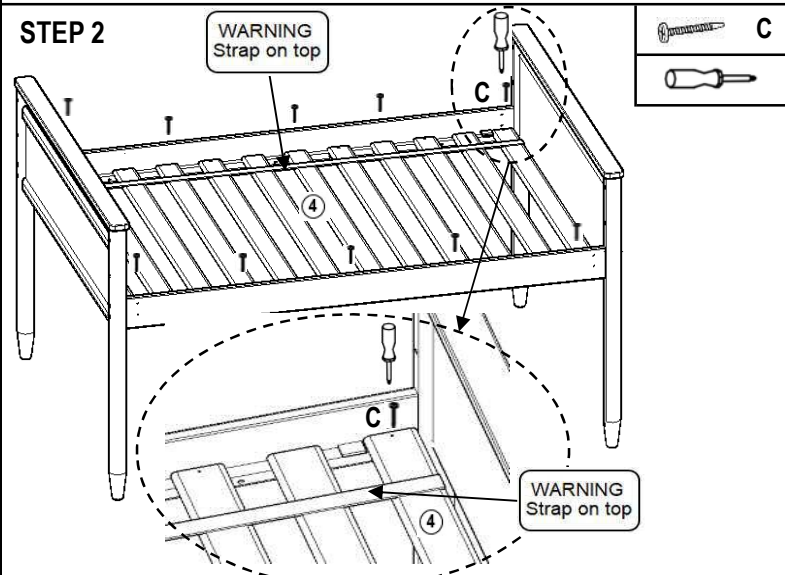


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

STEP 3

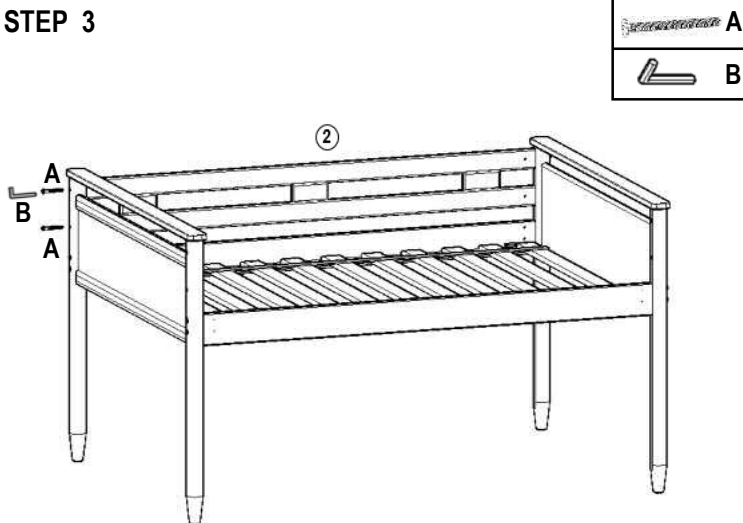

Assemble back guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 4

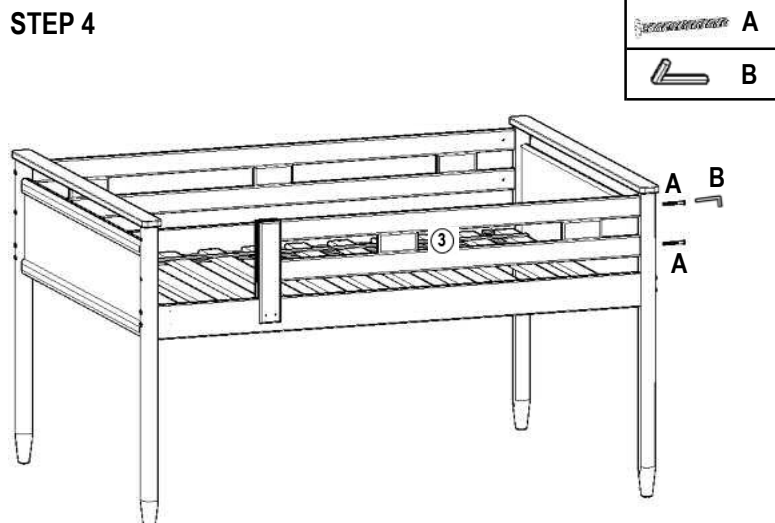

Assemble front guardrail and tighten all bolts.
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

ASSEMBLY INSTRUCTIONS


STEP 5

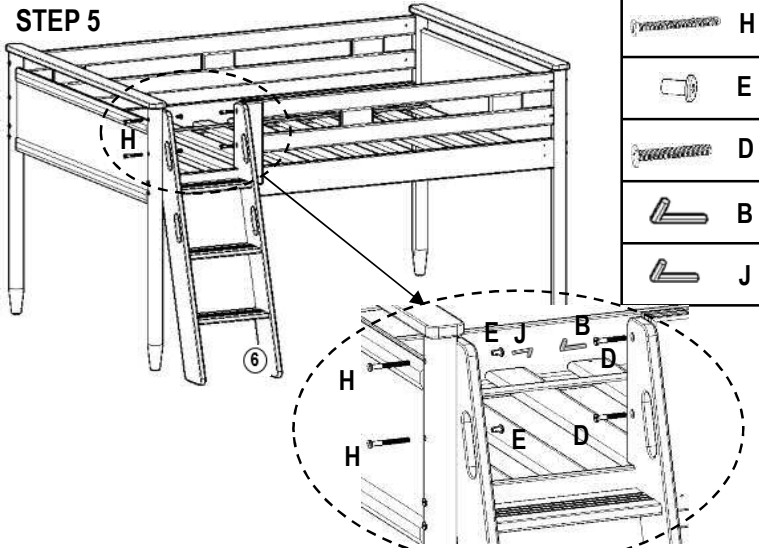

Install ladder per drawing


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 6

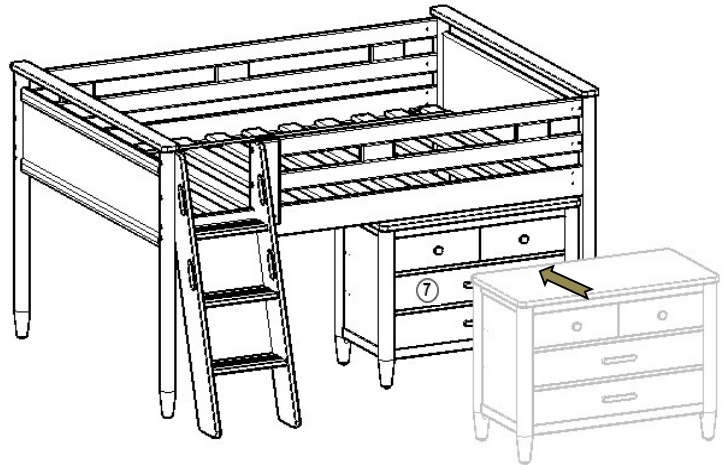


Slide 3 drw chest under loft bed

STEP 7

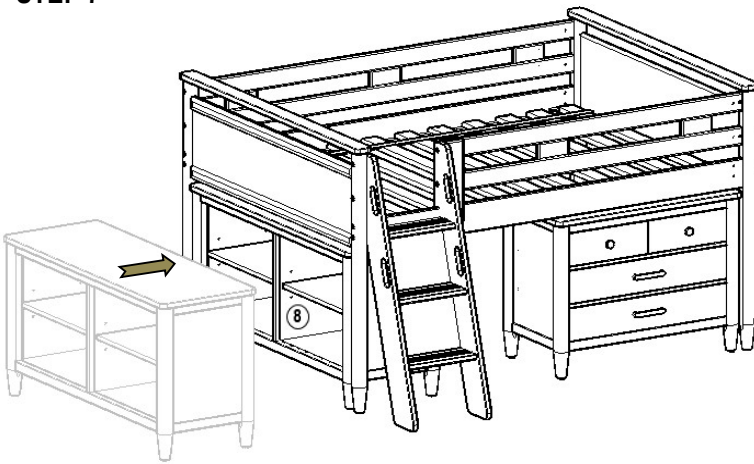


Slide bookcase under loft bed

STEP 8

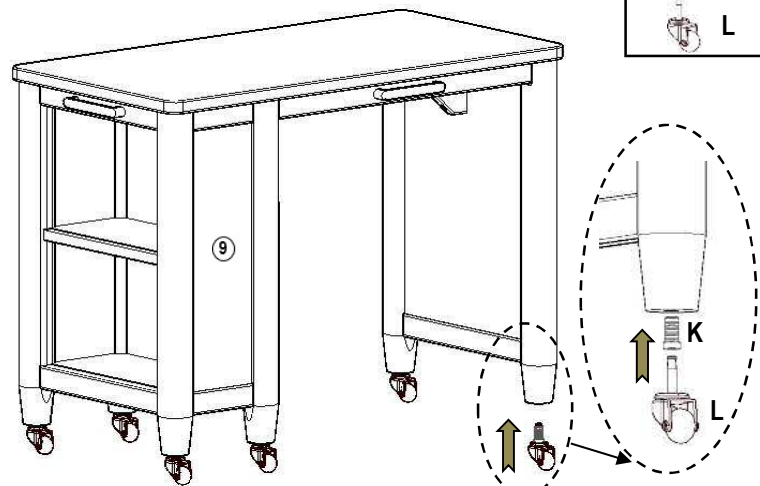

Install casters in all desk posts

STEP 9

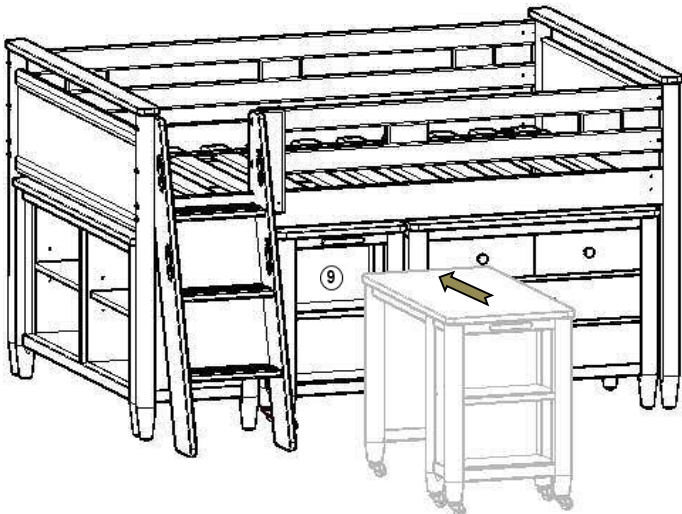

Slide caster desk under loft bed

ASSEMBLY INSTRUCTIONS

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide

Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST