





PARTS LIST

3494040P FULL BOOKCASE BED CHARCOAL		
RTG SKU #	STYLE #	ITEM DESCRIPTION
34940406	40G-814	FULL BOOKCASE HEADBOARD
35040409	40G-118	FULL FOOTBOARD
35140401	40G-939	2 PC. SIDE RAILS
38100234	100-646	FULL SLAT PACK (4)
35440407	40G-744	TRUNDLE BED ADD ON

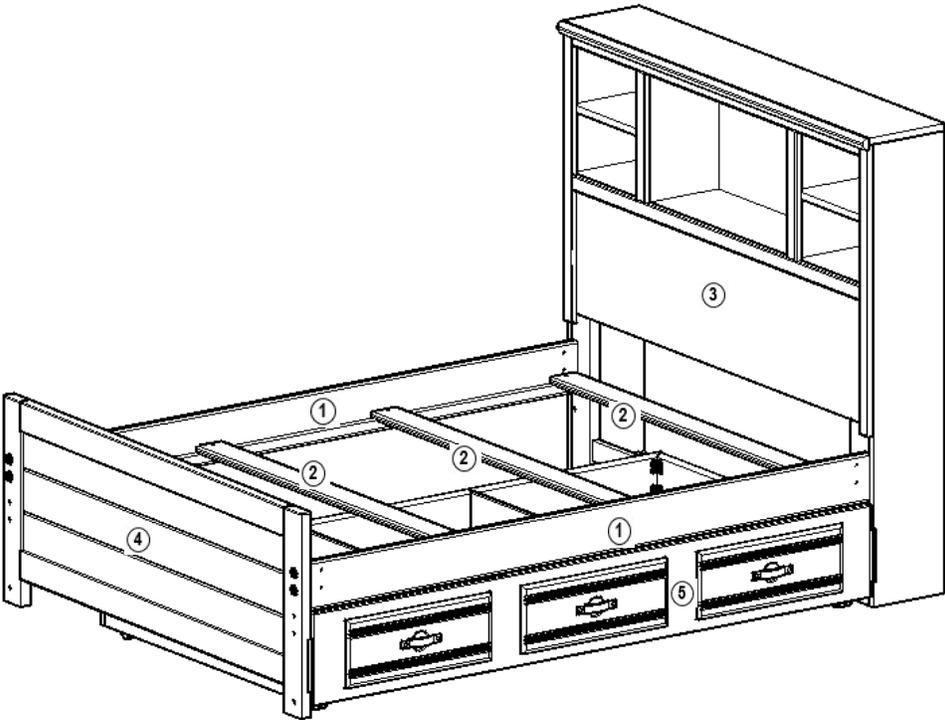



3494041P FULL BOOKCASE BED CHESTNUT		
RTG SKU #	STYLE #	ITEM DESCRIPTION
34940418	40B-814	FULL BOOKCASE HEADBOARD
35040411	40B-118	FULL FOOTBOARD
35140413	40B-939	2 PC. SIDE RAILS
38100234	100-646	FULL SLAT PACK (4)
35440419	40B-744	TRUNDLE BED ADD ON

WARNING:
THE BED SLATS WILL NOT SUPPORT A MATTRESS ALONE, THIS BED REQUIRES A BOX SPRING OR BUNKIE BOARD. SOLD SEPARATELY

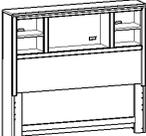

PARTS LIST	QTY	PARTS LIST	QTY	HARDWARE LIST	QTY	TOOLS NEEDED
1			2 Pcs	A		Phillips screwdriver (not included) 
		Side rails		5/16"-18 x 2 3/8" Bolt	8 Pcs	
2			4 Pcs	B		Allen wrench (included) 
		Full slats		C		
				1 1/4" Screws	8 Pcs	
3			1 Pc			
		Full bookcase hdbd				
4			1 Pc			
		Full footboard				
5			1 Pc			
		Trundle bed (Optional)				

ASSEMBLY INSTRUCTIONS

THERE ARE TWO POSSIBLE SETTINGS, HIGH AND LOW SIDE RAIL SETTINGS
 IF YOU PURCHASE A TRUNDLE BED DO HIGH SETTINGS,
 IF NOT DO LOW SETTINGS.

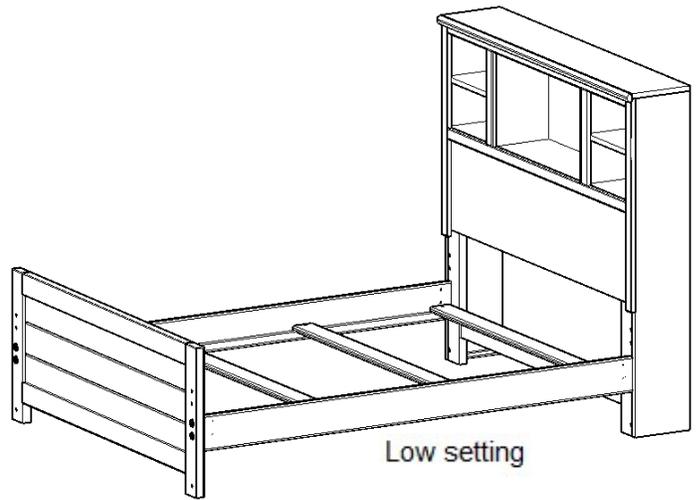
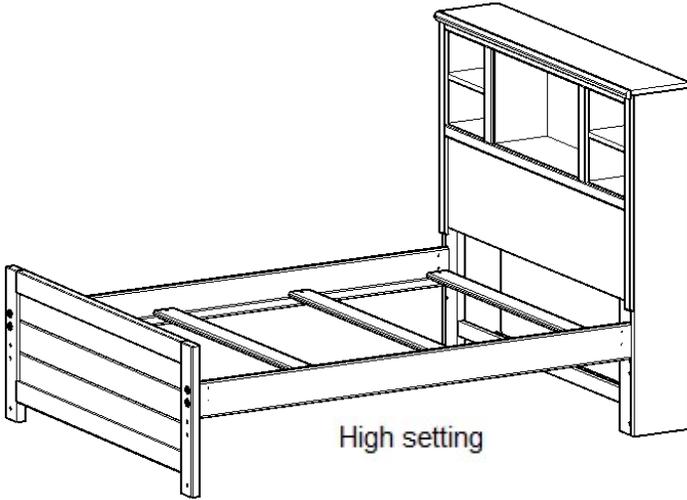


STEP 1

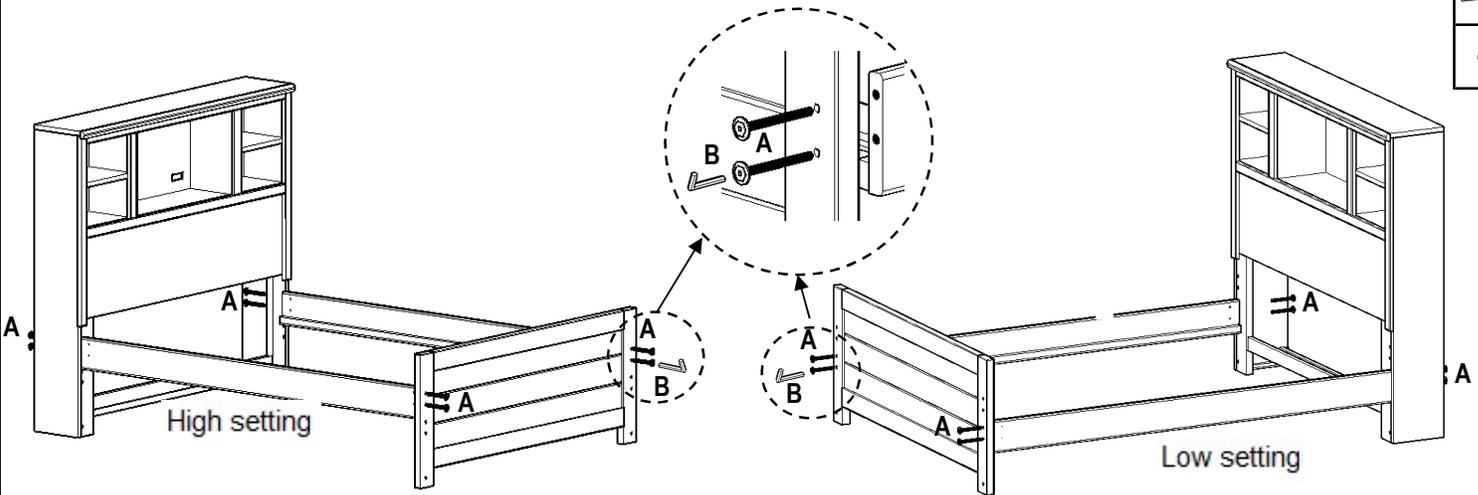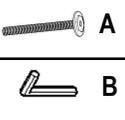

Assemble side rails
MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


STEP 2

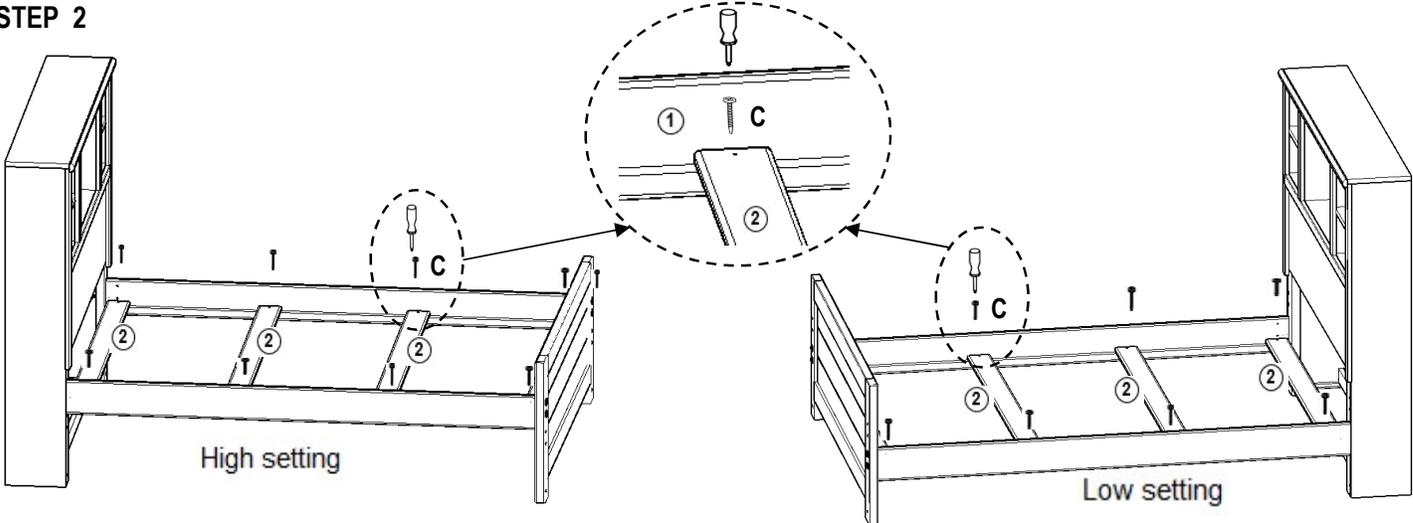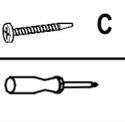

Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

ASSEMBLY INSTRUCTIONS

STEP 3

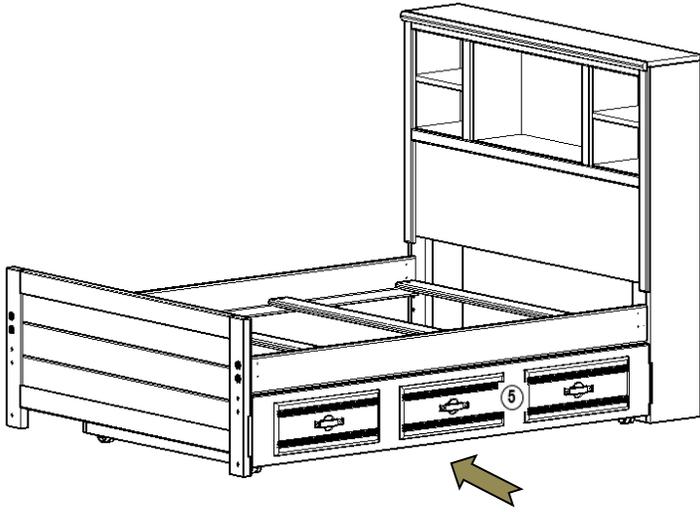

For **optional** Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.