

IVY LEAGUE 2.0 COLLECTION

THANK YOU FOR YOUR PURCHASE



WARNING DANGER

Failure to follow these warnings and assembly instructions could result in serious injury or death. To help prevent serious or fatal injuries from entrapment or falls:

- Read all instructions before assembling bunk bed and keep these instructions for future reference.
- Before each usage or assembly, inspect bunk bed for damaged hardware, loose joints, missing parts, or sharp edges. DO NOT Use bunk bed if any parts are missing or broken.
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.
- Follow the information on the warnings appearing on the upper bunk end structure and on the carton, DO NOT REMOVE WARNING LABEL FROM BED.
- Always use the recommended size mattress or mattress supports, or both to help prevent the likelihood of entrapment or falls.
- Ensure thickness of mattress and foundation combine does not exceed **10 inches (255mm)** and mattress surface is at least **5 inches (127mm)** below upper edge of guardrails.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Limit top bunk use to one person.
- Always use the ladder for entering and leaving the upper bunk.
- Use of night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- The use of water or sleep flotation mattress is prohibited.
- This bunk bed meets all the requirements of ASTM 1427-19.




STRANGULATION HAZARD:

Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts, and jump ropes.

1/12/2021 Page1 of 72


CONFIGURATIONS

Choose your configuration, read all the instructions, identify all components, and be sure you have all parts prior to assembly

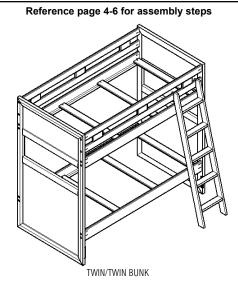


3462360P WALNUT

3461326P WHITE

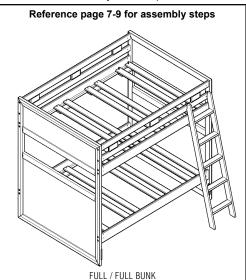

3472360P WALNUT

3471326P WHITE

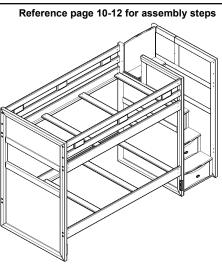

TWIN / TWIN STEP BUNK

3482360P WALNUT 3481326P WHITE Reference page 21-24 for assembly steps



FULL / FULL STEP BUNK BED


3492360P WALNUT 3491326P WHITE



Reference page 17-20 for assembly steps

TWIN / TWIN LOFT W/CHEST

3512360P WALNUT 3511326P WHITE

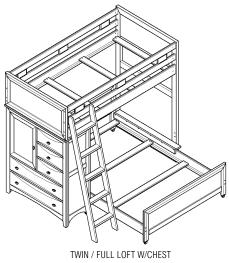

3522360P WALNUT 3521326P WHITE Reference page 34-38 for assembly steps



3532360P WALNUT 3531326P WHITE



FULL/TWIN LOFT W/CHEST-BOOKCASE 3552360P WALNUT 3551326P WHITE



FULL/FULL LOFT W/CHEST-BOOKCASE

3562360P WALNUT 3561326P WHITE

1/12/2021 Page2of 72


CONFIGURATIONS

Choose your configuration, read all the instructions, identify all components, and be sure you have all parts prior to assembly

Reference page 39-42 for assembly steps

Reference page 39-44 for assembly steps

Reference page 45-48 for assembly steps

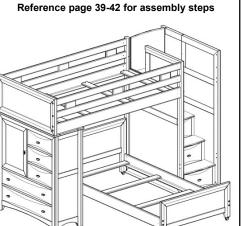


TWIN/TWIN STEP LOFT W/CHEST

3592360P WALNUT


3591326P WHITE

TWIN/TWIN STEP LOFT W/CHEST-DESK ATTACHMENT
3602360P WALNUT 3601326P WHITE

Reference page 51-68 for assembly steps

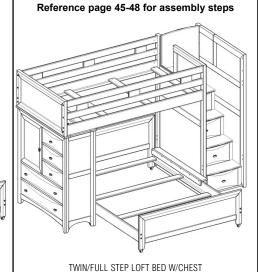

PENDING WALNUT PENDING WHITE
Reference page 51-60 for assembly steps

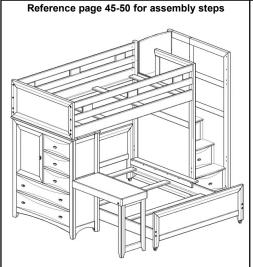

TWIN/FULL STEP LOFT W/CHEST-DESK ATTACHMENT 3622360P WALNUT 3621326P WHITE




FULL/TWIN STEP LOFT W/CHEST-BOOKCASE

3652360P WALNUT 3651326P WHITE



FULL/TWIN STEP LOFT W/CHEST-BOOKCASE-DESK ATTACHMENT 3662360P WALNUT 3661326P WHITE



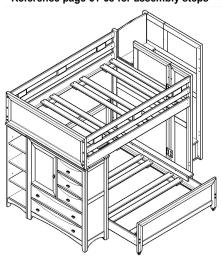


FULL/FULL STEP LOFT W/CHEST-BOOKCASE

3672360P WALNUT 3671326P WHITE



FULL/FULL STEP LOFT W/CHEST-BOOKCASE-DESK ATTACHMENT
PENDING WALNUT PENDING WHITE

1/12/2021 Page3 of 72

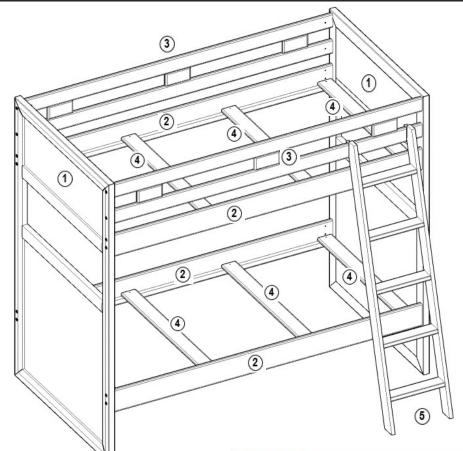

3462360P TWIN/TWIN BUNK WALNUT							
RTG SKU#	STYLE#	ITEM DESCRIPTION					
35423603	3260706	TWIN BUNKBED END					
35423603	3260706	TWIN BUNKBED END					
36723600	3260720	LADDER					
36623608	3260730	4 SIDE RLS/2 GUARD RLS					
38000232	100-645	TWIN SLAT PACK (4)					
38000232	100-645	TWIN SLAT PACK (4)					

	3461326P	TWIN/TWIN BUNK WHITE
RTG SKU#	STYLE#	ITEM DESCRIPTION
35413260	3261706	TWIN BUNKBED END
35413260	3261706	TWIN BUNKBED END
36713267	3261720	LADDER
36613265	3261730	4 SIDE RLS/2 GUARD RLS
38000232	100-645	TWIN SLAT PACK (4)
38000232	100-645	TWIN SLAT PACK (4)

WARNING

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

	PARTS LIST QTY					
1	Twin bunk bed end	2 Pcs				
2	Side rails	4 Pcs				
3	Guardrails	2 Pcs				
4	Slats	8 Pcs				
5	Ladder	1 Pc				

HAF	RDWARE LIST	QTY	TOOLS NEEDED
Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
В	Allen wrench	1 Pc	Allen wrench (included)
С	1 1/4" Screws	16 Pcs	
D	Panamani 1" Screws	6 Pcs	
E	Ladder Hook	2 Pcs	

TWO PEOPLE ARE NEEDED TO ASSEMBLE

DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES


ARE CONNECTED TOGETHER


12/12/2020 Page 4 of 72


TIPS: SEE ILLUSTRATION BELOW


- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening



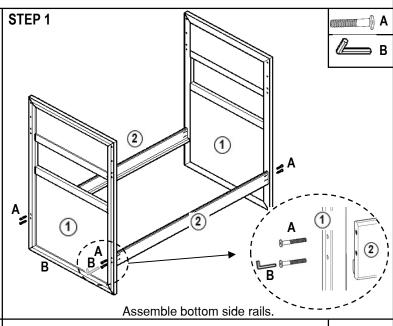


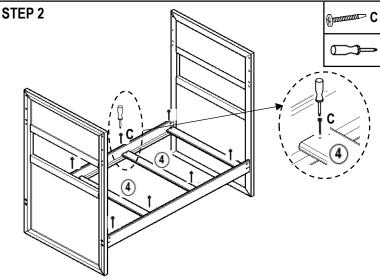




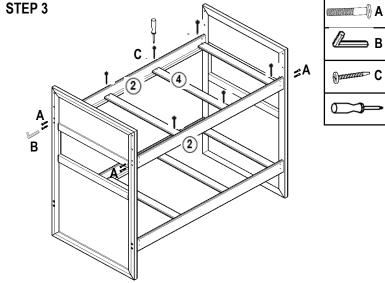

Repeat step 1 & 2 for top set of side rails.

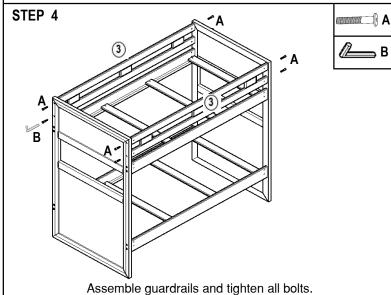

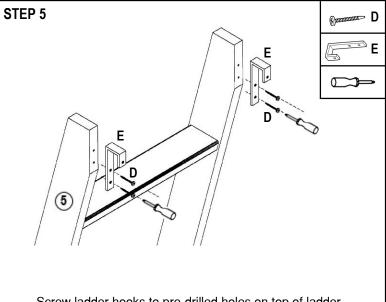


Screw ladder hooks to pre-drilled holes on top of ladder.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


12/12/2020

Page 5 of 72



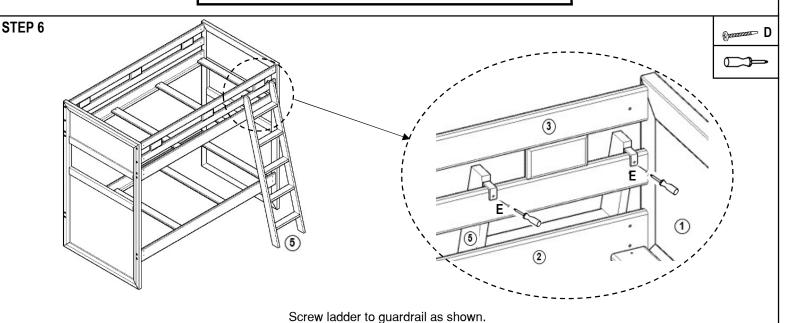

STEP 7

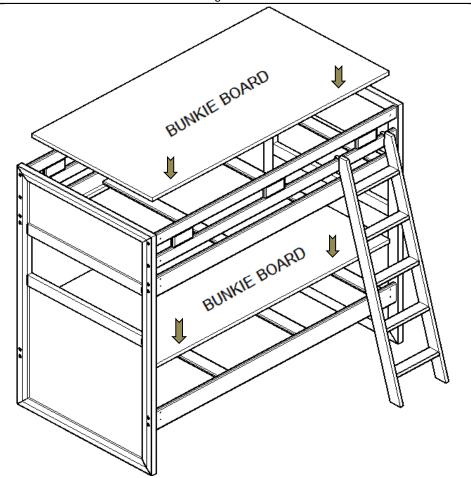


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 6 of 72

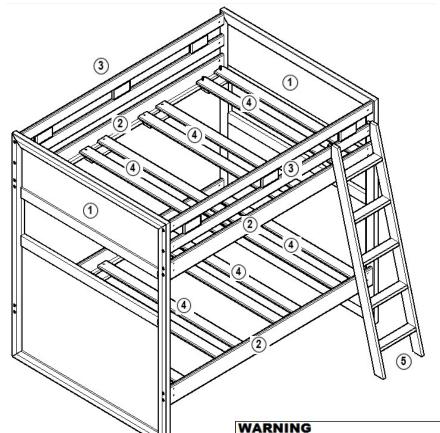

	3472360P	FULL/FULL BUNK WALNUT
RTG SKU#	STYLE#	ITEM DESCRIPTION
35523605	3260704	FULL BUNKBED END
35523605	3260704	FULL BUNKBED END
36723600	3260720	LADDER
36623608	3260730	4 SIDE RLS/2 GUARD RLS
38300238	100-648	FULL BUNK SLATS
38300238	100-648	FULL BUNK SLATS

	3471326P	FULL/FULL BUNK WHITE
RTG SKU#	STYLE#	ITEM DESCRIPTION
35513262	3261704	FULL BUNK BED END
35513262	3261704	FULL BUNK BED END
36713267	3261720	LADDER
36613265	3261730	4 SIDE RLS/2 GUARD RLS
38300238	100-648	FULL BUNK SLATS
38300238	100-648	FULL BUNK SLATS


The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

BARTOLIST LOTY					
	PARTS LIST	QTY			
1	Twin bunk bed end	2 Pcs			
2	Side rails	4 Pcs			
3	Guardrails	2 Pcs			
4	Slats	8 Pcs			
5	Ladder	1 Pc			

HAF	RDWARE LIST	QTY	TOOLS NEEDED
Α		24 Pcs	Phillips screwdriver (not included)
	50 mm Bolts		
	M		Allen wrench (included)
B		1 Pc	/ 77
	Allen wrench		
С	Dunnum	16 Pcs	
	1 1/4" Screws		
D	E)mmmm_	6 Pcs	
	1" Screws		
Е		2 Pcs	
	Ladder Hook		

TWO PEOPLE ARE NEEDED TO ASSEMBLE DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES **ARE CONNECTED TOGETHER**

12/12/2020 Page 7 of 72

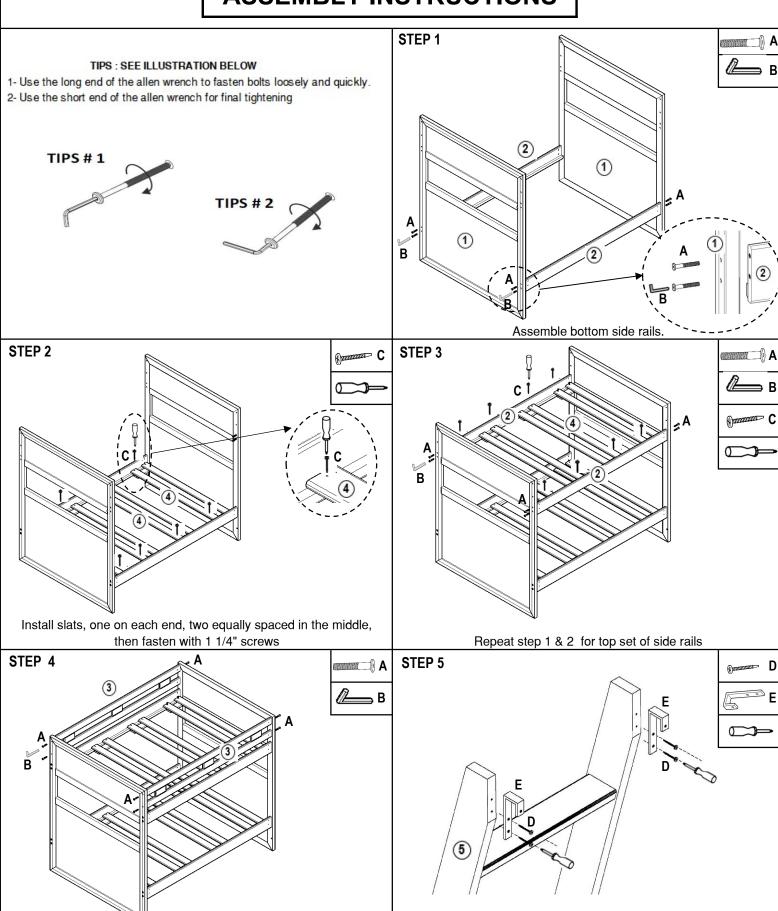


12/12/2020 Page 8 of 72

Screw ladder hooks to pre-drilled holes on top of ladder


Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY



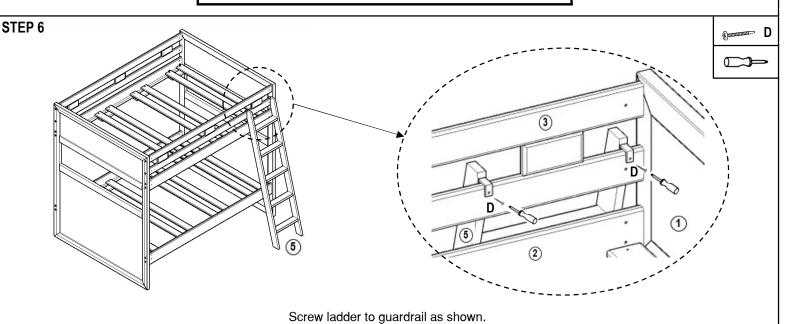

STEP 7

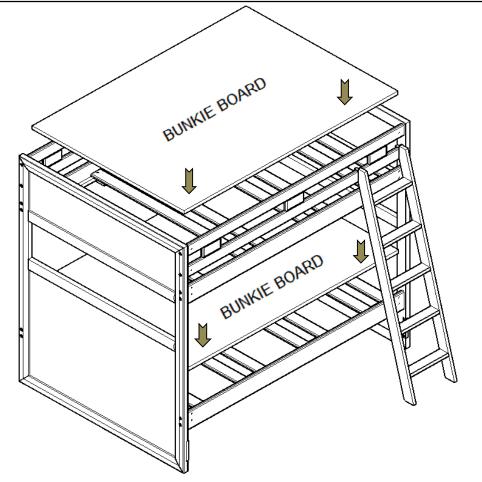


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 9 of 72

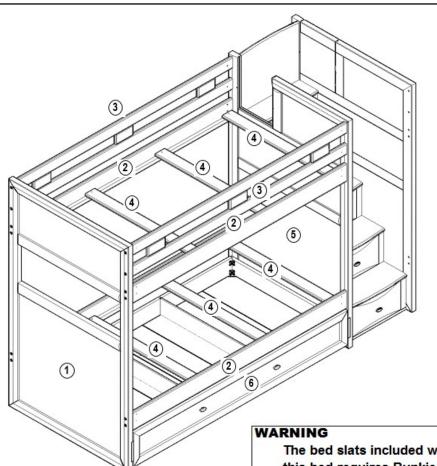

8 Pcs

Slats

3482360P TWIN/TWIN STEP BUNK WALNUT					
RTG SKU#	STYLE#	ITEM DESCRIPTION			
35723609	3260160	STEP BUNK UNIT			
35423603	3260706	TWIN BUNKBED END			
36623608	3260730	4 SIDE RLS/2 GUARD RLS			
38000232	100-645	TWIN SLAT PACK (4)			
38000232	100-645	TWIN SLAT PACK (4)			
35323601	3260744	TRUNDLE BED OPTIONAL			

3481326P TWIN/TWIN STEP BUNK WHITE						
	9401320F 1V	VIN/I WIN STEP BONK WHITE				
RTG SKU#	STYLE#	ITEM DESCRIPTION				
35713266	3261160	STEP BUNK UNIT				
35413260	3261706	TWIN BUNKBED END				
36613265	3261730	4 SIDE RLS/2 GUARD RLS				
38000232	100-645	TWIN SLAT PACK (4)				
38000232	100-645	TWIN SLAT PACK (4)				
35313268	3261744	TRUNDLE BED OPTIONAL				

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

	PARTS LIST	QTY		PARTS LIST		QTY HARDWARE LIST		QTY	TOOLS NEEDED
						Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
1		1 Pc	5		1 Pc	В	Allen wrench	1 Pc	Allen wrench (included)
	Twin bunk bed end			Step bunk unit		С	Dumming 1 1/4" Screws	16 Pcs	
2	Side rails	4 Pcs	6	Trundle bed (Optional)	1 Pc				
3	Guardrails	2 Pcs		Tanais Sou (Optional)		Ц			
	-								


TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER


12/12/2020 Page 10 of 72


TIPS: SEE ILLUSTRATION BELOW


- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




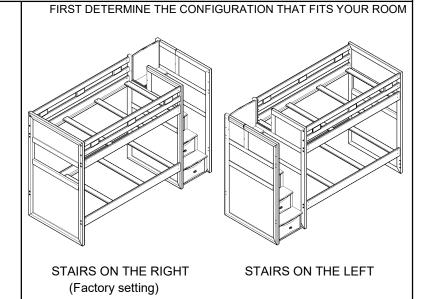


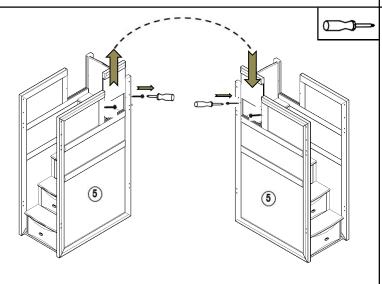



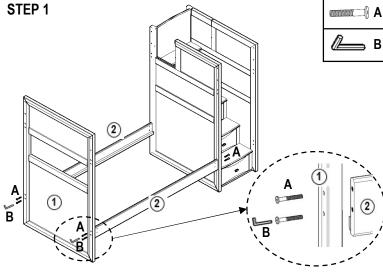


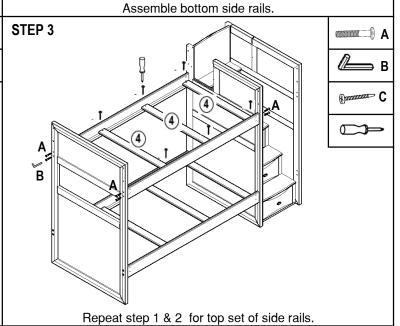

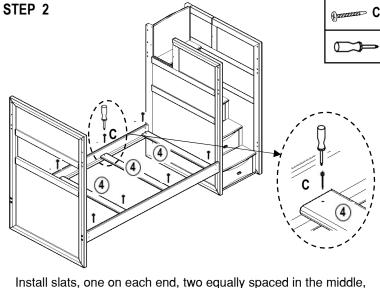


then fasten with 1 1/4" screws.

Page 11 of 72

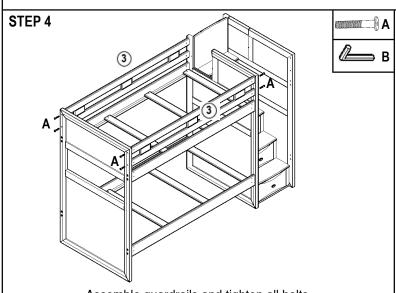


Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

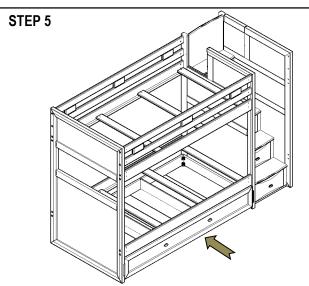

For **optional** Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.

STEP 6

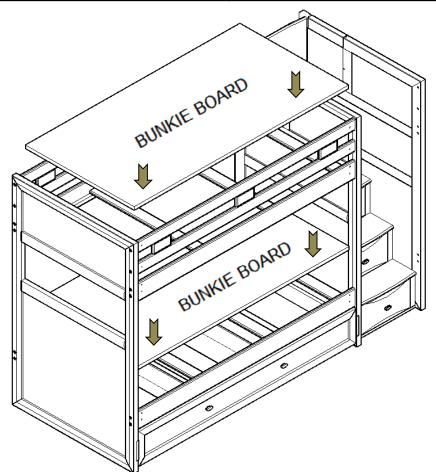


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 12 of 72

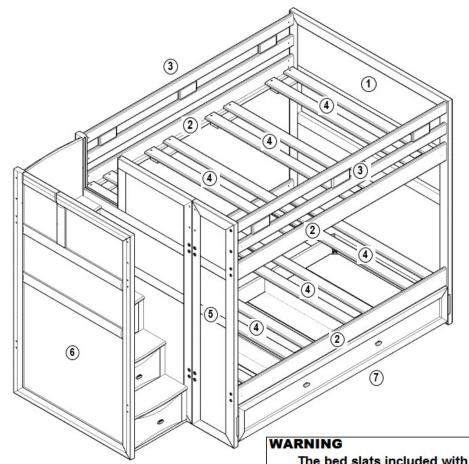

Ext. kit full/full

12/12/2020

3492360P FULL/FULL STEP BUNK WALNUT						
RTG SKU#	STYLE#	ITEM DESCRIPTION				
35723609	3260160	STEP BUNK UNIT				
35523605	3260704	FULL BUNKBED END				
36423604	3260783	FULL/FULL EXT. KIT				
36623608	3260730	4 SIDE RLS/2 GUARD RLS				
38300238	100-648	FULL BUNK SLATS				
38300238	100-648	FULL BUNK SLATS				
35323601	3260744	TRUNDLE BED OPTIONAL				

3491326P FULL/FULL STEP BUNK WHITE								
RTG SKU#	STYLE#	ITEM DESCRIPTION						
35713266	3261160	STEP BUNK UNIT						
35513262	3261704	FULL BUNKBED END						
36413261	3261783	FULL/FULL EXT. KIT						
36613265	3261730	4 SIDE RLS/2 GUARD RLS						
38300238	100-648	FULL BUNK SLATS						
38300238	100-648	FULL BUNK SLATS						
35313268	3261744	TRUNDLE BED OPTIONAL						

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

Page 13 of 72

ARE CONNECTED TOGETHER


	PARTS LIST	QTY		PARTS LIST	QTY	HAF	RDWARE LIST	QTY	TOOLS NEEDED
						Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
1		1 Pcs	6	Step bunk unit	1 Pc	В	Allen wrench	1 Pc	Allen wrench (included)
	Twin bunk bed end					С	Dumming 1 1/4" Screws	16 Pcs	
2		4 Pcs	7		1 Pc	D		8 Pcs	
	Side rails			Trundle bed (Optional)			Cup nut		
3		2 Pcs				E	17 mm bolts	8 Pcs	
	Guardrails								
4	Slats	8 Pcs				F	Metal plates	2 Pcs	
5		1 Pc							RE NEEDED TO ASSEMBLE
5		1 Pc					DO NOT TIGH	ITEN CO	MPLETELY UNTIL ALL PIECES

TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

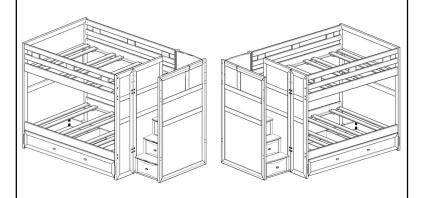


STAIRS ON THE RIGHT (Factory setting)


STAIRS ON THE LEFT

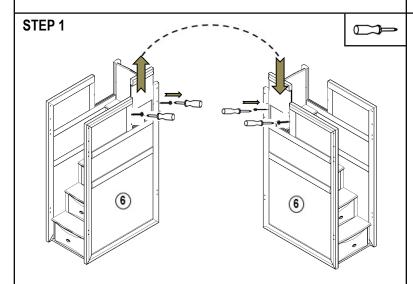


For stairs on the left, first remove the screws, then remove the panel and install it on the other side and secure with the screws.

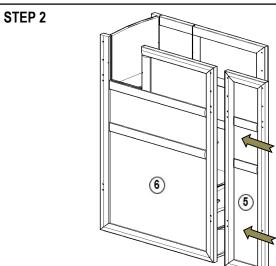

Assemble step bunk unit and extension kit, aligning inside and outside pattern and holes.

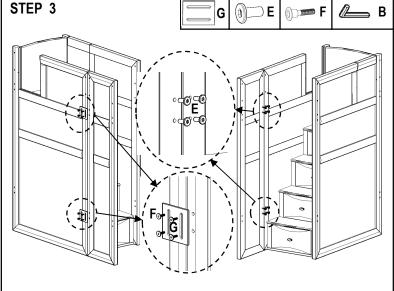


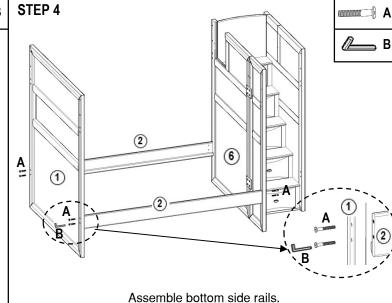

Fasten and make sure all bolts are tightened completely.


12/12/2020 Page 14 of 72



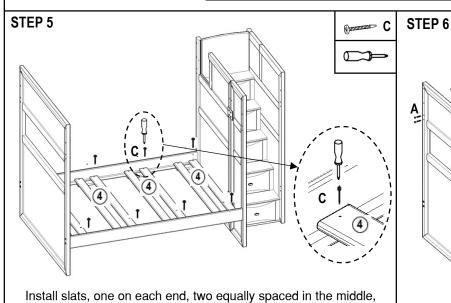

Repeat step 1 & 2 for top set of side rails

A

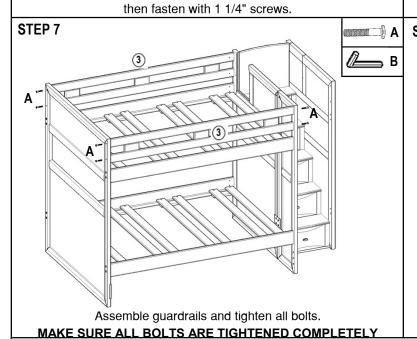


STEP 8

For **optiona**l Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.

12/12/2020 Page 15 of 72

STEP 9

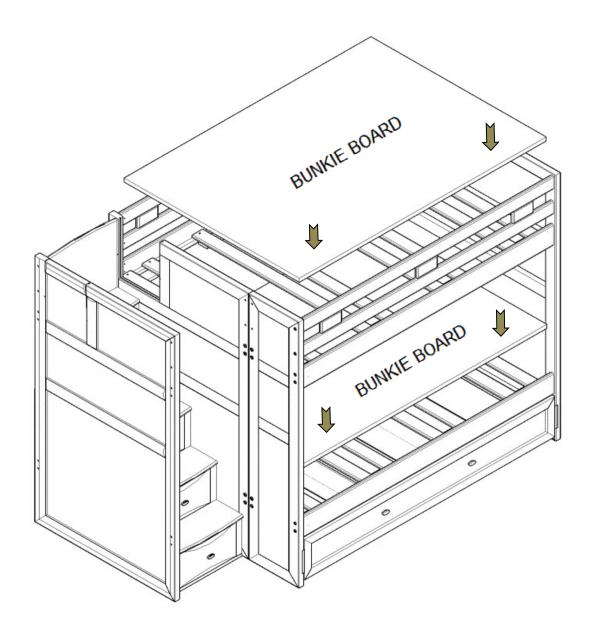


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 16 of 72

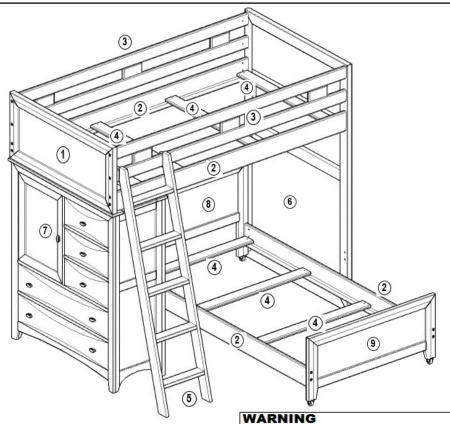

351	3512360P TWIN/TWIN LOFT W/CHEST WALNUT								
RTG SKU#	STYLE#	ITEM DESCRIPTION							
35423603	3260706	TWIN BUNKBED END							
35623607	3260705	TWIN TOP BUNKBED END							
36623608	3260730	4 SIDE RLS/2 GUARD RLS							
35923603	3260711	5 DRW. LOFT CHEST							
36223600	3260707	TWIN BOTTOM HD/FT							
36723600	3260720	LADDER							
38000232	100-645	TWIN SLAT PACK (4)							
38000232	100-645	TWIN SLAT PACK (4)							

3511326P TWIN/TWIN LOFT W/CHEST WHITE								
RTG SKU #	STYLE#	ITEM DESCRIPTION						
35413260	3261706	TWIN BUNKBED END						
35613264	3261705	TWIN TOP BUNKBED END						
36613265	3261730	4 SIDE RLS/2 GUARD RLS						
35913260	3261711	5 DRW. LOFT CHEST						
36213267	3261707	TWIN BOTTOM HD/FT						
36713267	3261720	LADDER						
38000232	100-645	TWIN SLAT PACK (4)						
38000232	100-645	TWIN SLAT PACK (4)						

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

									-
	PARTS LIST	QTY		PARTS LIST	QTY	HAR	DWARE LIST	QTY	TOOLS NEEDED
1		1 Pc	6		1 Pc	Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
2	Twin top bunk bed end	4 Pc		Headboard/footboard		В	Allen wrench	1 Pc	Allen wrench (included)
	Side rails	410				С	1 1/4" Screws	16 Pcs	
3	Guardrails	2 Pc	7	5 Drw Loft chest	1 Pc	D	Metal pin	2 Pcs	
4		8 Pc	8		1 Pc	E	⊕mmmm⊃ 1 " Screws	6 Pcs	
	Slats			Headboard		F	Ladder hook	2 Pcs	
5	Ladder	1 Pc	9	Footboard	1 Pc	G	3	4 Pcs	
							Casters		


TWO PEOPLE ARE NEEDED TO ASSEMBLE DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES **ARE CONNECTED TOGETHER**


1/11/2021 Page 17 of 72


TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




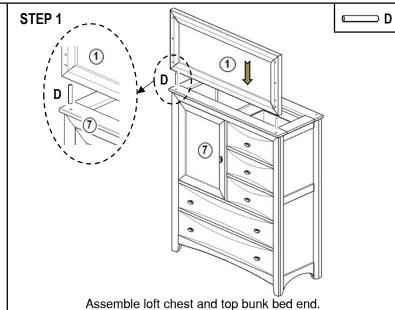


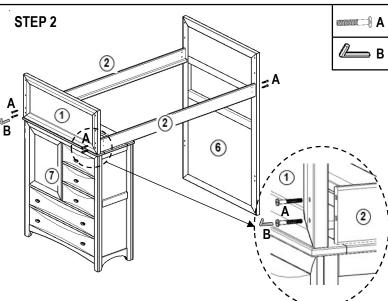

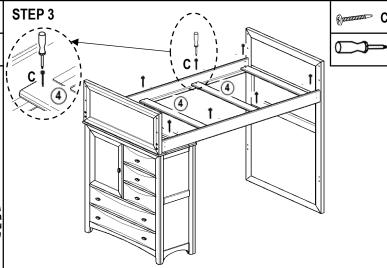


Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

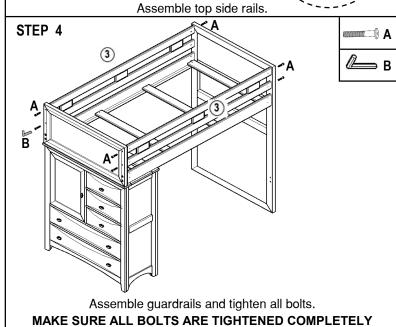

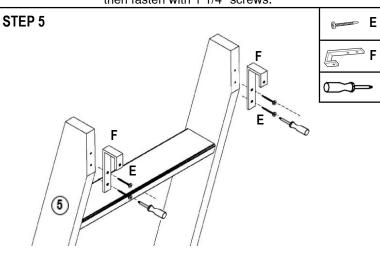


Screw ladder hooks to pre-drilled holes on top of ladder.

1/11/2021

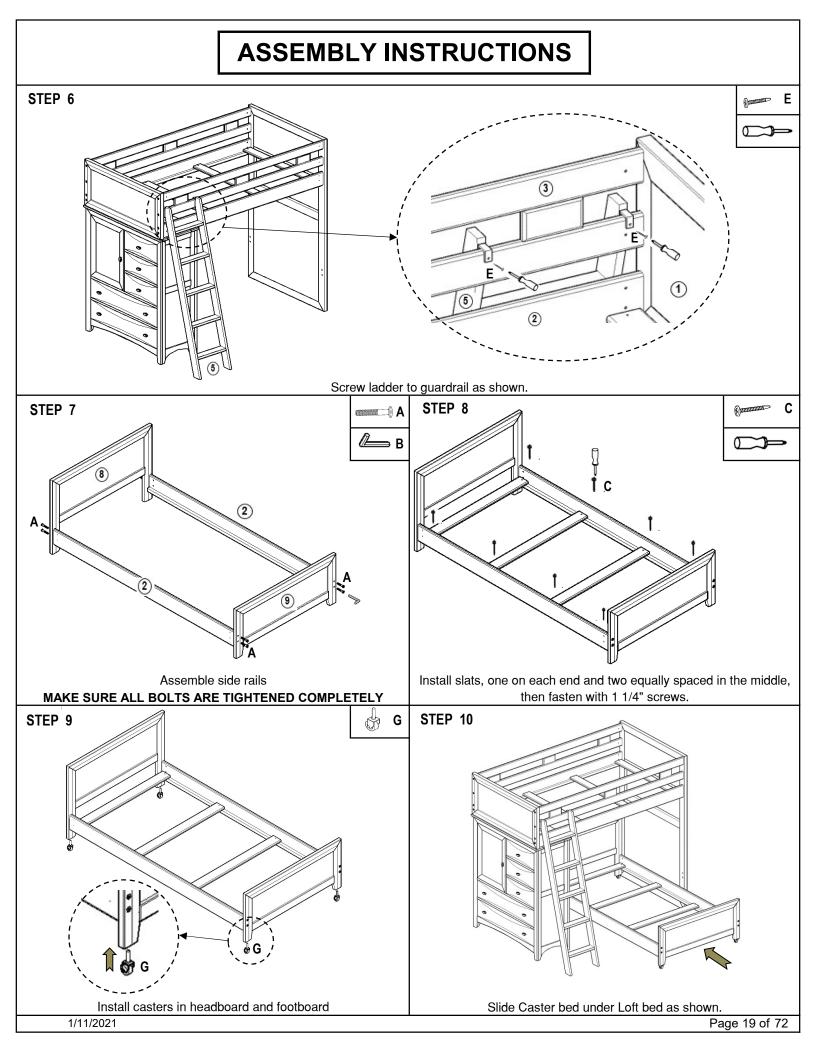

STEP 11

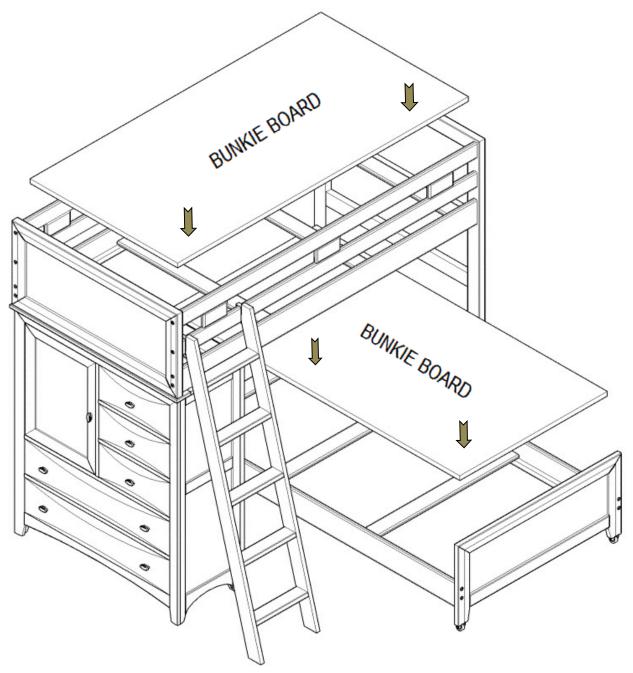


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 20 of 72

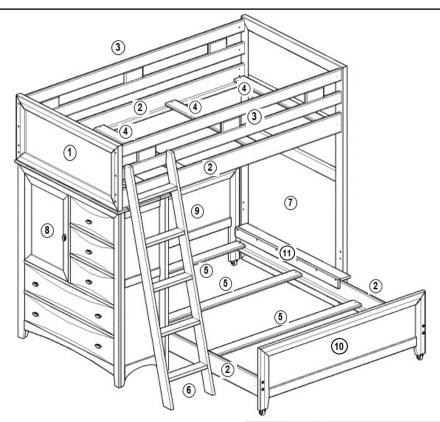

352	3522360P TWIN/FULL LOFT W/CHEST WALNUT								
RTG SKU#	STYLE#	ITEM DESCRIPTION							
35423603	3260706	TWIN BUNKBED END							
35623607	3260705	TWIN TOP BUNKBED END							
36623608	3260730	4 SIDE RLS/2 GUARD RLS							
35923603	3260711	5 DRW. LOFT CHEST							
36323602	3260709	FULL BOTTOM HD/FT							
36723600	3260720	LADDER							
36823602	3260735	TWIN RAIL CUP							
38000232	100-645	TWIN SLAT PACK (4)							
38100234	100-646	FULL SLAT PACK (4)							

3521326P TWIN/FULL LOFT W/CHEST WHITE								
RTG SKU #	STYLE#	ITEM DESCRIPTION						
35413260	3261706	TWIN BUNKBED END						
35613264	3261705	TWIN TOP BUNKBED END						
36613265	3261730	4 SIDE RLS/2 GUARD RLS						
35913260	3261711	5 DRW. LOFT CHEST						
36313269	3261709	FULL BOTTOM HD/FT						
36713267	3261720	LADDER						
36813269	3261735	TWIN RAIL CUP						
38000232	100-645	TWIN SLAT PACK (4)						
38100234	100-646	FULL SLAT PACK (4)						

WARNING

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

L										
Γ		PARTS LIST	QTY		PARTS LIST	QTY	HAF	RDWARE LIST	QTY	TOOLS NEEDED
	1		1 Pc	7		1 Pc	Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
-	2	Twin top bunk bed end	4 Pc	Ľ	Headboard/footboard	110	В	Allen wrench	1 Pc	Allen wrench (included)
	_	Side rails					С	1 1/4" Screws	16 Pcs	
	3		2 Pc	8	0 0	1 Pc	D		2 Pcs	
┈		Guardrails		 	5 Drw Loft chest		<u> </u>	Metal pin		
	4		4 Pc	9		1 Pc	E	1 " Screws	6 Pcs	
ŀ		Twin slats	<u> </u>		Headboard		F	Ladder hook	2 Pcs	
	5	Full slats	4 Pc	10	Footboard	1 Pc	G	Laudel Hook	4 Pcs	
╟				\parallel				Casters		
	6		1 Pc	11		1 Pc				RE NEEDED TO ASSEMBLE
L		Ladder			Twin rail cup		<u>J</u>	DO NOT TIG	HIEN CO	MPLETELY UNTIL ALL PIECES


ED TO ASSEMBLE LY UNTIL ALL PIECES **ARE CONNECTED TOGETHER**


1/0/1900


TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




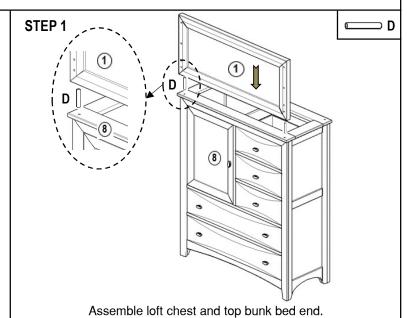


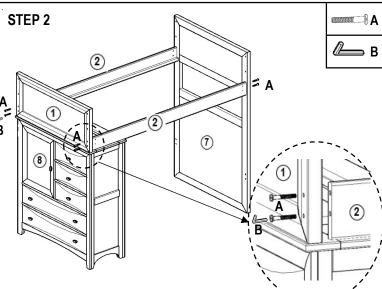

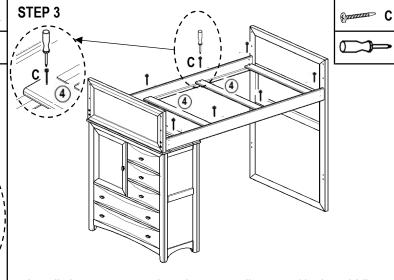

Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

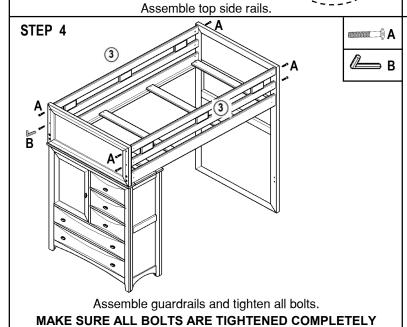


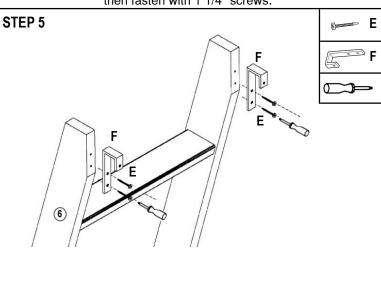


Screw ladder hooks to pre-drilled holes on top of ladder.

1/0/1900

Page 22 of 72

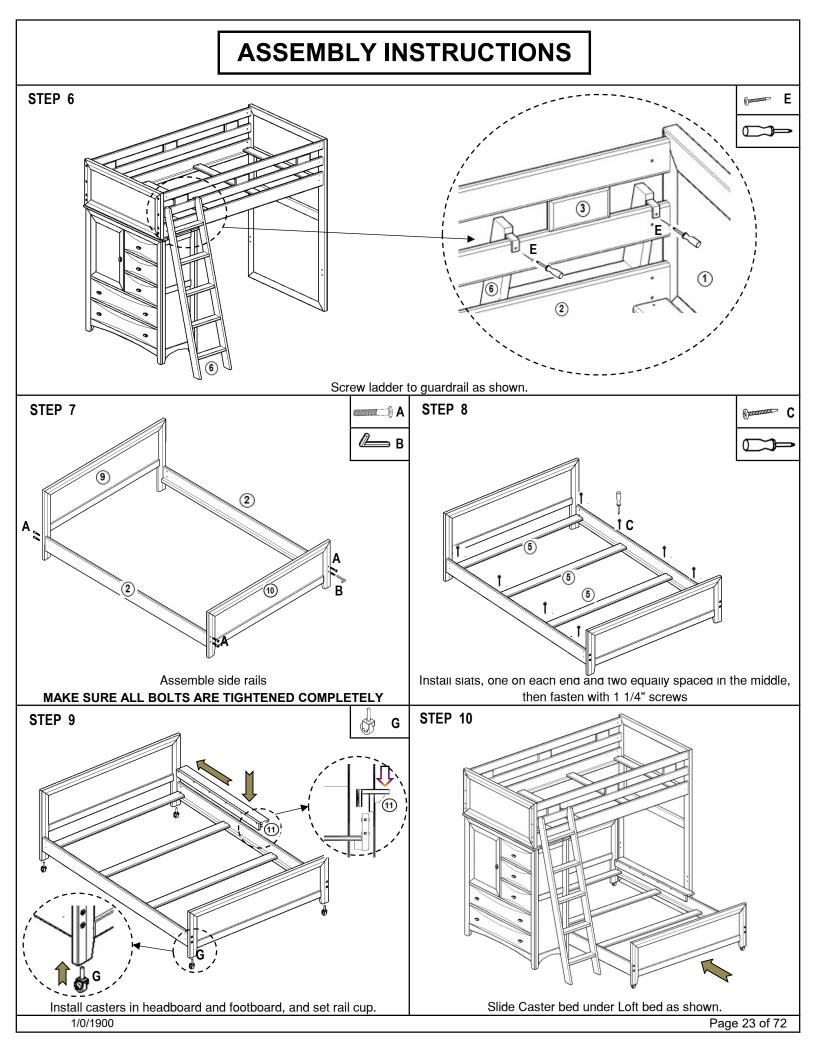

STEP 11

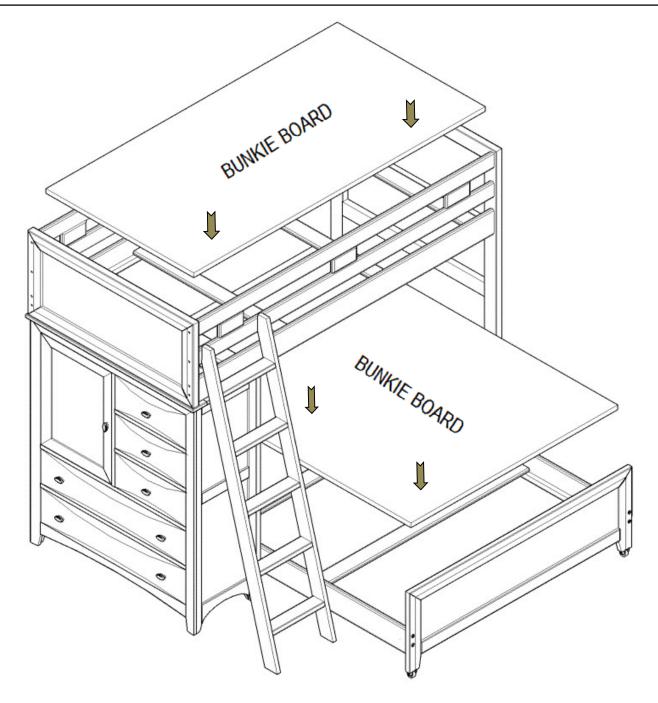


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 24 of 72

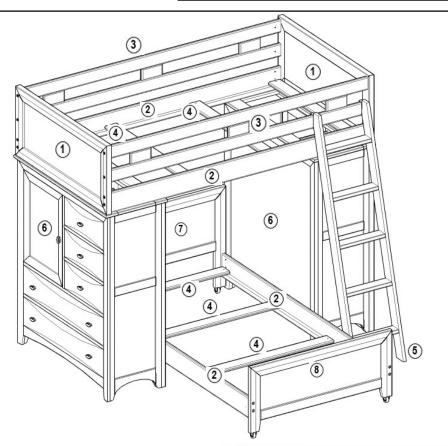

3532	3532360P TWIN/TWIN LOFT W/2 CHEST WALNUT								
RTG SKU#	STYLE#	ITEM DESCRIPTION							
35623607	3260705	TWIN TOP BUNKBED END							
35623607	3260705	TWIN TOP BUNKBED END							
36623608	3260730	4 SIDE RLS/2 GUARD RLS							
35923603	3260711	5 DRW. LOFT CHEST							
35923603	3260711	5 DRW. LOFT CHEST							
36723600	3260720	LADDER							
36223600	3260707	TWIN BOTTOM HD/FT							
38000232	100-645	TWIN SLAT PACK (4)							
38000232	100-645	TWIN SLAT PACK (4)							
36123608	3260601	FOLDING DESK (OPTIONAL)							

3531326P TWIN/TWIN LOFT W/2 CHEST WHITE							
RTG SKU #	STYLE#	ITEM DESCRIPTION					
35613264	3261705	TWIN TOP BUNKBED END					
35613264	3261705	TWIN TOP BUNKBED END					
36613265	3261730	4 SIDE RLS/2 GUARD RLS					
35913260	3261711	5 DRW. LOFT CHEST					
35913260	3261711	5 DRW. LOFT CHEST					
36713267	3261720	LADDER					
36213267	3261707	TWIN BOTTOM HD/FT					
38000232	100-645	TWIN SLAT PACK (4)					
38000232	100-645	TWIN SLAT PACK (4)					
36113265	3261601	FOLDING DESK (OPTIONAL)					

WARNING

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

	PARTS LIST	QTY		PARTS LIST	QTY	HAR	DWARE LIST	QTY	TOOLS NEEDED
1		2 Pc	6		2 Pc	Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
2	Twin top bunkbed end	4 Pc		5 Drw Loft chest	210	В	Allen wrench	1 Pc	Allen wrench (included)
	Side rails	470	7		1 Pc	С	(Amanana)	16 Pcs	
3	Guardrails	2 Pc		Headboard		D	1 1/4" Screws Metal pin	4 Pcs	
4	Guardrans	8 Pc	8	Footboard	1 Pc	E	®hamanan: 1 " Screws	6 Pcs	FOLDING DESK HARDWARE C 2 Pcs
	Slats					F			1 1/4" Screws
5		1 Pc					Ladder hook	2 Pcs	H 1 Pcs 3/4" Screw
	Ladder					G	Casters	4 Pcs	1 3/4 Octew 1
						Ľ			ii


TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER

1/0/1900 Page 25 of 70


TIPS: SEE ILLUSTRATION BELOW


- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening



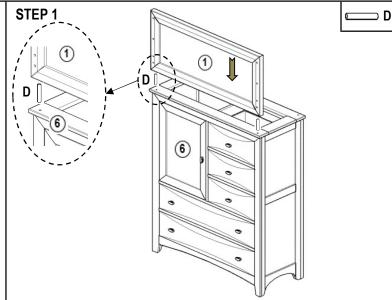



Assemble 2 sets of loft chest and top bunk bed ends.

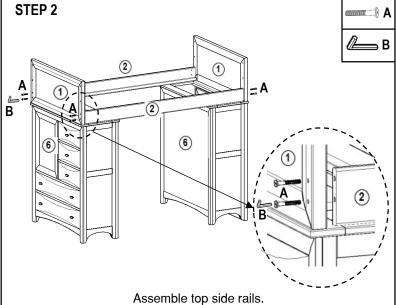

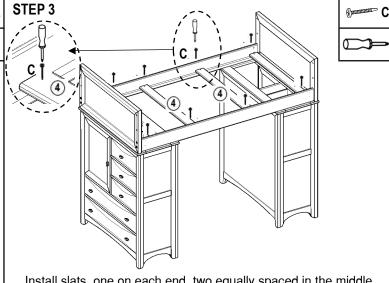

Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

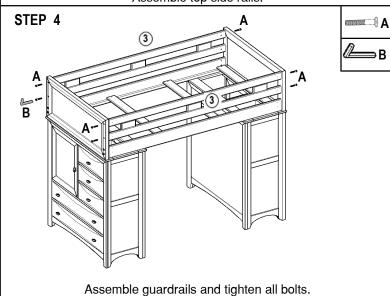

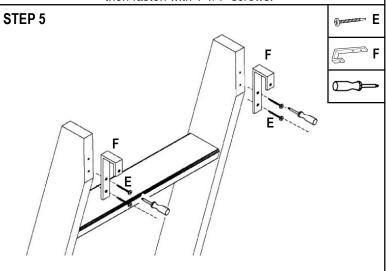


Screw ladder hooks to pre-drilled holes on top of ladder.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

1/0/1900

Page 26 of 72

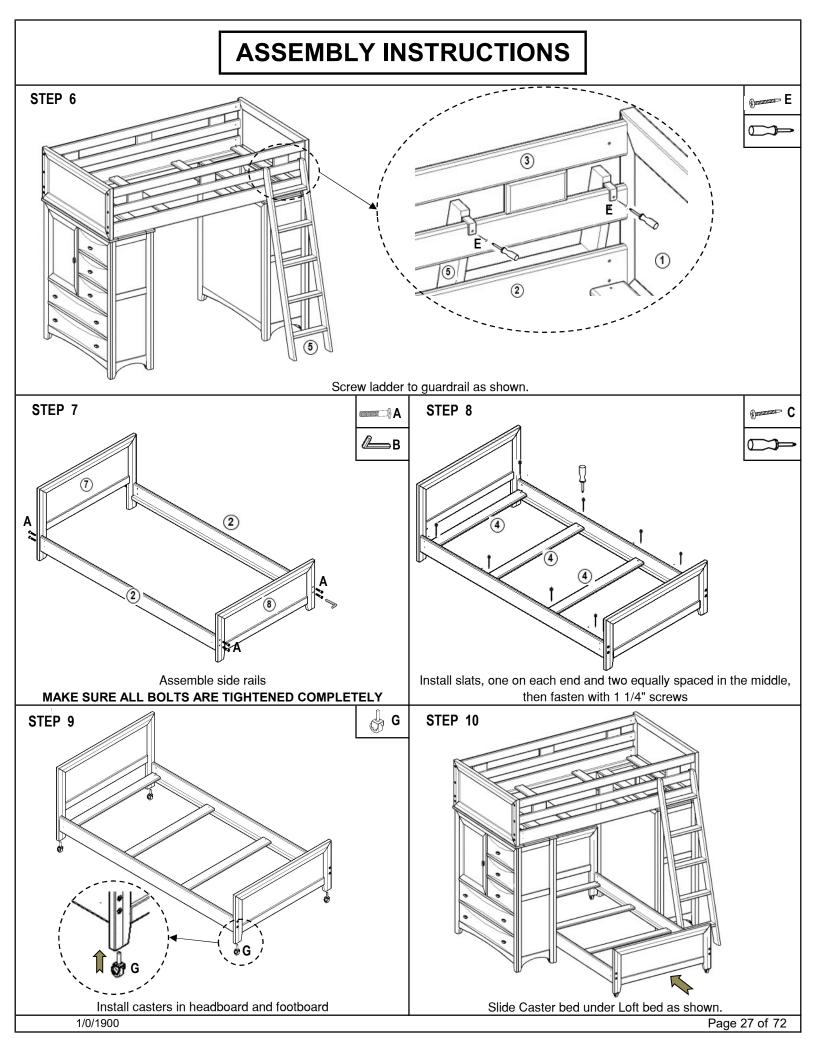





Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide


1/0/1900 Page 28 of 72

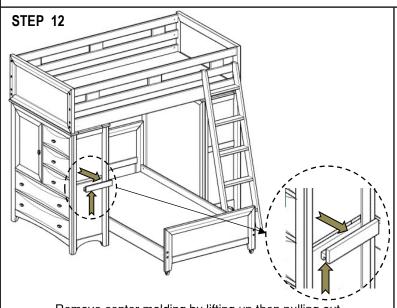

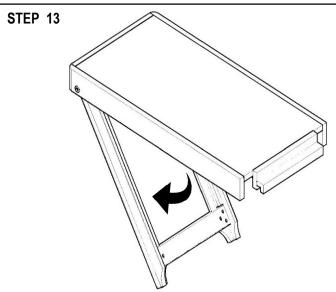


Remove center molding by lifting up then pulling out


Unfold desk leg and look for hardware pack inside desk box.

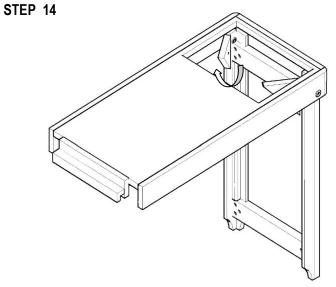


Unfold corner supports.

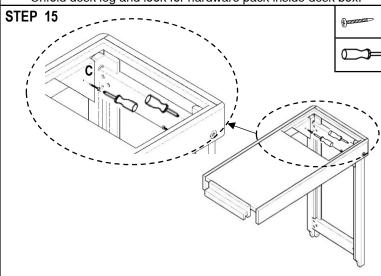

Secure each corner block with 1 1/4" screw (from desk box hardware pack) in the pre-bore hole.

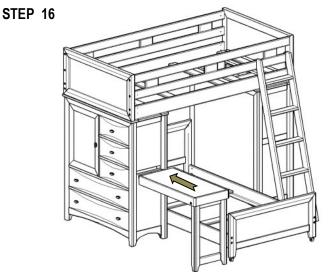


Place folding desk by sliding into the opening of loft chest then push down.

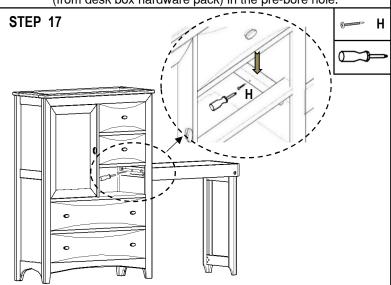

For desk on the right remove third drawer, and secure desk with one 3/4" screw (from desk box hardware pack) .

1/0/1900

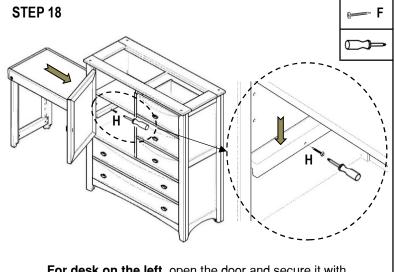

For desk on the left, open the door and secure it with one 3/4" screw (from desk box hardware pack).

STEP 19



Place Bunkie boards (required, sold separately) on top of the slats


Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 30 of 72

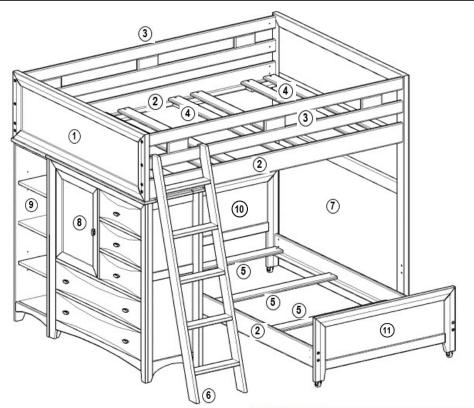

3552360P	FULL/TWIN	LOFT W/CHEST & BOOKCASE	WALNUT
RTG SKU #	STYLE#	ITEM DESCRIPTION	
35523605	3260704	FULL BUNKBED END	
35823601	3260703	FULL TOP BUNKBED END	
36623608	3260730	4 SIDE RLS/2 GUARD RLS	
36223600	3260707	TWIN BOTTOM HD/FT	
35923603	3260711	5 DRW. LOFT CHEST	
36023606	3260760	LOFT BOOKSHELF	
36723600	3260720	LADDER	
38300238	100-648	FULL BUNK SLATS	
38000232	100-645	TWIN SLAT PACK (4)	

3551326P	FULL/TWI	N LOFT W/CHEST & BOOKCASE WHITE
RTG SKU#	STYLE#	ITEM DESCRIPTION
35513262	3261704	FULL BUNKBED END
35813268	3261703	FULL TOP BUNKBED END
36613265	3261730	4 SIDE RLS/2 GUARD RLS
36213267	3261707	TWIN BOTTOM HD/FT
35913260	3261711	5 DRW. LOFT CHEST
36013263	3261760	LOFT BOOKSHELF
36713267	3261720	LADDER
38300238	100-648	FULL BUNK SLATS
38000232	100-645	TWIN SLAT PACK (4)

WARNING


The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

	PARTS LIST	QTY	QTY PARTS LIST		QTY	HARDWARE LIST		QTY	TOOLS NEEDED
1		1 Pc	7		1 Pc	Α	50 mm Bolts	24 Pcs	Phillips screwdriver (not included)
	Full top bunk bed end	4.0-	<i>'</i>	Full bunkbed end	110	В	Allen wrench	1 Pc	Allen wrench (included)
2	Side rails	4 Pc			1 Pc	С	1 1/4" Screws	16 Pcs	_
3		2 Pc	8			D		2 Pcs	
	Guardrails			5 Drw Loft chest			Metal pin		
4	Full slats	4 Pc	9	Loft Bookshelf	1 Pc	E	1 " Screws	6 Pcs	
5		4 Pc				F	Ladder hook	2 Pcs	
	Twin slats		10			G	Casters	4 Pcs	
6	6	1 Pc		မူ Headboard			TWO PEOPLE ARE NEEDED TO ASSEMBLE		
Ladder		11		1 Pc	DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER				
				Footboard					
	1/0/1900 Page 31 of 72								


TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




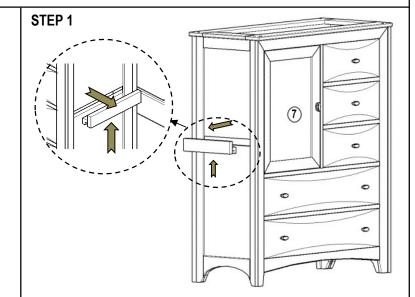


Remove center molding by lifting up then pulling out.

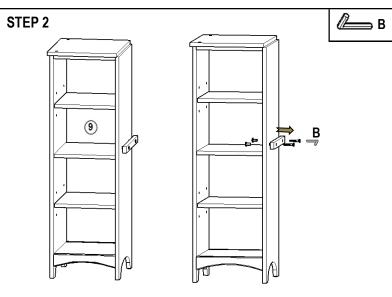




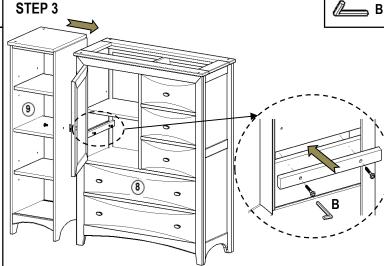



Assemble loft bookshelf and loft chest, using the fastening board and bolts previously removed as shown.

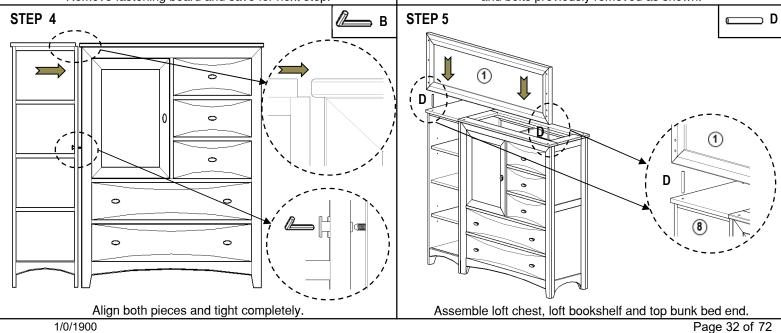

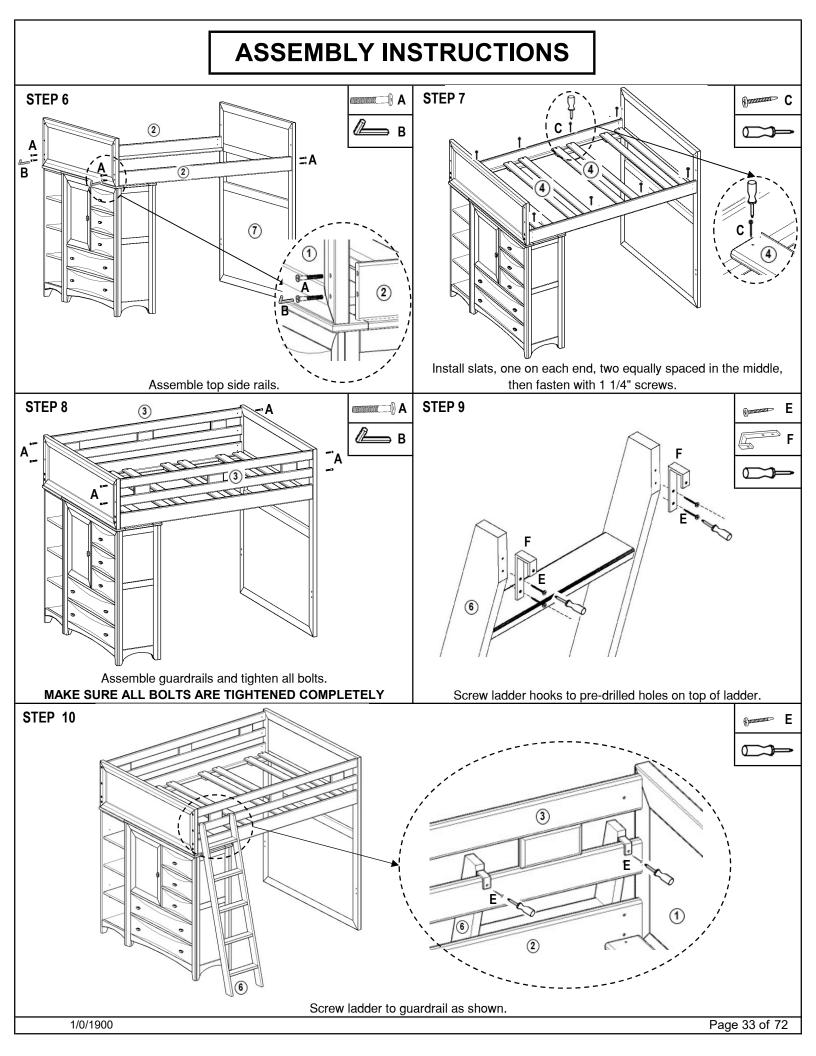




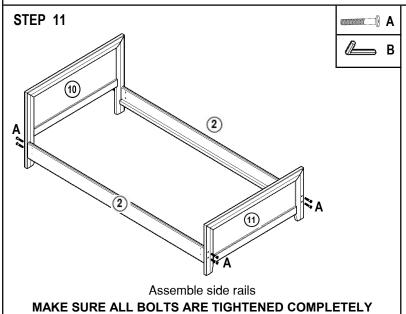

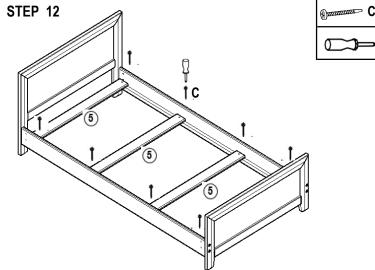

Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

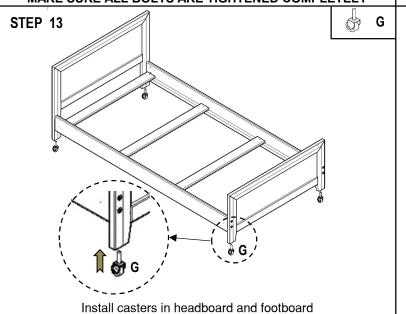




Slide Caster bed under Loft bed as shown.

1/0/1900

STEP 15

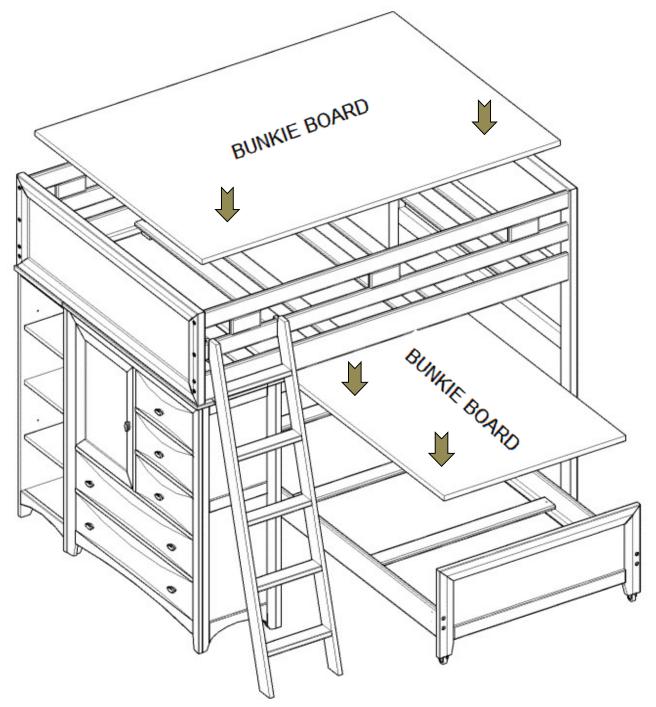


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

1/0/1900 Page 35 of 72

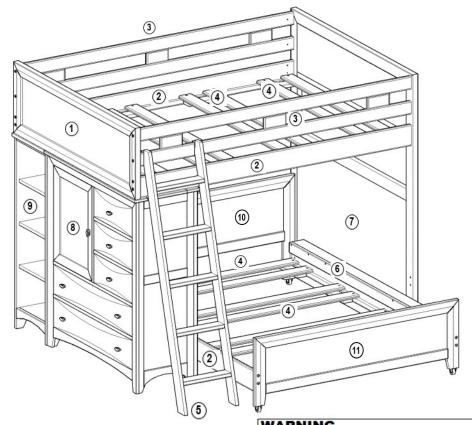

3562360P	FULL/FULL	LOFT W/CHEST & BOOKCASE WALNUT
RTG SKU#	STYLE#	ITEM DESCRIPTION
35523605	3260704	FULL BUNKBED END
35823601	3260703	FULL TOP BUNKBED END
36623608	3260730	4 SIDE RLS/2 GUARD RLS
36323602	3260709	FULL BOTTOM HD/FT
35923603	3260711	5 DRW. LOFT CHEST
36023606	3260760	LOFT BOOKSHELF
36723600	3260720	LADDER
36923604	3260736	FULL RAIL CUP
38300238	100-648	FULL BUNK SLATS
38300238	100-648	FULL BUNK SLATS

3561326P FULL/FULL LOFT W/CHEST & BOOKCASE WHITE						
RTG SKU#	STYLE#	ITEM DESCRIPTION				
35513262	3261704	FULL BUNKBED END				
35813268	3261703	FULL TOP BUNKBED END				
36613265	3261730	4 SIDE RLS/2 GUARD RLS				
36313269	3261709	FULL BOTTOM HD/FT				
35913260	3261711	5 DRW. LOFT CHEST				
36013263	3261760	LOFT BOOKSHELF				
36713267	3261720	LADDER				
36913261	3261736	FULL RAIL CUP				
38300238	100-648	FULL BUNK SLATS				
38300238	100-648	FULL BUNK SLATS				

WARNING


The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

	PARTS LIST	QTY	PARTS LIST		QTY	HARDWARE LIST		QTY	TOOLS NEEDED
1	Full top bunk bed end	1 Pc	7		1 Pc	A	50 mm Bolts	24 Pcs	Phillips screwdriver (not included) Allen wrench (included)
2	T dil top sum sod one	4 Pc		Full bunkbed end		В	Allen wrench	1 Pc	
	Side rails			0 0	1 Pc	С	@mmmm= 1 1/4" Screws	16 Pcs	
3	Guardrails	2 Pc	8	5 Drw Loft chest		D		2 Pcs	
	Guardraiis			5 Drw Loft chest			Metal pin		
4	Full slats	8 Pc	9	Loft Bookshelf	1 Pc	E	1 " Screws	6 Pcs	
5		1 Pc				F	Ladder hook	2 Pcs	
	Ladder		10		1 Pc	G	Casters	4 Pcs	
6		1 Pc		Headboard		TWO PEOPLE ARE NEEDED TO ASSEMBLE DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER			
	Full rail cup		11		1 Pc				MPLETELY UNTIL ALL PIECES
			<u> </u>	Footboard					
1/0/1900 Page 36 of 72									


TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




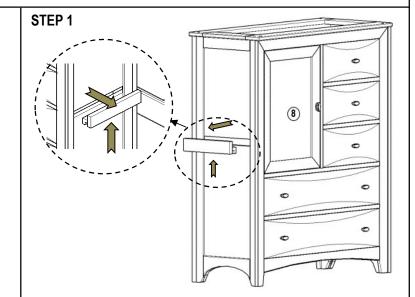


Remove center molding by lifting up then pulling out.

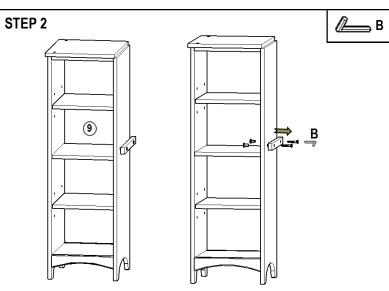

Remove fastening board and save for next step.

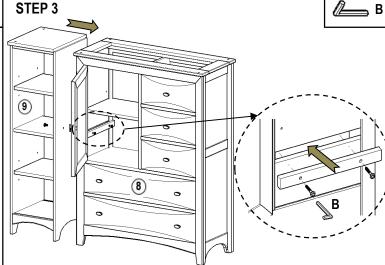


Assemble loft bookshelf and loft chest, using the fastening board and bolts previously removed as shown.

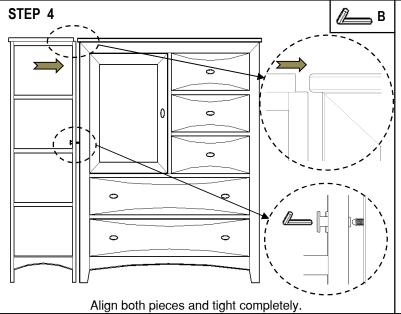


STEP 5

Assemble loft chest, loft bookshelf and top bunk bed end.


1/0/1900 Page 37 of 72

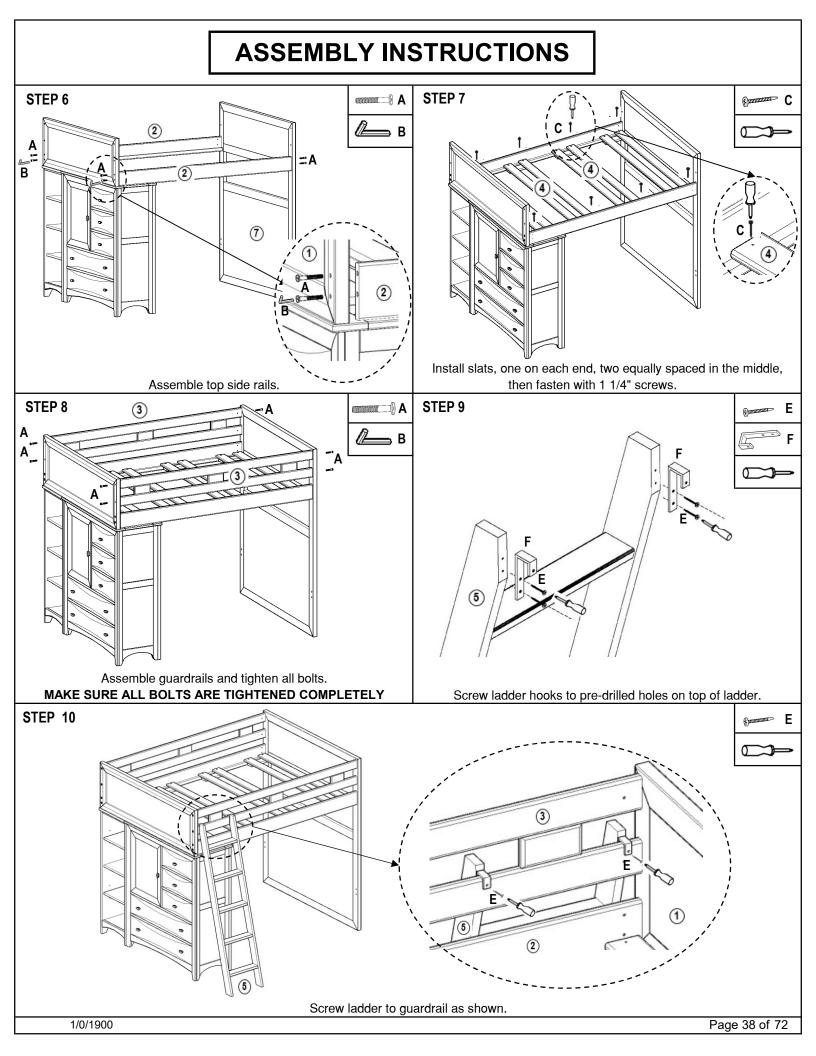




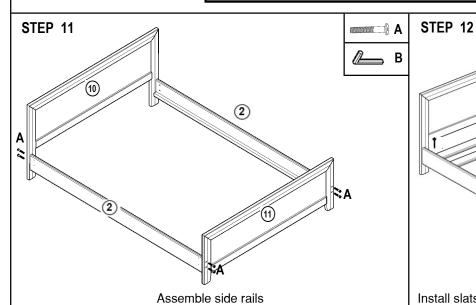


Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

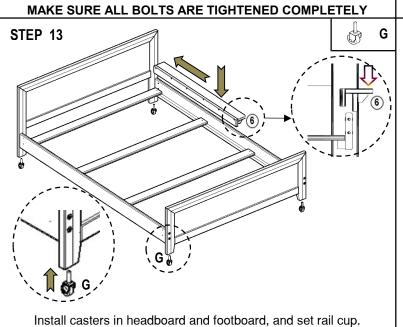

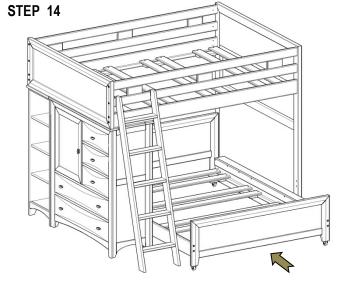

Slide Caster bed under Loft bed as shown.

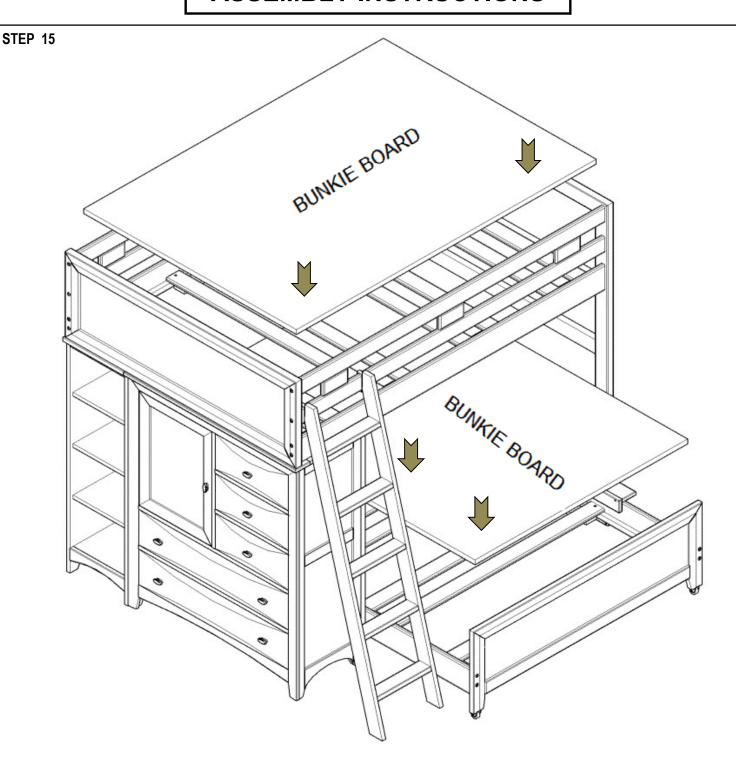

Place Bunkie boards (required, sold separately) on top of the slats


Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

1/0/1900 Page 40 of 72

PARTS LIST

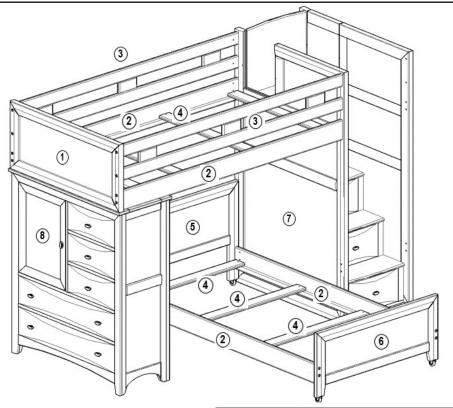

3592360P TWIN/TWIN STEP LOFT W/CHEST WAL										
RTG SKU#	STYLE#	ITEM DESCRIPTION								
35723609	3260160	STEP BUNK UNIT								
35623607	3260705	TWIN TOP BUNKBED END								
36623608	3260730	4 SIDE RLS/2 GUARD RLS								
35923603	3260711	5 DRW. LOFT CHEST								
36223600	3260707	TWIN BOTTOM HD/FT								
38000232	100-645	TWIN SLAT PACK (4)								
38000232	100-645	TWIN SLAT PACK (4)								
36123608	3260601	FOLDING DESK (OPTIONAL)								

3591	326P TWIN	I/TWIN STEP LOFT W/CHEST WHITE
RTG SKU#	STYLE#	ITEM DESCRIPTION
35713266	3261160	STEP BUNK UNIT
35613264	3261705	TWIN TOP BUNKBED END
36613265	3261730	4 SIDE RLS/2 GUARD RLS
35913260	3261711	5 DRW. LOFT CHEST
36213267	3261707	TWIN BOTTOM HD/FT
38000232	100-645	TWIN SLAT PACK (4)
38000232	100-645	TWIN SLAT PACK (4)
36113265	3261601	FOLDING DESK (OPTIONAL)

WARNING

1 Pc

1 Pc

5

6

Headboard

Footboard

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

Ŀ													
ľ	PARTS LIST QTY			PARTS LIST	QTY	HAR	DWARE LIST	QTY		TOOLS N	EEDED		
	1		1 Pc	7	Step bunk unit	1 Pc	Α	50 mm Bolts	24 Pcs		Phillips screwdrive	r (not include	∍d)
	2	Twin top bunk bed end	4 Pc	,			В	Allen wrench	1 Pc		Allen wrench	(included)	
		Side rails	410		0 0		С	1 1/4" Screws	16 Pcs	16 Pcs FOLDING DESK HARDWARE)WARE	
	3	Guardrails	2 Pc	8	5 Drw Loft chest	1 Pc	D	Metal pin	2 Pcs	С	(Jammana) 1 1/4" Screws	2 Pcs	
	4		8 Pc				E	Casters	4 Pcs	F	3/4" Screw	1 Pcs	
-		Slats											

TWO PEOPLE ARE NEEDED TO ASSEMBLE


DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER

1/0/1900 Page 41 of 72

TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




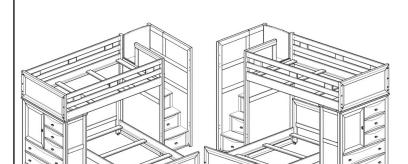


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

STAIRS ON THE RIGHT (Factory setting)


STAIRS ON THE LEFT

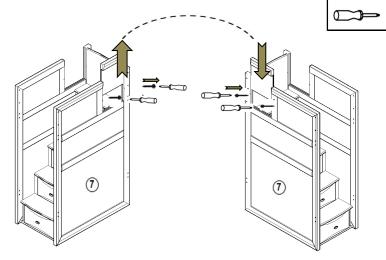


For stairs on the left, first remove the screws, then remove the panel and install it on the other side and secure with the screws.

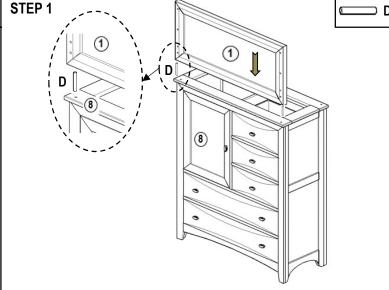

Assemble loft chest and top bunk bed end.

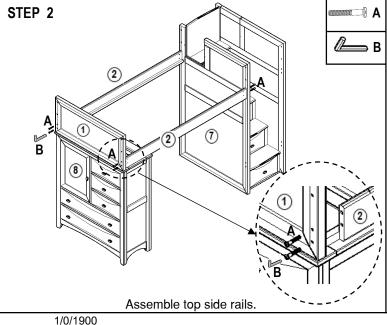

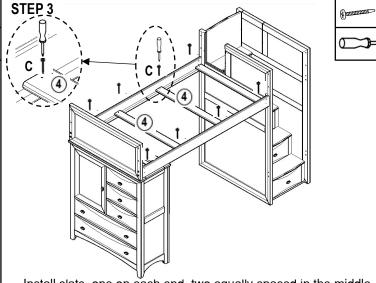


Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

Page 42 of 72




STEP 5

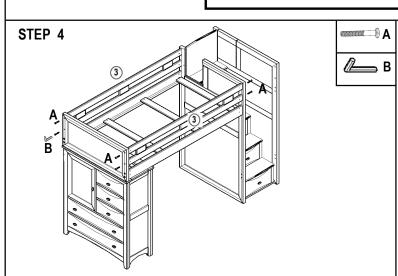


Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

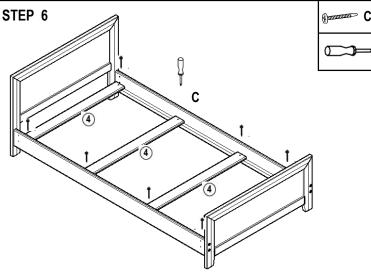


Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

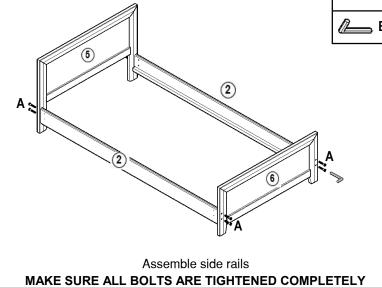


A

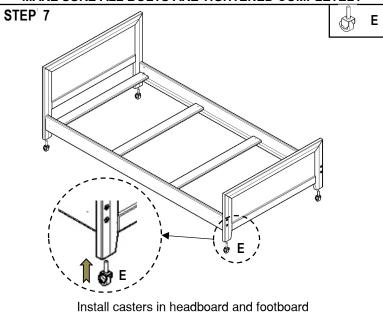

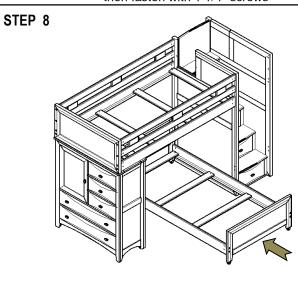

Slide Caster bed under loft bed as shown.

1/0/1900 Page 43 of 72

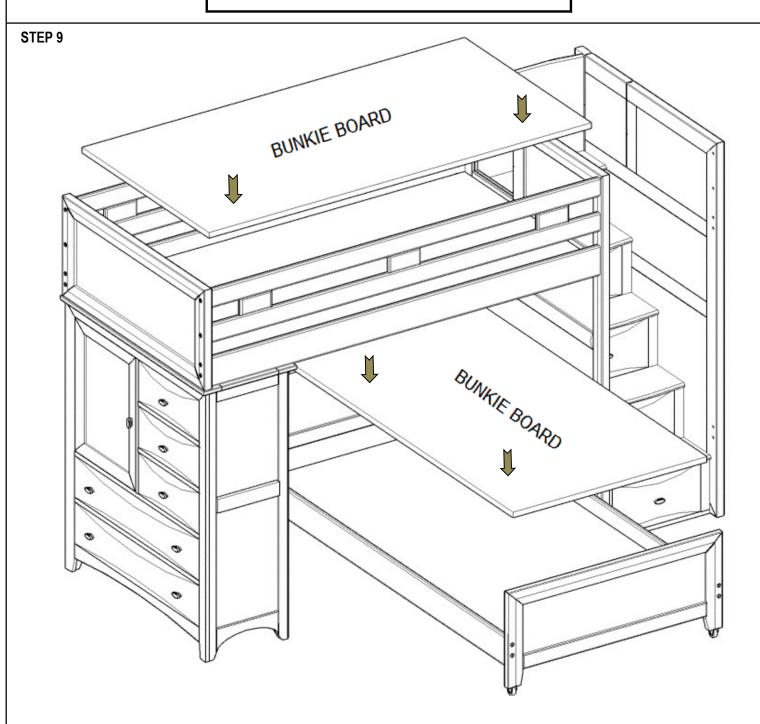


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:


Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST


12/12/2020 Page 44 of 72

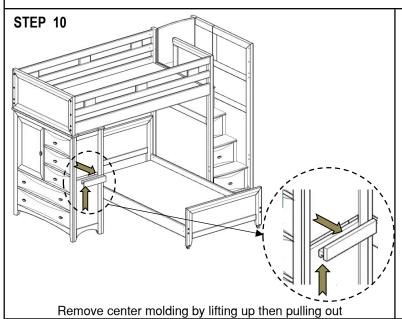

STEP 11

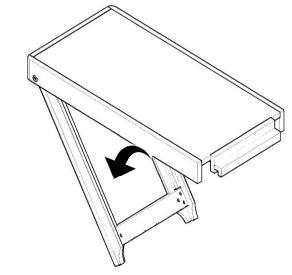


Unfold desk leg and look for hardware pack inside desk box.

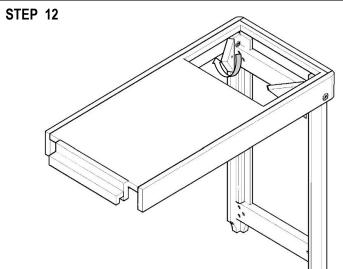


STEP 13

Secure each corner block with 1 1/4" screw (from desk box hardware pack) in the pre-bore hole.

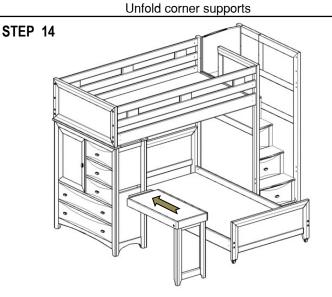


Place folding desk by sliding into the opening of loft chest then push down

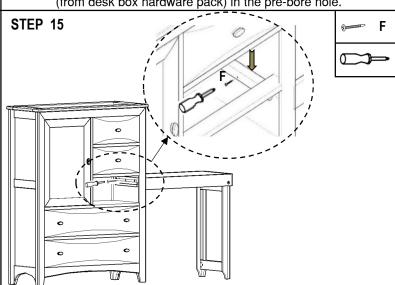


For desk on the right remove third drawer, and secure desk with one 3/4" screw (from desk box hardware pack) .

1/0/1900 Page 45 of 72

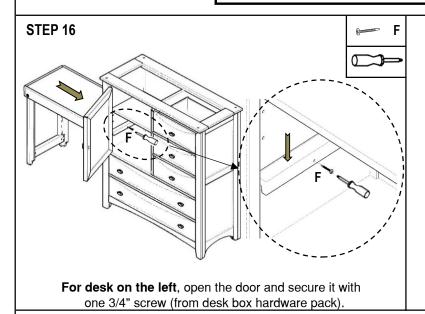

STEP 17

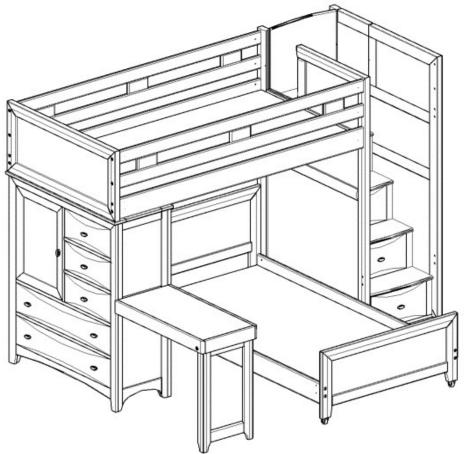

Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:


Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide

Twin size Bunkie board- 74" long and 37-1/2" wide Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 46 of 72

PARTS LIST

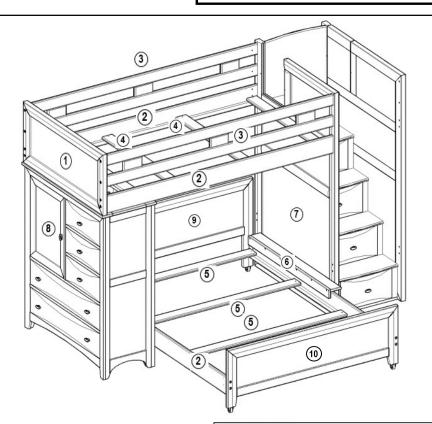

36123	B60P TWIN	/FULL STEP LOFT W/CHEST WALNUT
RTG SKU#	STYLE#	ITEM DESCRIPTION
35723609	3260160	STEP BUNK UNIT
35623607	3260705	TWIN TOP BUNKBED END
36623608	3260730	4 SIDE RLS/2 GUARD RLS
35923603	3260711	5 DRW. LOFT CHEST
36323602	3260709	FULL BOTTOM HD/FT
36823602	3260735	TWIN RAIL CUP
38000232	100-645	TWIN SLAT PACK (4)
38100234	100-646	FULL SLAT PACK (4)
36123608	3260601	FOLDING DESK (OPTIONAL)

3611	1326P TWI	N/FULL STEP LOFT W/CHEST WHITE
RTG SKU #	STYLE#	ITEM DESCRIPTION
35713266	3261160	STEP BUNK UNIT
35613264	3261705	TWIN TOP BUNKBED END
36613265	3261730	4 SIDE RLS/2 GUARD RLS
35913260	3261711	5 DRW. LOFT CHEST
36313269	3261709	FULL BOTTOM HD/FT
36813269	3261735	TWIN RAIL CUP
38000232	100-645	TWIN SLAT PACK (4)
38100234	100-646	FULL SLAT PACK (4)
36113265	3261601	FOLDING DESK (OPTIONAL)

WARNING

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)


n top bunk bed end Side rails	QTY 1 Pc 4 Pc	7	PARTS LIST	QTY 1 Pc	A A	DWARE LIST 50 mm Bolts	QTY 24 Pcs	TOOLS NEEDED Phillips screwdriver (not included)		
		7		1 Pc	Α		24 Pcs			
	4 Pc					_		Allen wrench (included)		
Side rails			Step bunk unit		В	Allen wrench	1 Pc			
					С	(Junimini)	16 Pcs			
Guardrails	2 Pc	8	5 Drw Loft chest	1 Pc	D	1 1/4" Screws Metal pin	2 Pcs	FOLDING DESK HARDWARE C 2 Pcs		
Twin slats	4 Pc	9	Headboard	1 Pc	E	Casters	4 Pcs	1 1/4" Screws F 1 Pcs 3/4" Screw		
Full slats	4 Pc	10	Footboard	1 Pc		TWO PE	OPLE AI	RE NEEDED TO ASSEMBLE		
Twin rail cup	1 Pc				DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER					
	Twin slats Full slats	Guardrails 4 Pc Twin slats 4 Pc Full slats	Quardrails 4 Pc 9 Twin slats 4 Pc 10 Full slats	Guardrails 4 Pc 9 Twin slats 4 Pc 10 Full slats 1 Pc	Guardrails 4 Pc 9 Headboard 1 Pc Full slats 1 Pc	Guardrails 4 Pc 9 Headboard 1 Pc Full slats 1 Pc 1 Pc	Guardrails 4 Pc 9 Headboard 1 Pc Full slats 1 Pc Two PE D Metal pin 1 Pc Casters TWO PE All	Guardrails 4 Pc 9 Headboard 1 Pc Two PEOPLE AI 1 Pc 1 Pc ARE CONI		


1/0/1900 Page 47 of 72


TIPS: SEE ILLUSTRATION BELOW


- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening




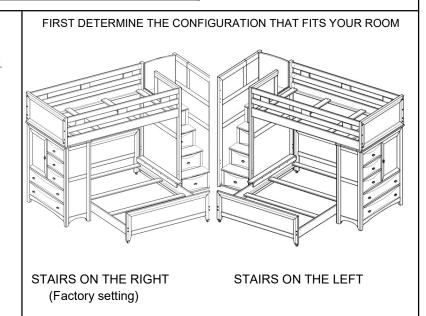

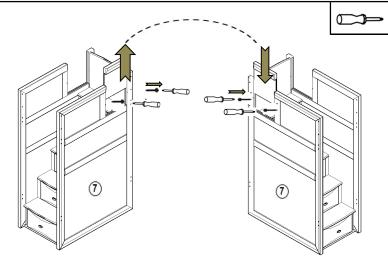



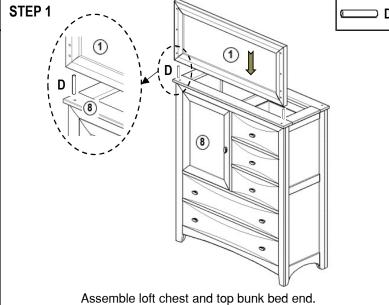


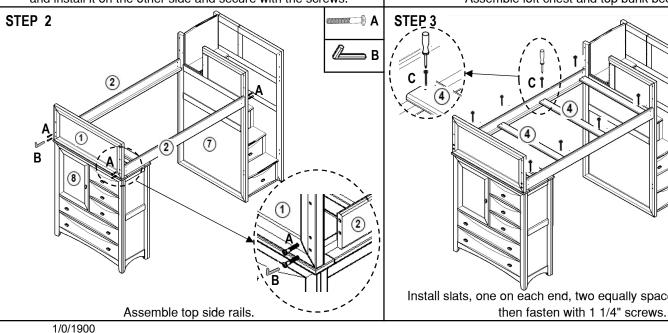

Install slats, one on each end, two equally spaced in the middle,


Page 48 of 72



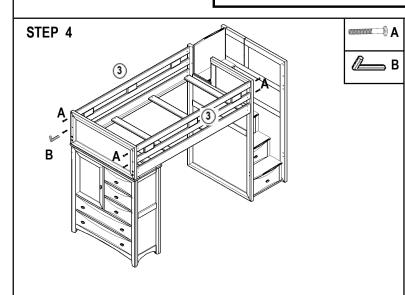



Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

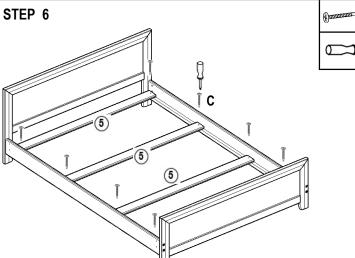

Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

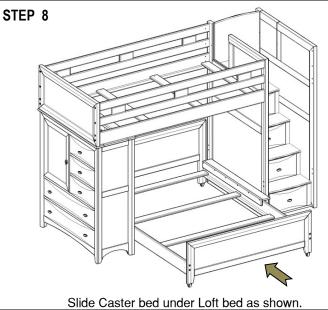

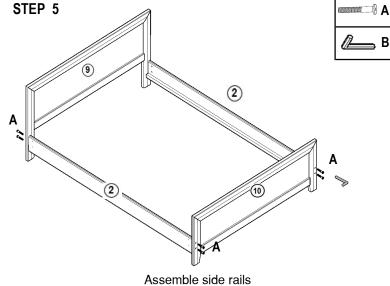


STEP 7

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

Install casters in headboard and footboard, and set rail cup.

1/0/1900

STEP 9

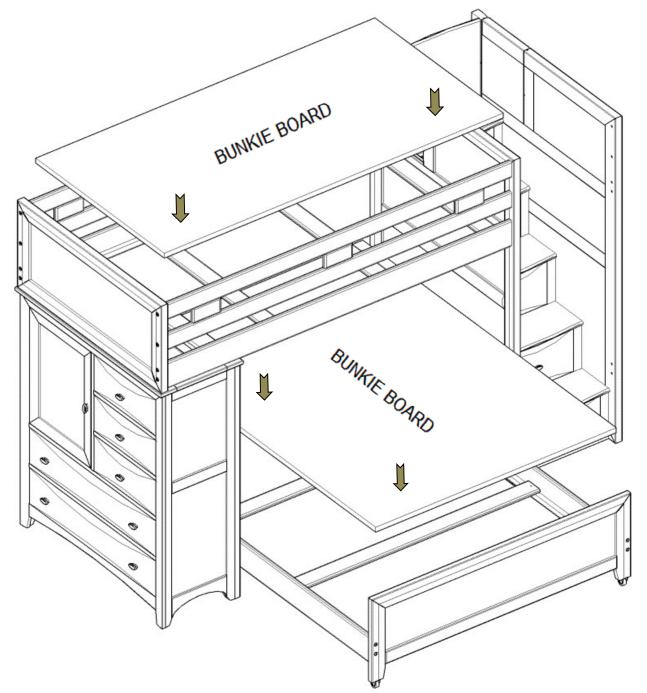


Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:


Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST


12/12/2020 Page 50 of 72

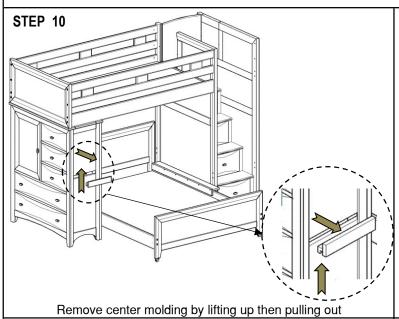


STEP 11

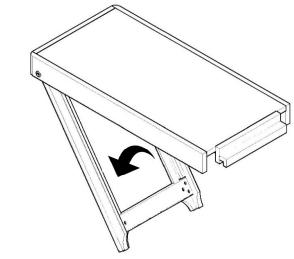


Unfold desk leg and look for hardware pack inside desk box.

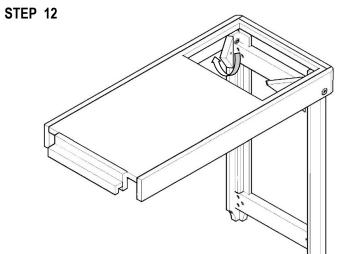


Unfold corner supports

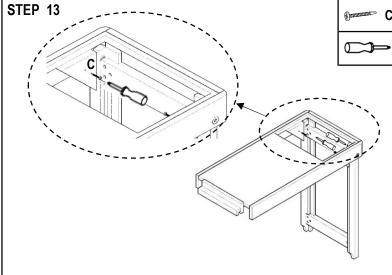

Secure each corner block with 1 1/4" screw (from desk box hardware pack) in the pre-bore hole.

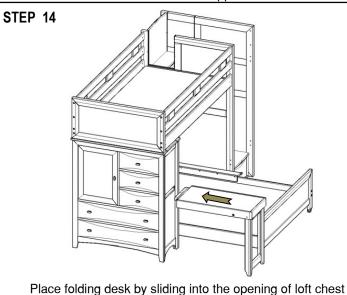


then push down

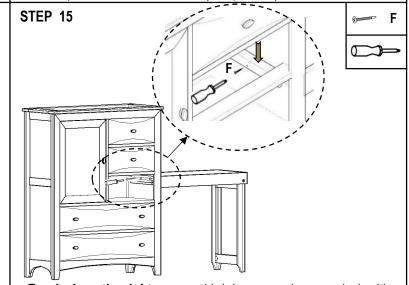


For desk on the right remove third drawer, and secure desk with one 3/4" screw (from desk box hardware pack) .

1/0/1900 Page 51 of 72

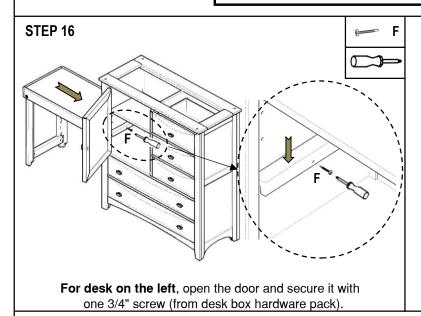

STEP 17

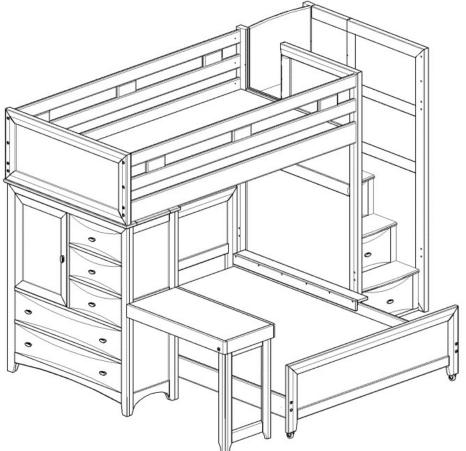

Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide

Twin size Bunkie board- 74" long and 37-1/2" wide


Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

12/12/2020 Page 52 of 72

PARTS LIST

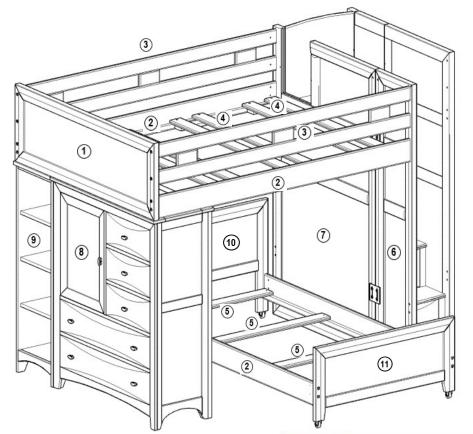

3652360P	FULL/TWIN	STEP LOFT W/CHEST-BOOKCASE WALNUT
RTG SKU#	STYLE#	ITEM DESCRIPTION
35723609	3260160	STEP BUNK UNIT
35823601	3260703	FULL TOP BUNKBED END
36623608	3260730	4 SIDE RLS/2 GUARD RLS
35923603	3260711	5 DRW. LOFT CHEST
36023606	3260760	LOFT BOOKSHELF
36423604	3260783	FULL/FULL EXT. KIT
36223600	3260707	TWIN BOTTOM HD/FT
38000232	100-645	TWIN SLAT PACK (4)
38300238	100-648	FULL BUNK SLATS
36123608	3260601	FOLDING DESK (OPTIONAL)

3651326P	FULL/TWIN	STEP LOFT W/CHEST-BOOKCASE WHITE
RTG SKU#	STYLE#	ITEM DESCRIPTION
35713266	3261160	STEP BUNK UNIT
35813268	3261703	FULL TOP BUNKBED END
36613265	3261730	4 SIDE RLS/2 GUARD RLS
35913260	3261711	5 DRW. LOFT CHEST
36013263	3261760	LOFT BOOKSHELF
36413261	3261783	FULL/FULL EXT. KIT
36213267	3261707	TWIN BOTTOM HD/FT
38000232	100-645	TWIN SLAT PACK (4)
38300238	100-648	FULL BUNK SLATS
36113265	3261601	FOLDING DESK (OPTIONAL)

ARE CONNECTED TOGETHER

Page 53 of 72

WARNING

Footboard


1/0/1900

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

1	7											
	PARTS LIST QTY PARTS LIST					HAF	RDWARE LIST	QTY	HA	RDWARE LIST	QTY	1
1		1 Pc	7	7		A	50 mm Bolts	24 Pcs	G	Metal plates	2 Pcs	
2	Full top bunk bed end	4 Pc		Step bunk unit		В	Allen wrench	1 Pc	Н	Casters	4 Pcs	
_	Side rails	470				С	Epinimini —	16 Pcs		TOOLS NE Phillips screwdriver		ıded)
3		2 Pc	8	0 0	1 Pc	D	1 1/4" Screws	2 Pcs	Allen wrench (included)			
<u> </u>	Guardrails		⊩—	5 Drw Loft chest		 	Metal pin					
4	Full slats	4 Pc	9		1 Pc	E	Cup nut	8 Pcs	FOL	FOLDING DESK HARDWARE]
5		4 Pc		Loft Bookshelf		F	17 mm bolts	8 Pcs	С	1 1/4" Screws	2 Pcs	
Ľ	Twin slats		10	::	1 Pc				J	%	1 Pcs	
6		1 Pc		Headboard			TWO PE	OPLE A	RE N	EEDED TO ASSE	MBLE	1
	Ext. kit full/full		11		1 Pc		DO NOT TIGH	HTEN C	OMPL	ETELY UNTIL A	LL PIEC	ES


TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening






FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

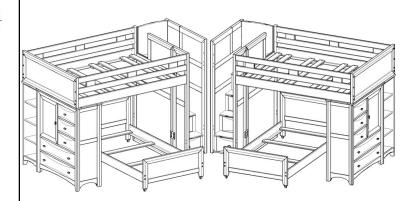



STAIRS ON THE RIGHT (Factory setting) Step 1-15

STAIRS ON THE LEFT


Step 16-31

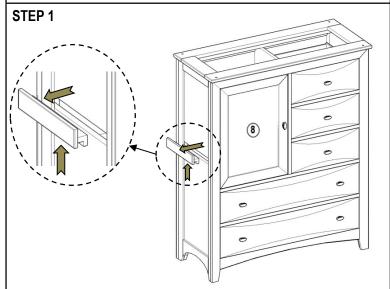



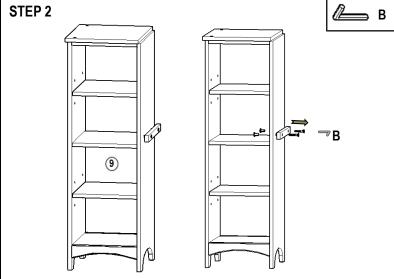


Remove fastening board and save for next step.

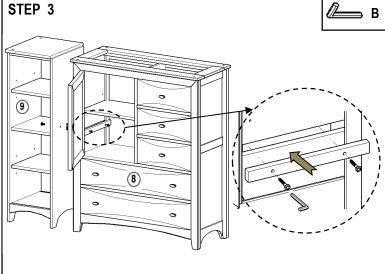

Assemble loft bookshelf and loft chest, using the fastening board and bolts previously removed as shown.


1/0/1900

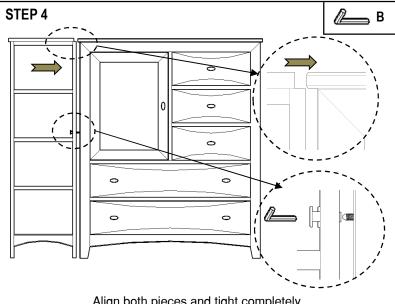

Align both pieces and tight completely.


Page 54 of 72



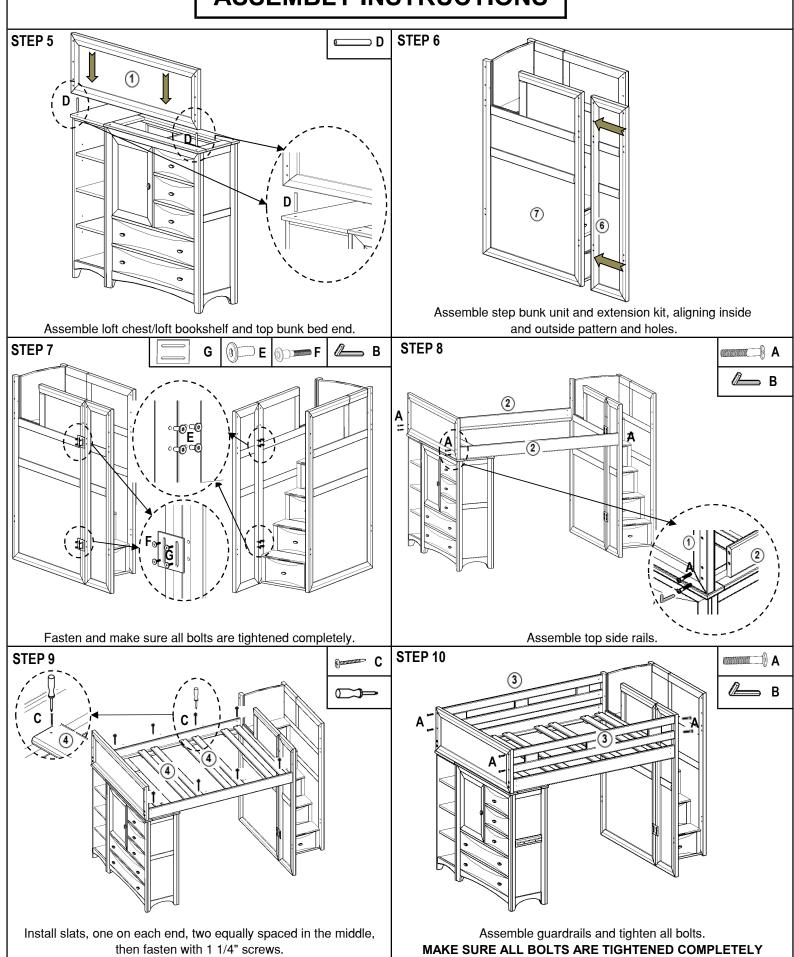


1/0/1900 Page 55 of 72



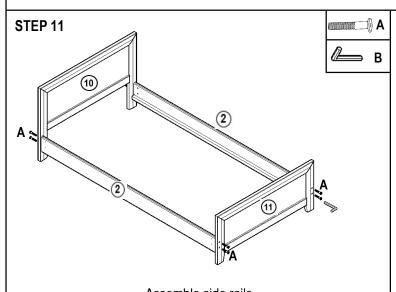


Assemble side rails


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

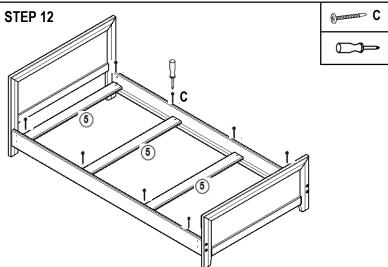

Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

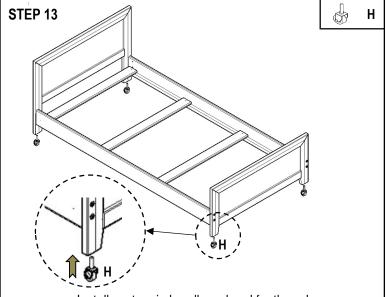


Install casters in headboard and footboard

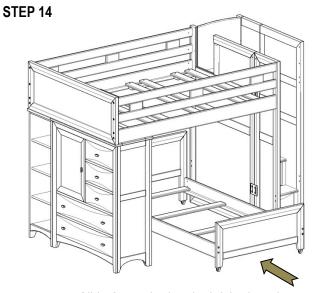

Slide Caster bed under loft bed as shown.

1/0/1900 Page 56 of 72

STEP 15

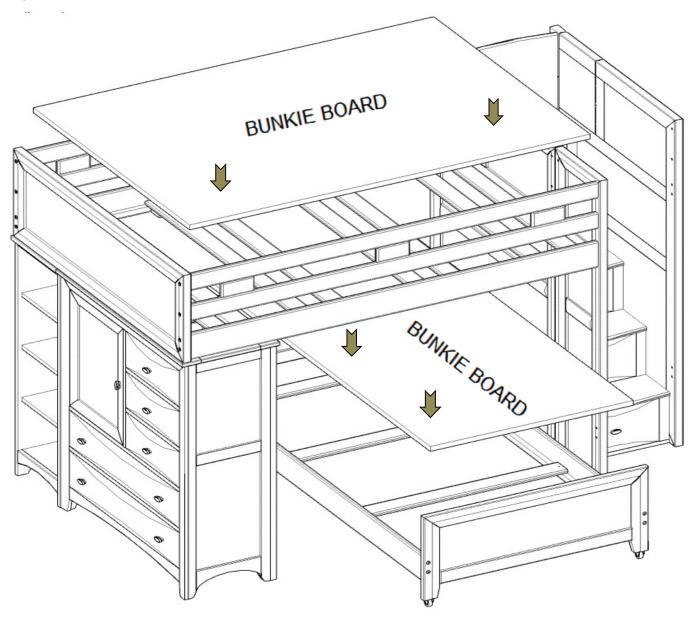

Place Bunkie boards (required, sold separately) on top of the slats


Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide


PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST


1/0/1900 Page 57 of 72



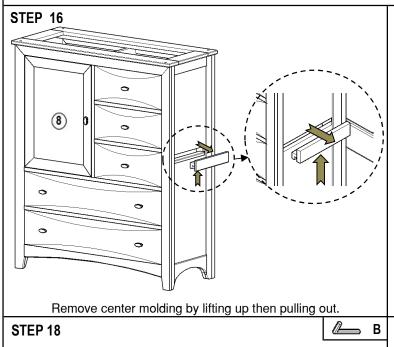




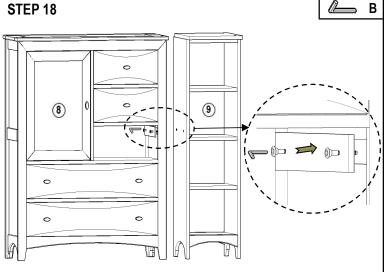


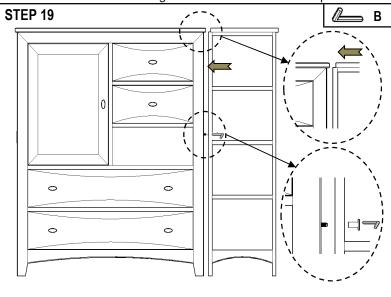

To assemble loft bookshelf and loft chest, first remove 3rd drawer and then use the fastening board and bolts previously removed as shown.

Align both pieces and tight completely.

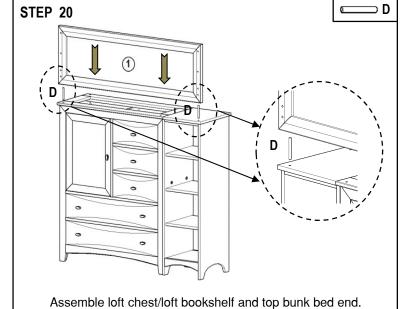


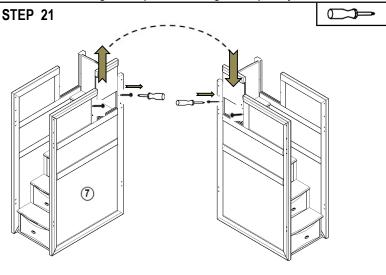



For stairs on the left, first remove the screws, then remove the panel and install it on the other side and secure with the screws.


1/0/1900 Page 58 of 72



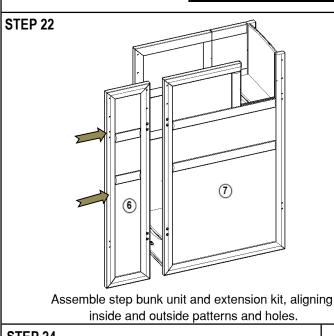


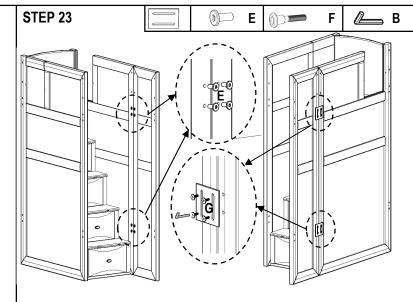


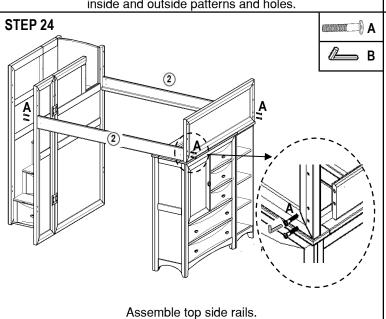

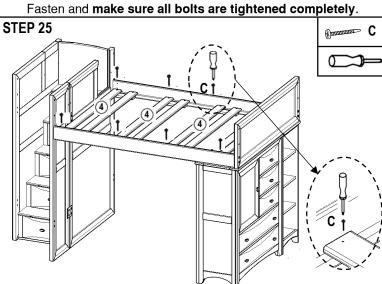

Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

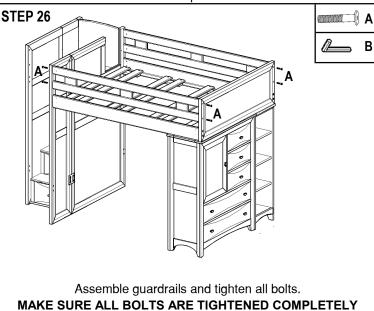

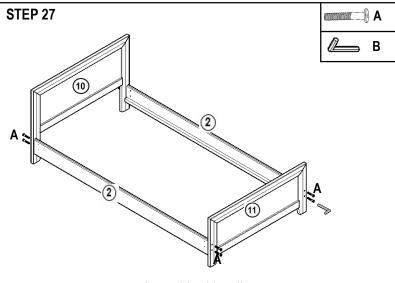


Assemble side rails MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


Page 59 of 72

1/0/1900



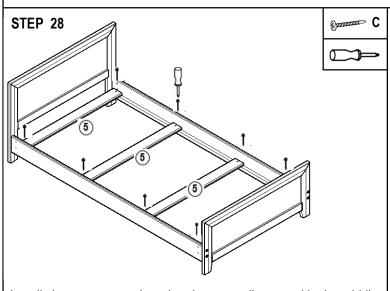


Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

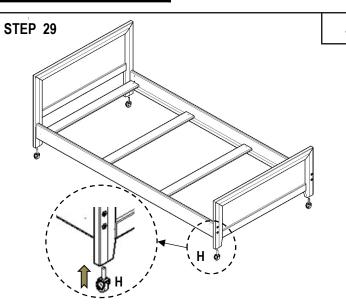

Install casters in headboard and footboard



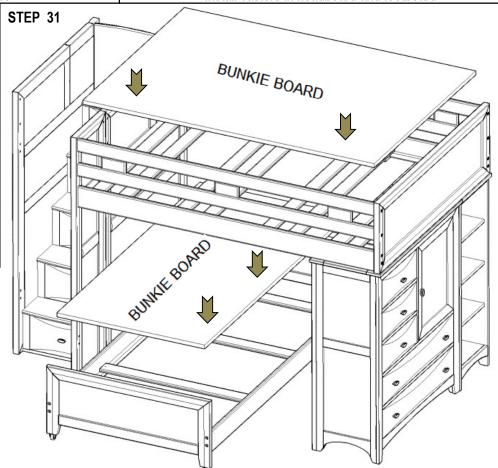


Place Bunkie boards (required, sold separately) on top of the slats


Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST


1/0/1900 Page 60 of 72

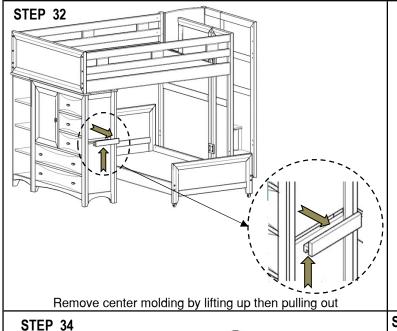

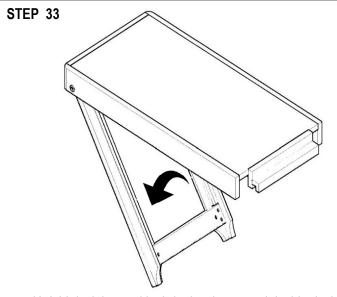


Remove center molding by lifting up then pulling out


Unfold desk leg and look for hardware pack inside desk box.

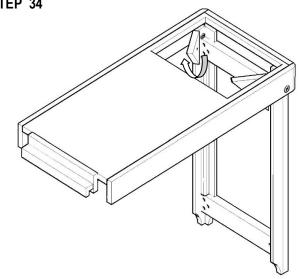




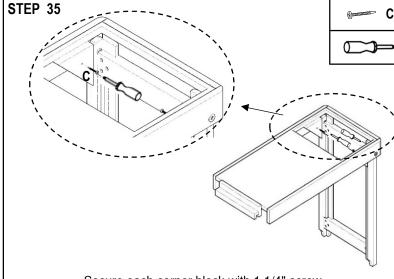

Secure each corner block with 1 1/4" screw (from desk box hardware pack) in the pre-bore hole.

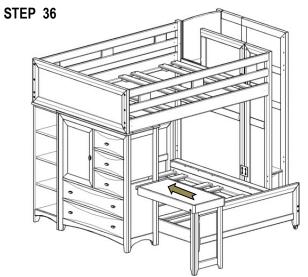


Place folding desk by sliding into the opening of loft chest then push down

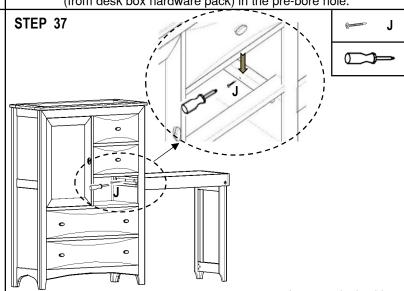


For desk on the right remove third drawer, and secure desk with one 3/4" screw (from desk box hardware pack) .

1/0/1900 Page 61 of 72

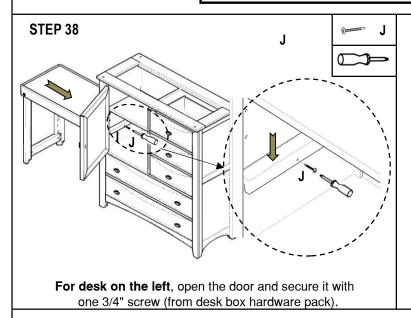

STEP 39

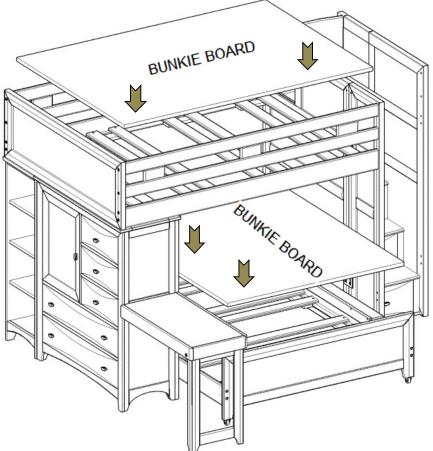

Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide

Twin size Bunkie board- 74" long and 37-1/2" wide


Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

1/0/1900 Page 62 of 72

PARTS LIST

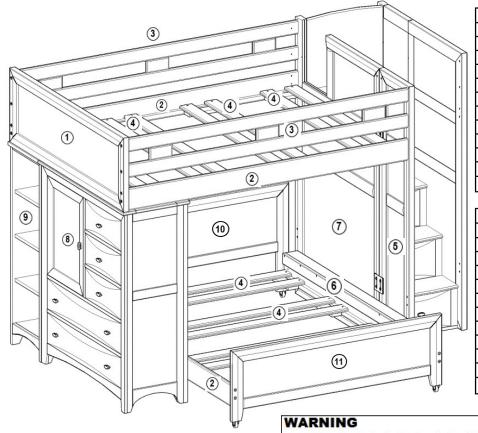

3672360P	FULL/FULL	STEP LOFT W/CHEST-BOOKCASE WALNUT
RTG SKU#	STYLE#	ITEM DESCRIPTION
35723609	3260160	STEP BUNK UNIT
35823601	3260703	FULL TOP BUNKBED END
36623608	3260730	4 SIDE RLS/2 GUARD RLS
35923603	3260711	5 DRW. LOFT CHEST
36023606	3260760	LOFT BOOKSHELF
36423604	3260783	FULL/FULL EXT. KIT
36323602	3260709	FULL BOTTOM HD/FT
36923604	3260736	FULL RAIL CUP
38300238	100-648	FULL BUNK SLATS
38300238	100-648	FULL BUNK SLATS
36123608	3260601	FOLDING DESK (OPTIONAL)

3671326P	FULL/FUL	L STEP LOFT W/CHEST-BOOKCASE WHITE
RTG SKU#	STYLE#	ITEM DESCRIPTION
35713266	3261160	STEP BUNK UNIT
35813268	3261703	FULL TOP BUNKBED END
36613265	3261730	4 SIDE RLS/2 GUARD RLS
35913260	3261711	5 DRW. LOFT CHEST
36013263	3261760	LOFT BOOKSHELF
36413261	3261783	FULL/FULL EXT. KIT
36313269	3261709	FULL BOTTOM HD/FT
36913261	3261736	FULL RAIL CUP
38300238	100-648	FULL BUNK SLATS
38300238	100-648	FULL BUNK SLATS
36113265	3261601	FOLDING DESK (OPTIONAL)

The bed slats included with this bed will not support a mattress alone, this bed requires Bunkie boards (sold separately)

ARE CONNECTED TOGETHER

Page 63 of 72

PARTS LIST	QTY		PARTS LIST	QTY			\sim TV/						
		I I		•	I IAI	RDWARE LIST	QTY	HA	RDWARE LIST	QTY			
Full ton bunk had and	1 Pc	7		7		1 Pc	A	50 mm Bolts	24 Pcs	G	Metal plates	2 Pcs	
Full top bunk bed end	4 Pc		Step bunk unit		В	Allen wrench	1 Pc	Н	Casters	4 Pcs			
Side rails	4.0		0		С	Dummum	16 Pcs				ded)		
	2 Pc	8			D	1 1/4" Screws	2 Pcs		Allen wrench (included)				
Guardrails			5 Drw Loft chest			Metal pin							
	8 Pc	9		1 Pc	Ε	Cup nut	8 Pcs	FOL	DING DESK HARI	OWARE]		
Full slats	4.5		Loft Bookshelf		F	17 mm bolts	8 Pcs	С	Ommunion 1 1/4" Screws	2 Pcs			
Ext. kit full/full	1 PC	10		1 Pc				J	§mmmax	1 Pcs			
	1 Pc		Headboard						EDED TO ASSEN		i Es		
1	Guardrails Full slats	Side rails 2 Pc Guardrails 8 Pc Full slats 1 Pc Ext. kit full/full	Side rails 2 Pc Guardrails 8 Pc Full slats 1 Pc Ext. kit full/full 10	Side rails 2 Pc Guardrails 8 Pc Full slats 1 Pc Ext. kit full/full 1 Pc Headboard	Side rails 2 Pc Guardrails 8 Pc Full slats 1 Pc Loft Bookshelf 1 Pc Headboard 1 Pc Headboard	Side rails 2 Pc Guardrails 8 Pc Full slats 1 Pc Loft Bookshelf 1 Pc Headboard 1 Pc Headboard	Side rails 2 Pc 8 2 Pc Guardrails 8 Pc 9 Loft Bookshelf 1 Pc Ext. kit full/full 1 Pc Headboard 1 Pc TWO PEC DO NOT TIGH	Side rails 2 Pc Guardrails 8 Pc Full slats 1 Pc Loft Bookshelf 1 Pc Ext. kit full/full 1 Pc 1 Pc Two People Af Do Not Tighten Co	Side rails 2 Pc Guardrails 8 Pc 9 Pcs 1 Pc Ext. kit full/full 1 Pc 1 P	Side rails 2 Pc Guardrails 8 Pc Full slats 9	Side rails 8 2 Pc Guardrails 8 Pc Full slats 9 1 Pc Ext. kit full/full 1 Pc 1 P		


Footboard

1/0/1900

TIPS: SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening



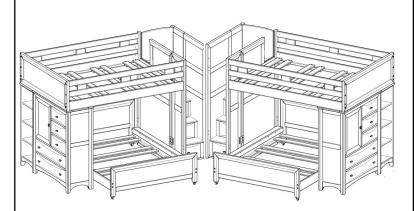

FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM


STAIRS ON THE RIGHT (Factory setting) Step 1-15

STAIRS ON THE LEFT


Step 16-31

STEP 1 (8)

Remove center molding by lifting up then pulling out.

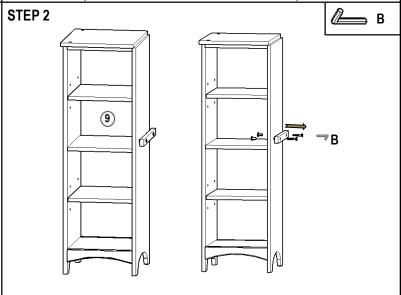


Remove fastening board and save for next step.

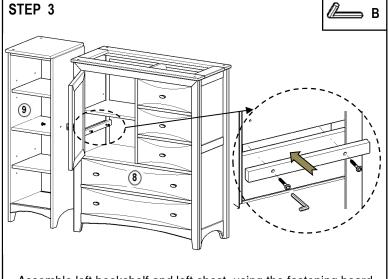


Assemble loft bookshelf and loft chest, using the fastening board and bolts previously removed as shown.

1/0/1900

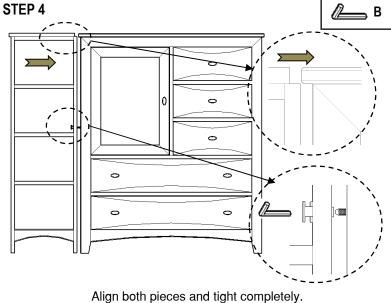


Page 64 of 72



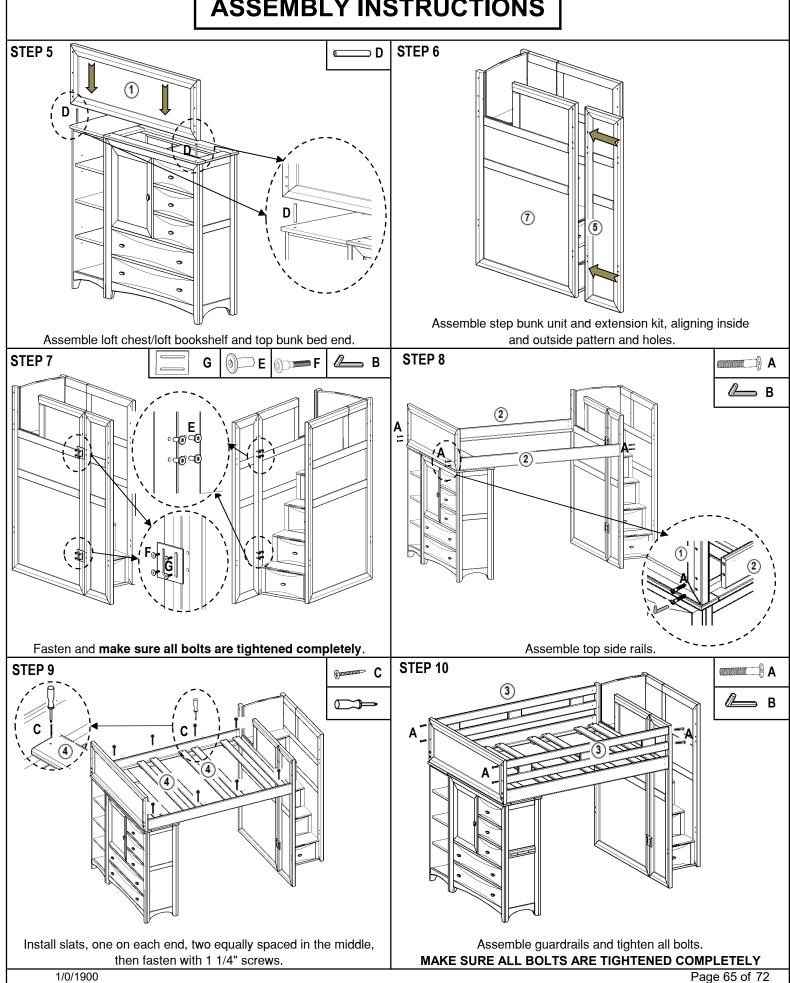




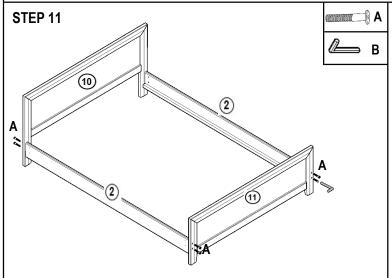


Assemble side rails


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

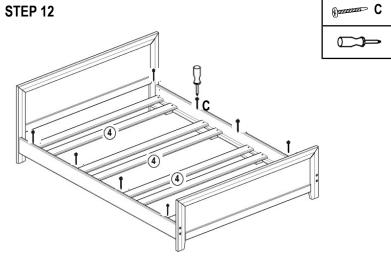

Install slats, one on each end and two equally spaced in the middle, then fasten with 1 1/4" screws

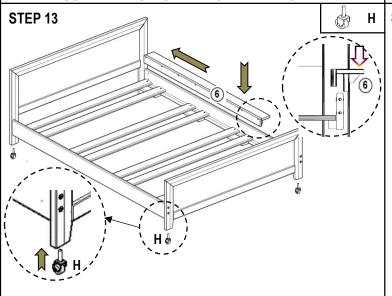


Install casters in headboard and footboard, and set rail cup.

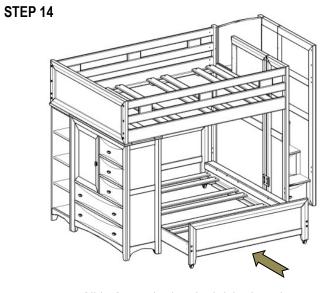

Slide Caster bed under loft bed as shown.

1/0/1900

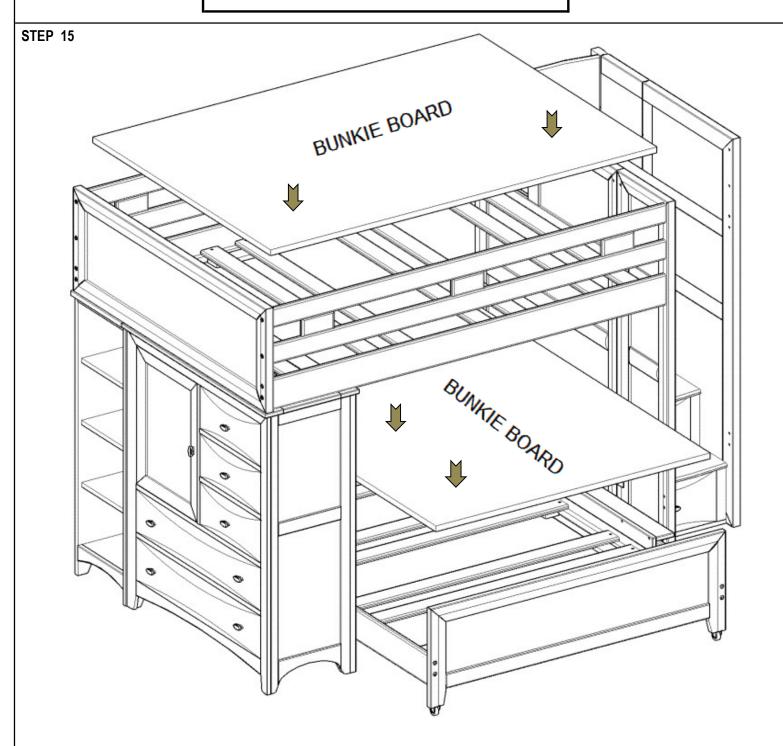

Place Bunkie boards (required, sold separately) on top of the slats


Use only correct mattress dimensions and Bunkie board:


Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

1/0/1900 Page 67 of 72



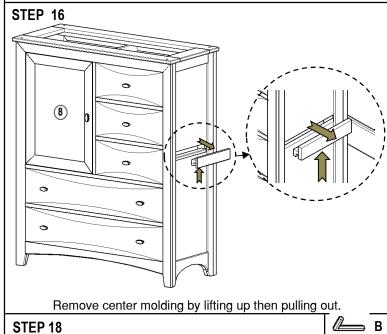

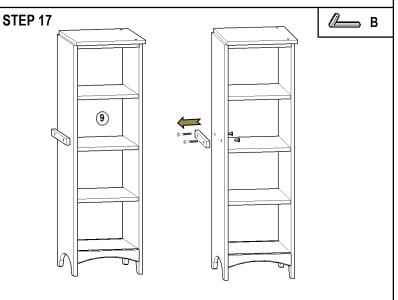


To assemble loft bookshelf and loft chest, first remove 3rd drawer and then use the fastening board and bolts previously removed as shown

Remove fastening board and save for next step. **STEP 19** 0

Align both pieces and tight completely.

STEP 21

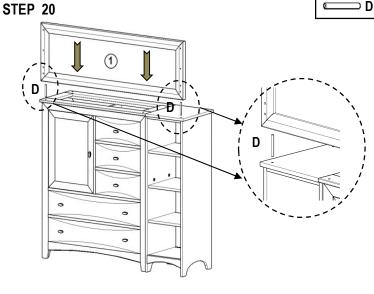

Assemble loft chest/loft bookshelf and top bunk bed end.


1/0/1900


For stairs on the left, first remove the screws (save), then remove


the panel and install it on the other side and secure with the screws.

Page 68 of 72



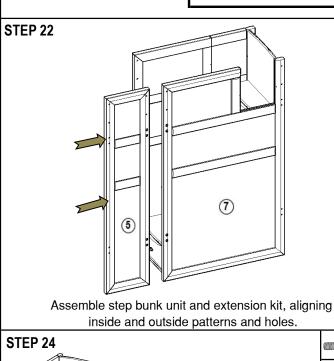

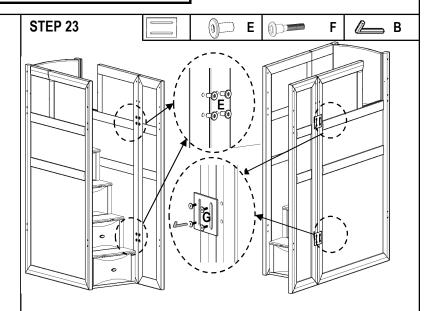


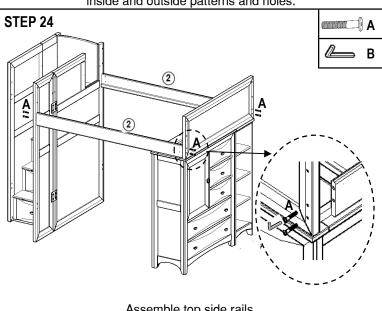


Fasten and make sure all bolts are tightened completely. **STEP 25**

Assemble top side rails.

Install slats, one on each end, two equally spaced in the middle, then fasten with 1 1/4" screws.

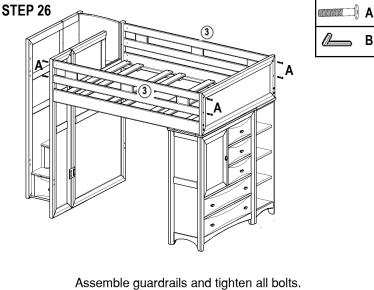

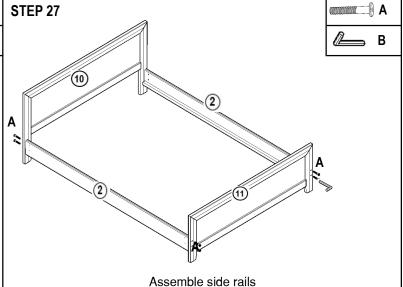


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

1/0/1900 Page 69 of 72




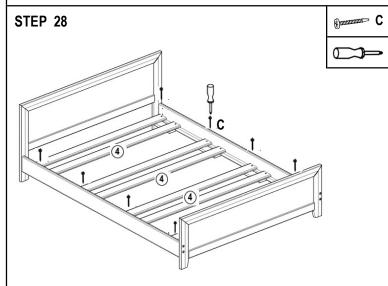


Install slats, one of each end and two equally spaced in the middle, then fasten with 1 1/4" screws

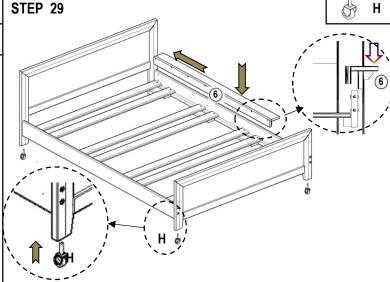

Install casters in headboard and footboard, and set rail cup.

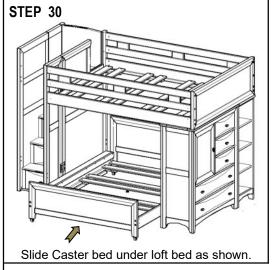

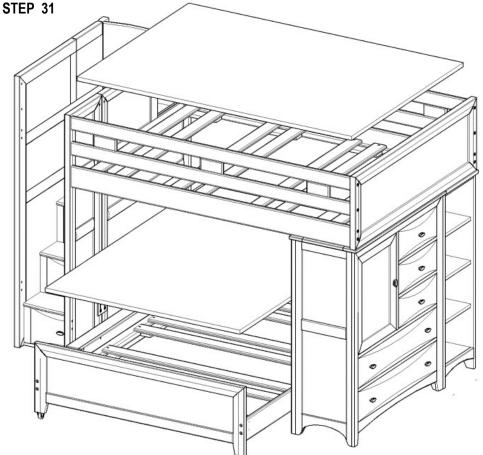


Place Bunkie boards (required, sold separately) on top of the slats


Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide
Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide
Full size Bunkie board- 74" long and 52-1/2" wide


PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST


1/0/1900 Page 70 of 72

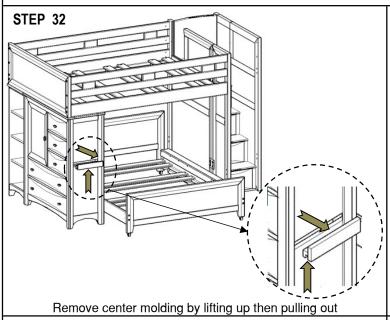


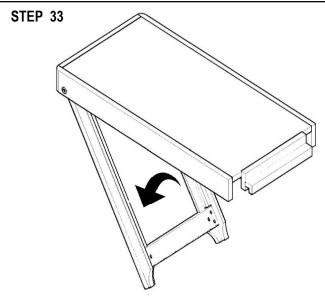


Unfold desk leg and look for hardware pack inside desk box.

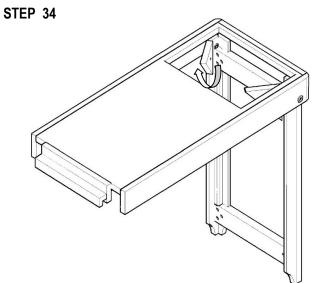




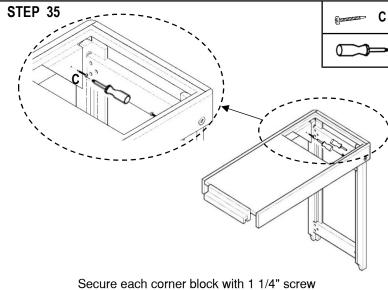

Secure each corner block with 1 1/4" screw (from desk box hardware pack) in the pre-bore hole.

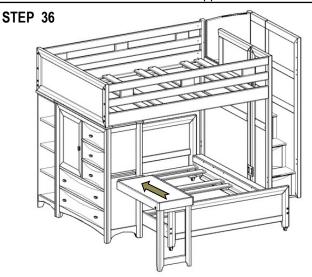


Place folding desk by sliding into the opening of loft chest then push down

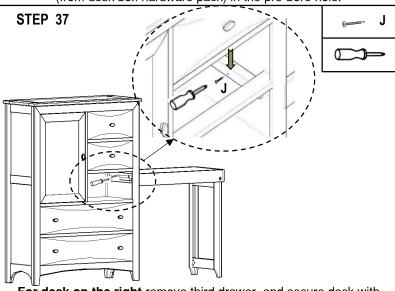


For desk on the right remove third drawer, and secure desk with one 3/4" screw (from desk box hardware pack) .

1/0/1900

Page 71 of 72

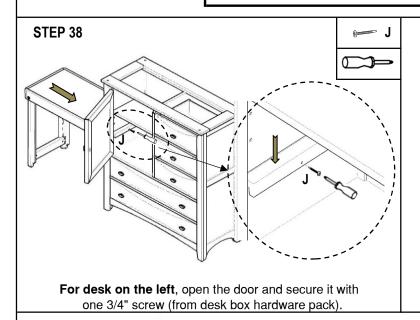

STEP 39

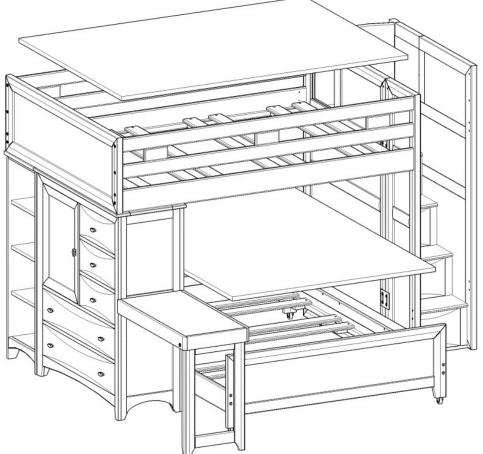

Place Bunkie boards (required, sold separately) on top of the slats

Use only correct mattress dimensions and Bunkie board:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide
Twin size Bunkie board- 74" long and 37-1/2" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide Full size Bunkie board- 74" long and 52-1/2" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

1/0/1900 Page 72 of 72