
CANYON FURNITURE COMPANY

TRUNDLE BED ASSEMBLY INSTRUCTIONS (28-744)


COTTAGE COLORS COLLECTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment.

Identify and count all Hardware and compare with the Hardware List Below. Please contact your retail store with service or parts replacement request.

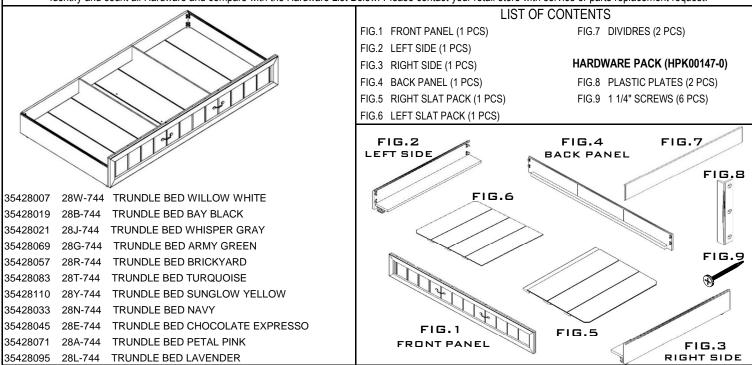

- 1.- BEFORE YOU START, CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT AND HARDWARE TO MAKE SURE YOU HAVE EVERYTHING YOU NEED FOR ASSEMBLY, CHECK ON THE BOTTOM OF THE FRAME COMPONENTS FIG 1, 2, 3 & 4, THEY SHOULD HAVE MATCHING NUMBERS (FRONT XXXX, BACK XXXX, LEFT XXXX, RIGHT XXXX).
- 2.- REMOVE SCREWS IN BOTH PANEL SIDES (FIG.2 & 3), USING A PHILLIP HEAD SCREWDRIVER (NOT INCLUDED) SAVE THE SCREWS FOR RE-ATTACH SEE FIG.7
- 3.- ALIGN HARDWARE INSTALLED IN THE FRONT PANEL (FIG.1) WITH LEFT SIDE (FIG.2), THEN ATTACH USING THE SCREWS REMOVED IN PREVIOUS STEP SEE FIG. 8, REPEAT THE SAME PROCESS IN THE RIGHT SIDE (FIG.3) AND AT ALL FOUR CORNERS, SEE FIG.9
- 4.- PLACE THE LEFT SLAT PACK (FIG.6) INSIDE THE BED, THEN SLIDE TOWARD CENTER SEE FIG.10, REPEAT THE SAME PROCESS WITH THE RIGHT SLAT PACK (FIG.5).

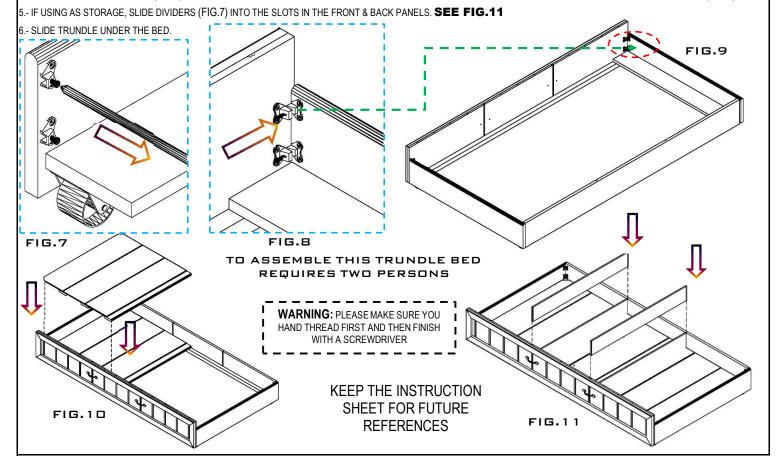

REV 03 19/02/2020 PAGE 1 OF 1 KIS01182-0