


CANYON FURNITURE COMPANY
TRUNDLE BED KD ASSEMBLY INSTRUCTIONS (26-744)

LIST OF CONTENTS
RECLAIM YOUTH COLLECTION

THANK YOU FOR YOUR PURCHASE ! PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

TRUNDLE BED KD BOX (26-744)

- A- (1) FRONT PANEL
- B- (2) SIDES
- C- (1) BACK PANEL
- D- (1) RIGHT SLAT PACK
- E- (1) LEFT SLAT PACK
- F- (2) DIVIDERS

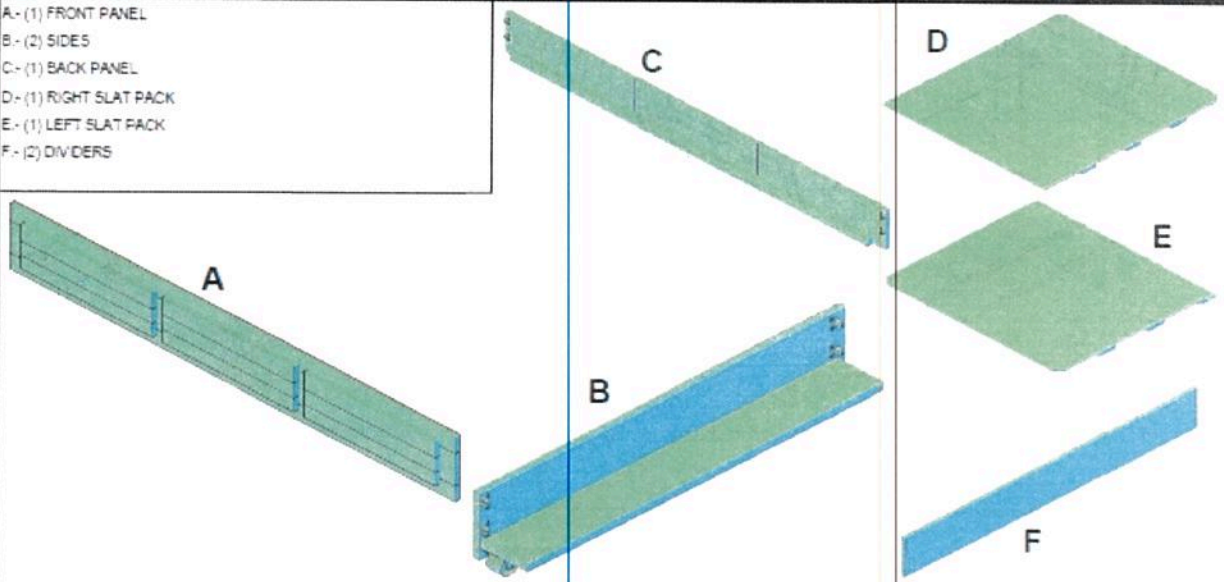

- 1.- BEFORE YOU START, CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT AND PIECE OF HARDWARE TO MAKE SURE YOU HAVE EVERYTHING YOU NEED FOR ASSEMBLY
- 2.- REMOVE SCREWS IN BOTH SIDES (B), USING A PHILLIP HEAD SCREWDRIVER (NOT INCLUDED) SAVE THE SCREWS FOR RE-ATTACH SEE FIG. 1
- 3.- ALIGN HARDWARE INSTALLED IN THE FRONT PANEL (A) WITH ONE SIDE (B), THEN ATTACH USING THE SCREWS REMOVED IN PREVIOUS STEP SEE FIG. A, REPEAT THE PROCESS AT ALL FOUR CORNERS, SEE FIG. 2
- 4.- PLACED THE LEFT SLAT PACK (E) IN INSIDE INTO THE BED, THEN SLIDE TOWARD CENTER SEE FIG. 3 REPEAT THE SAME PROCESS WITH THE RIGHT SLAT PACK (D)
- 5.- IF USING AS STORAGE, SLIDE DIVIDERS (F) INTO THE SLOTS IN THE FRONT&BACK PANELS. SEE FIG. 4

