










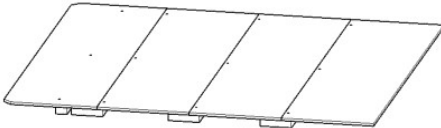
12-Modern Colors Trundle bed assembly instructions

TWO PEOPLE ARE NEEDED TO ASSEMBLE

35611260	TRUNDLE BED	WHITE
35611272	TRUNDLE BED	PINK
35611234	TRUNDLE BED	IRON ORE
35611246	TRUNDLE BED	SLATE BLUE
35611258	TRUNDLE BED	LIGHT GRAY

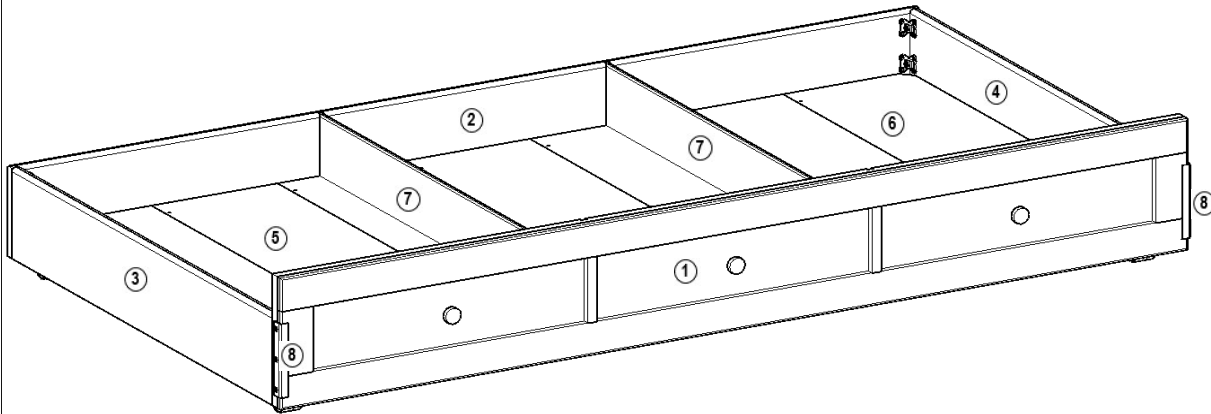

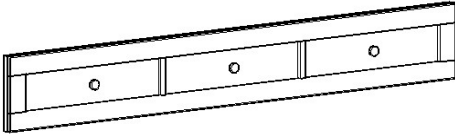- Read all the instructions, identify all components, and be sure you have all parts prior to assembly.
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.

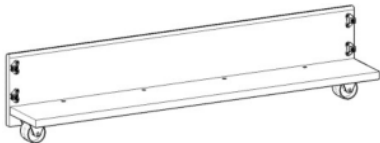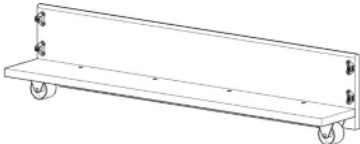PARTS LIST		QTY	PARTS LIST		QTY
1		1 Pc	6		1 Pc
	Front panel			Right slat pack	
2		1 Pc	7		2 Pc
	Back panel			Dividers	
3		1 Pc	8		2 Pc
	Left side			Plastic corner plate	
4		1 Pc	A		6 Pc
	Right side			1/2" Screw	
5		1 Pc			
	Left slat pack				

TOOLS NEEDED


Phillips screwdriver (not included)



ASSEMBLY INSTRUCTIONS


Before you start, carefully unpack and identify each component and hardware to make sure you have everything you need, check on the bottom of the frame components (1,2,3,4) they should have matching numbers (front XXXX, back XXXX, Right XXXX & left XXXX)

STEP 1

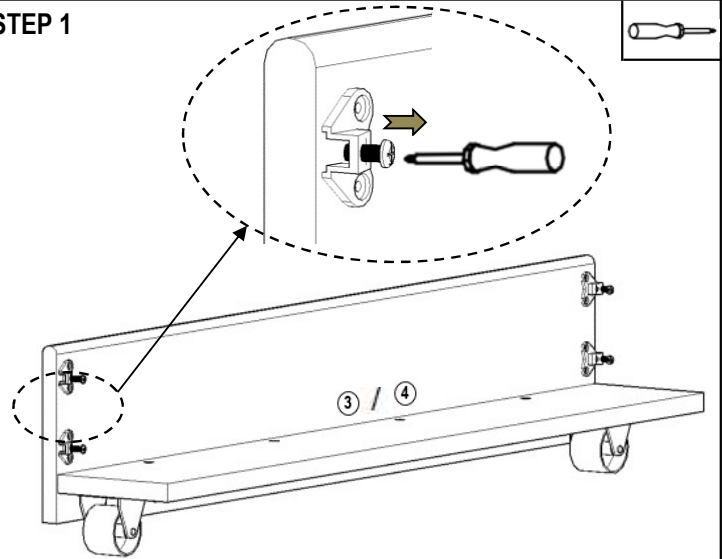


Remove the four screws in both side panels and save for re-attach.

STEP 2

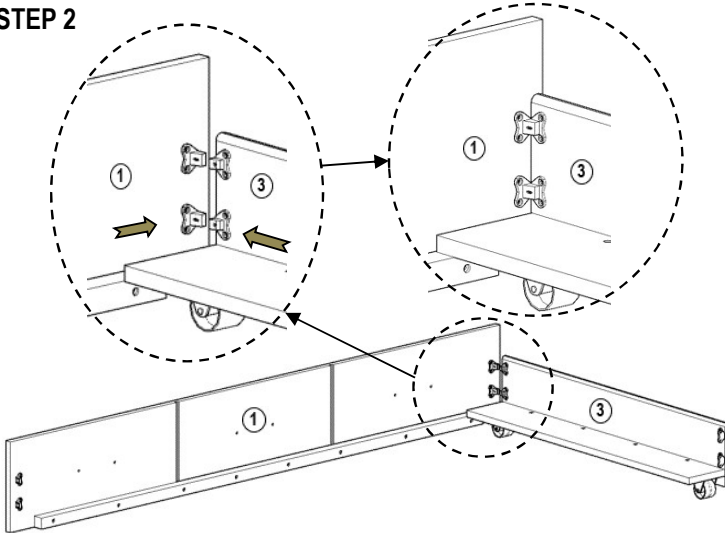


Assemble front and side panels

STEP 3

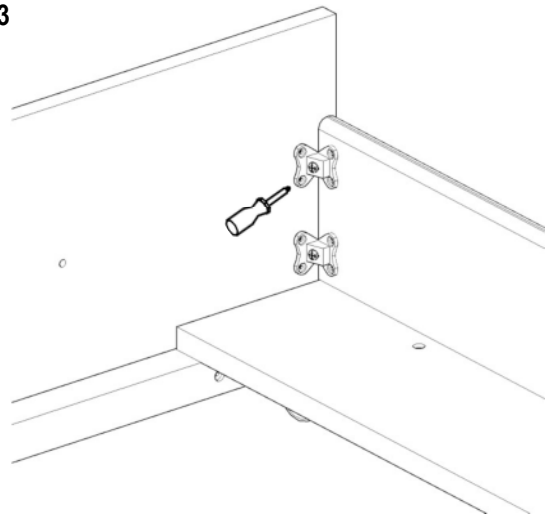


Fasten using the screws removed in previous step.

STEP 4

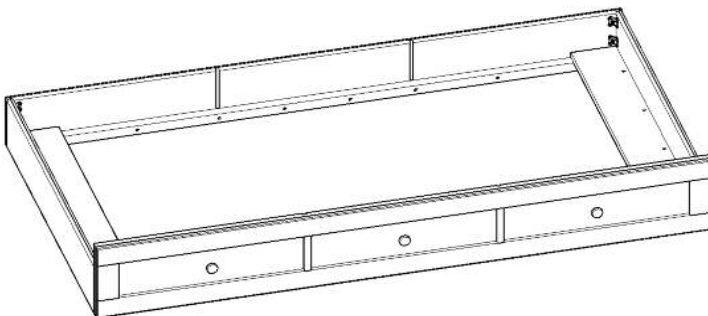

repeat the same process for right side and back panels.



STEP 5

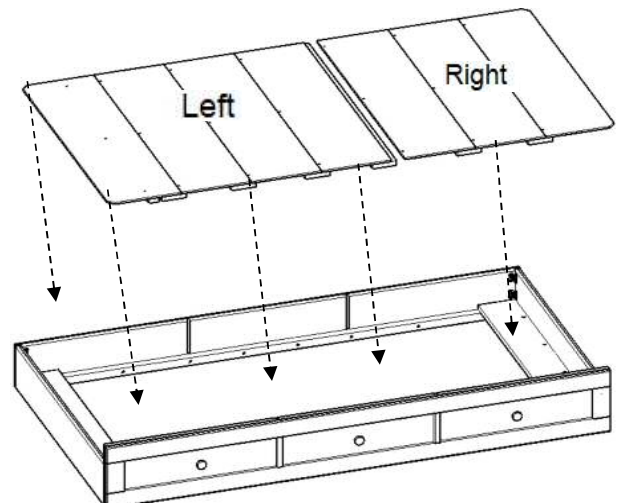

Unfold left and right side packs and place them on top of the panel's cleats


ASSEMBLY INSTRUCTIONS

STEP 6

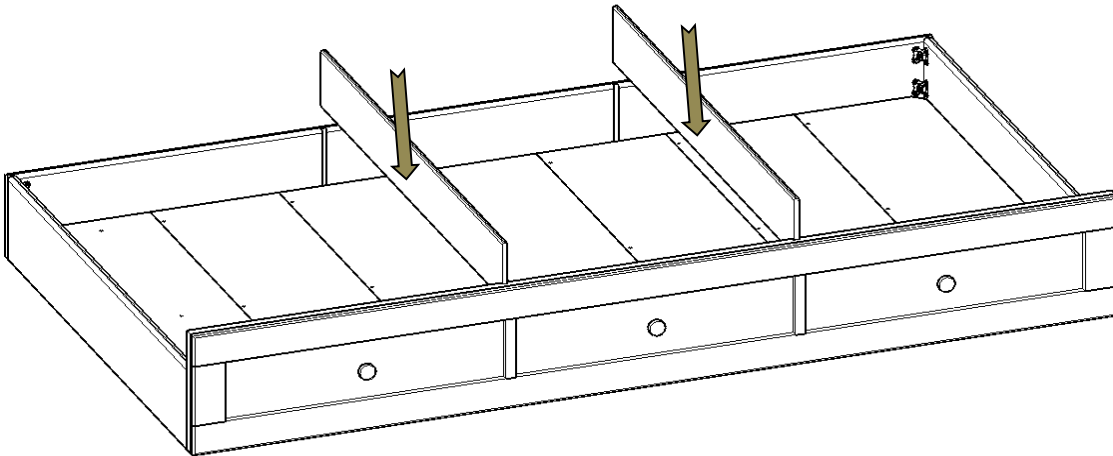

Install dividers for storage, for mattress do not install.

STEP 7

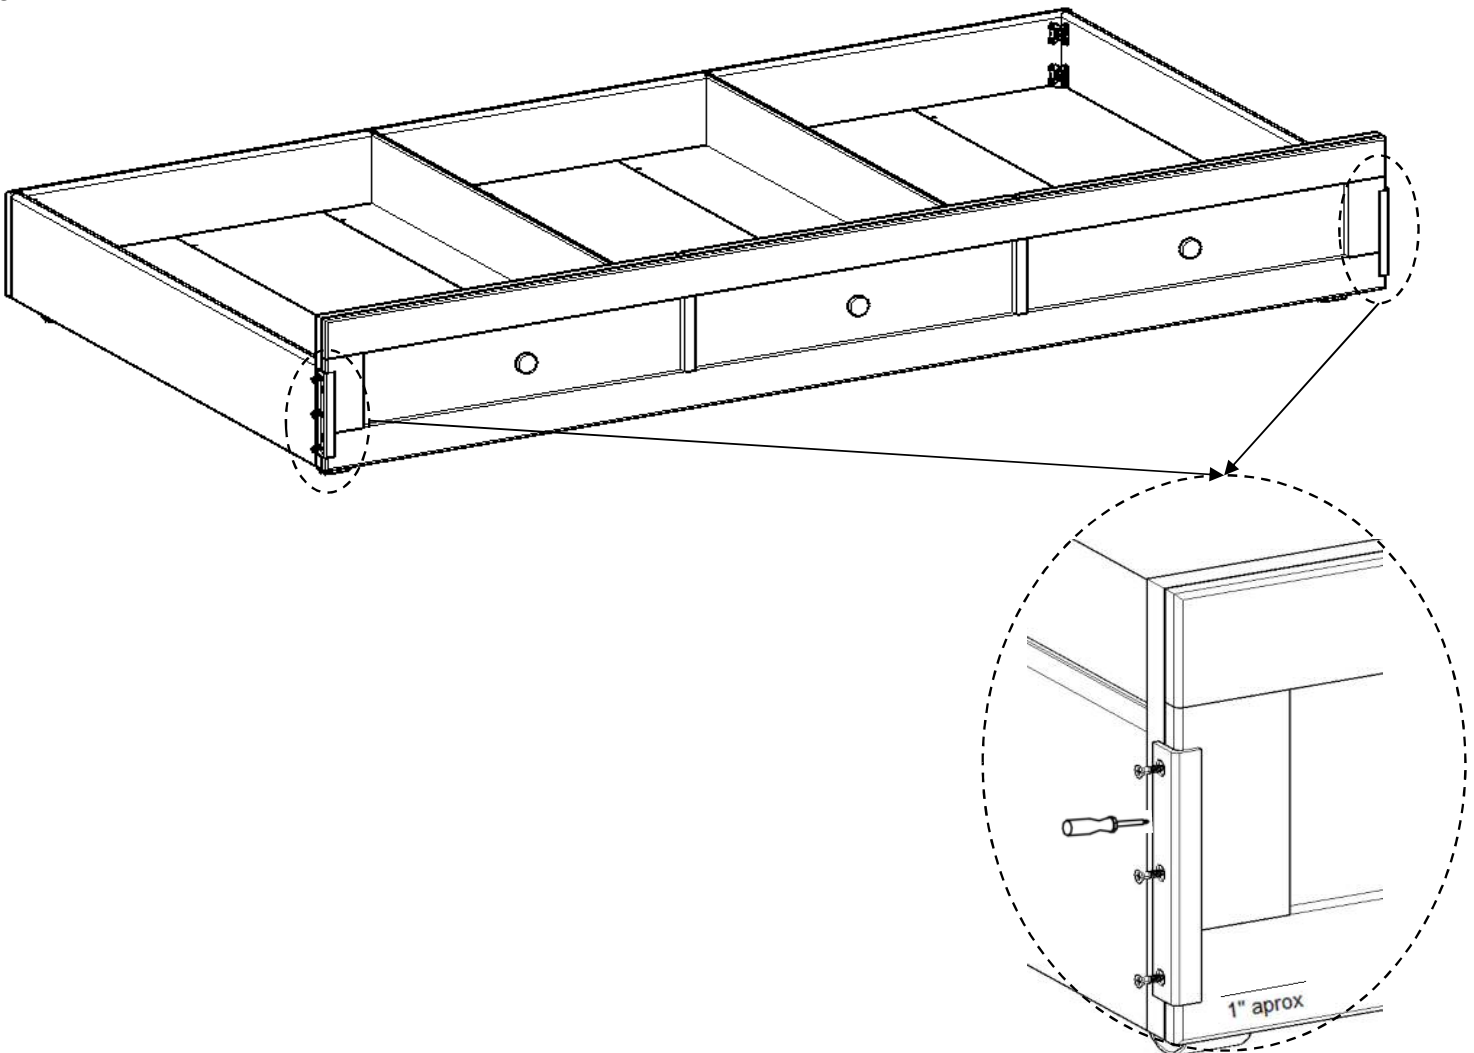

Install plastic plates, one in each front side as shown, fasten with three screws.