



MODERN COLORS COLLECTION

THANK YOU FOR YOUR PURCHASE



WARNING DANGER

Failure to follow these warnings and assembly instructions could result in serious injury or death. To help prevent serious or fatal injuries from entrapment or falls:

- Read all instructions before assembling bunk bed and keep these instructions for future reference.
- Before each usage or assembly, inspect bunk bed for damaged hardware, loose joints, missing parts, or sharp edges. DO NOT Use bunk bed if any parts are missing or broken.
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.
- Follow the information on the warnings appearing on the upper bunk end structure and on the carton, DO NOT REMOVE WARNING LABEL FROM BED.
- Always use the recommended size mattress or mattress supports, or both to help prevent the likelihood of entrapment or falls.
- Ensure thickness of mattress and foundation combine does not exceed **10 inches (255mm)** and mattress surface is at least **5 inches (127mm)** below upper edge of guardrails.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Limit top bunk use to one person.
- Always use the ladder for entering and leaving the upper bunk.
- Use of night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- The use of water or sleep flotation mattress is prohibited.
- This bunk bed meets all the requirements of ASTM 1427-19.




STRANGULATION HAZARD:

Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts, and jump ropes.

CONFIGURATIONS

Choose your configuration, read all the instructions, identify all components, and be sure you have all parts prior to assembly

Reference page 4-8 for assembly steps

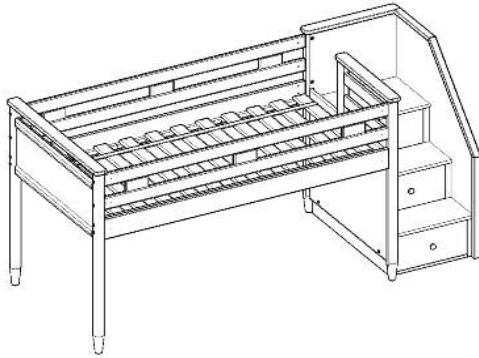


TWIN LOW LOFT W/STEP END

3511123P IRON ORE 3511124P SLATE BLUE

3511125P LIGHT GRAY 3511126P WHITE 3511127P PINK

Reference page 9-13 for assembly steps

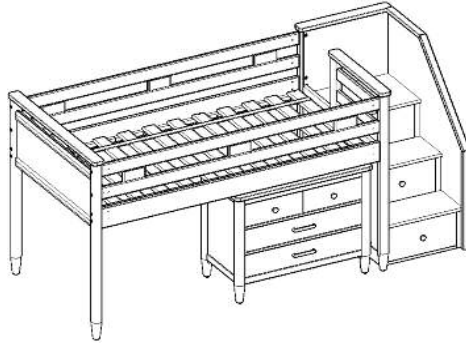


TWIN LOW LOFT W/STEP END & CHEST

3521123P IRON ORE 3521124P SLATE BLUE

3521125P LIGHT GRAY 3521126P WHITE 3521127P PINK

Reference page 14-18 for assembly steps

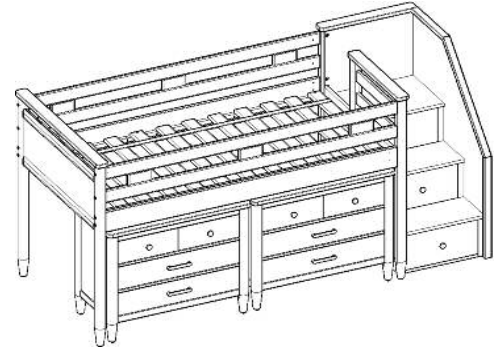


TWIN LOW LOFT W/STEP END & 2 CHEST

3541123P IRON ORE 3541124P SLATE BLUE

3541125P LIGHT GRAY 3541126P WHITE 3541127P PINK

Reference page 19-23 for assembly steps

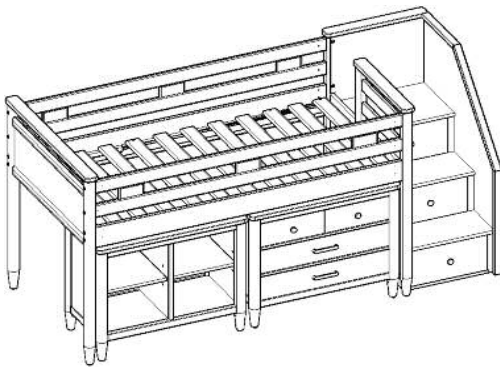


TWIN LOW LOFT W/STEP END, CHEST, BOOKCASE

3531123P IRON ORE 3531124P SLATE BLUE

3531125P LIGHT GRAY 3531126P WHITE 3531127P PINK

Reference page 24-28 for assembly steps

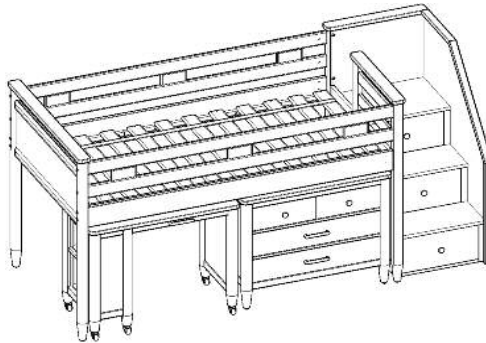


TWIN LOW LOFT W/STEP END, CHEST & DESK

3551123P IRON ORE 3551124P SLATE BLUE

3551125P LIGHT GRAY 3551126P WHITE 3551127P PINK

Reference page 29-34 for assembly steps

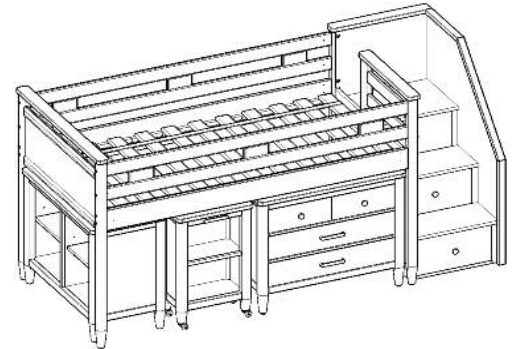


TWIN LOW LOFT W/STEP END, CHEST, BOOKCASE & DESK

3561123P IRON ORE 3561124P SLATE BLUE

3561125P LIGHT GRAY 3561126P WHITE 3561127P PINK

Reference page 35-39 for assembly steps

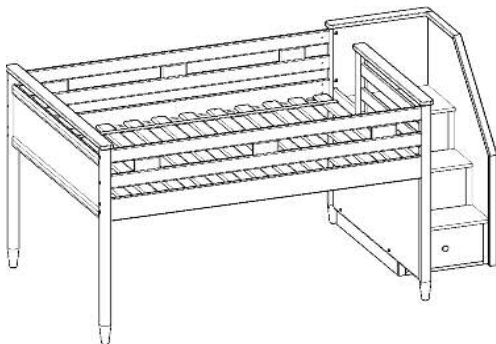


FULL LOW LOFT W/STEP END

3611123P IRON ORE 3611124P SLATE BLUE

3611125P LIGHT GRAY 3611126P WHITE 3611127P PINK

Reference page 40-44 for assembly steps

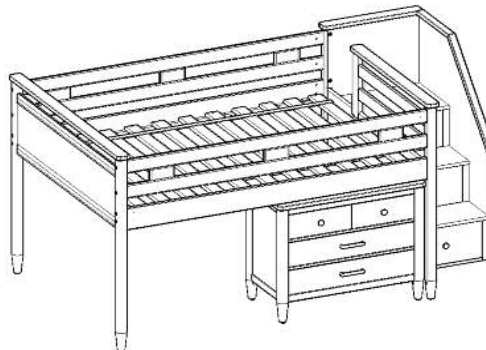


FULL LOW LOFT W/STEP END & CHEST

3621123P IRON ORE 3621124P SLATE BLUE

3621125P LIGHT GRAY 3621126P WHITE 3621127P PINK

Reference page 45-49 for assembly steps

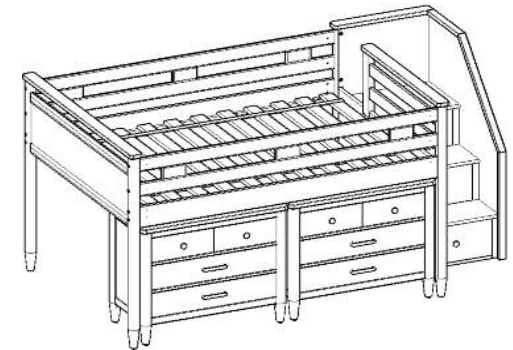

FULL LOW LOFT W/STEP END & 2 CHEST


3641123P IRON ORE 3641124P SLATE BLUE

3641125P LIGHT GRAY 3641126P WHITE 3641127P PINK

CONFIGURATIONS

Choose your configuration, read all the instructions, identify all components, and be sure you have all parts prior to assembly


Reference page 50-54 for assembly steps

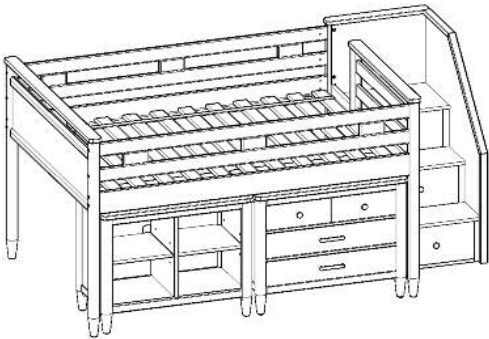

FULL LOW LOFT W/STEP END, CHEST, BOOKCASE

3631123P IRON ORE 3631124P SLATE BLUE
3631125P LIGHT GRAY 3631126P WHITE 3631127P PINK


Reference page 55-60 for assembly steps

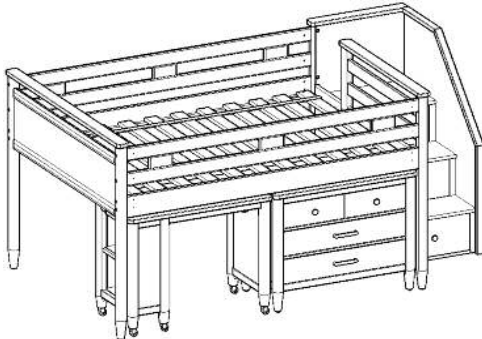

FULL LOW LOFT W/STEP END, CHEST & DESK

3651123P IRON ORE 3651124P SLATE BLUE
3651125P LIGHT GRAY 3651126P WHITE 3651127P PINK


Reference page 61-66 for assembly steps

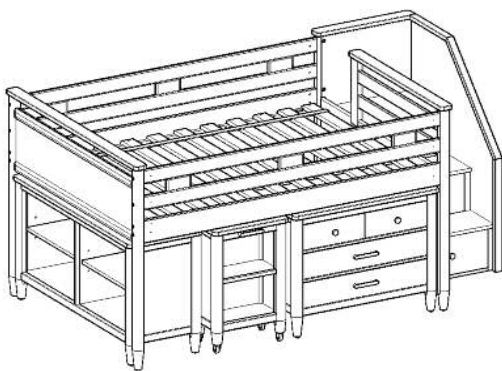

FULL LOW LOFT W/STEP END, CHEST, BOOKCASE & DESK

3661123P IRON ORE 3661124P SLATE BLUE
3661125P LIGHT GRAY 3661126P WHITE 3661127P PINK

PARTS LIST

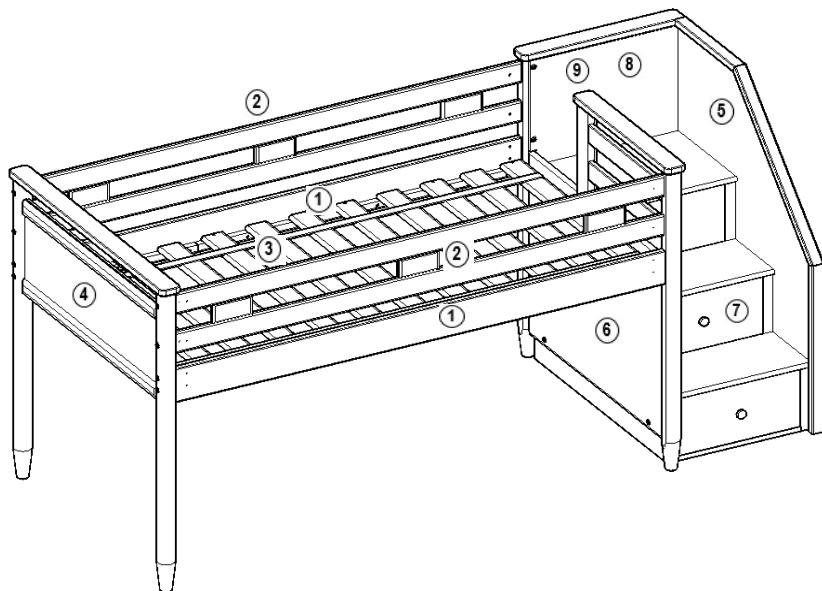

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**




3511123P TWIN LOW LOFT W/STEP END D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
35911230	12D-164	TWIN LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811238	12D-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL

3511124P TWIN LOW LOFT W/STEP END E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
35911242	12E-164	TWIN LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811240	12E-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL

3511125P TWIN LOW LOFT W/STEP END G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
35911254	12G-164	TWIN LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811252	12G-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL

3511126P TWIN LOW LOFT W/STEP END W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
35911266	12W-164	TWIN LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811264	12W-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL

3511127P TWIN LOW LOFT W/STEP END A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
35911278	12A-164	TWIN LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811276	12A-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs			
5		1 Pcs			
6		1 Pcs			

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x

Hardware pack
location



12-403 LOW LOFT STEP UNIT

G




Gold knobs 3x

D



5/16-18x40mm bolt 14x

Hardware
location
Installed

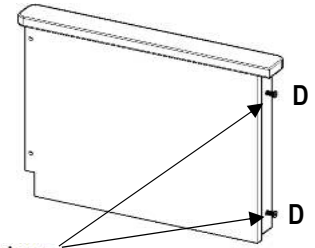

100-170 12 PC TWIN SLAT ROLL



6 x 1 1/4" Screw 10x

Hardware pack
location




12-164 TWIN LOW LOFT SIDE PANELS




1/4-20X30mm bolt 2x

Hardware
location
Installed

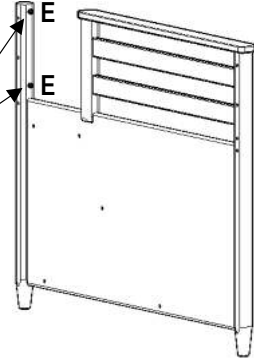

Hardware pack
location

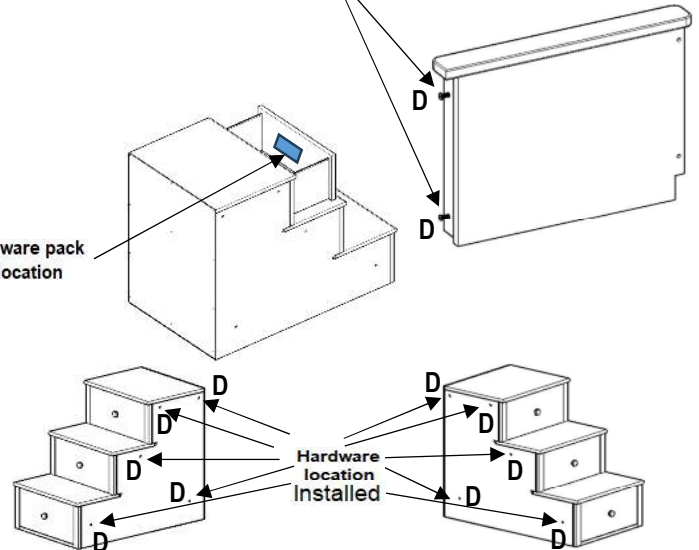


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

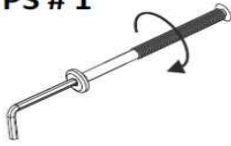

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

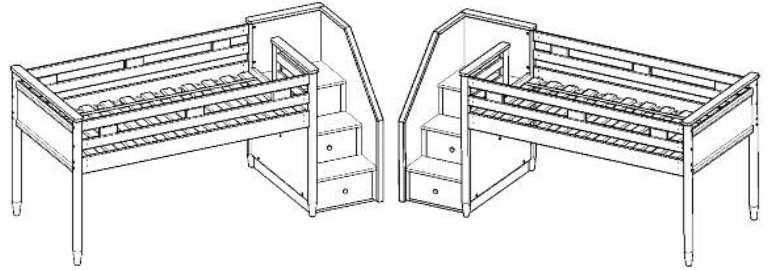


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

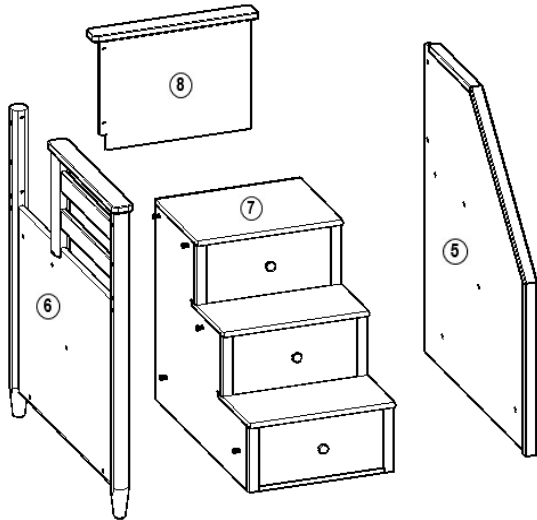


Assembly configuration for stairs on the right side.

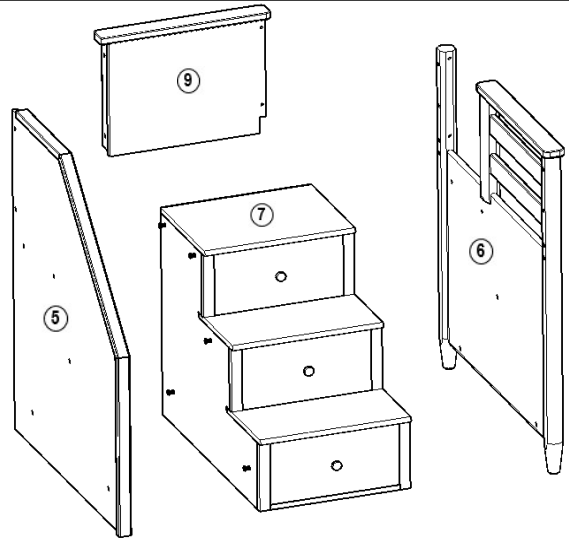


Assembly configuration for stairs on the left side.

STEP 2

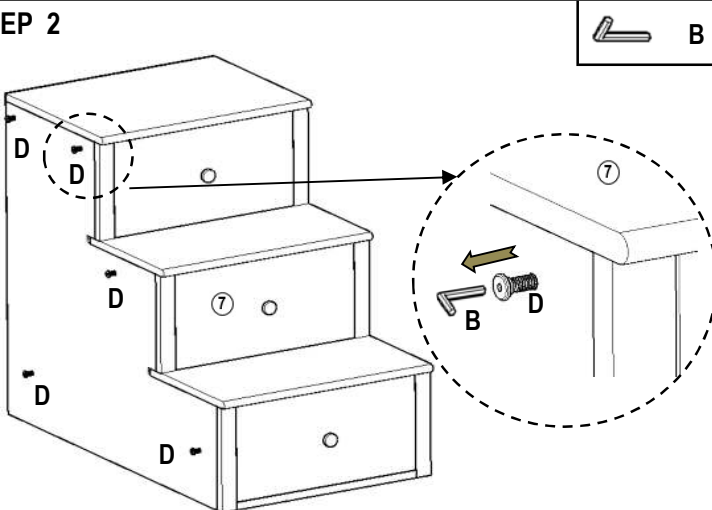

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

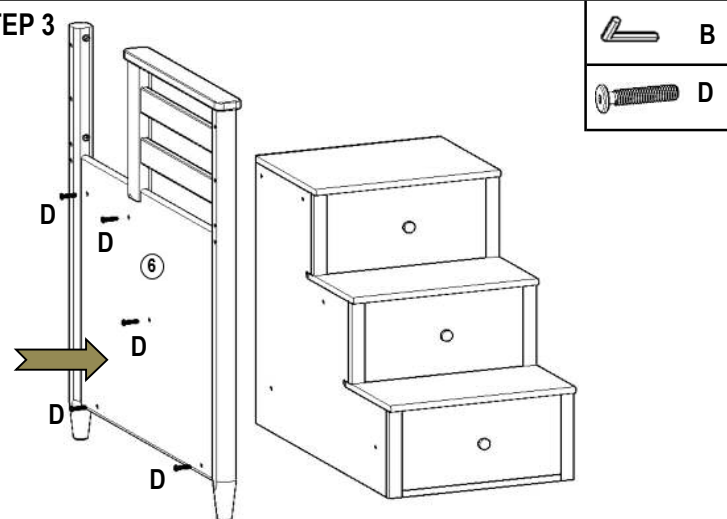

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

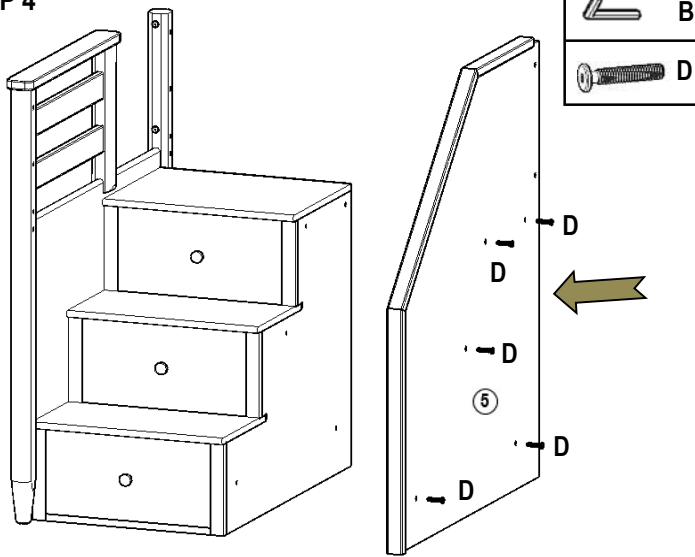


Repeat process for angle side panel.

STEP 5

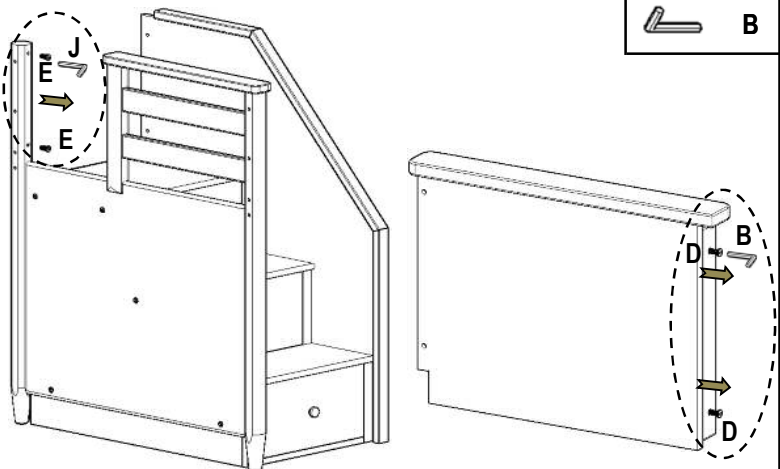


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

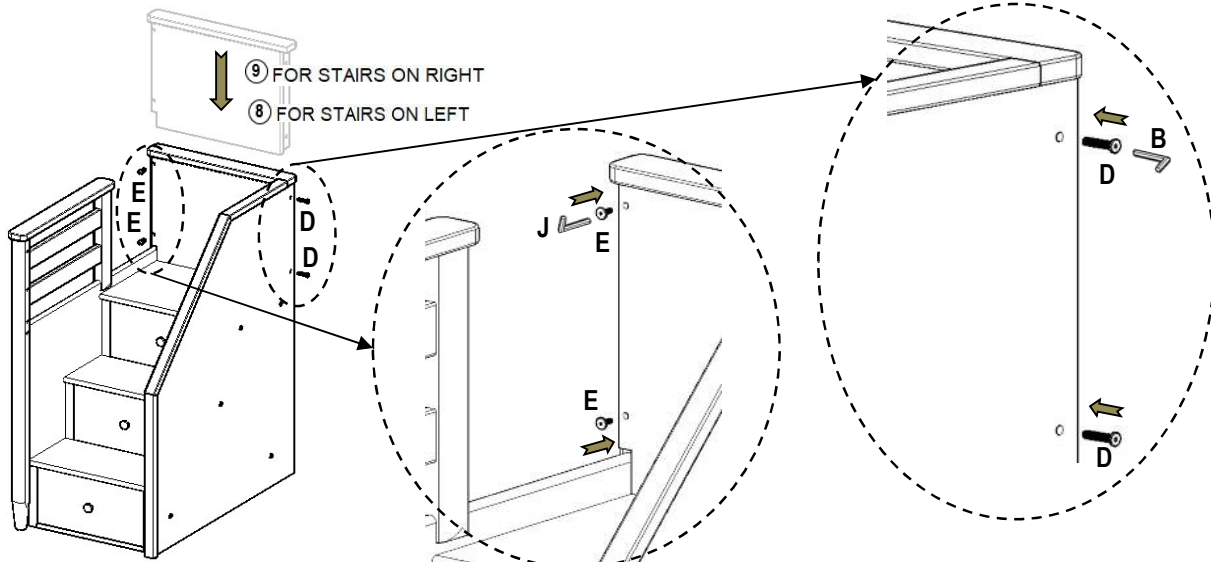


Assemble step back panel

STEP 7

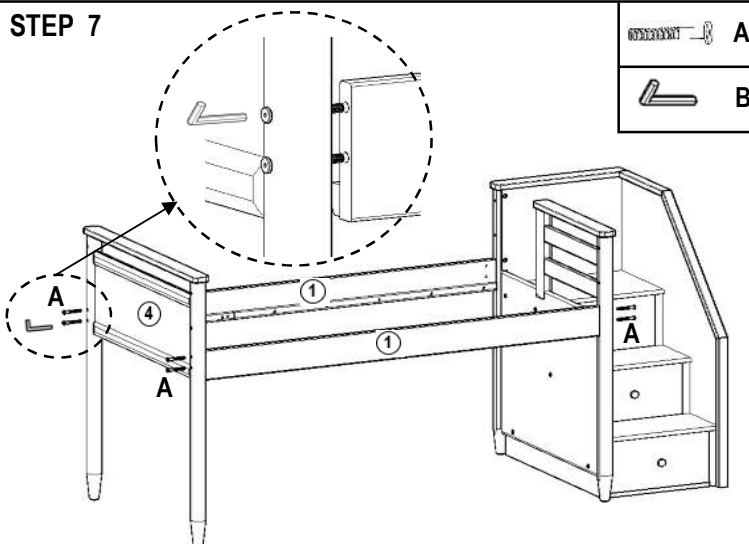

Assemble side rails.




STEP 8

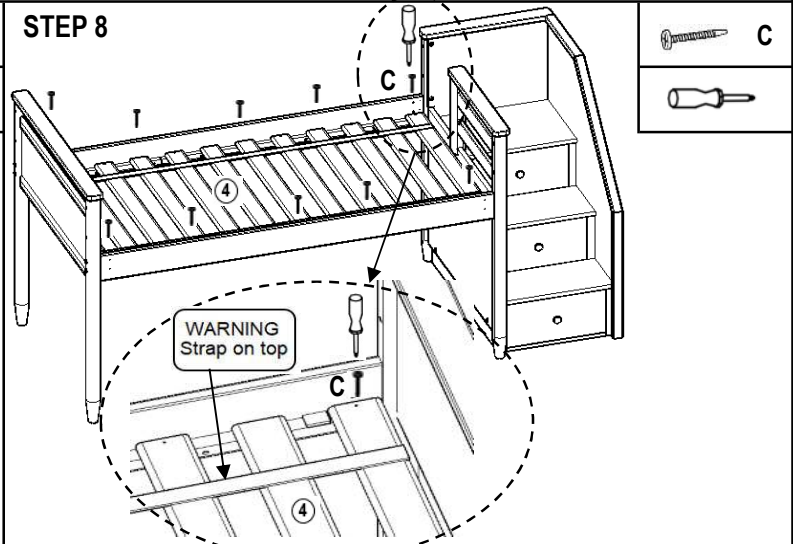

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS

STEP 9

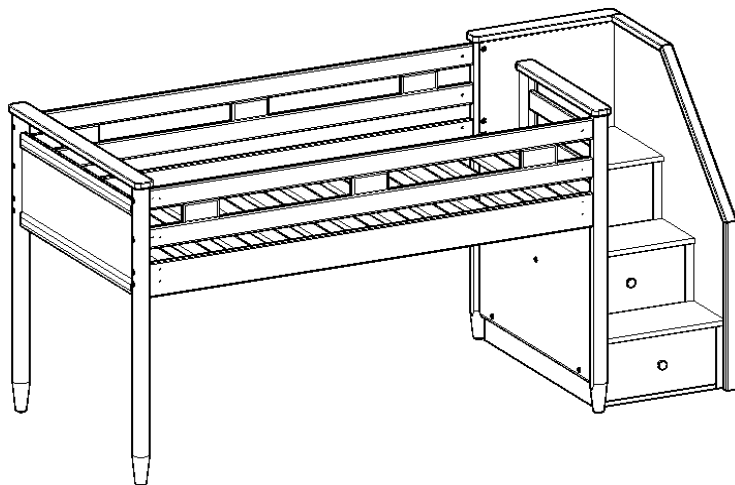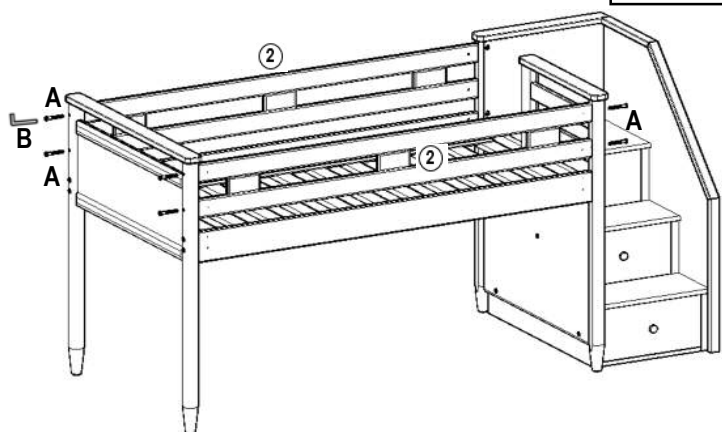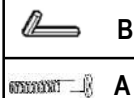

Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide


Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

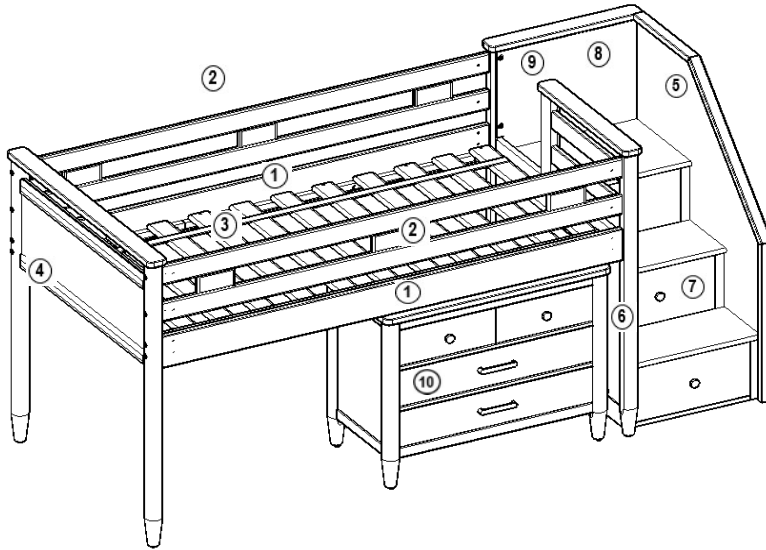

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

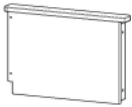PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs			
6		1 Pcs			

3521123P TWIN LOW LOFT W/STEP END & CHEST D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
35911230	12D-164	TWIN LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811238	12D-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST

3521124P TWIN LOW LOFT W/STEP END & CHEST E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
35911242	12E-164	TWIN LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811240	12E-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST

3521125P TWIN LOW LOFT W/STEP END & CHEST G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
35911254	12G-164	TWIN LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811252	12G-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST

3521126P TWIN LOW LOFT W/STEP END & CHEST W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
35911266	12W-164	TWIN LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811264	12W-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST


3521127P TWIN LOW LOFT W/STEP END & CHEST A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
35911278	12A-164	TWIN LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811276	12A-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED	
Phillips screwdriver (not included)	
4 mm allen wrench (included)	
5 mm allen wrench (included)	

HARDWARE LIST


12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS

- A**  5/16-18x80 mm bolt 16x
- B**  5 mm allen wrench 1x
- J**  4 mm allen wrench 1x

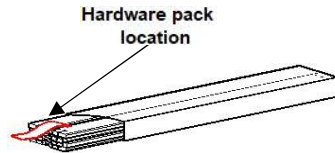


12-403 LOW LOFT STEP UNIT


- G**  Gold knobs 3x
- D**  5/16-18x40mm bolt 14x

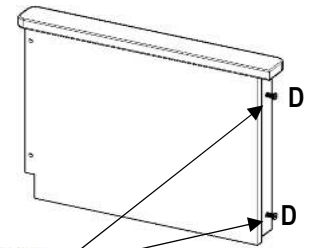

Hardware location Installed

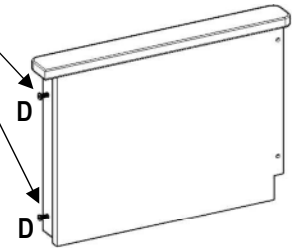

Hardware pack location

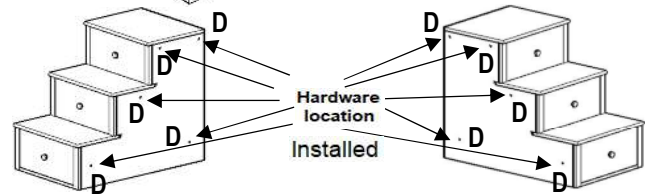


100-170 12 PC TWIN SLAT ROLL

- C**  6 x 1 1/4" Screw 10x



12-164 TWIN LOW LOFT SIDE PANELS


- E**  1/4-20X30mm bolt 2x

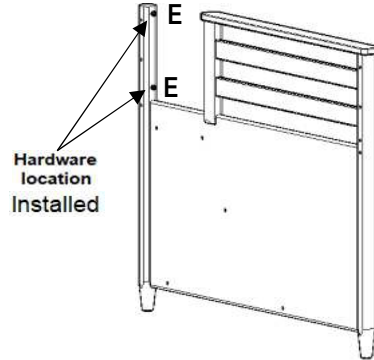

12-403 CHEST

- F**  Gold pulls 2x
- G**  Gold knobs 2x

Hardware pack location

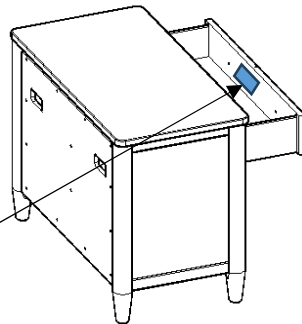


ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

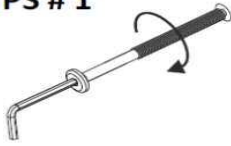

TIPS # 2

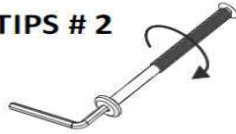


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

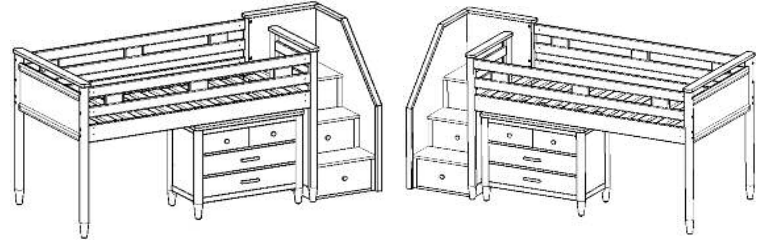


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

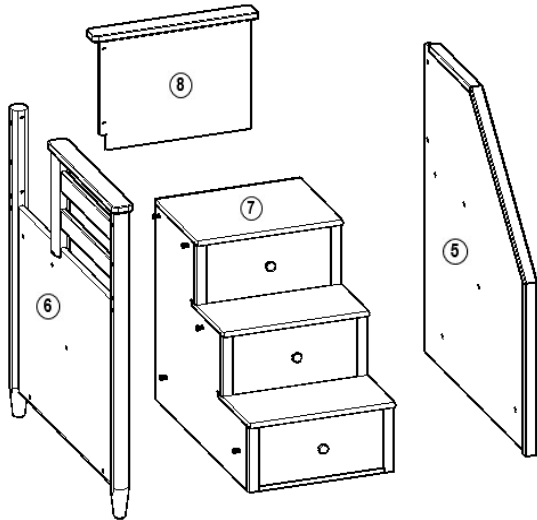


Assembly configuration for stairs on the right side.

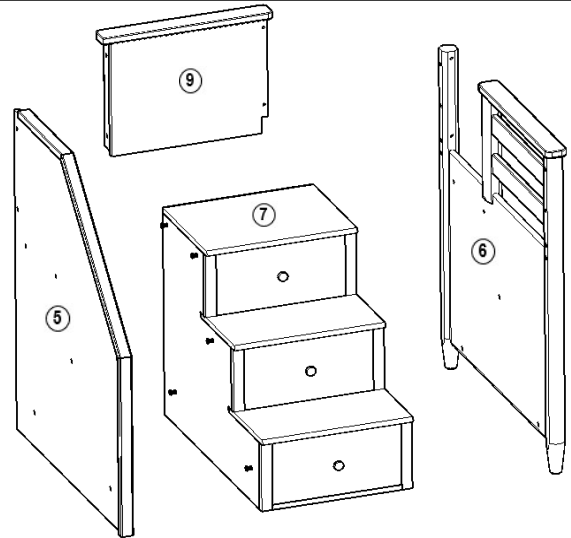


Assembly configuration for stairs on the left side.

STEP 2

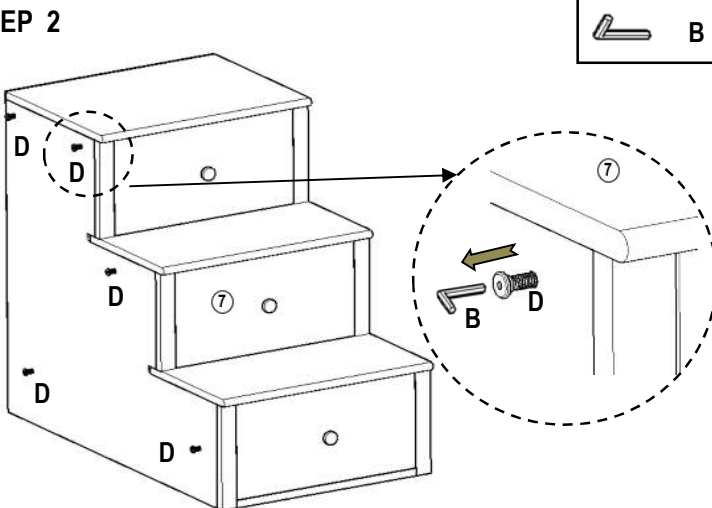

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

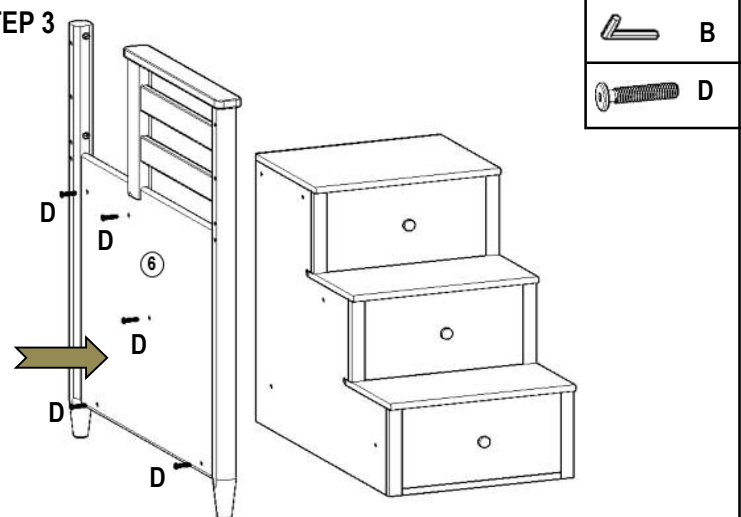

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

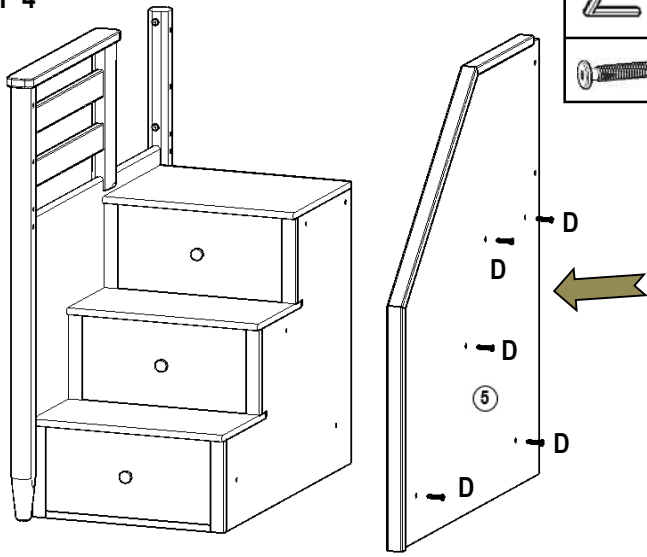


Repeat process for angle side panel.

STEP 5

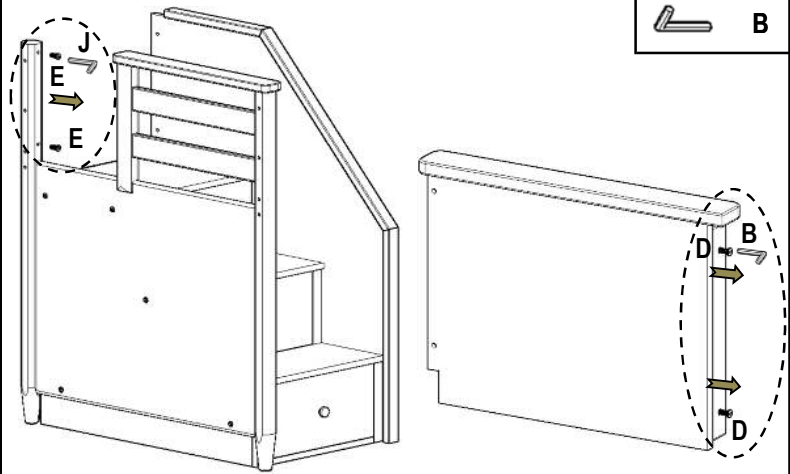


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

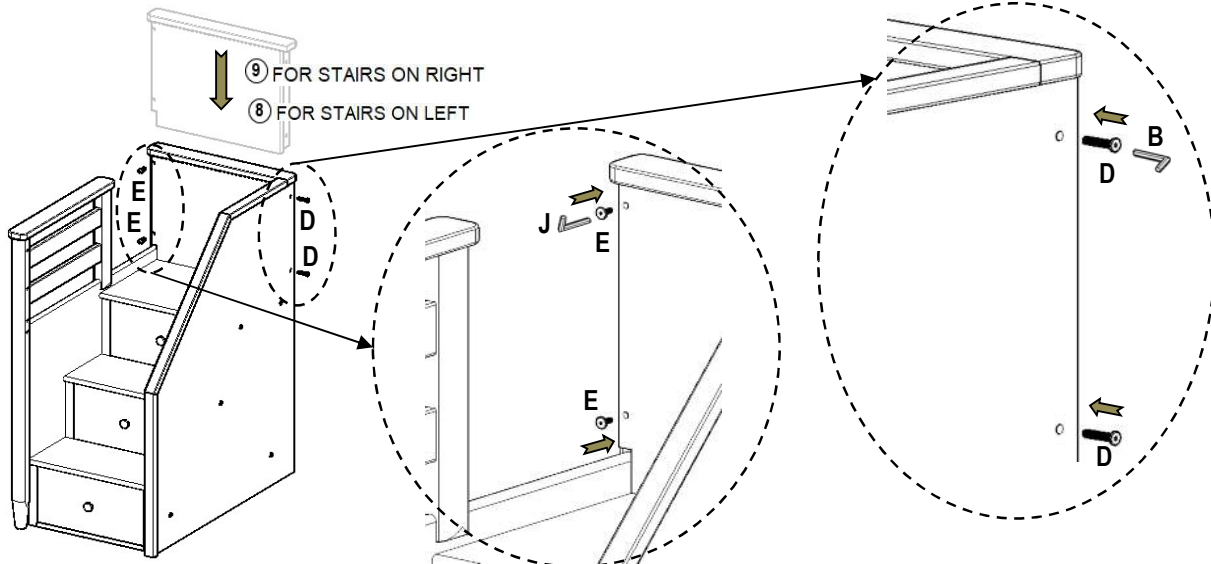


Assemble step back panel

STEP 7

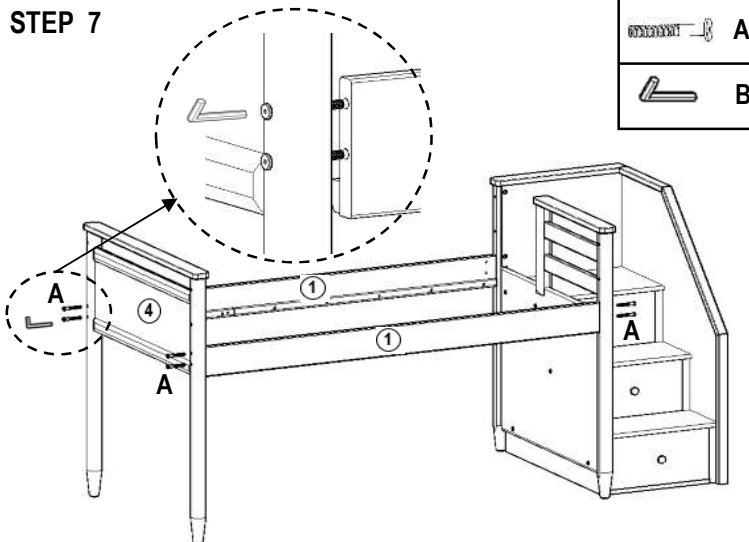

Assemble side rails.



STEP 8

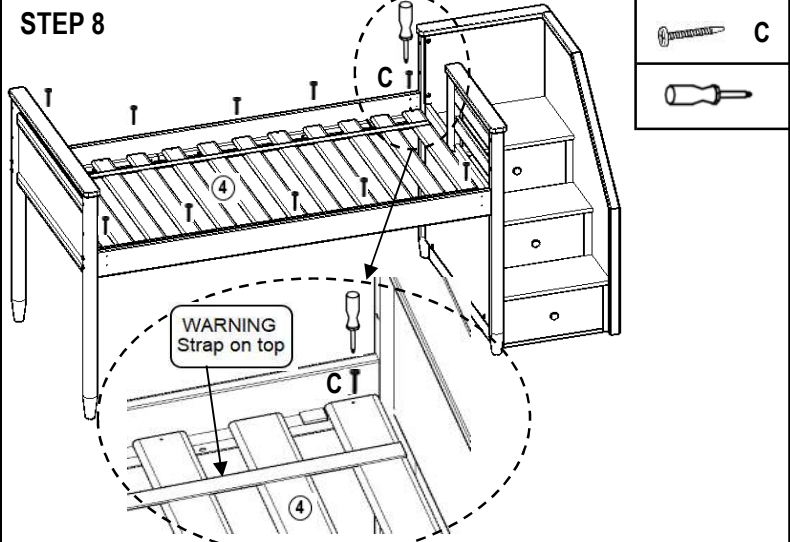

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

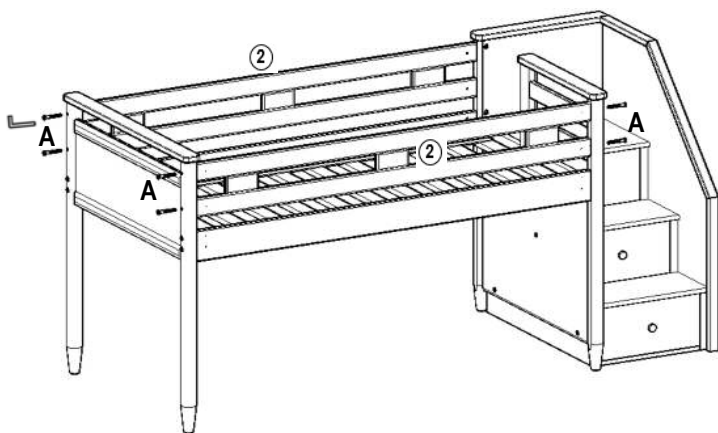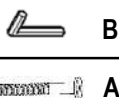

Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

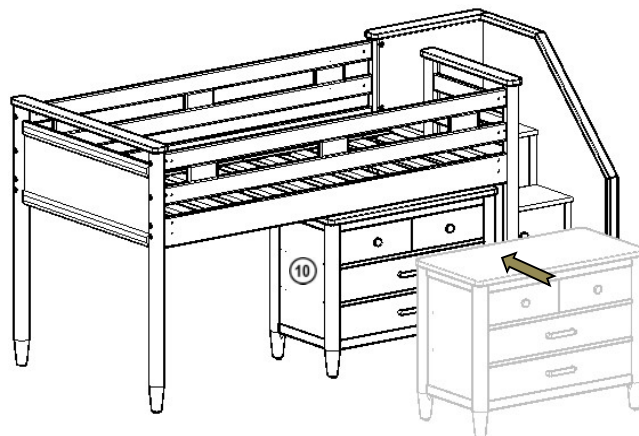

Slide 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide


Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

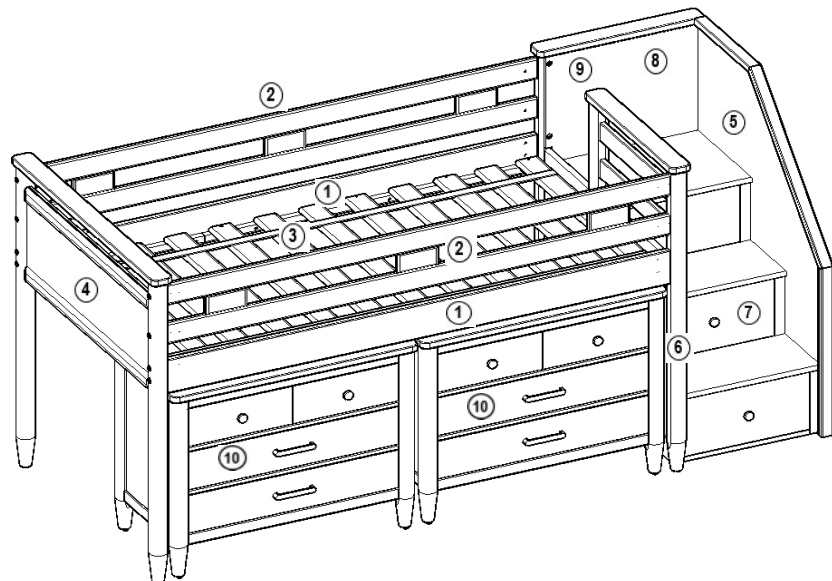

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

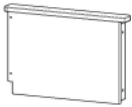PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		2 Pcs
5		1 Pcs			
6		1 Pcs			

3541123P TWIN LOW LOFT W/STEP END & 2 CHEST D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
35911230	12D-164	TWIN LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811238	12D-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36611235	12D-403	3 DRW CHEST

3541124P TWIN LOW LOFT W/STEP END & 2 CHEST E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
35911242	12E-164	TWIN LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811240	12E-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36611247	12E-403	3 DRW CHEST

3541125P TWIN LOW LOFT W/STEP END & 2 CHEST G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
35911254	12G-164	TWIN LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811252	12G-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36611259	12G-403	3 DRW CHEST

3541126P TWIN LOW LOFT W/STEP END & 2 CHEST W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
35911266	12W-164	TWIN LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811264	12W-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36611261	12W-403	3 DRW CHEST

3541127P TWIN LOW LOFT W/STEP END & 2 CHEST A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
35911278	12A-164	TWIN LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811276	12A-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT



Gold knobs 3x



5/16-18x40mm bolt 14x

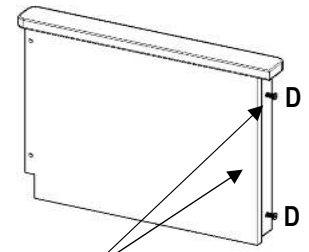

Hardware
location
Installed

100-170 12 PC TWIN SLAT ROLL



6 x 1 1/4" Screw 10x


Hardware pack
location



12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x

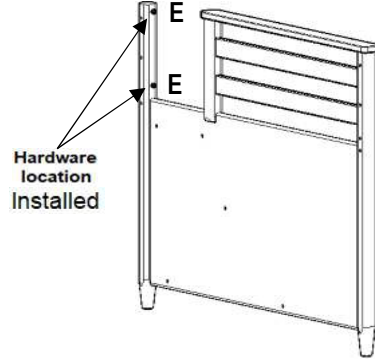

Hardware
location
Installed

Hardware pack
location

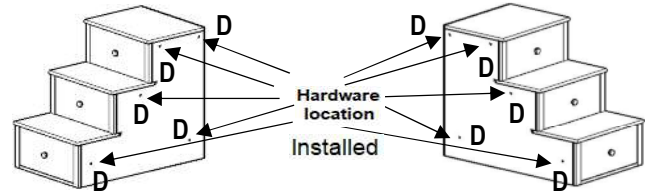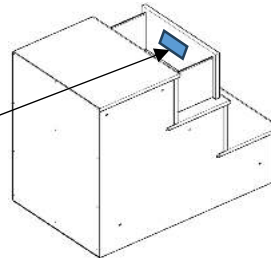


12-403 CHEST



Gold pulls 2x



Gold knobs 2x

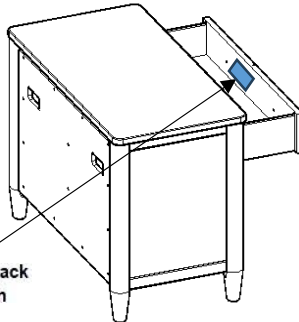


Hardware pack
location

ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

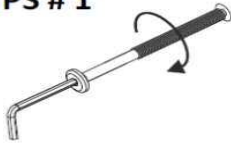

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

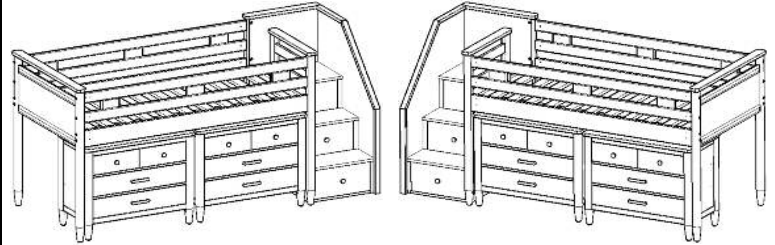


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

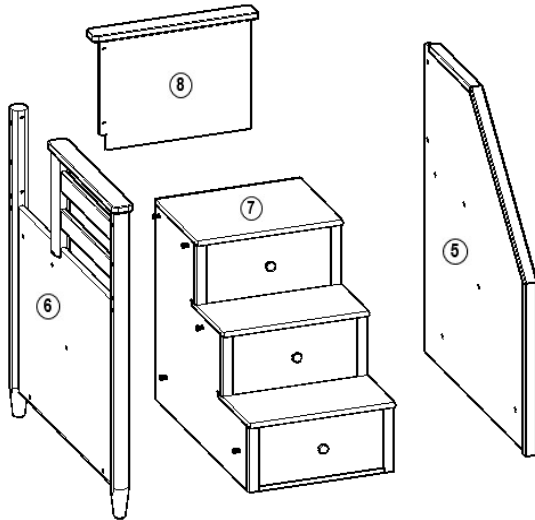


Assembly configuration for stairs on the right side.

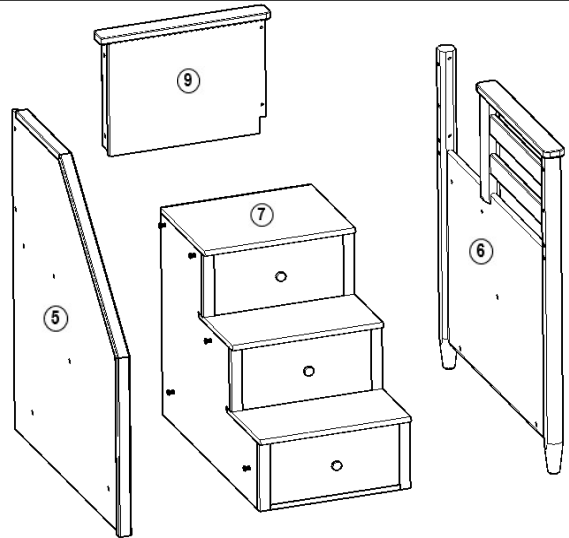


Assembly configuration for stairs on the left side.

STEP 2

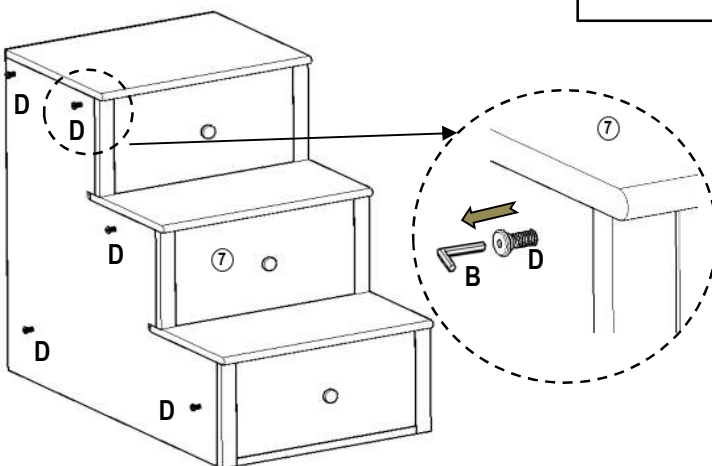

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.



STEP 3

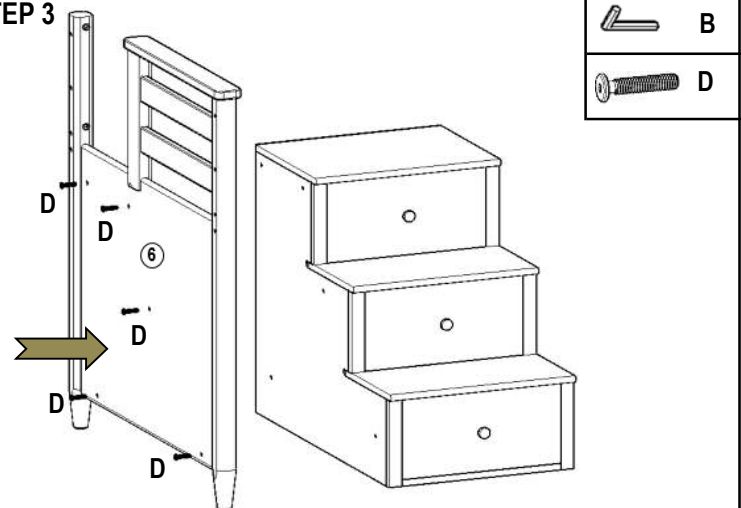

align holes then fasten with previously removed bolts.



ASSEMBLY INSTRUCTIONS

STEP 4

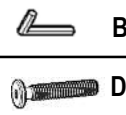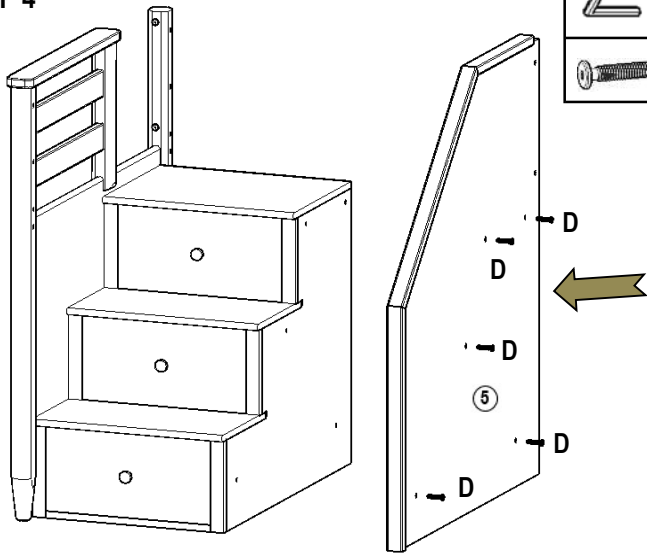



Repeat process for angle side panel.

STEP 5

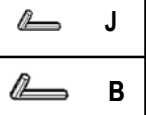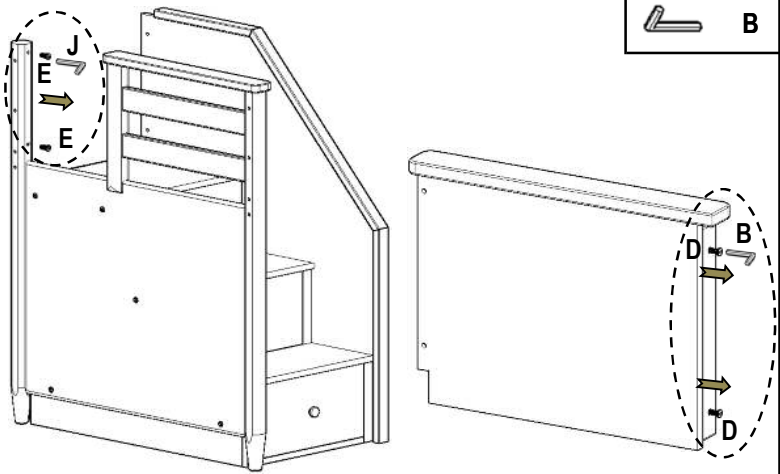



Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

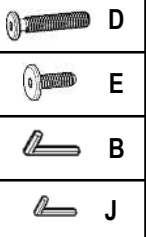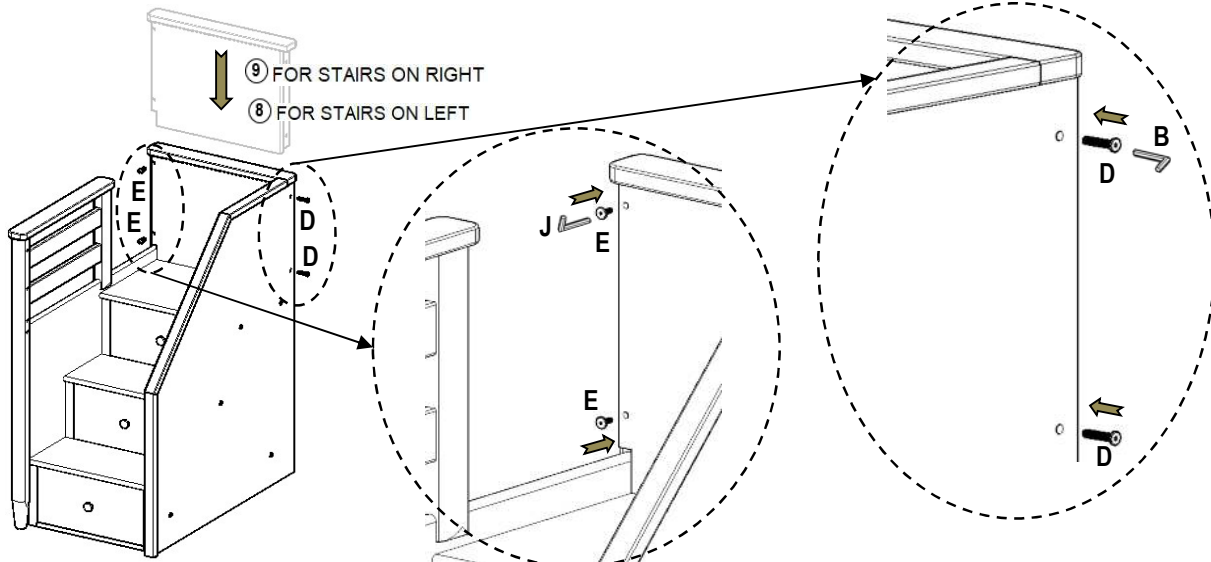



Assemble step back panel

STEP 7

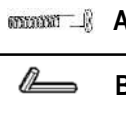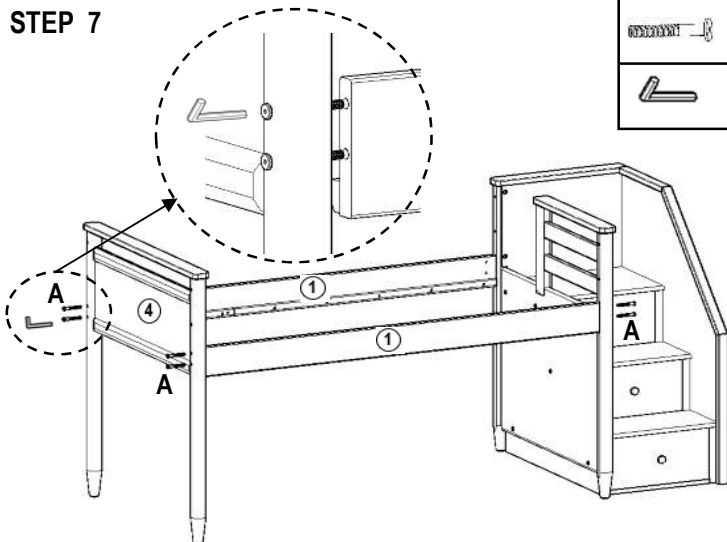

Assemble side rails.


STEP 8

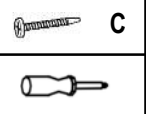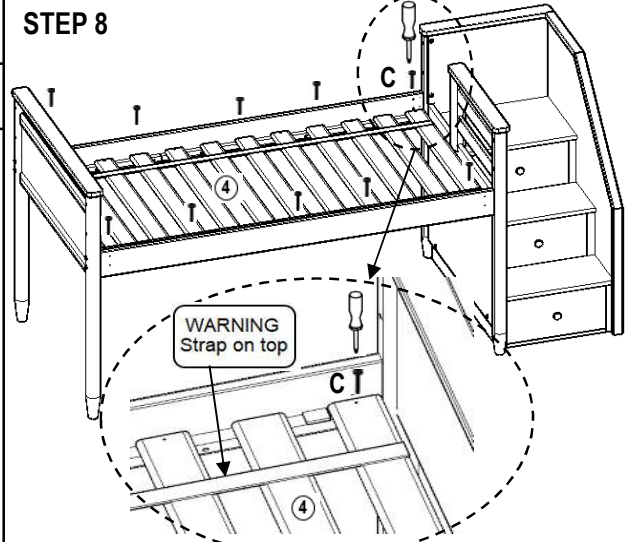

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS

STEP 9

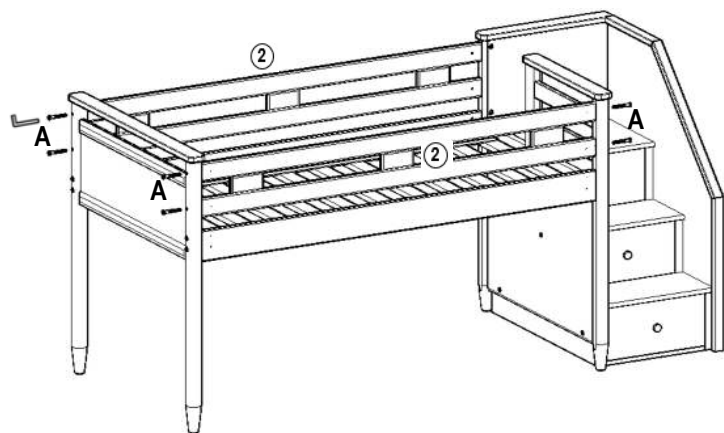


Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY




STEP 10

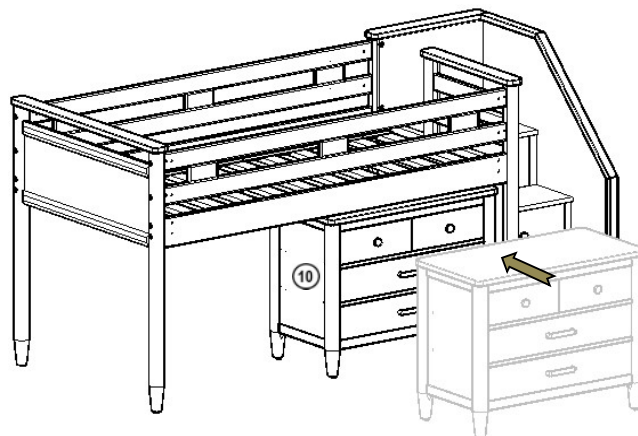

Slide 3 drw chest under loft bed

STEP 11

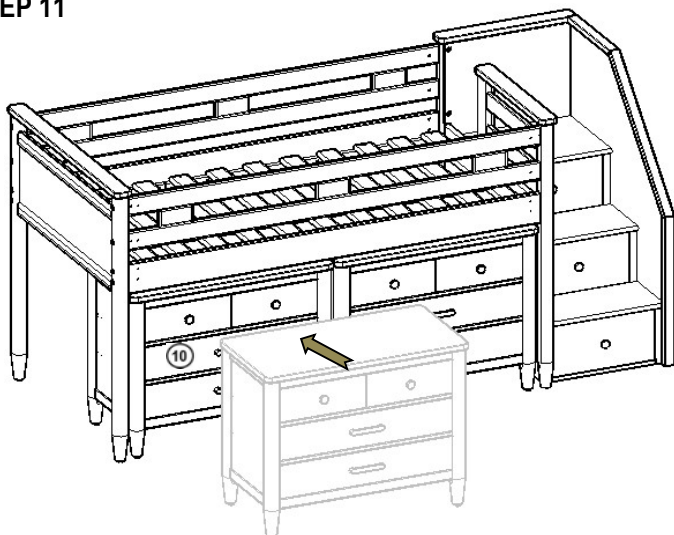

Slide 2nd 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide




Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

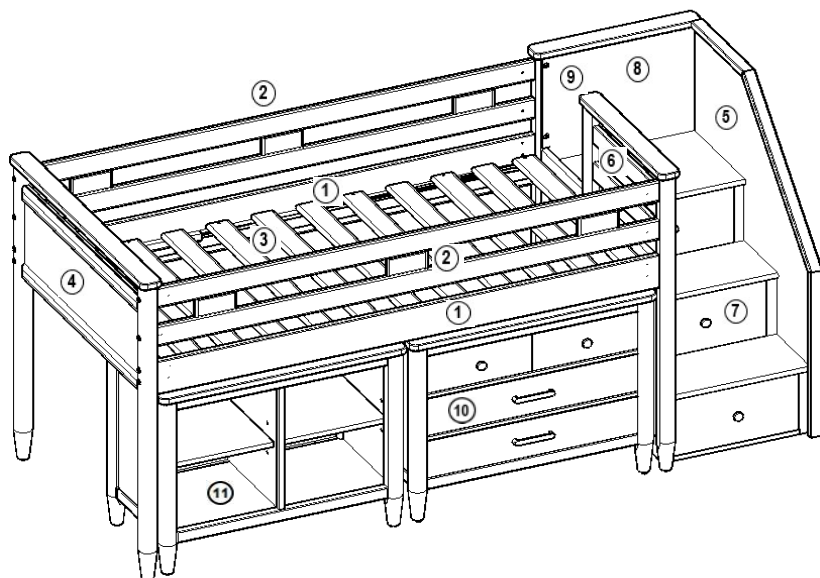

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

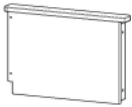PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs	11		1 Pcs
6		1 Pcs			

3531123P TWIN LOW LOFT W/STEP END, CHEST & BOOKCASE D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
35911230	12D-164	TWIN LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811238	12D-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36811239	12D-761	37" BOOKCASE

3531124P TWIN LOW LOFT W/STEP END, CHEST & BOOKCASE E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
35911242	12E-164	TWIN LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811240	12E-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36811241	12E-761	37" BOOKCASE

3531125P TWIN LOW LOFT W/STEP END, CHEST & BOOKCASE G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
35911254	12G-164	TWIN LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811252	12G-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36811253	12G-761	37" BOOKCASE

3531126P TWIN LOW LOFT W/STEP END, CHEST & BOOKCASE W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
35911266	12W-164	TWIN LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811264	12W-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36811265	12W-761	37" BOOKCASE

3531127P TWIN LOW LOFT W/STEP END, CHEST & BOOKCASE A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
35911278	12A-164	TWIN LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811276	12A-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36811277	12A-761	37" BOOKCASE

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT



Gold knobs 3x



5/16-18x40mm bolt 14x

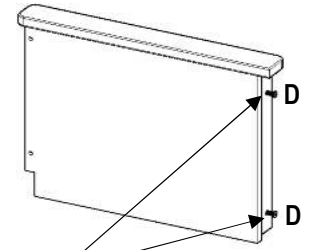

Hardware
location
Installed

100-170 12 PC TWIN SLAT ROLL



6 x 1 1/4" Screw 10x

Hardware pack
location




12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x

Hardware
location
Installed

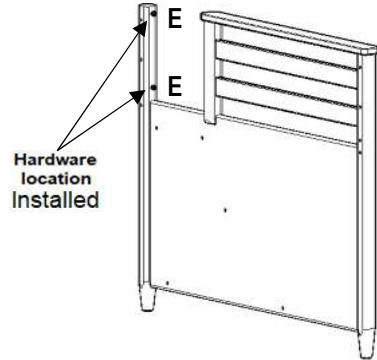

Hardware pack
location

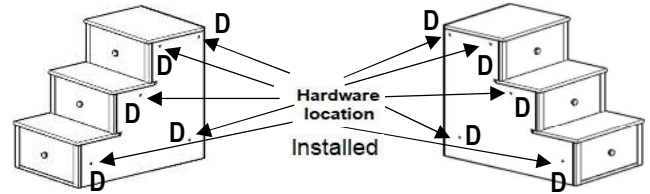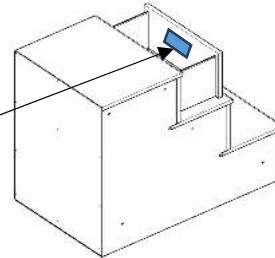

12-403 CHEST




Gold pulls 2x



Gold knobs 2x

Hardware pack
location

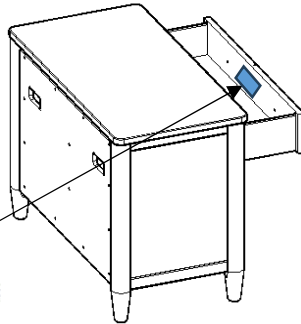


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

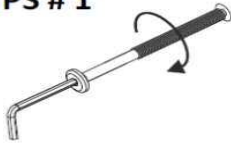

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

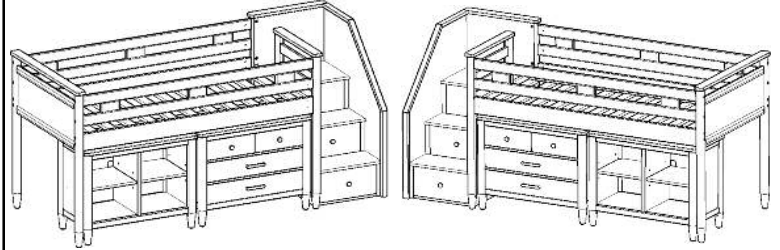


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

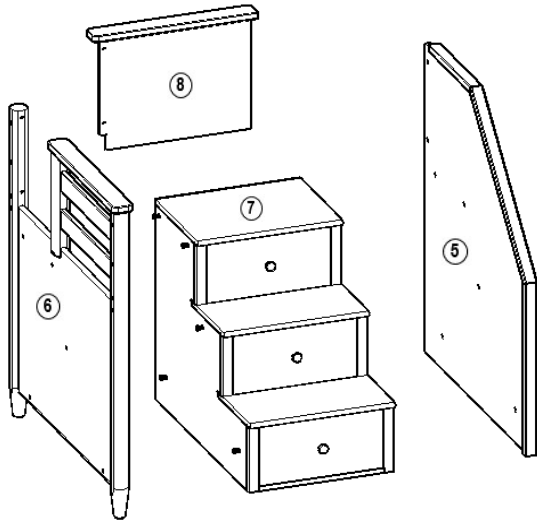


Assembly configuration for stairs on the right side.

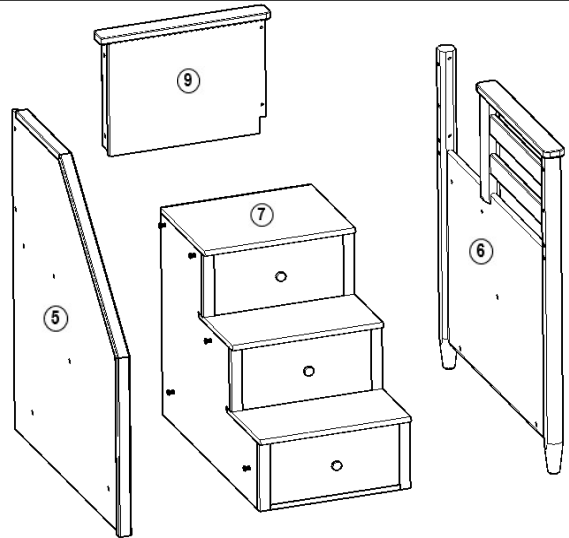


Assembly configuration for stairs on the left side.

STEP 2

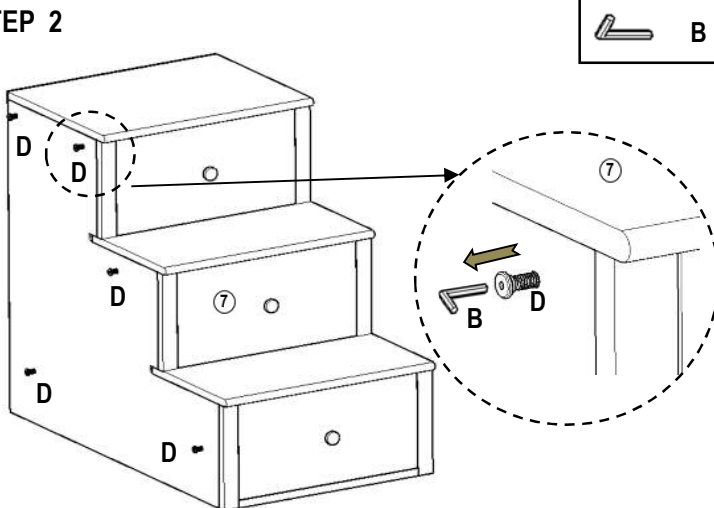

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

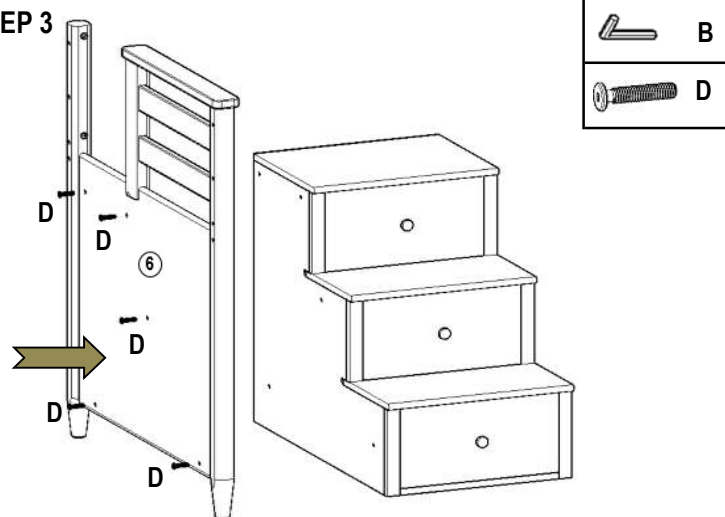

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

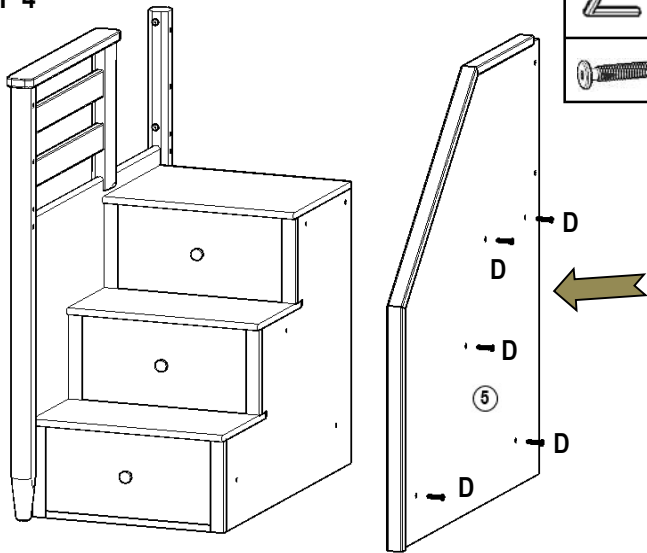


Repeat process for angle side panel.

STEP 5

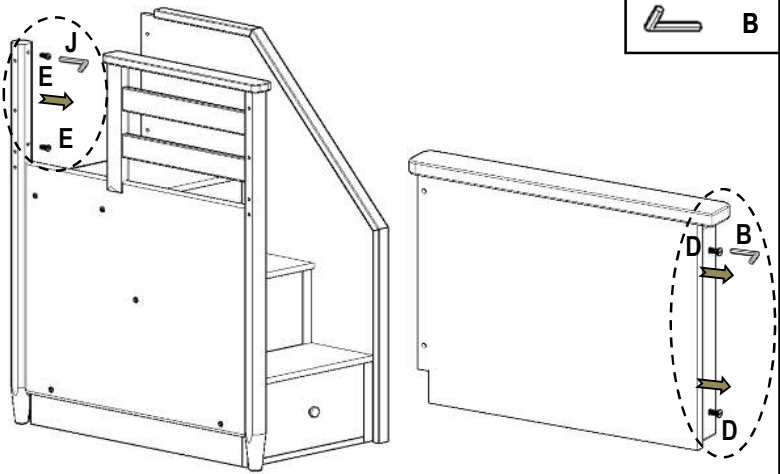


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

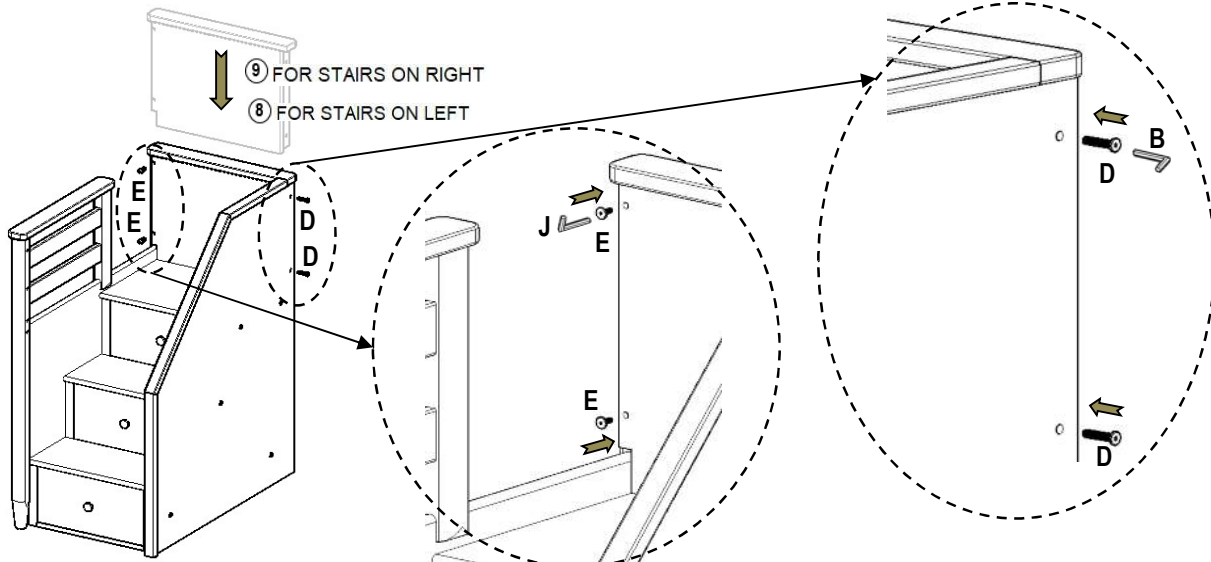


Assemble step back panel

STEP 7

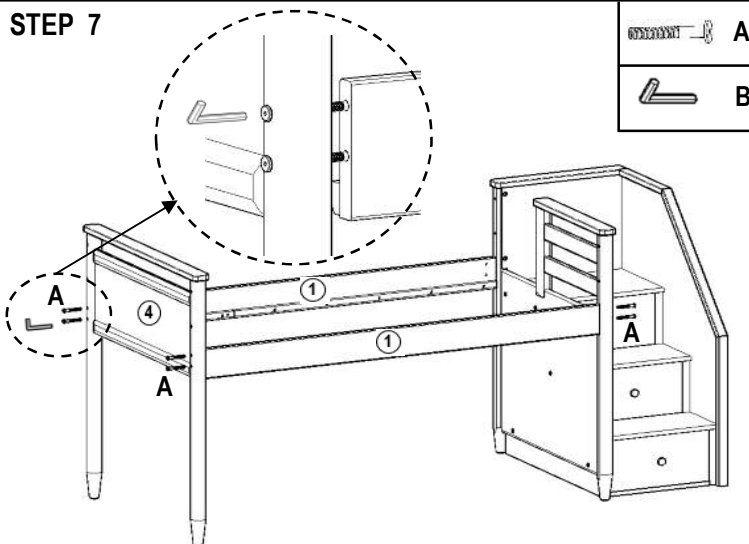

Assemble side rails.



STEP 8

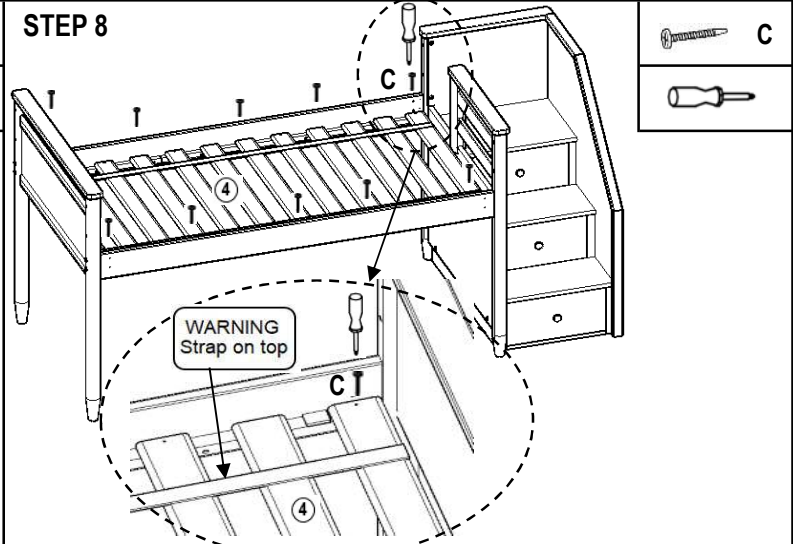

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

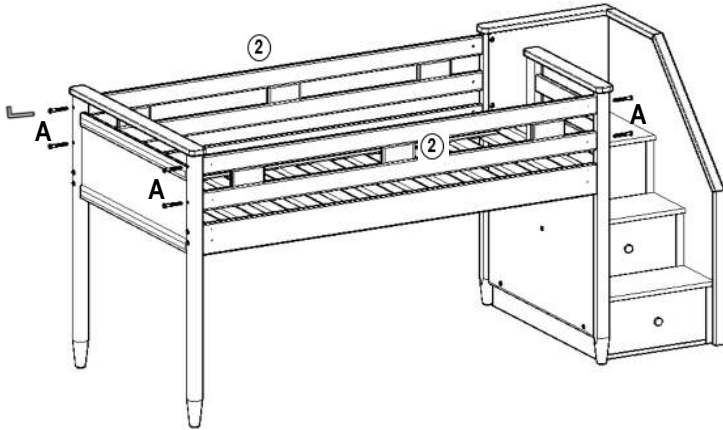

Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

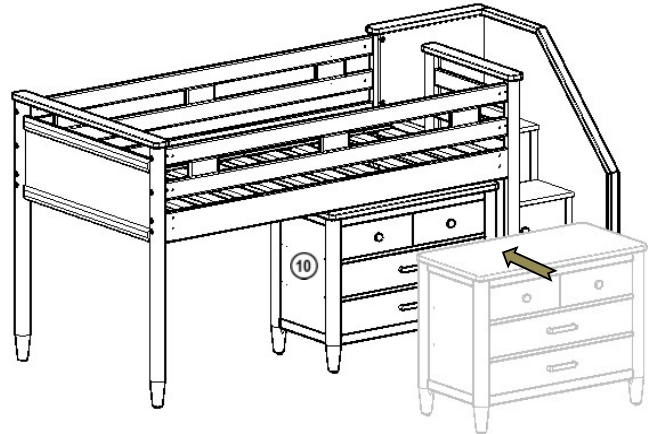

Slide 3 drw chest under loft bed

STEP 11

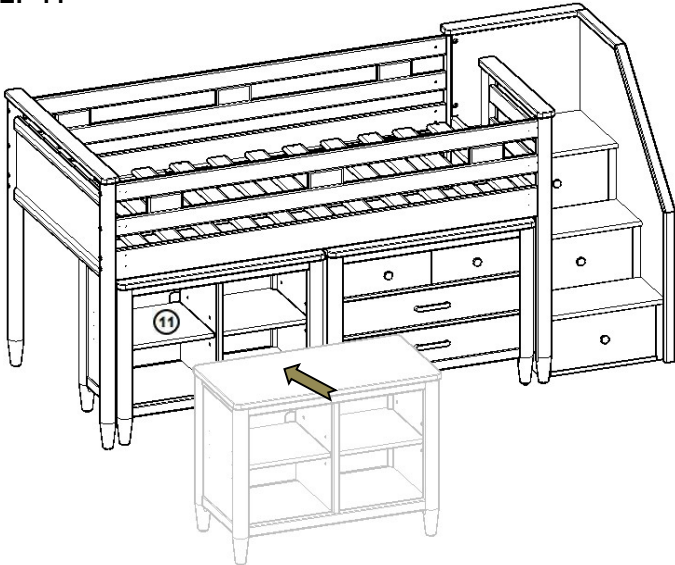

Slide bookcase under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

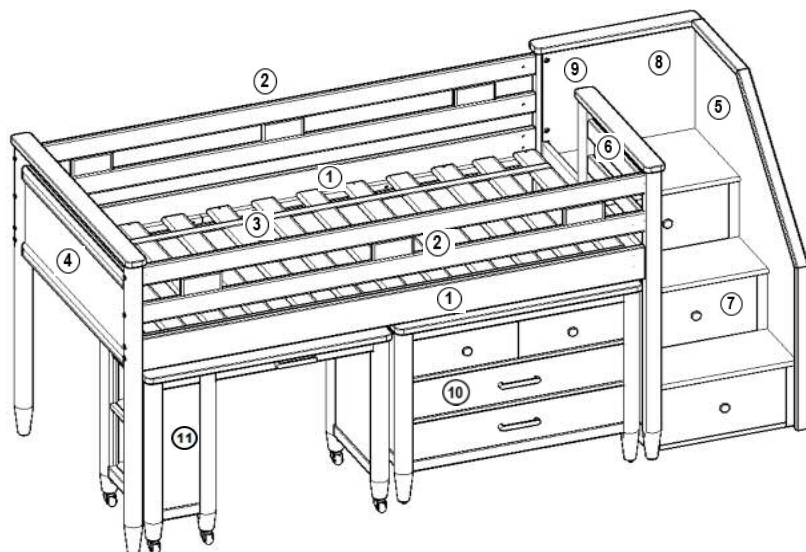

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

3551123P TWIN LOW LOFT W/STEP END, CHEST & DESK D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
35911230	12D-164	TWIN LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811238	12D-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36711237	12D-602	CASTER DESK

3551124P TWIN LOW LOFT W/STEP END, CHEST & DESK E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
35911242	12E-164	TWIN LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811240	12E-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36711249	12E-602	CASTER DESK

3551125P TWIN LOW LOFT W/STEP END, CHEST & DESK G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
35911254	12G-164	TWIN LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811252	12G-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36711251	12G-602	CASTER DESK

3551126P TWIN LOW LOFT W/STEP END, CHEST & DESK W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
35911266	12W-164	TWIN LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811264	12W-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36711263	12W-602	CASTER DESK

3551127P TWIN LOW LOFT W/STEP END, CHEST & DESK A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
35911278	12A-164	TWIN LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811276	12A-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36711275	12A-602	CASTER DESK

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs	11		1 Pcs
6		1 Pcs			

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT





Gold knobs 3x



5/16-18x40mm bolt 14x

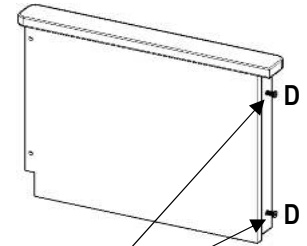

Hardware location
Installed

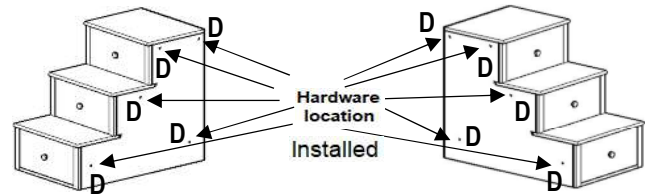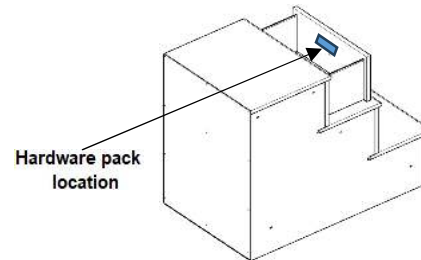

100-170 12 PC TWIN SLAT ROLL



6 x 1 1/4" Screw 10x


Hardware pack
location



12-164 TWIN LOW LOFT SIDE PANELS



1/4-20X30mm bolt 2x

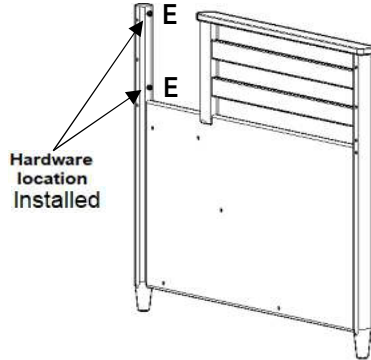

Hardware location
Installed

12-403 CHES




Gold pulls 2x



Gold knobs 2x

Hardware pack
location

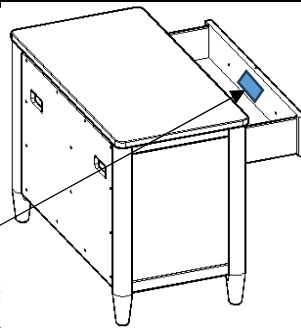

12-602 CASTER DESK



Caster 6x




Caster socket 6x



Gold pulls 2x

Hardware pack
location

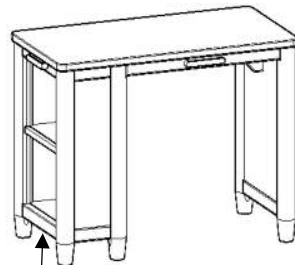


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

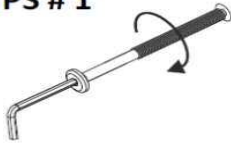

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

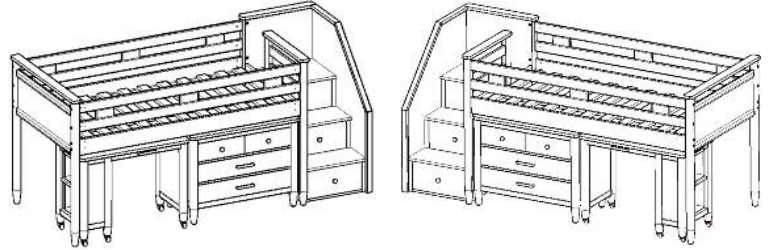


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

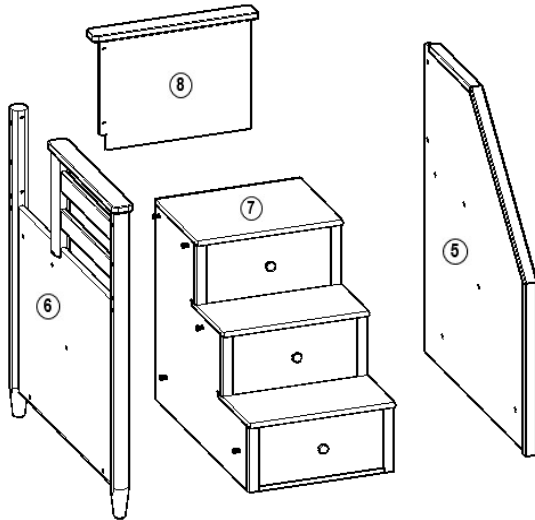


Assembly configuration for stairs on the right side.

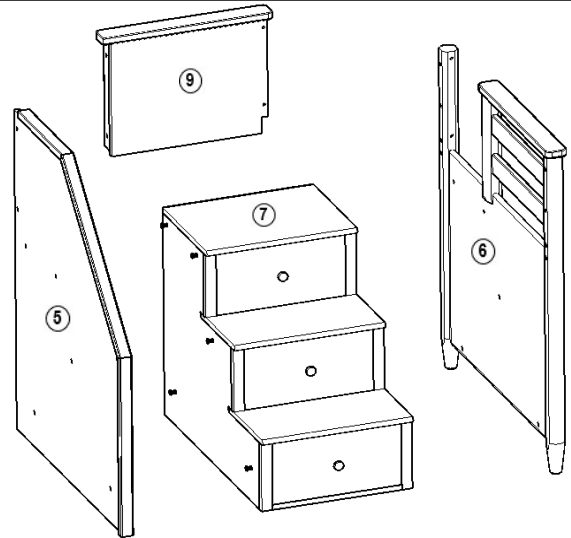


Assembly configuration for stairs on the left side.

STEP 2

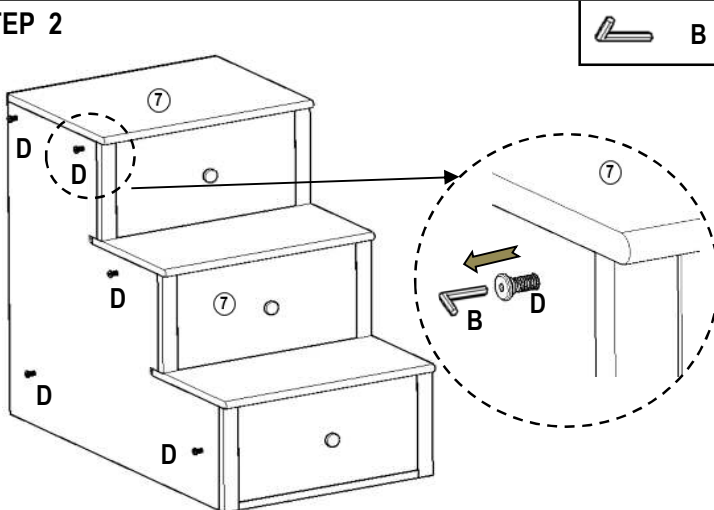

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

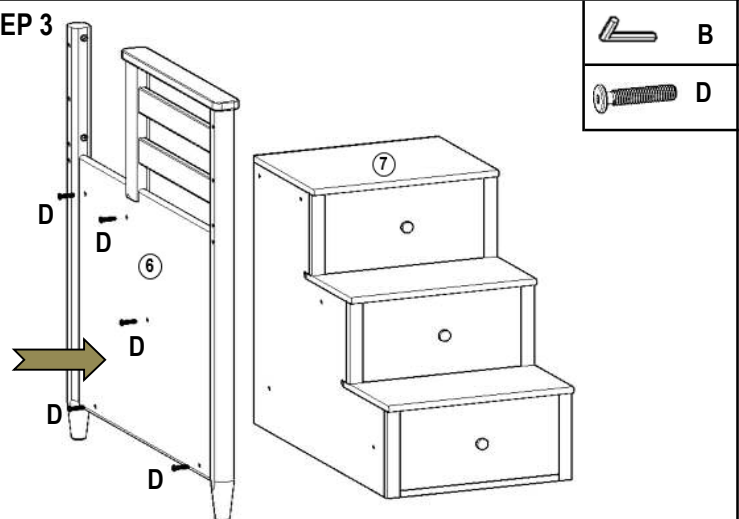

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

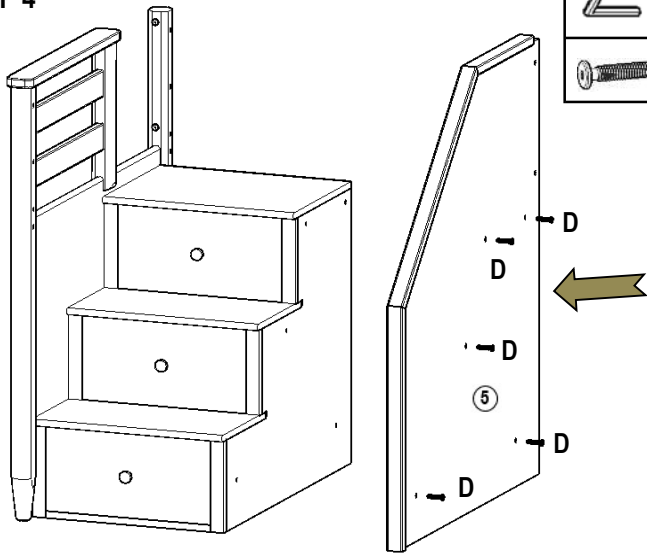


Repeat process for angle side panel.

STEP 5

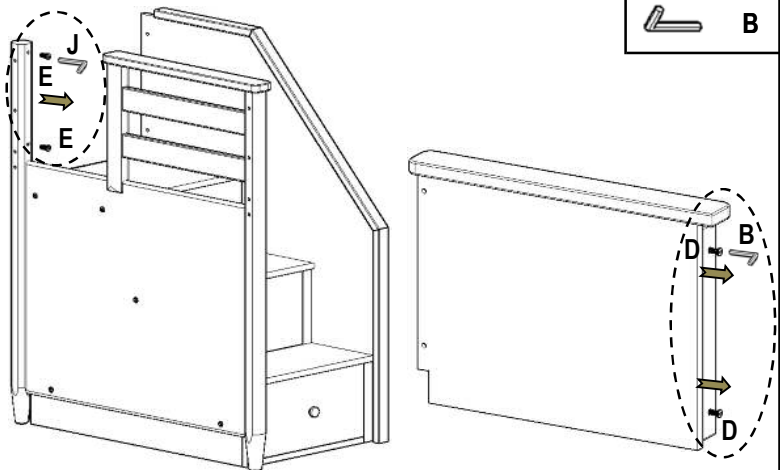


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

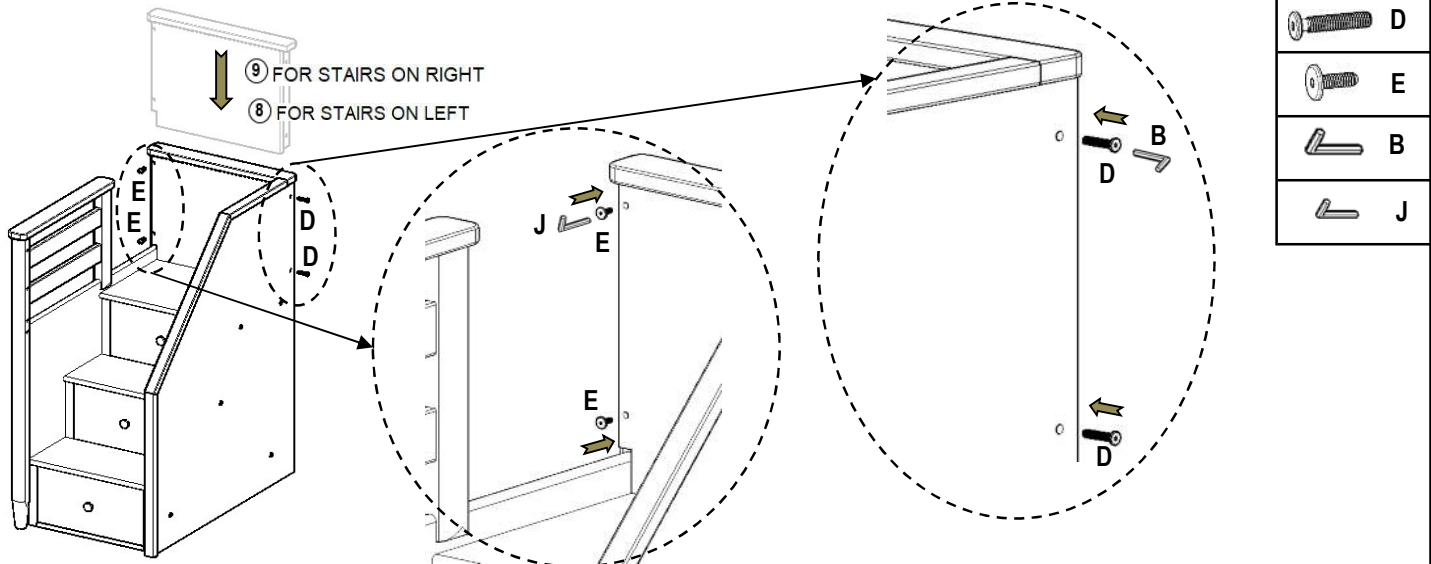


Assemble step back panel

STEP 7

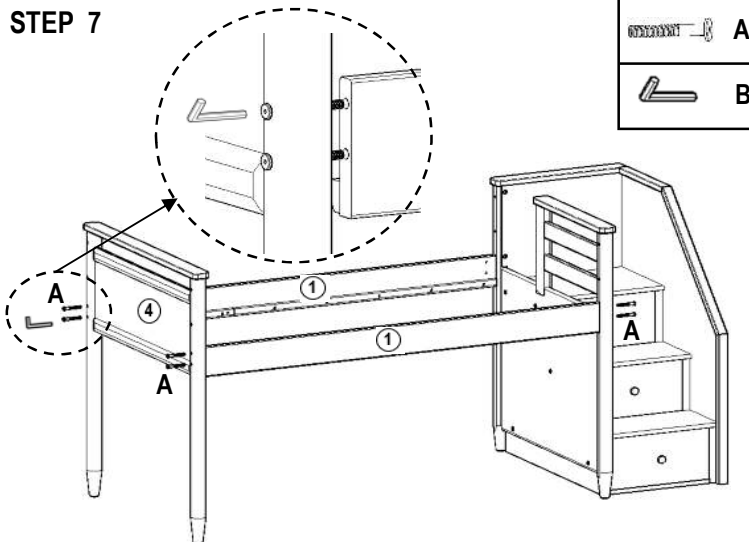

Assemble side rails.


STEP 8

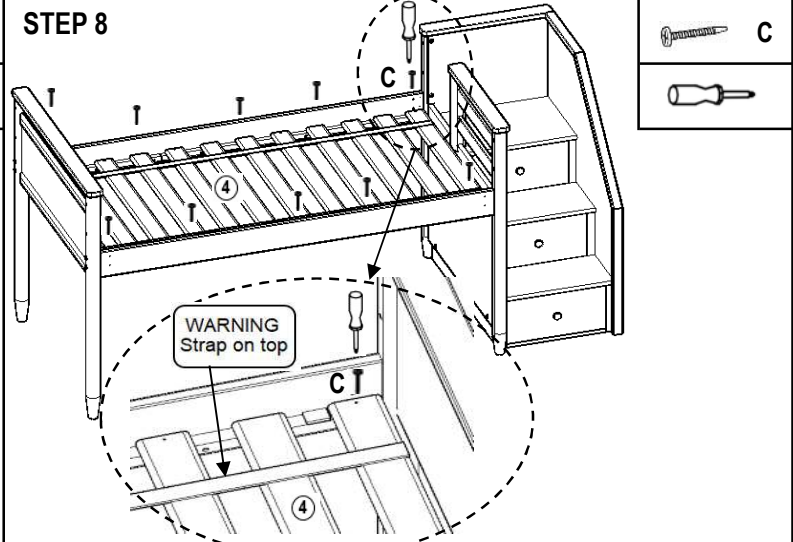

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.


ASSEMBLY INSTRUCTIONS

STEP 9

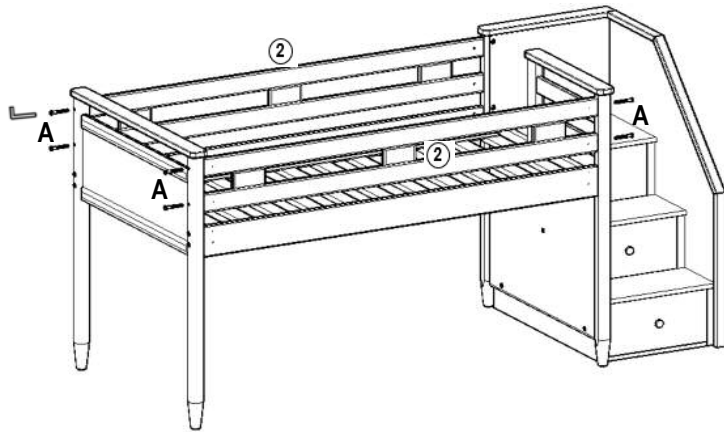


Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY




STEP 10

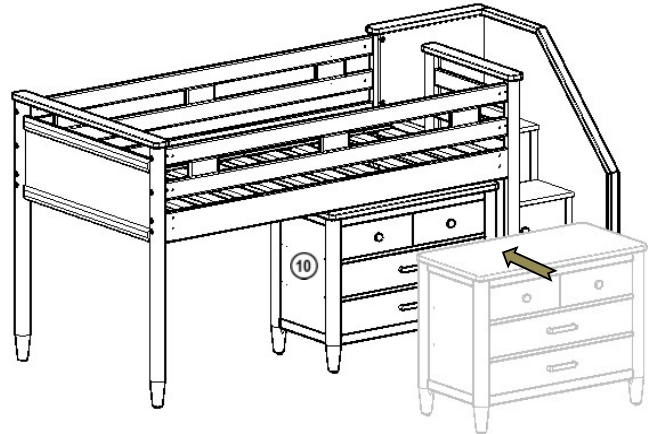

Slide 3 drw chest under loft bed


STEP 11

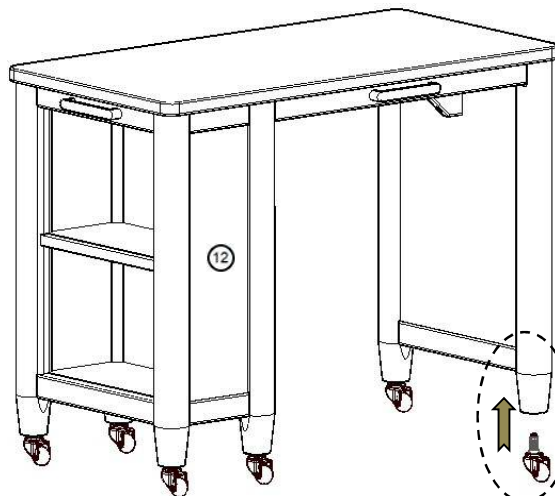

Install casters in all desk posts



STEP 12

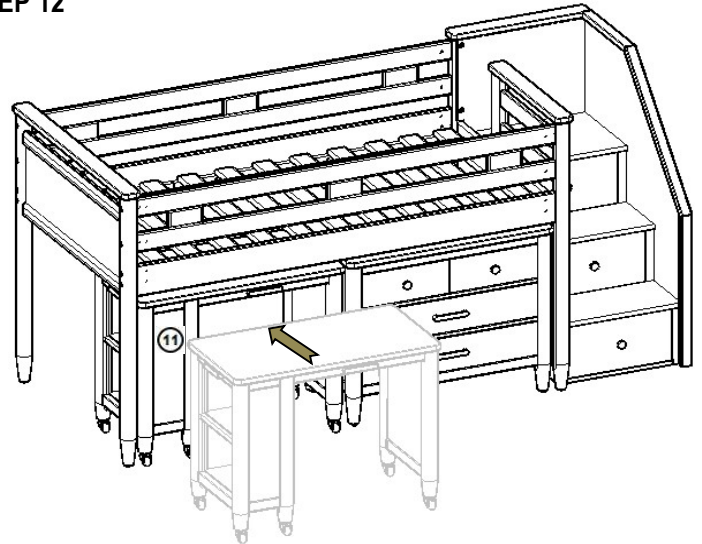

Slide caster desk under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

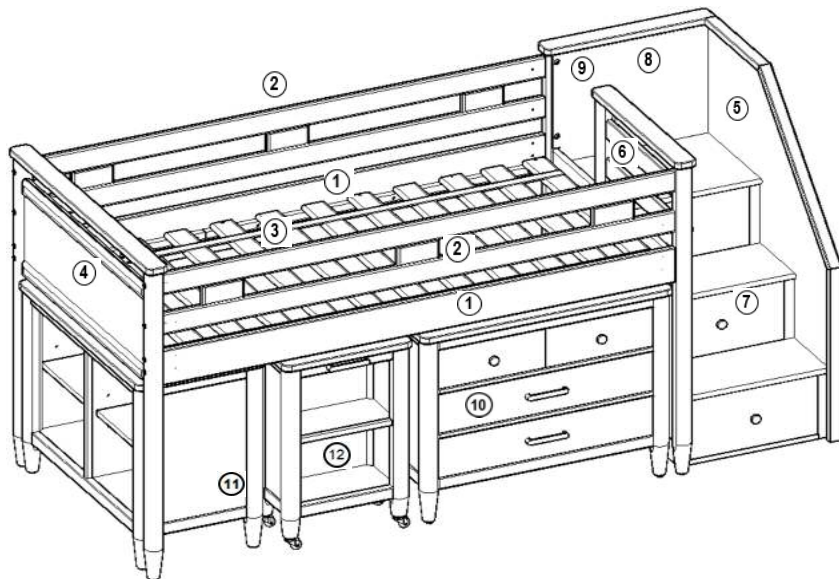

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**



3561123P TWIN LOW LOFT W/STEP END,CHEST,BOOKCASE&DESK D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
35911230	12D-164	TWIN LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811238	12D-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611235	12D-403	3 DRW CHEST
36811239	12D-761	37" BOOKCASE
36711237	12D-602	CASTER DESK

3561124P TWIN LOW LOFT W/STEP END,CHEST,BOOKCASE&DESK E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
35911242	12E-164	TWIN LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811240	12E-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611247	12E-403	3 DRW CHEST
36811241	12E-761	37" BOOKCASE
36711249	12E-602	CASTER DESK

3561125P TWIN LOW LOFT W/STEP END,CHEST,BOOKCASE&DESK G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
35911254	12G-164	TWIN LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811252	12G-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611259	12G-403	3 DRW CHEST
36811253	12G-761	37" BOOKCASE
36711251	12G-602	CASTER DESK

3561126P TWIN LOW LOFT W/STEP END,CHEST,BOOKCASE&DESK W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
35911266	12W-164	TWIN LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811264	12W-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611261	12W-403	3 DRW CHEST
36811265	12W-761	37" BOOKCASE
36711263	12W-602	CASTER DESK

3561127P TWIN LOW LOFT W/STEP END,CHEST,BOOKCASE&DESK A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
35911278	12A-164	TWIN LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
35811276	12A-702	TWIN LOW LOFT BUNK END
36811289	100-170	12 PC TWIN SLAT ROLL
36611273	12A-403	3 DRW CHEST
36811277	12A-761	37" BOOKCASE
36711275	12A-602	CASTER DESK

PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs	11		1 Pcs
6		1 Pcs	12		1 Pc

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT





Gold knobs 3x



5/16-18x40mm bolt 14x

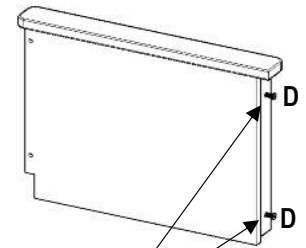

Hardware
location
Installed

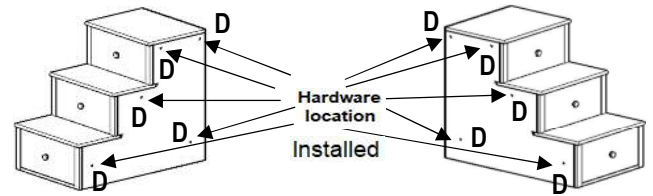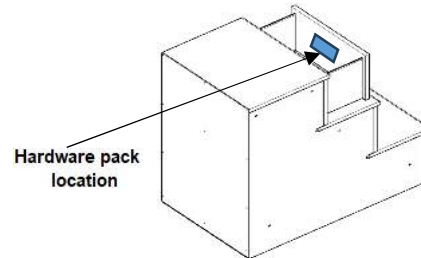

100-170 12 PC TWIN SLAT ROLL



6 x 1 1/4" Screw 10x

Hardware pack
location




12-164 TWIN LOW LOFT SIDE PANELS



1/4-20X30mm bolt 2x

Hardware
location
Installed

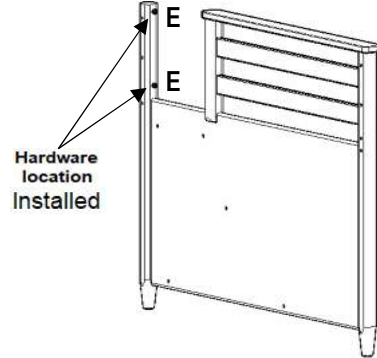

12-403 CHES




Gold pulls 2x



Gold knobs 2x

Hardware pack
location

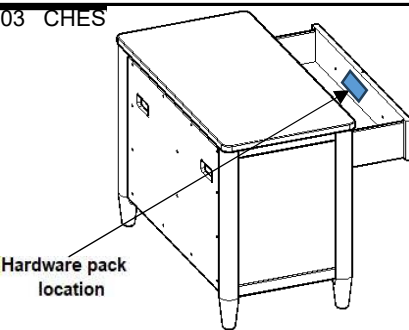

12-602 CASTER DESK



Caster 6x




Caster socket 6x



Gold pulls 2x

Hardware pack
location

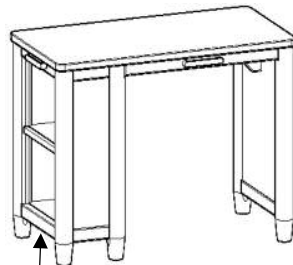


ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

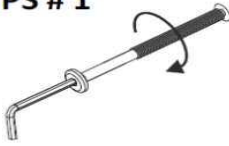

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

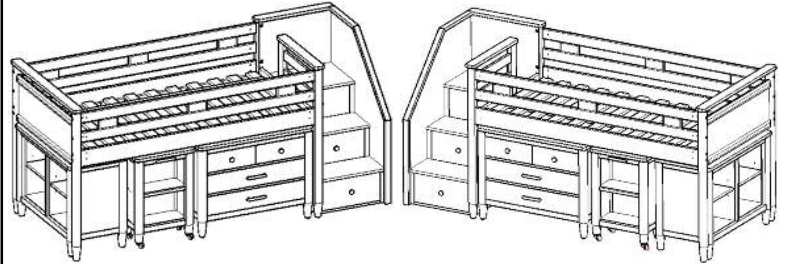


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

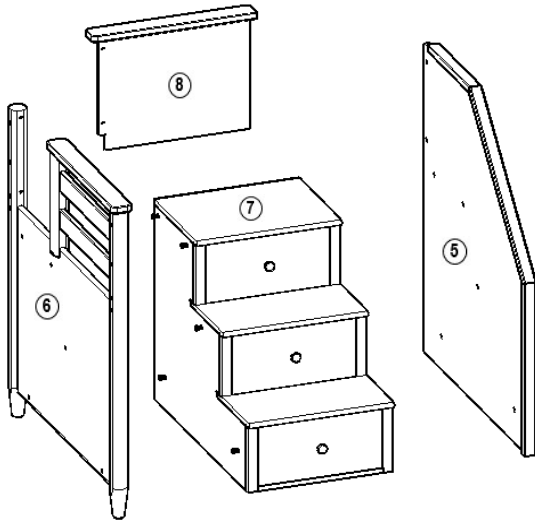


Assembly configuration for stairs on the right side.

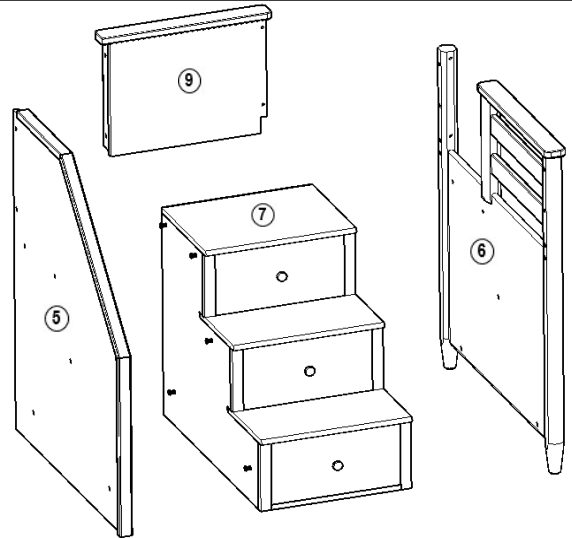


Assembly configuration for stairs on the left side.

STEP 2

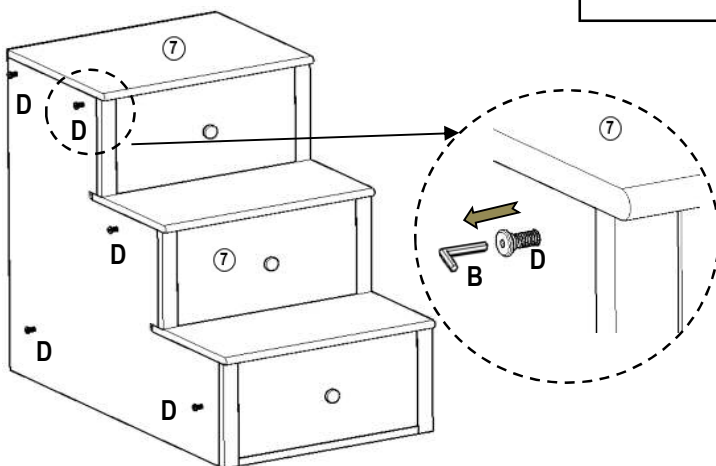

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

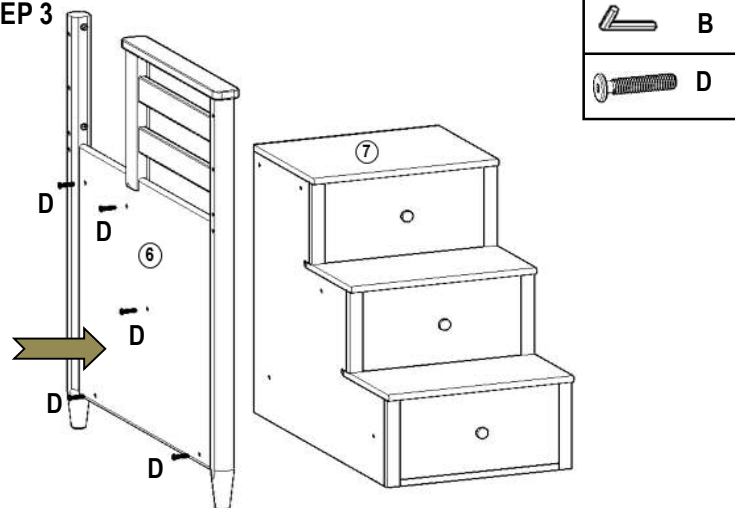

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

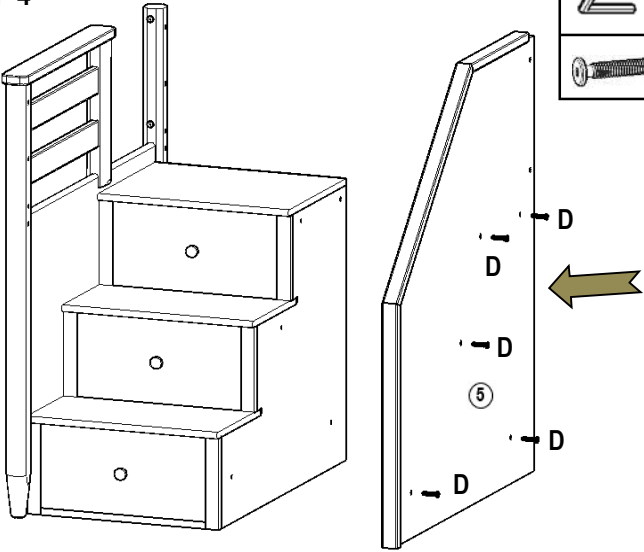


Repeat process for angle side panel.

STEP 5

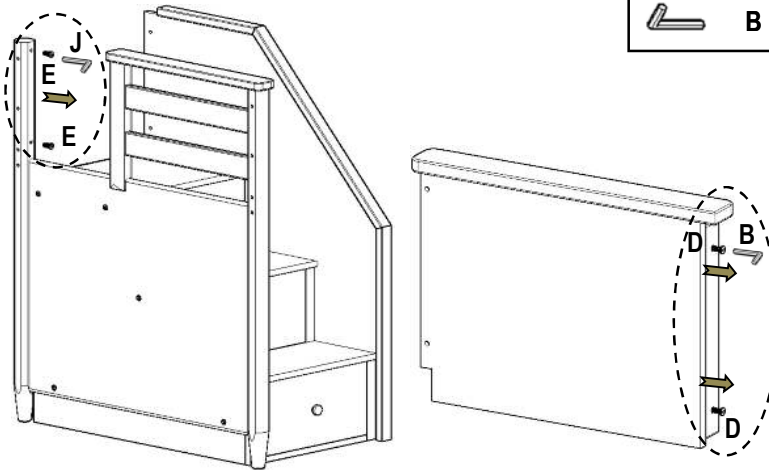


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

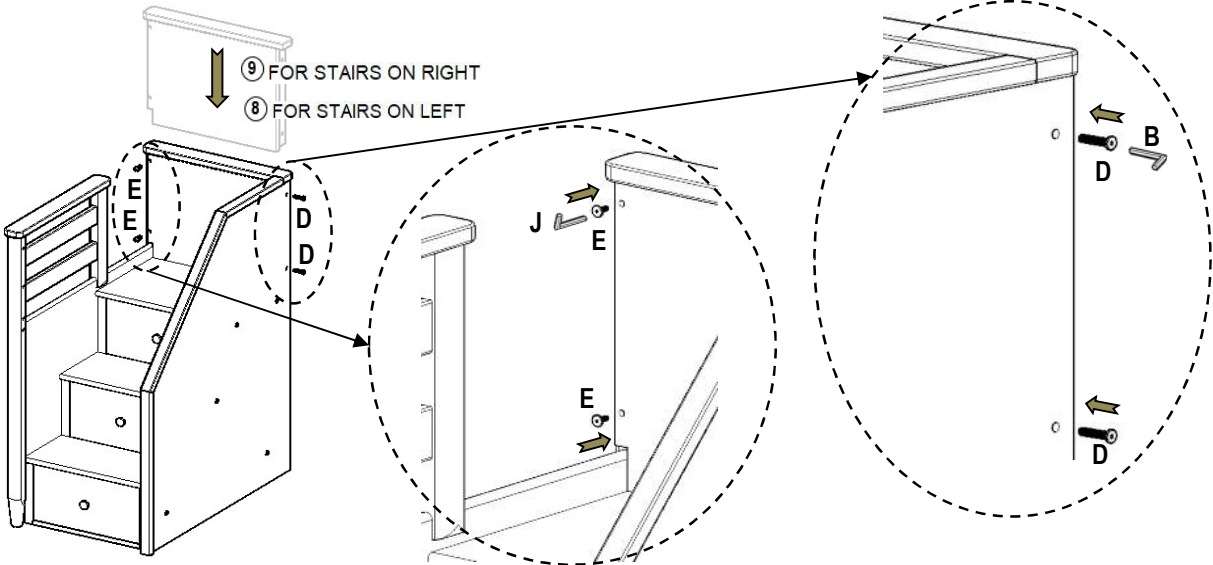


Assemble step back panel

STEP 7

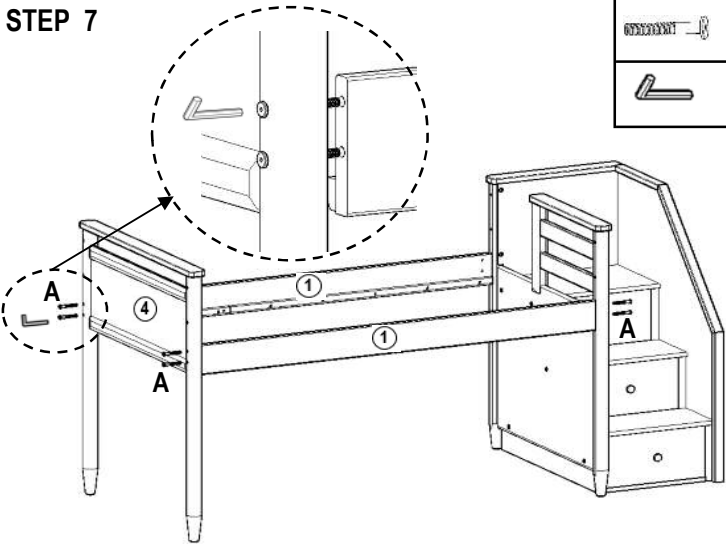

Assemble side rails.



STEP 8

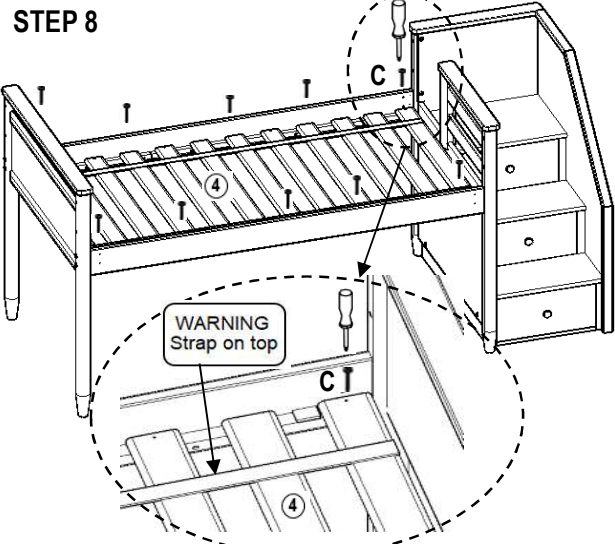

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

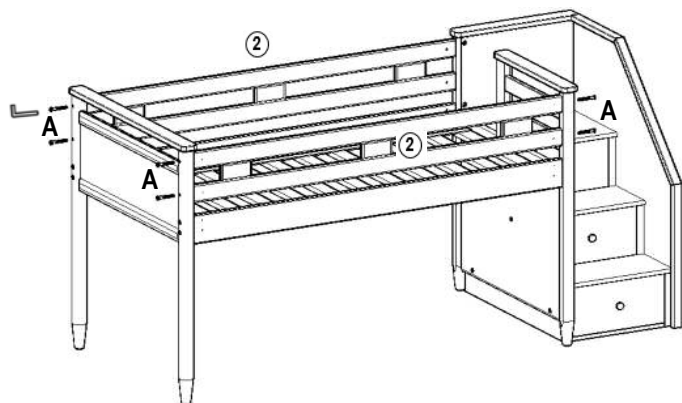

Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

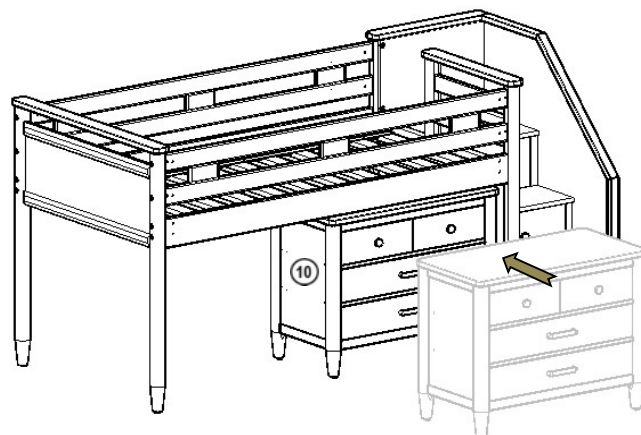


Slide 3 drw chest under loft bed

STEP 11

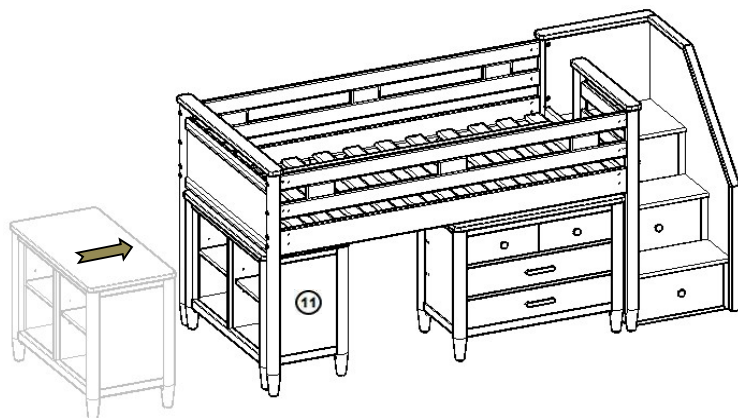


Slide bookcase under loft bed

STEP 12

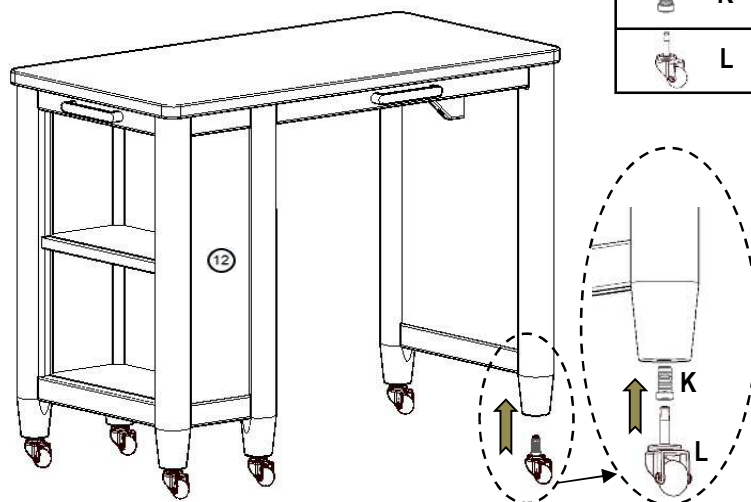

Install casters in all desk posts

STEP 13

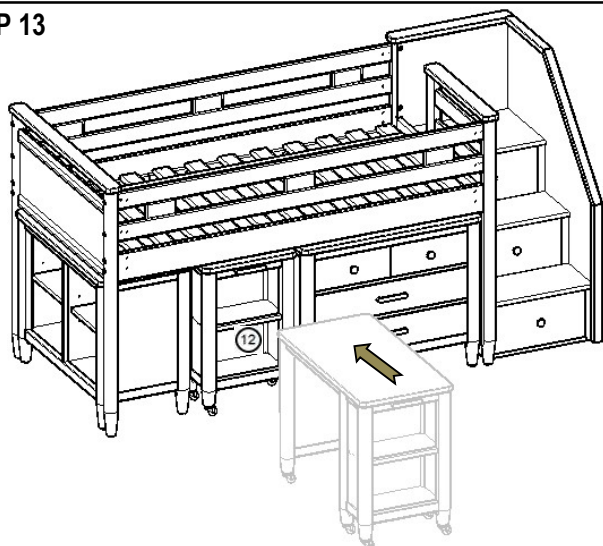

Slide caster desk under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide





Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

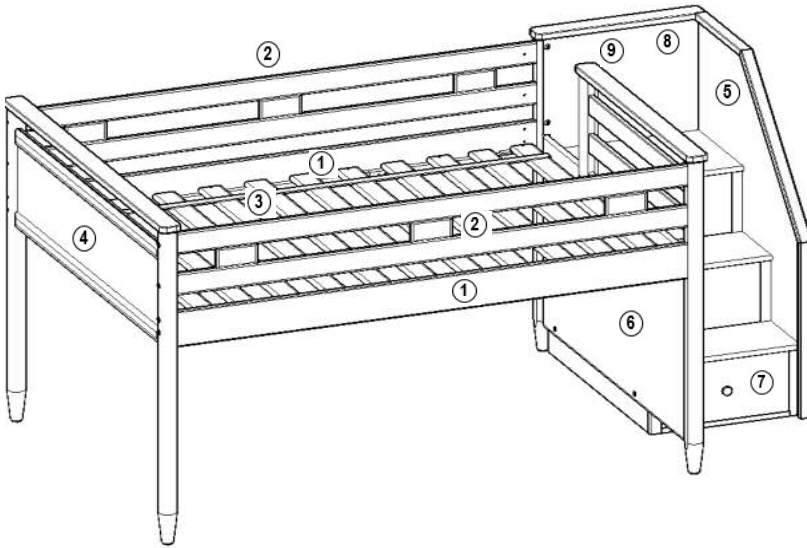

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

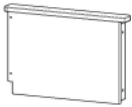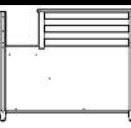PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs			
5		1 Pcs			
6		1 Pcs			

3611123P FULL LOW LOFT W/STEP END D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
36111235	12D-165	FULL LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011233	12D-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL

3611124P FULL LOW LOFT W/STEP END E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
36111247	12E-165	FULL LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011245	12E-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL

3611125P FULL LOW LOFT W/STEP END G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
36111259	12G-165	FULL LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011257	12G-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL

3611126P FULL LOW LOFT W/STEP END W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
36111261	12W-165	FULL LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011269	12W-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL

3611127P FULL LOW LOFT W/STEP END A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
36111273	12A-165	FULL LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011271	12A-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT




Gold knobs 3x



5/16-18x40mm bolt 14x

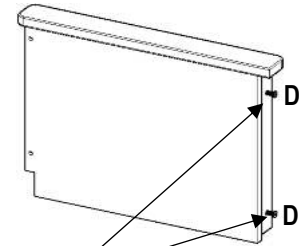

Hardware
location

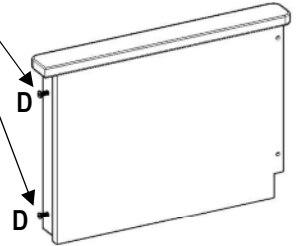

100-170 12 PC FULL SLAT ROLL



6 x 1 1/4" Screw 10x

Hardware pack
location




12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x


Hardware
location
Installed

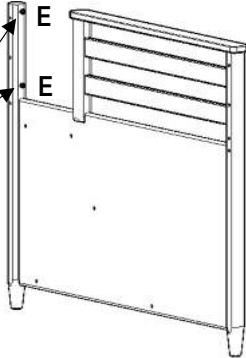

Hardware pack
location

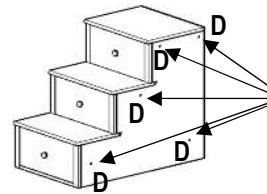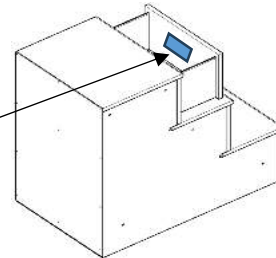

Hardware
location
Installed

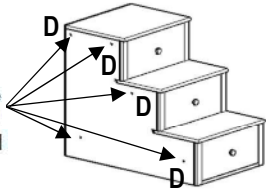

ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1



TIPS # 2

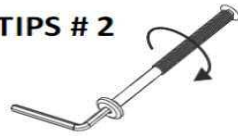


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

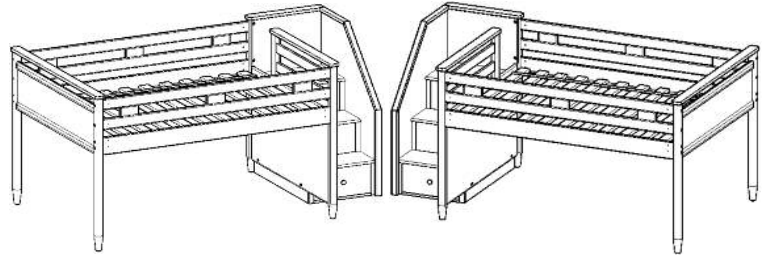


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

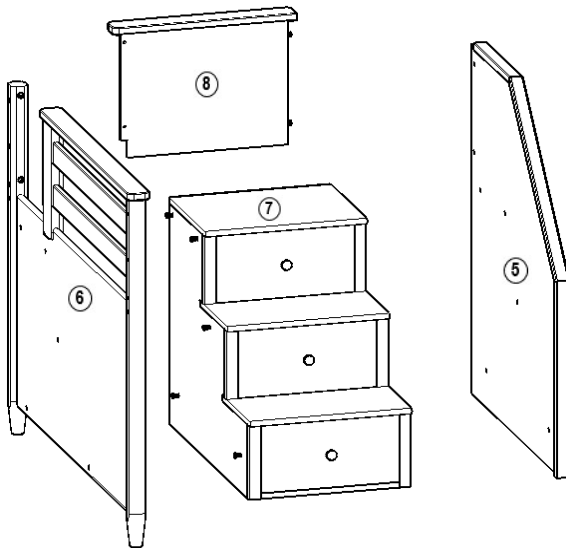


Assembly configuration for stairs on the right side.

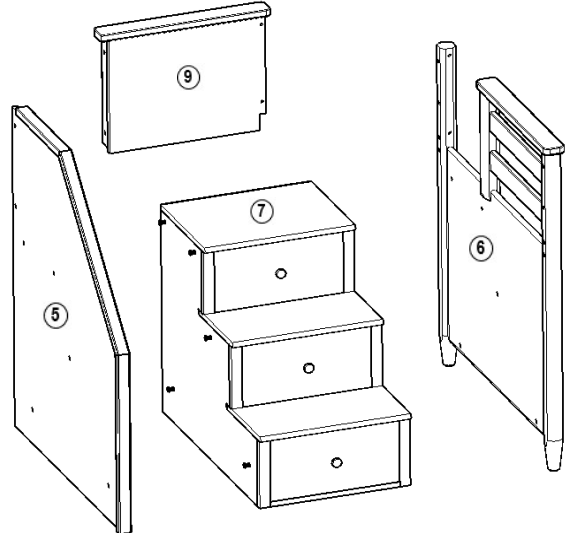


Assembly configuration for stairs on the left side.

STEP 2

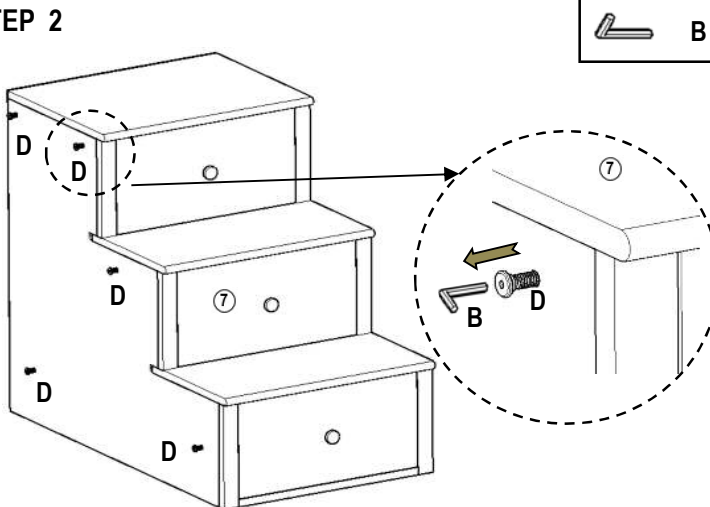

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

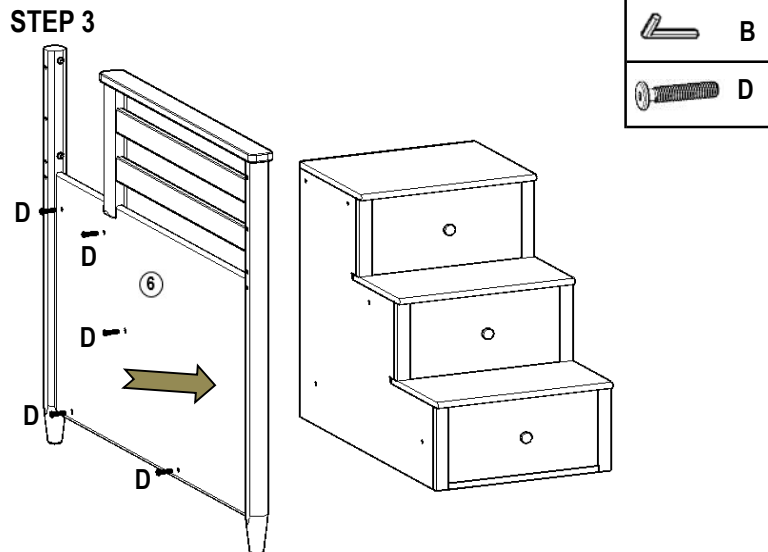

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

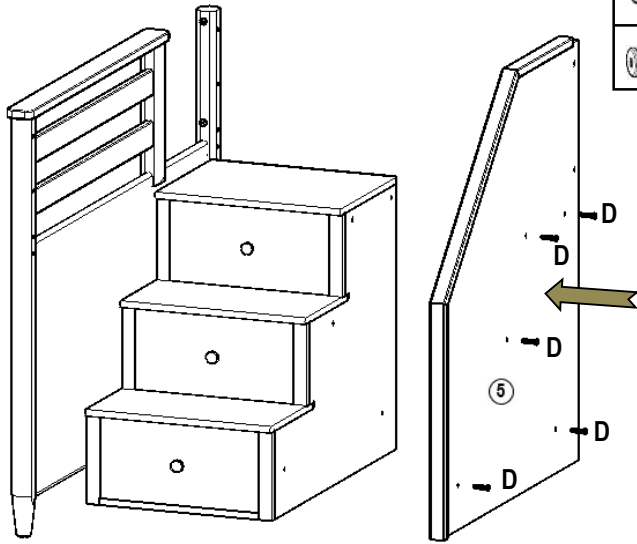


Repeat process for angle side panel.

STEP 5

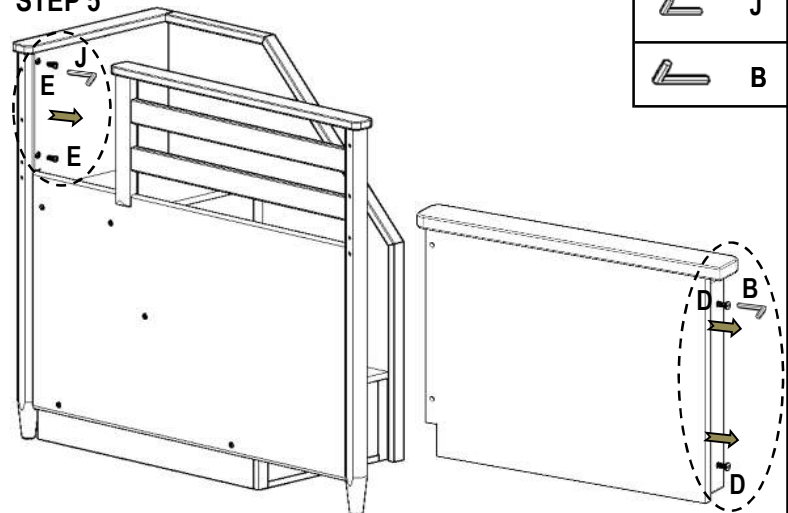


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

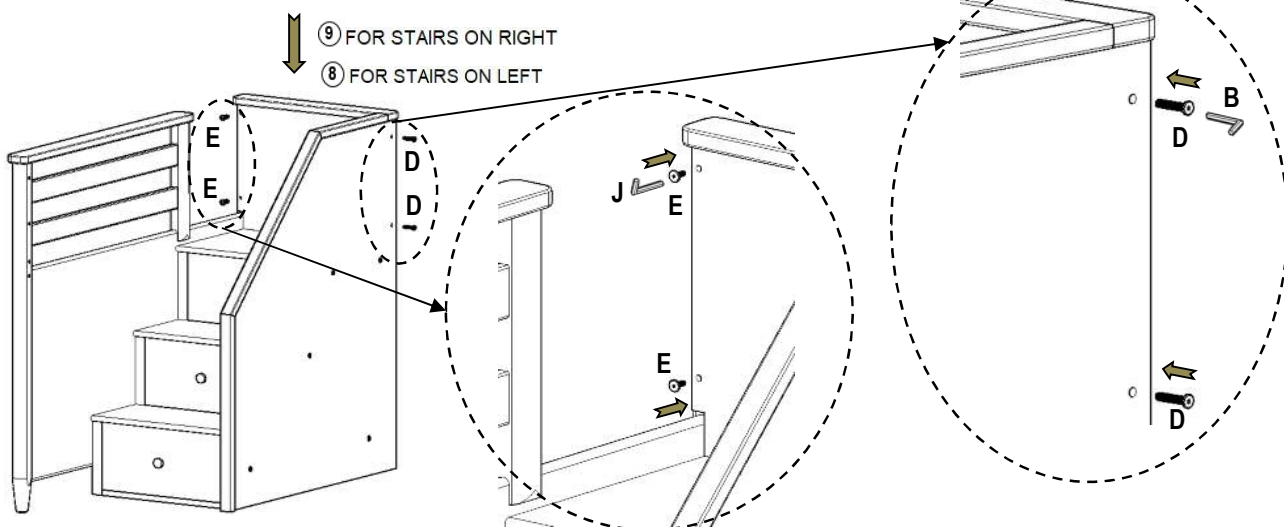


Assemble step back panel

STEP 7

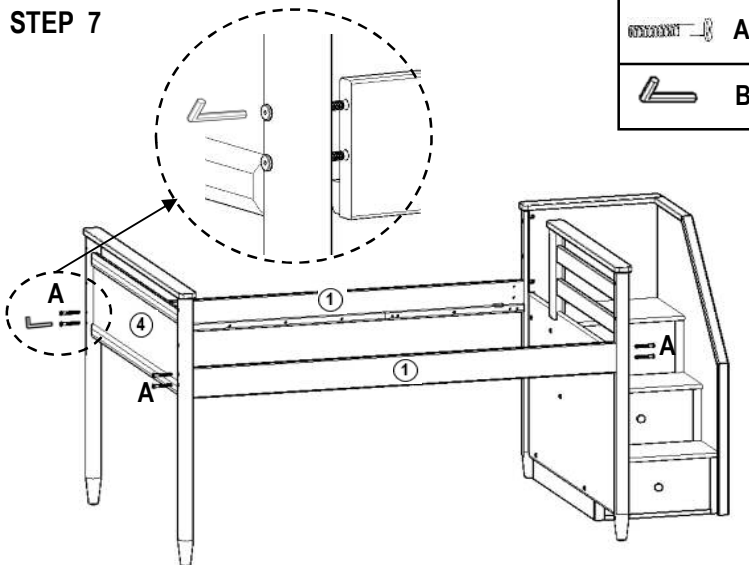

Assemble side rails.



STEP 8

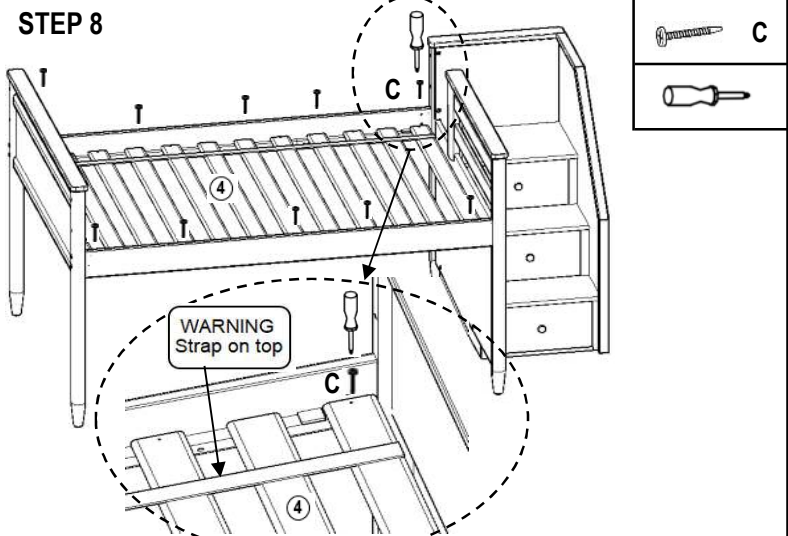


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS

STEP 9

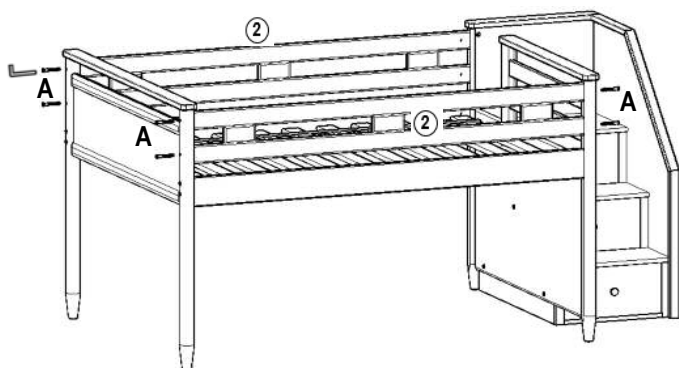

STEP 10

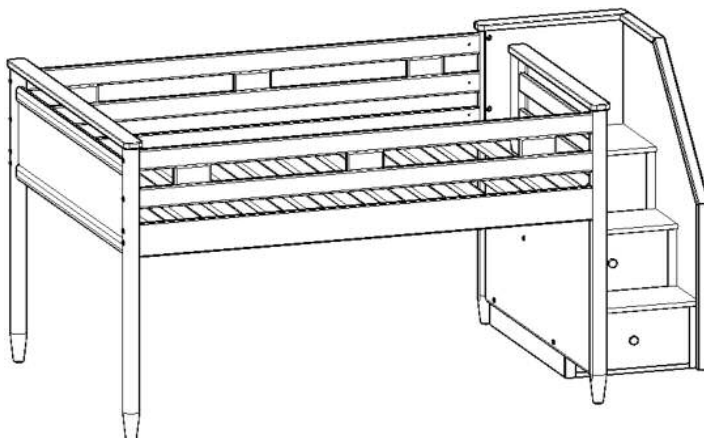

Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide





Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

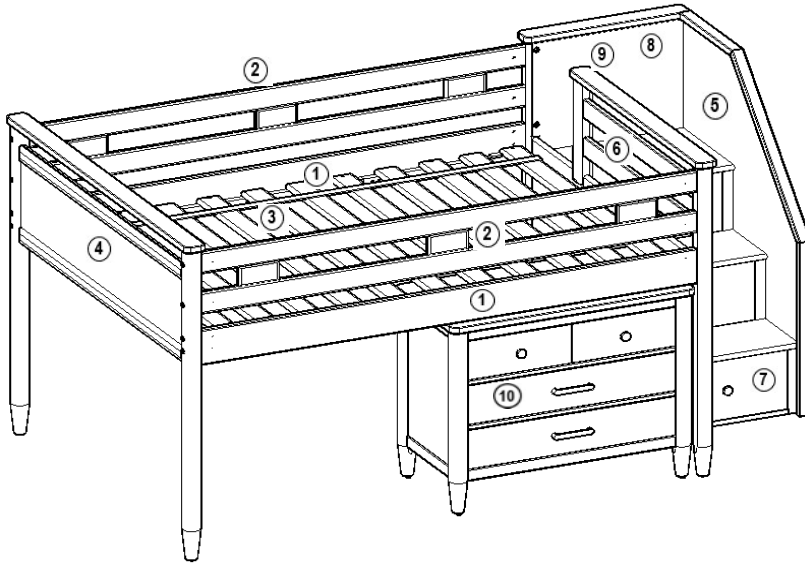

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

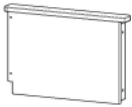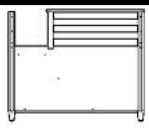PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs			
6		1 Pcs			

3621123P FULL LOW LOFT W/STEP END & CHEST D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
36111235	12D-165	FULL LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011233	12D-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST

3621124P FULL LOW LOFT W/STEP END & CHEST E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
36111247	12E-165	FULL LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011245	12E-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST

3621125P FULL LOW LOFT W/STEP END & CHEST G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
36111259	12G-165	FULL LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011257	12G-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST

3621126P FULL LOW LOFT W/STEP END & CHEST W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
36111261	12W-165	FULL LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011269	12W-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST

3621127P FULL LOW LOFT W/STEP END & CHEST A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
36111273	12A-165	FULL LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011271	12A-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT



Gold knobs 3x



5/16-18x40mm bolt 14x

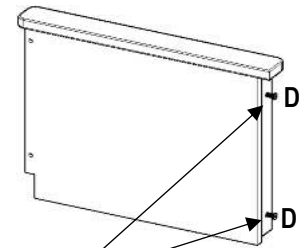

Hardware
location
Installed

100-170 12 PC FULL SLAT ROLL



6 x 1 1/4" Screw 10x


Hardware pack
location



12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x

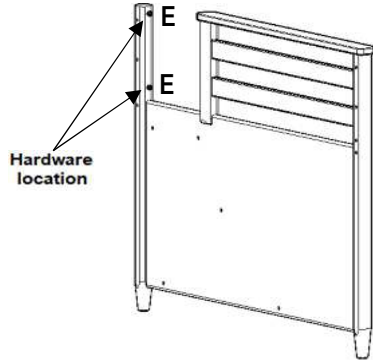

Hardware
location

Hardware pack
location

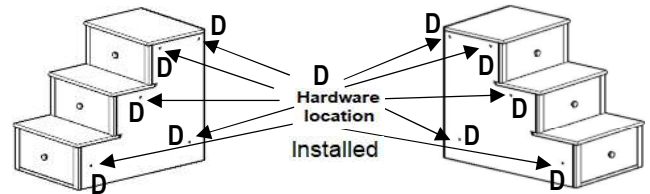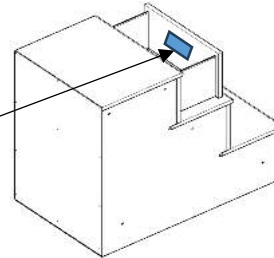


12-403 CHEST



Gold pulls 2x



Gold knobs 2x

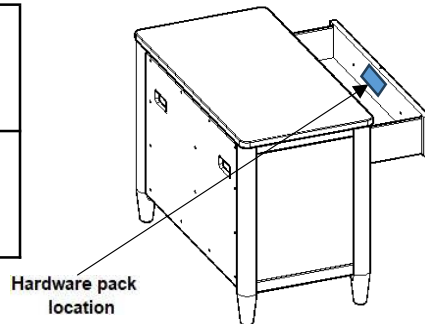


Hardware pack
location

ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

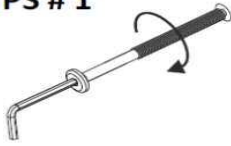

TIPS # 2

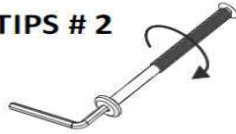


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

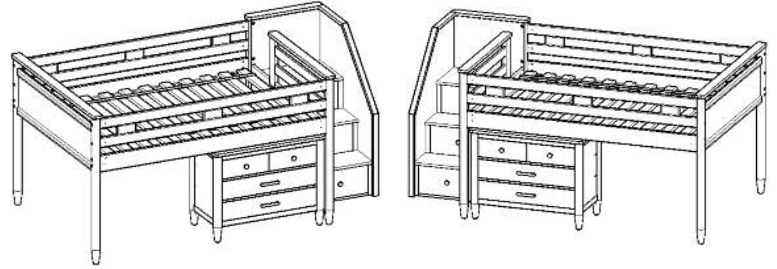


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

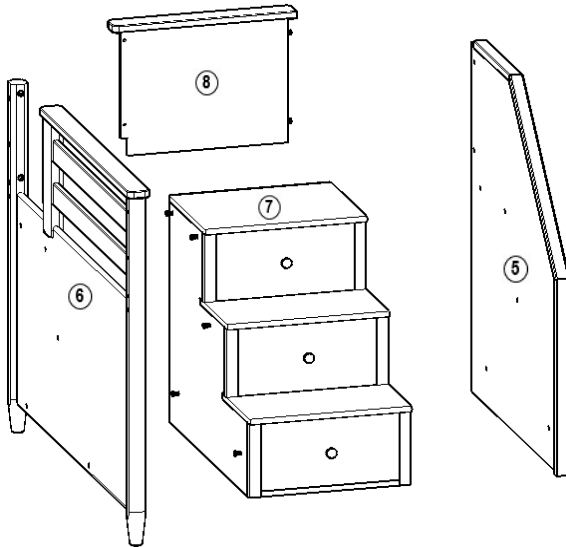


Assembly configuration for stairs on the right side.

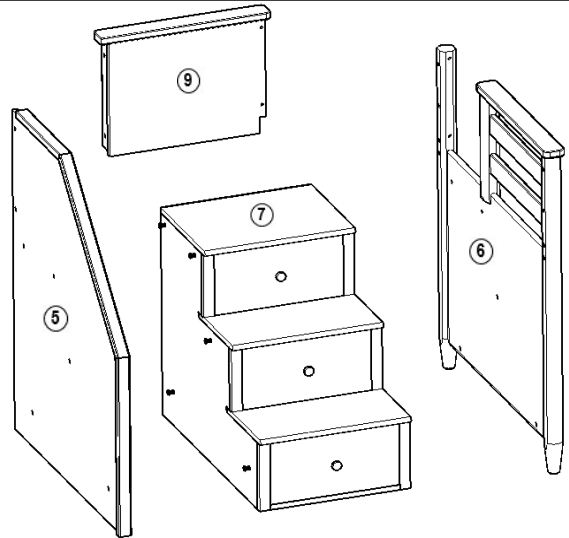


Assembly configuration for stairs on the left side.

STEP 2

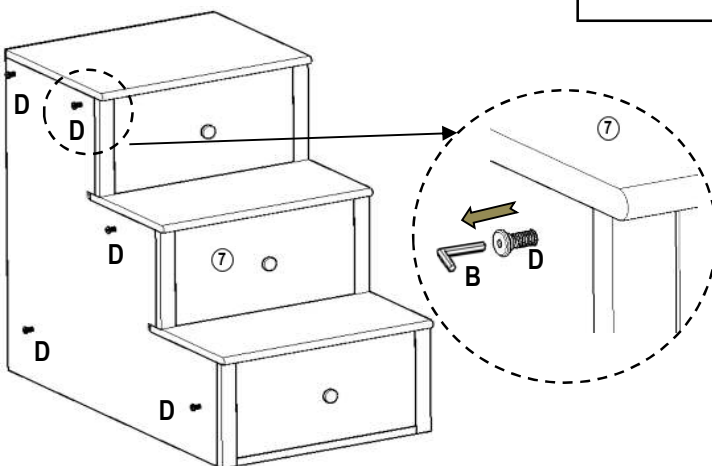

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

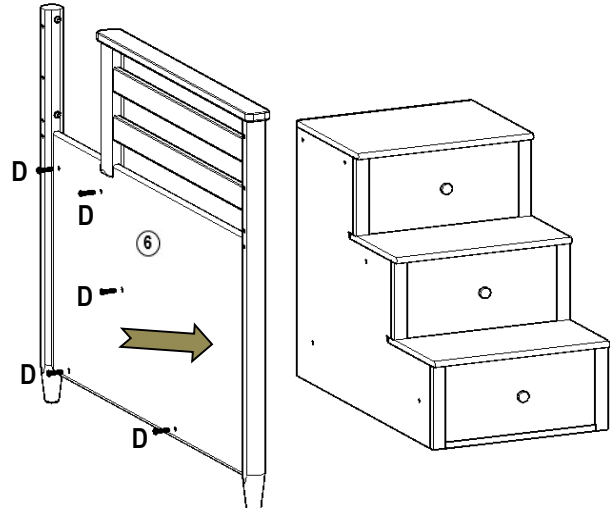


align holes then fasten with previously removed bolts.

ASSEMBLY INSTRUCTIONS


STEP 4

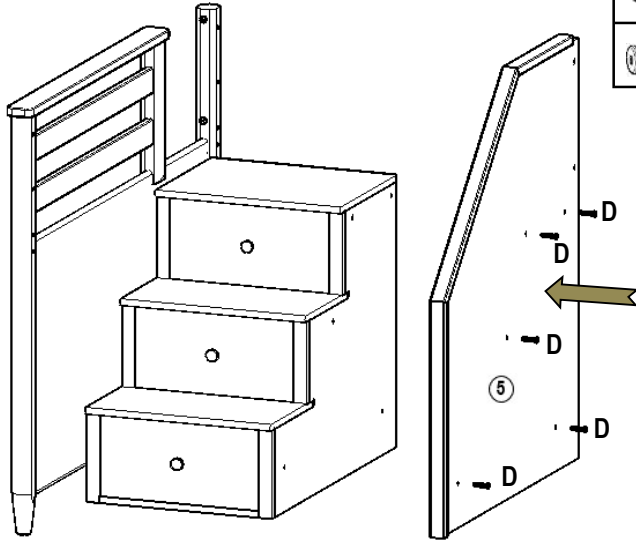


Repeat process for angle side panel.




STEP 5

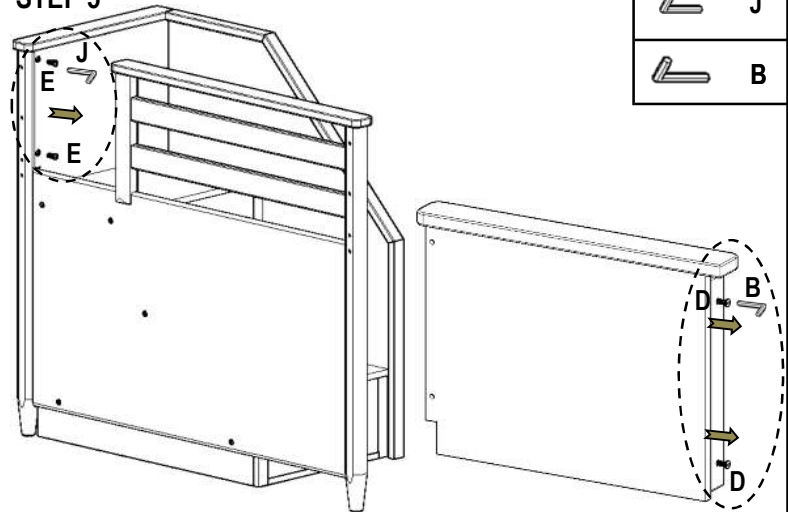


Removed bolts from side panel (2), and from step back panel (2). save them for next step.




STEP 6

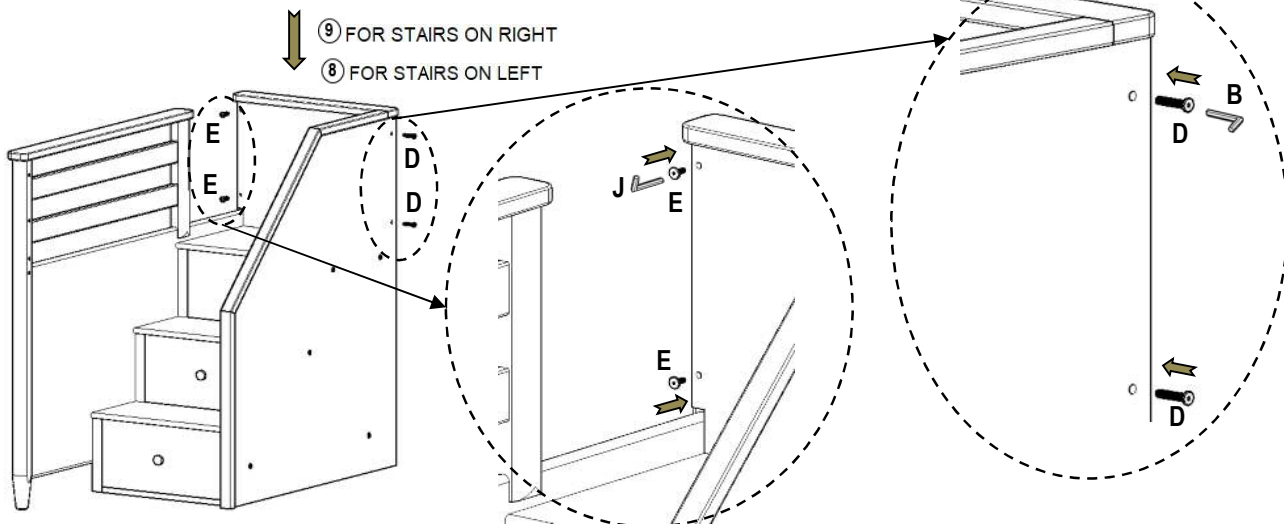


Assemble step back panel

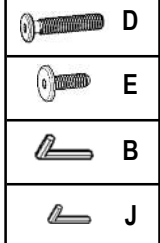


STEP 7

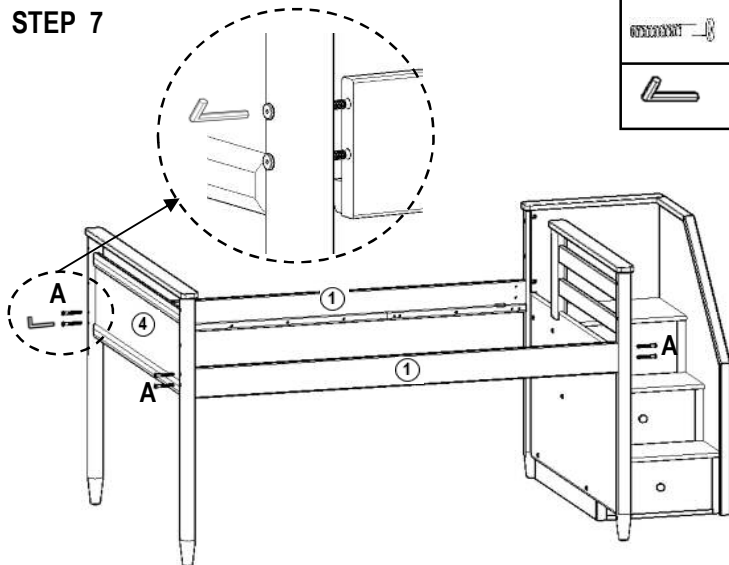


Assemble side rails.



STEP 8

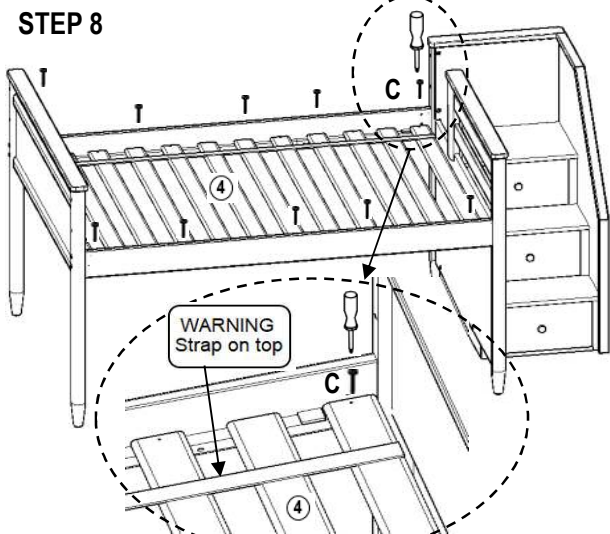


Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.



ASSEMBLY INSTRUCTIONS


STEP 9

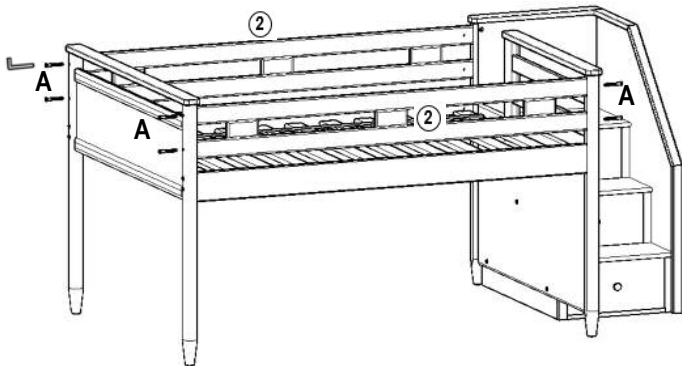

Assemble guardrails and tighten all bolts.

MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

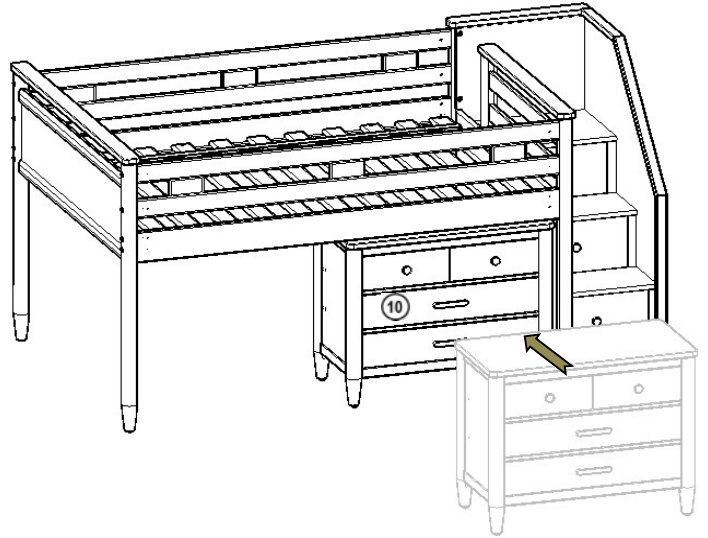

Slide 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide




Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

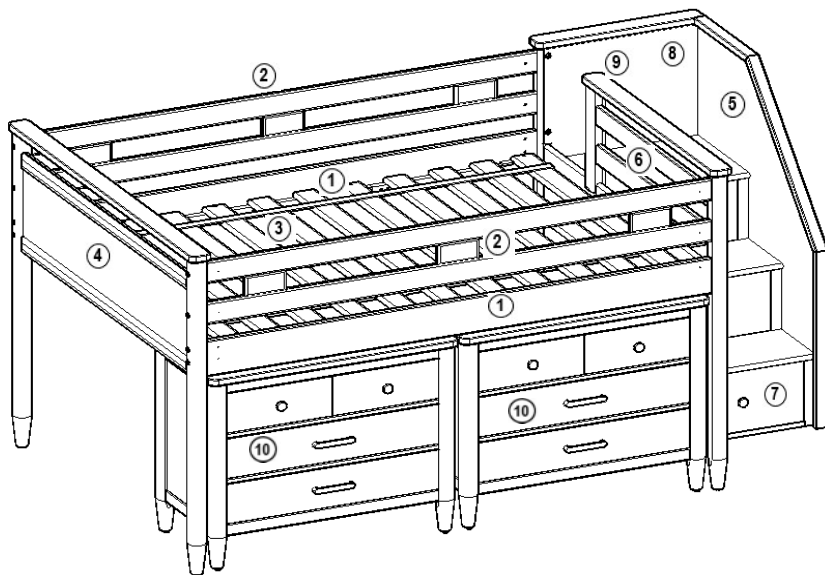

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

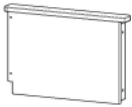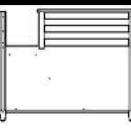PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		2 Pcs
5		1 Pcs			
6		1 Pcs			

3641123P FULL LOW LOFT W/STEP END & 2 CHEST D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
36111235	12D-165	FULL LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011233	12D-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST
36611235	12D-403	3 DRW CHEST

3641124P FULL LOW LOFT W/STEP END & 2 CHEST E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
36111247	12E-165	FULL LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011245	12E-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST
36611247	12E-403	3 DRW CHEST

3641125P FULL LOW LOFT W/STEP END & 2 CHEST G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
36111259	12G-165	FULL LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011257	12G-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST
36611259	12G-403	3 DRW CHEST

3641126P FULL LOW LOFT W/STEP END & 2 CHEST W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
36111261	12W-165	FULL LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011269	12W-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST
36611261	12W-403	3 DRW CHEST

3641127P FULL LOW LOFT W/STEP END & 2 CHEST A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
36111273	12A-165	FULL LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011271	12A-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST
36611273	12A-403	3 DRW CHEST

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT



Gold knobs 3x



5/16-18x40mm bolt 14x

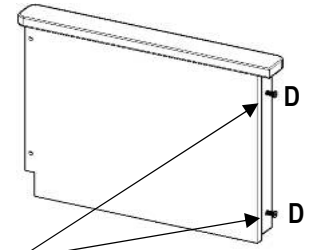

Hardware
location
Installed

100-170 12 PC FULL SLAT ROLL



6 x 1 1/4" Screw 10x


Hardware pack
location



12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x

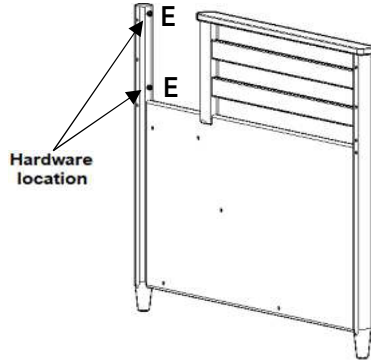


Hardware
location

Hardware pack
location

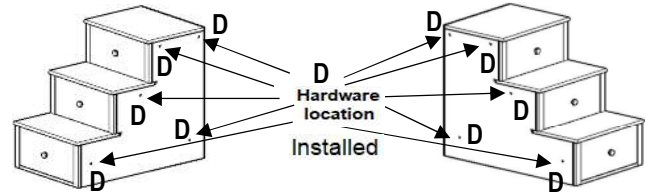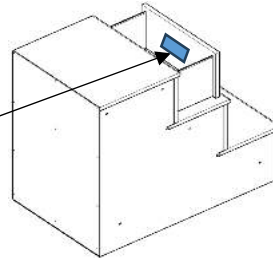

Installed


12-403 CHEST



Gold pulls 2x



Gold knobs 2x

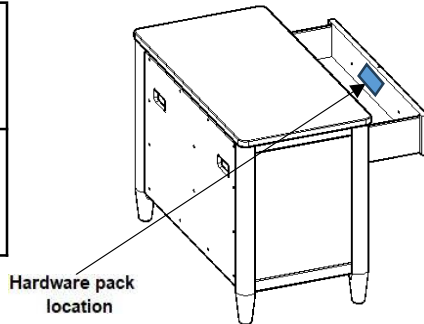


Hardware pack
location

ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

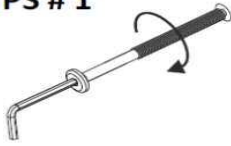

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

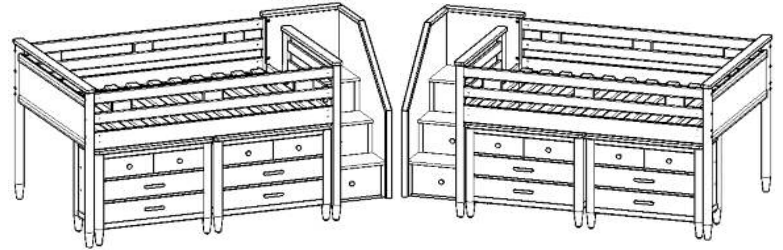


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

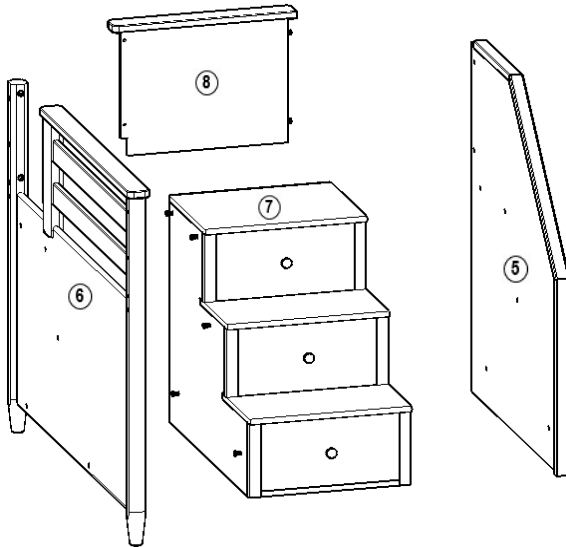


Assembly configuration for stairs on the right side.

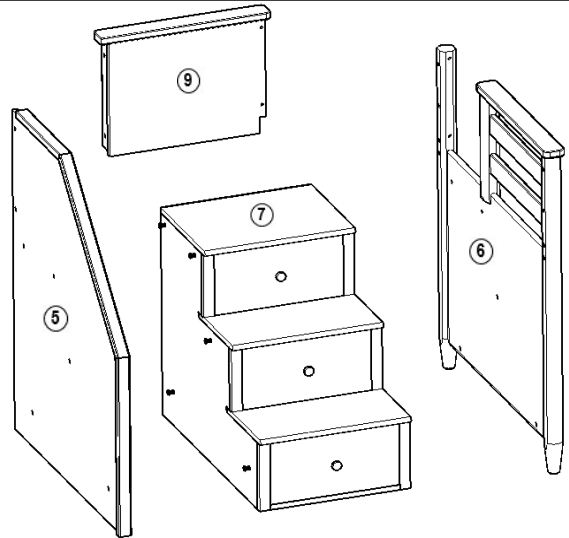


Assembly configuration for stairs on the left side.

STEP 2

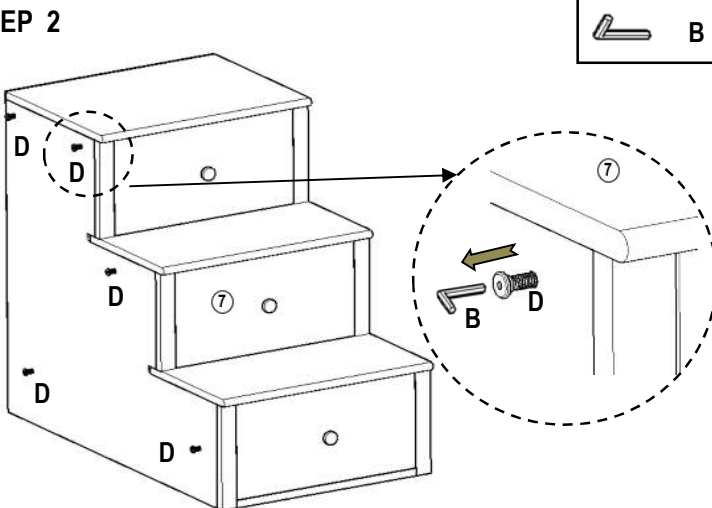

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

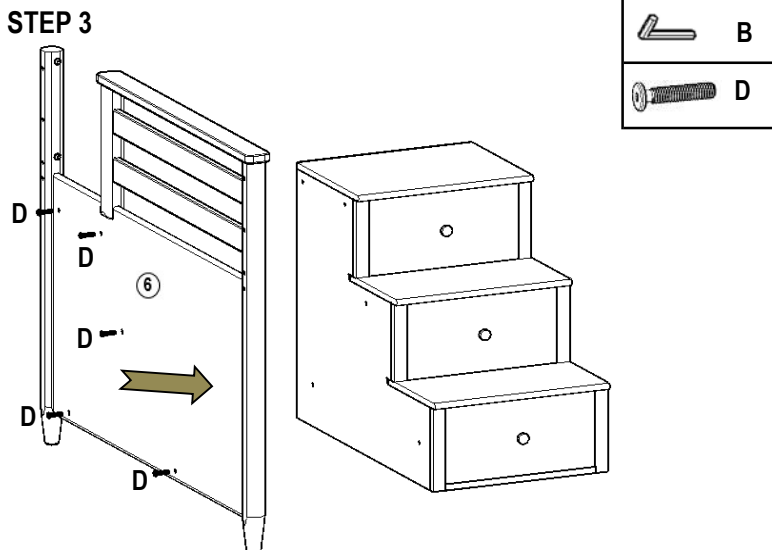

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

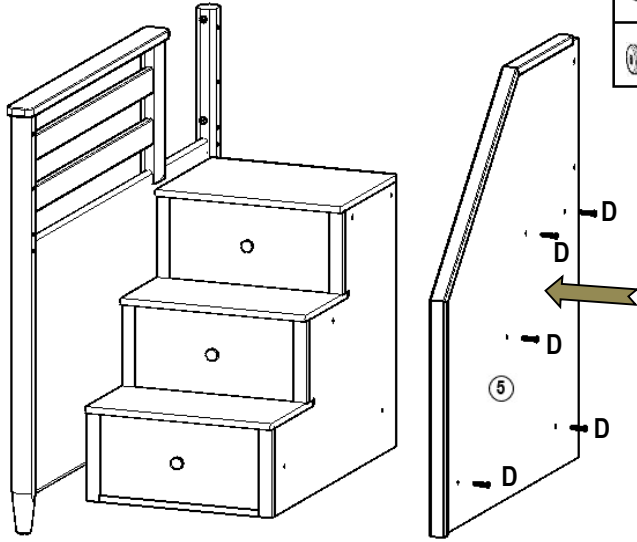


Repeat process for angle side panel.

STEP 5

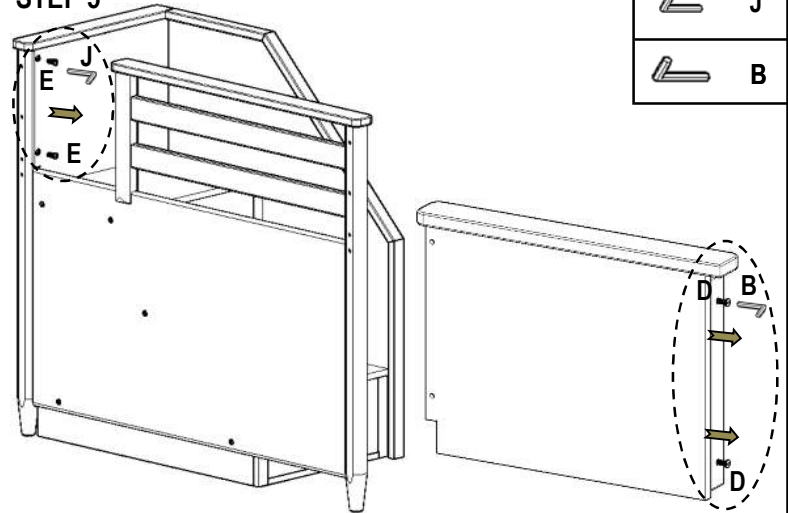


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

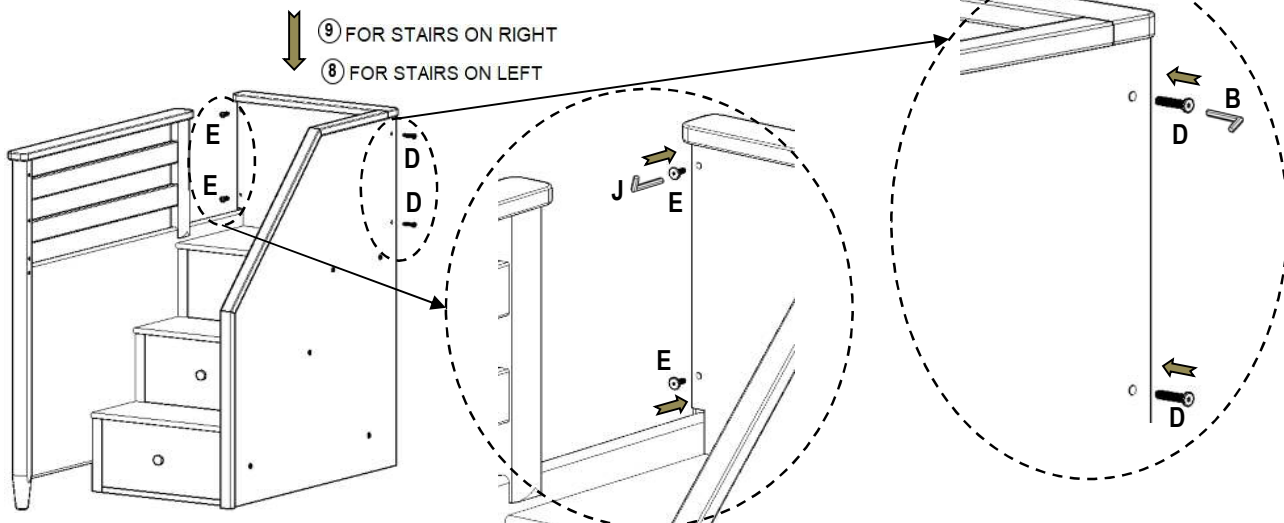


Assemble step back panel

STEP 7

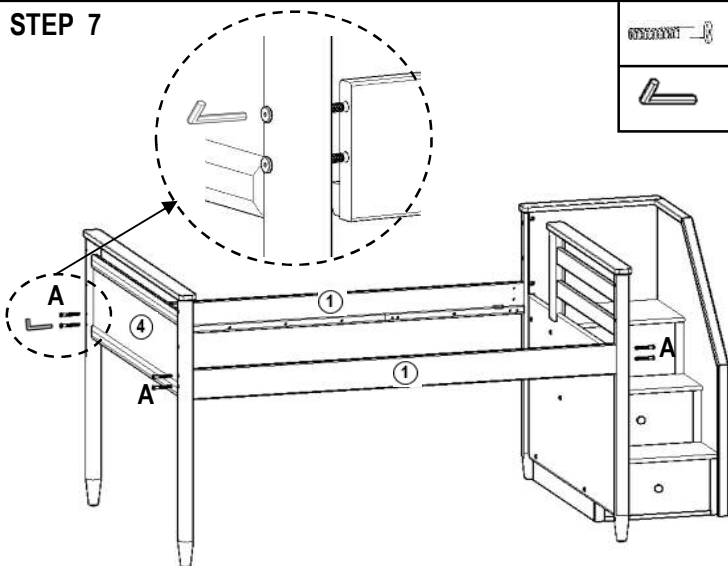

Assemble side rails.


STEP 8

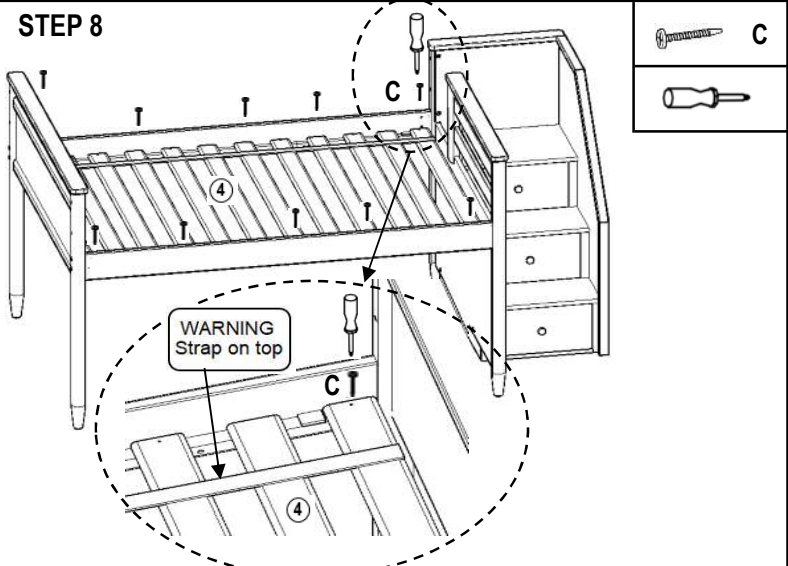

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

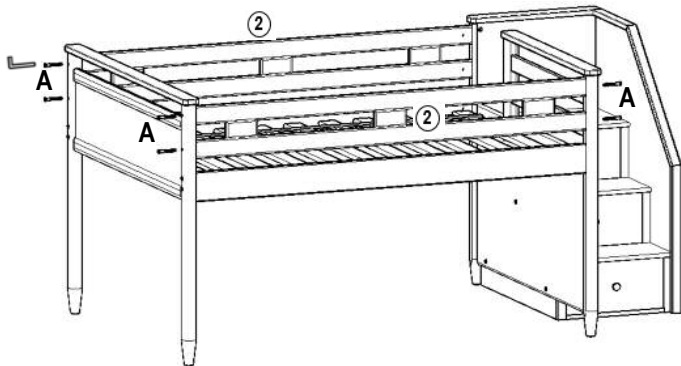

Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

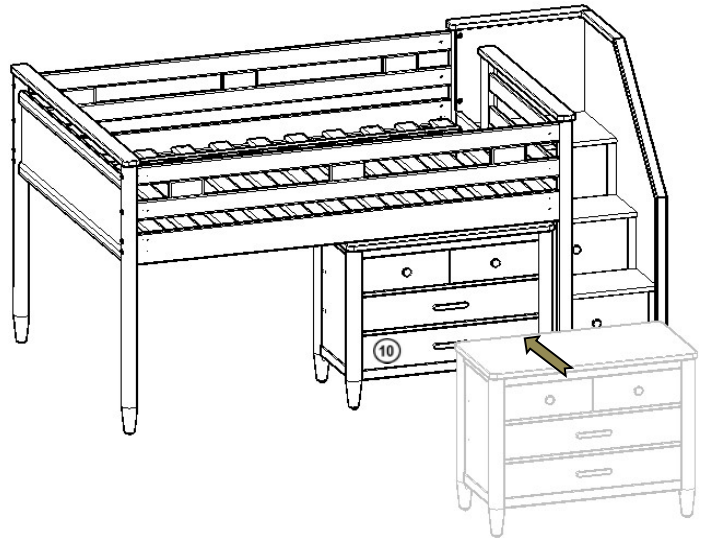

Slide 3 drw chest under loft bed

STEP 11

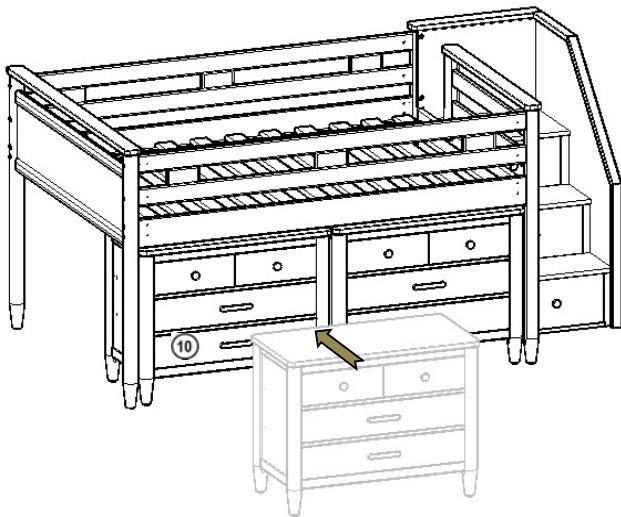

Slide 2nd 3 drw chest under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide




Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

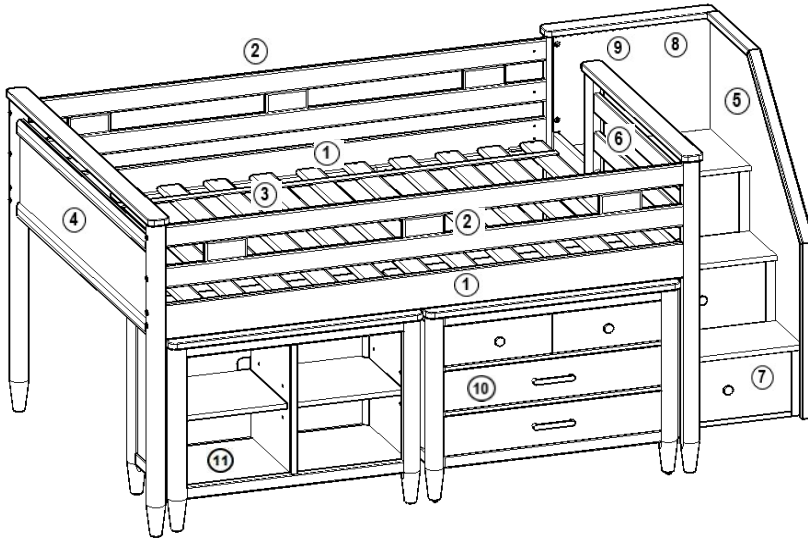

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

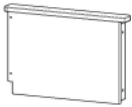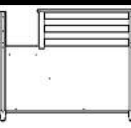PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs	11		1 Pcs
6		1 Pcs			

3631123P FULL LOW LOFT W/STEP END, CHEST & BOOKCASE D- IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
36111235	12D-165	FULL LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011233	12D-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST
36811239	12D-761	37" BOOKCASE

3631124P FULL LOW LOFT W/STEP END, CHEST & BOOKCASE E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
36111247	12E-165	FULL LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011245	12E-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST
36811241	12E-761	37" BOOKCASE

3631125P FULL LOW LOFT W/STEP END, CHEST & BOOKCASE G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
36111259	12G-165	FULL LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011257	12G-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST
36811253	12G-761	37" BOOKCASE

3631126P FULL LOW LOFT W/STEP END, CHEST & BOOKCASE W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
36111261	12W-165	FULL LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011269	12W-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST
36811265	12W-761	37" BOOKCASE

3631127P FULL LOW LOFT W/STEP END, CHEST & BOOKCASE A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
36111273	12A-165	FULL LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011271	12A-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST
36811277	12A-761	37" BOOKCASE

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT



Gold knobs 3x



5/16-18x40mm bolt 14x

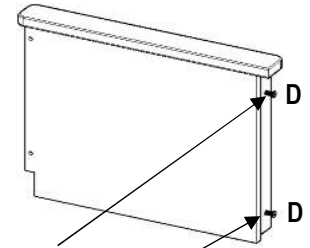

Hardware
location
Installed

100-170 12 PC FULL SLAT ROLL



6 x 1 1/4" Screw 10x


Hardware pack
location



12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x

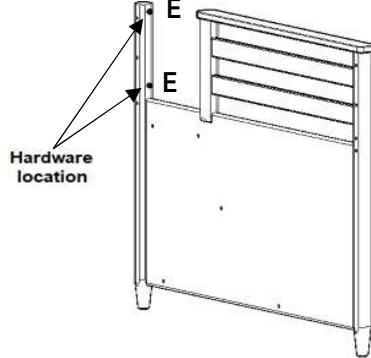

Hardware
location

Hardware pack
location

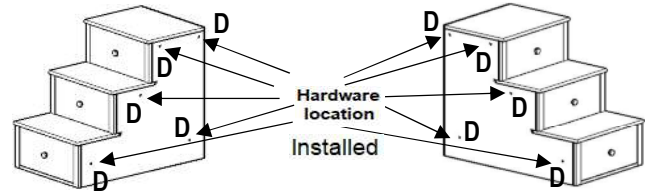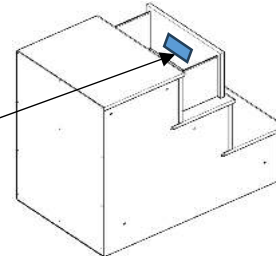

Hardware
location
Installed


12-403 CHEST



Gold pulls 2x



Gold knobs 2x

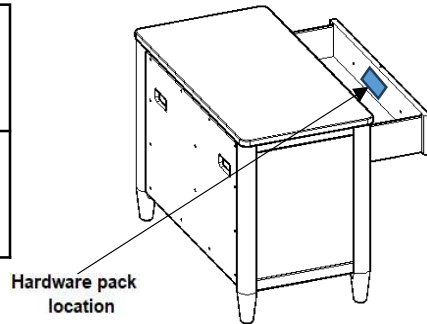


Hardware pack
location

ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

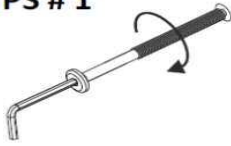

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

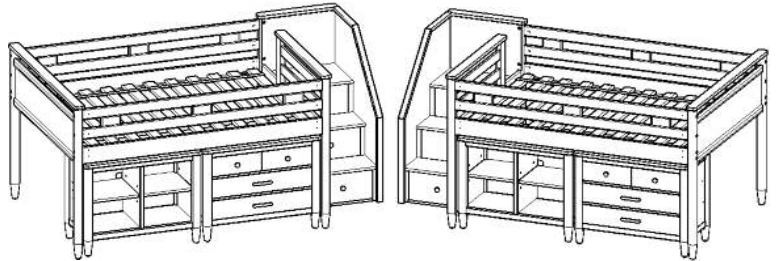


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

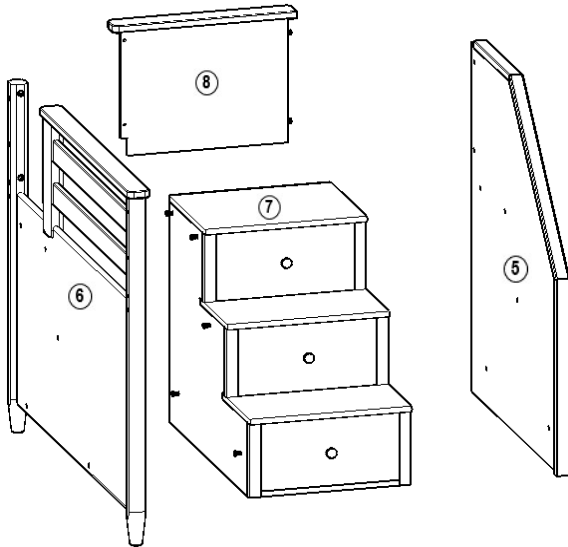


Assembly configuration for stairs on the right side.

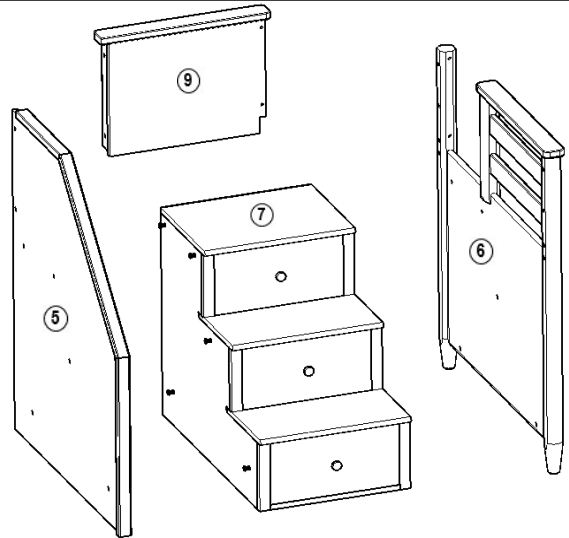


Assembly configuration for stairs on the left side.

STEP 2

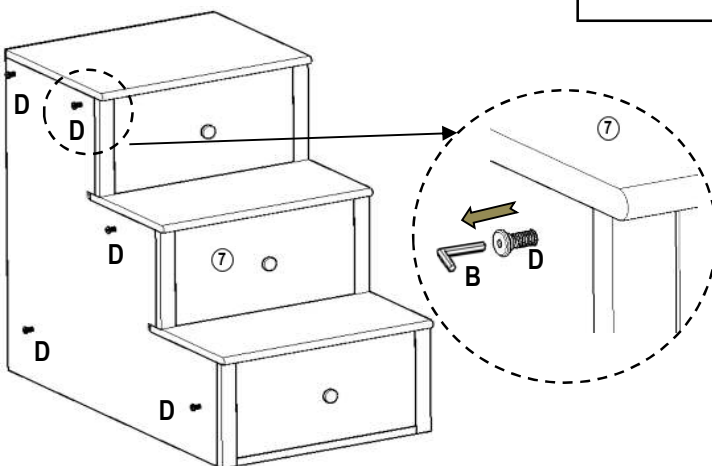

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

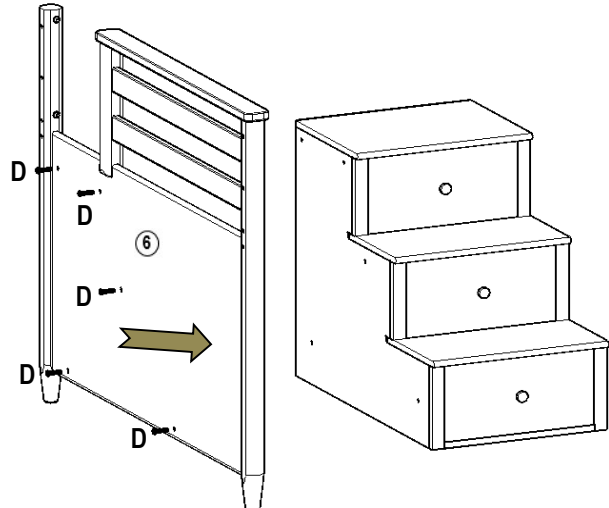

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

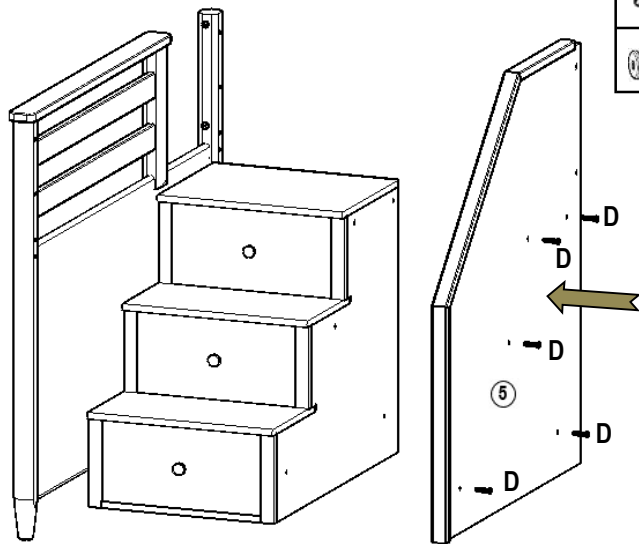


Repeat process for angle side panel.

STEP 5

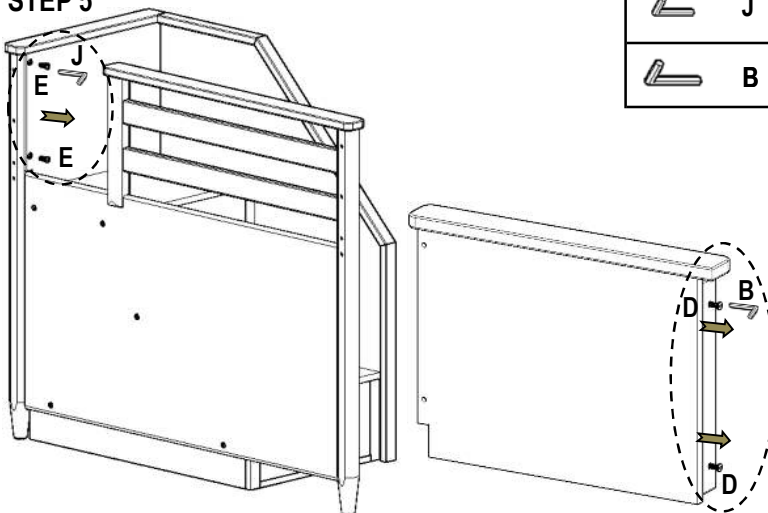


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

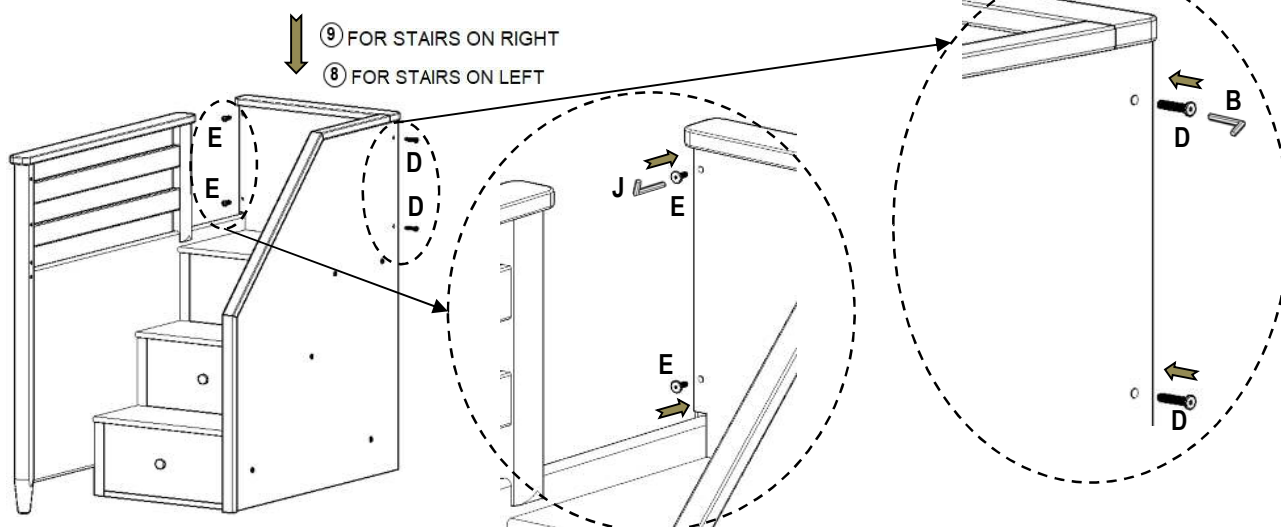


Assemble step back panel

STEP 7

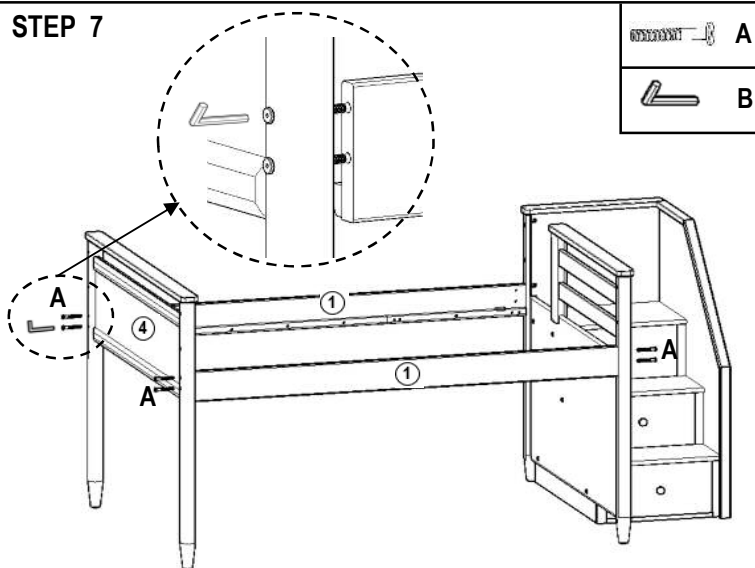

Assemble side rails.



STEP 8

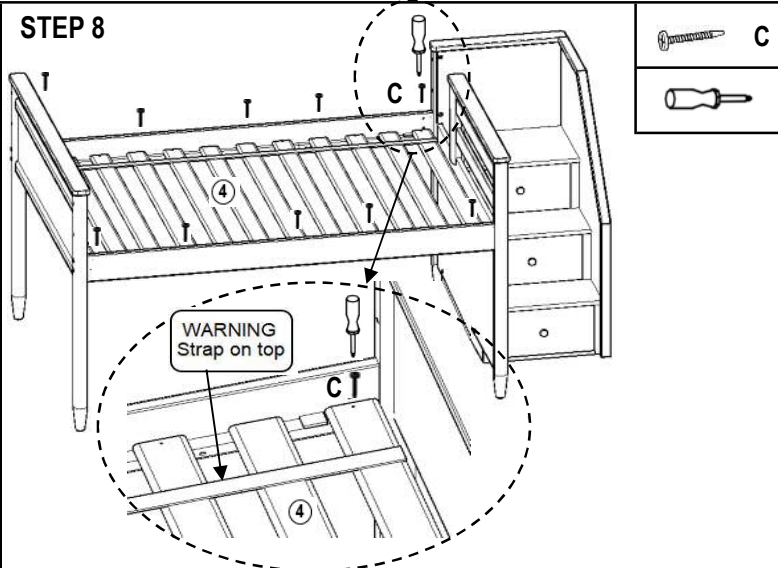

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

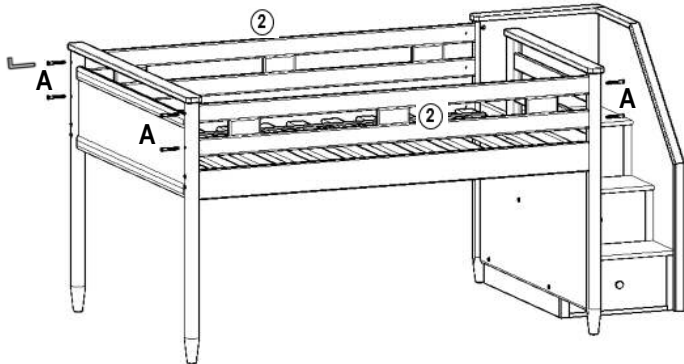

Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

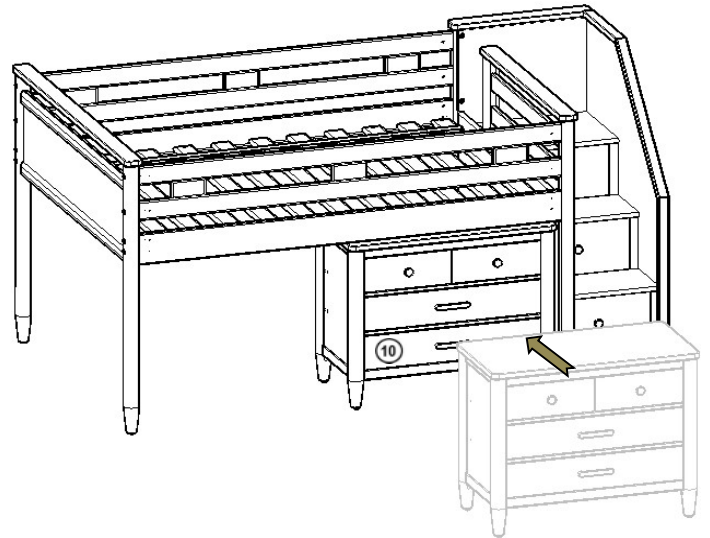


Slide 3 drw chest under loft bed

STEP 11

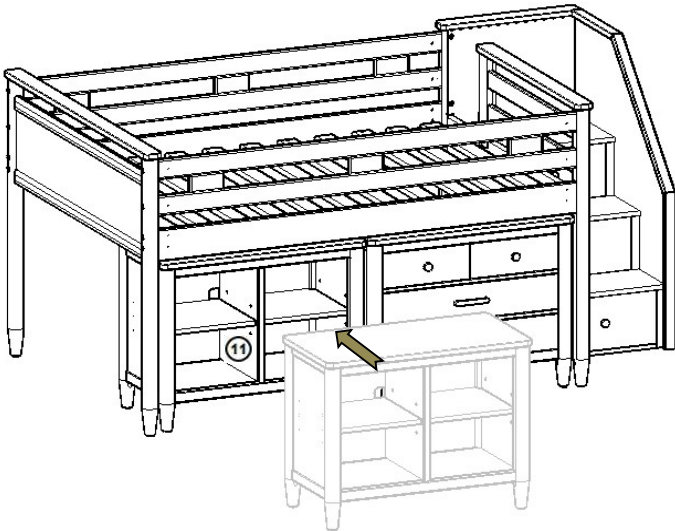

Slide bookcase under loft bed

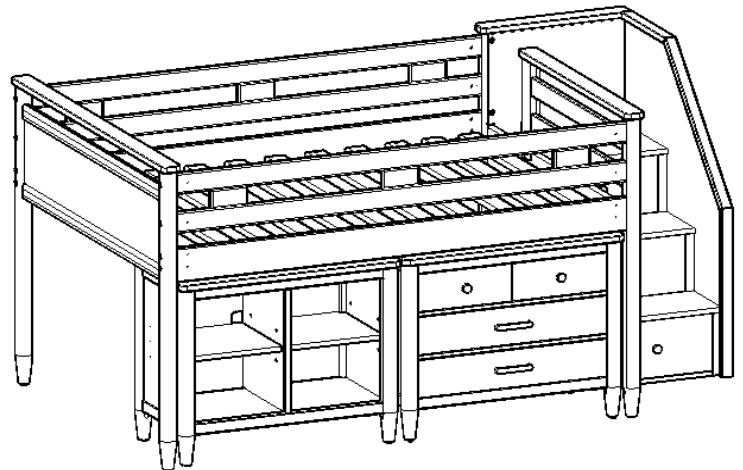

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide



Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

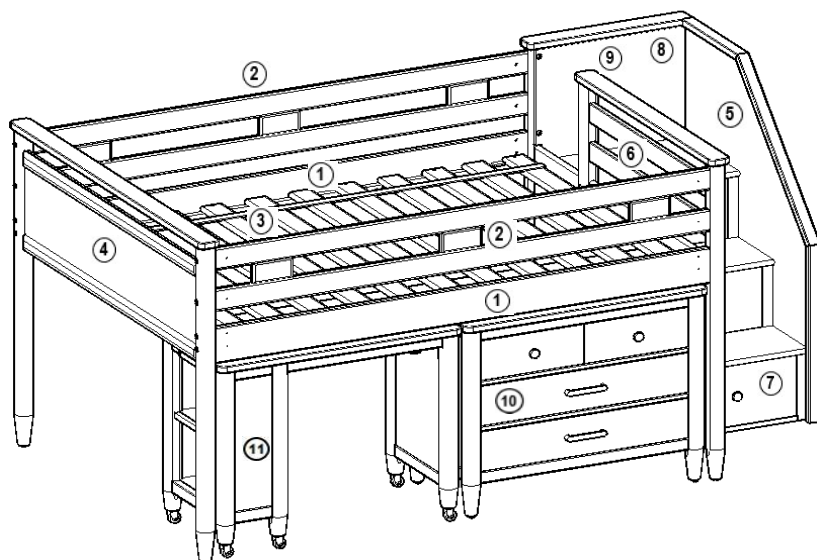

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

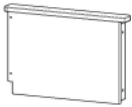PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs	11		1 Pcs
6		1 Pcs			

3651123P FULL LOW LOFT W/STEP END, CHEST & DESK D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
36111235	12D-165	FULL LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011233	12D-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST
36711237	12D-602	CASTER DESK

3651124P FULL LOW LOFT W/STEP END, CHEST & DESK E- SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
36111247	12E-165	FULL LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011245	12E-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST
36711249	12E-602	CASTER DESK

3651125P FULL LOW LOFT W/STEP END, CHEST & DESK G- LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
36111259	12G-165	FULL LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011257	12G-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST
36711251	12G-602	CASTER DESK

3651126P FULL LOW LOFT W/STEP END, CHEST & DESK W- WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
36111261	12W-165	FULL LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011269	12W-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST
36711263	12W-602	CASTER DESK

3651127P FULL LOW LOFT W/STEP END, CHEST & DESK A- PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
36111273	12A-165	FULL LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011271	12A-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST
36711275	12A-602	CASTER DESK

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location



12-403 LOW LOFT STEP UNIT




Gold knobs 3x



5/16-18x40mm bolt 14x

Hardware
location
Installed

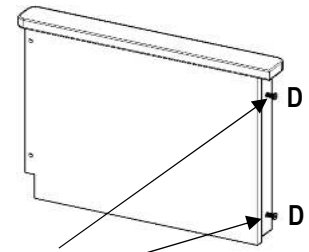

100-170 12 PC FULL SLAT ROLL



6 x 1 1/4" Screw 10x

Hardware pack
location




12-164 TWIN LOW LOFT SIDE PANELS





1/4-20X30mm bolt 2x

Hardware
location
Installed

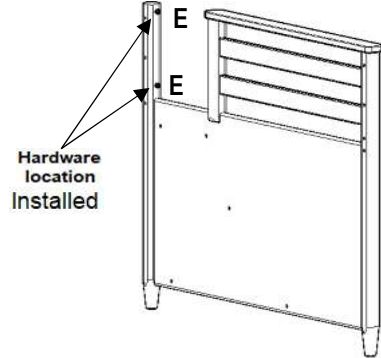

Hardware pack
location

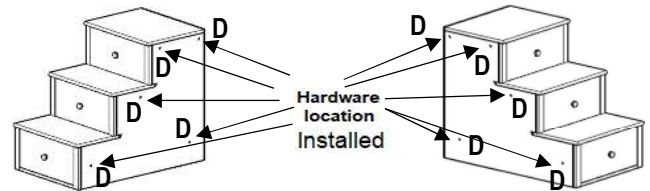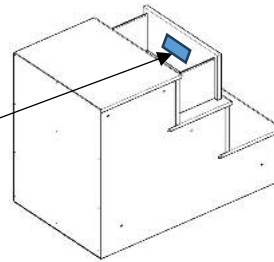

12-403 CHEST




Gold pulls 2x



Gold knobs 2x


Hardware pack
location

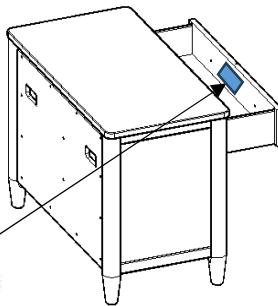


12-602 CASTER DESK



Caster 6x




Caster socket 6x



Gold pulls 2x

Hardware pack
location

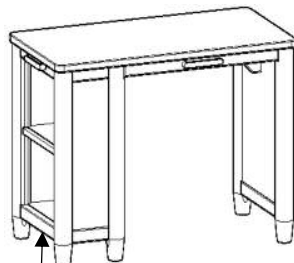


ASSEMBLY INSTRUCTIONS


TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

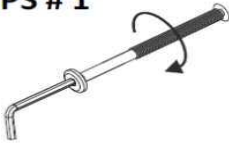

TIPS # 2

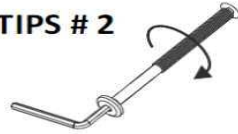


FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

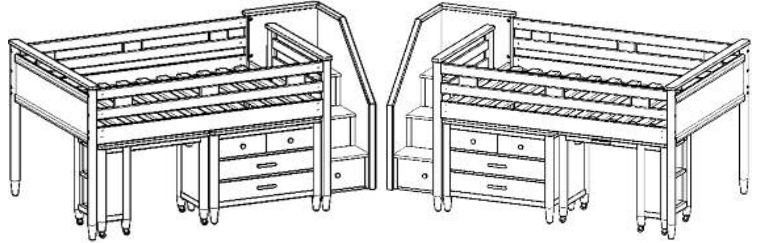


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

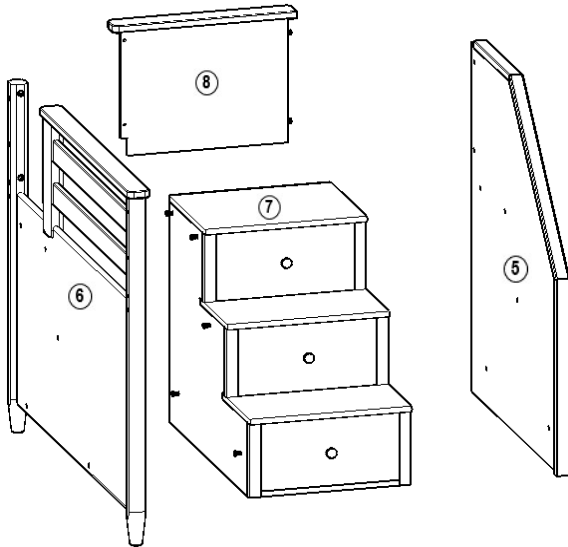


Assembly configuration for stairs on the right side.

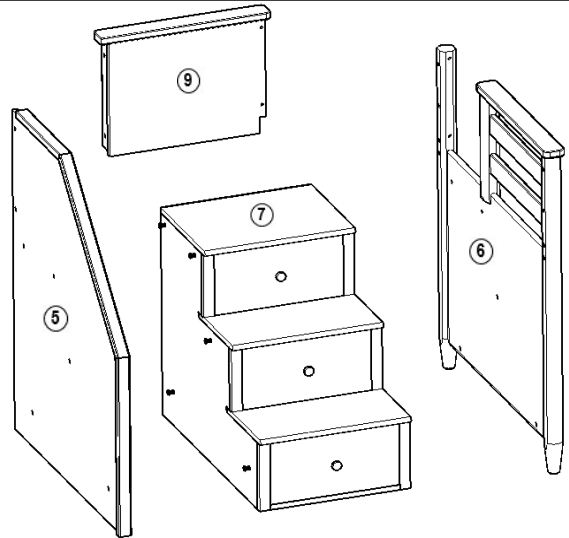


Assembly configuration for stairs on the left side.

STEP 2

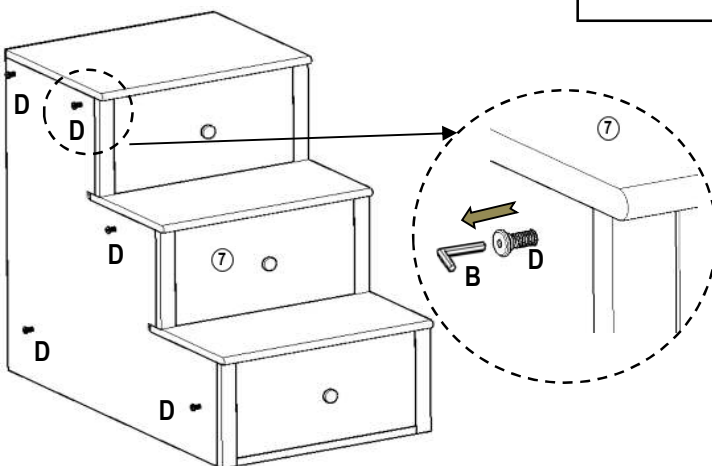

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

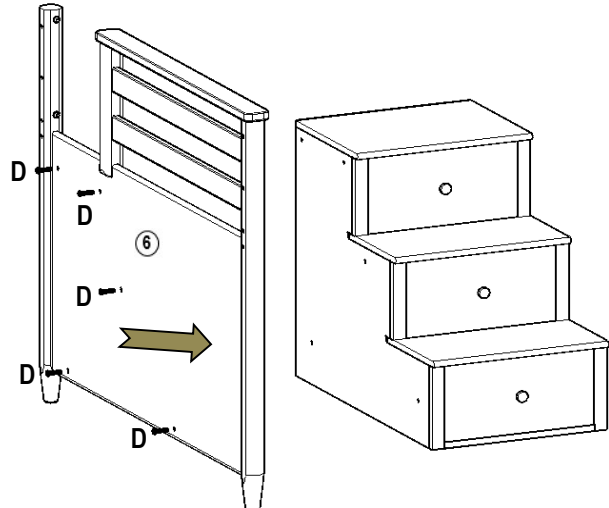

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

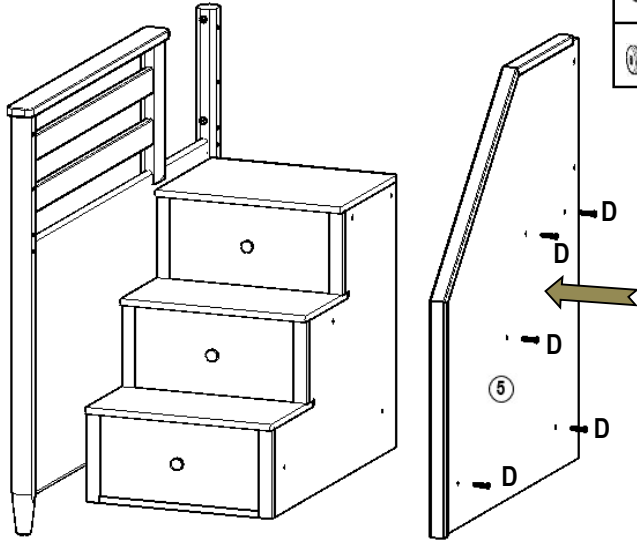


Repeat process for angle side panel.

STEP 5

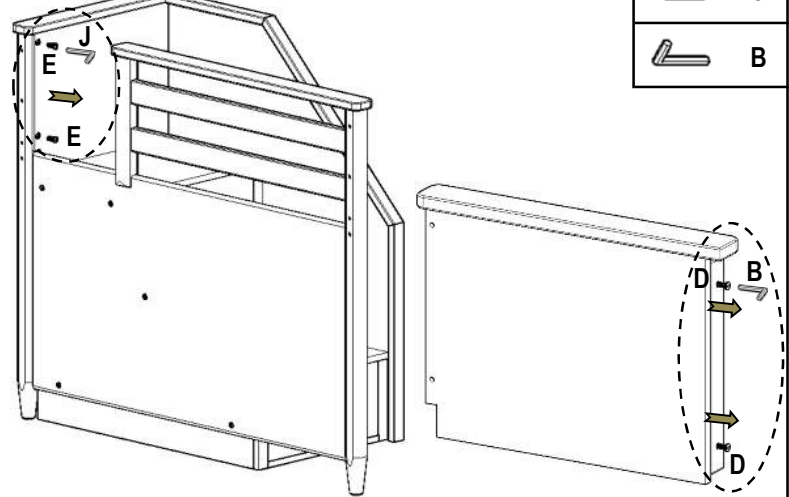


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

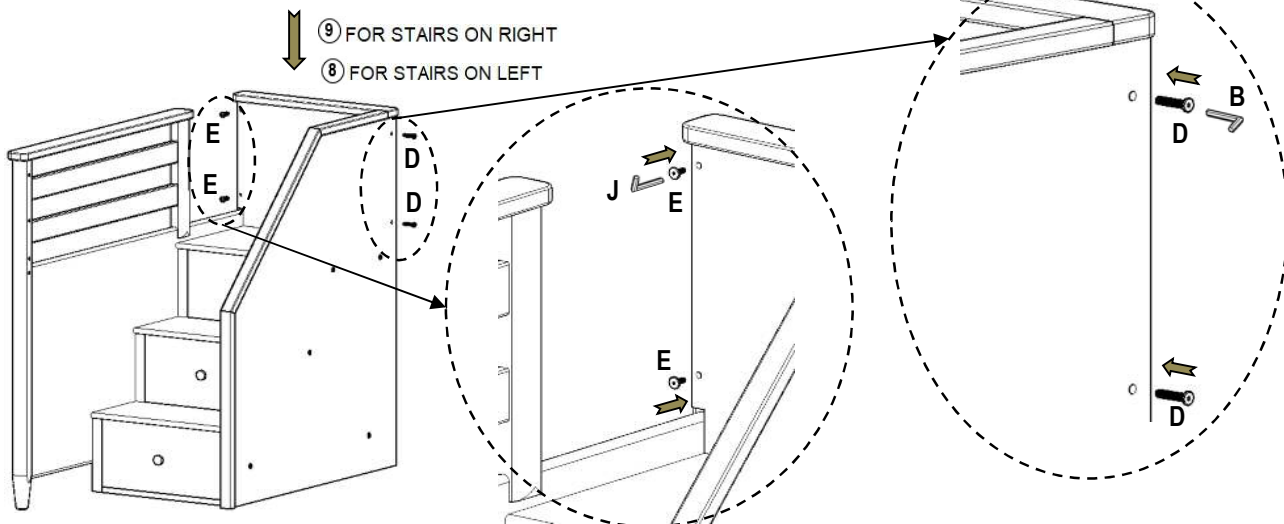


Assemble step back panel

STEP 7

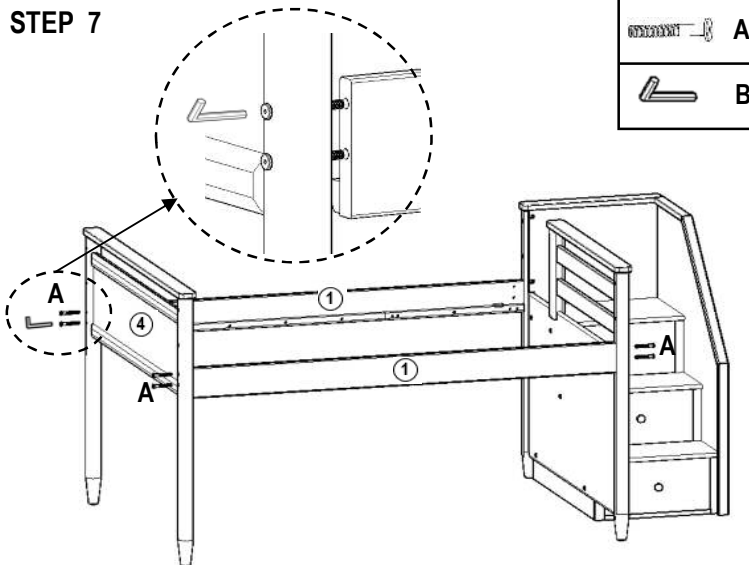

Assemble side rails.



STEP 8

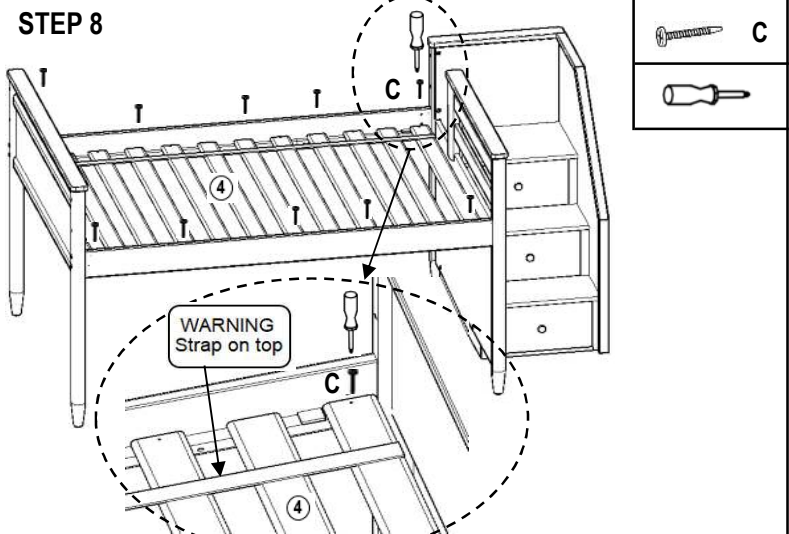

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

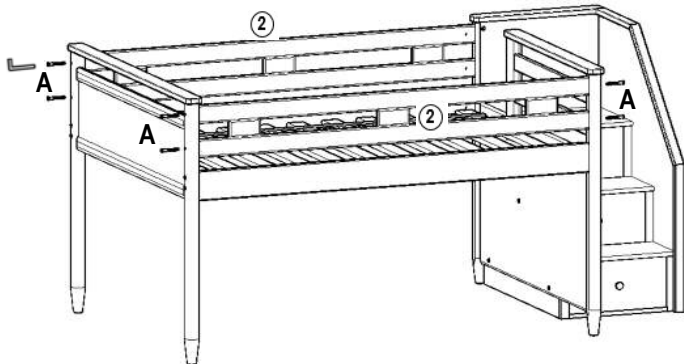

Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

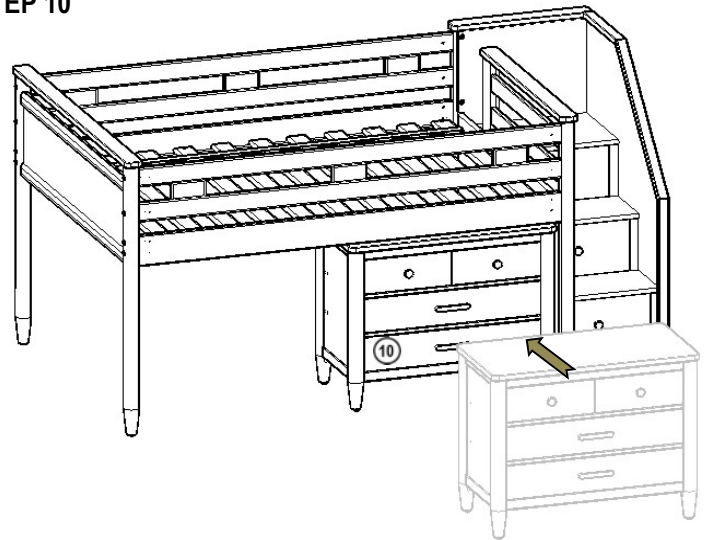


Slide 3 drw chest under loft bed

STEP 11

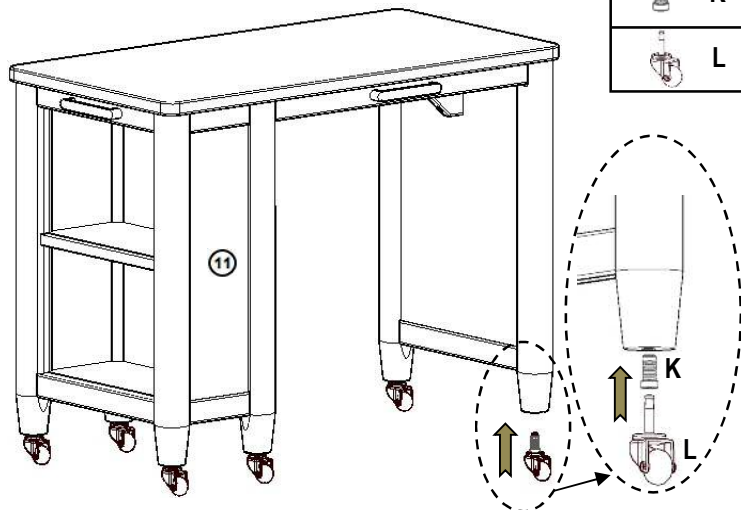


Install casters in all desk posts

STEP 12

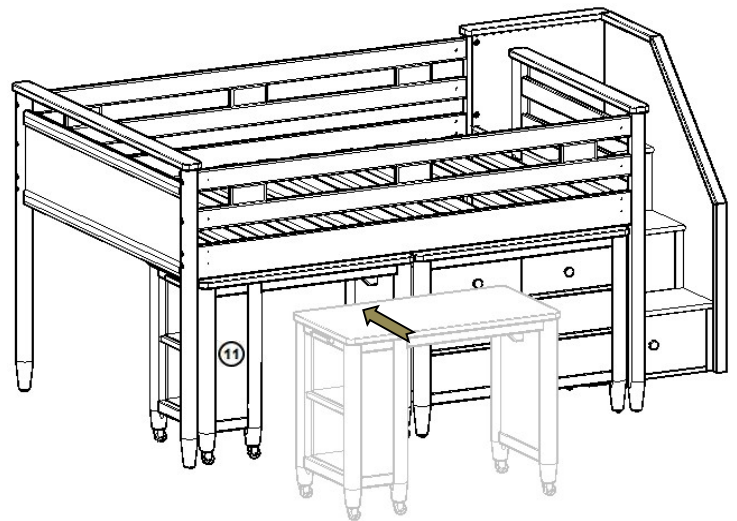

Slide caster desk under loft bed

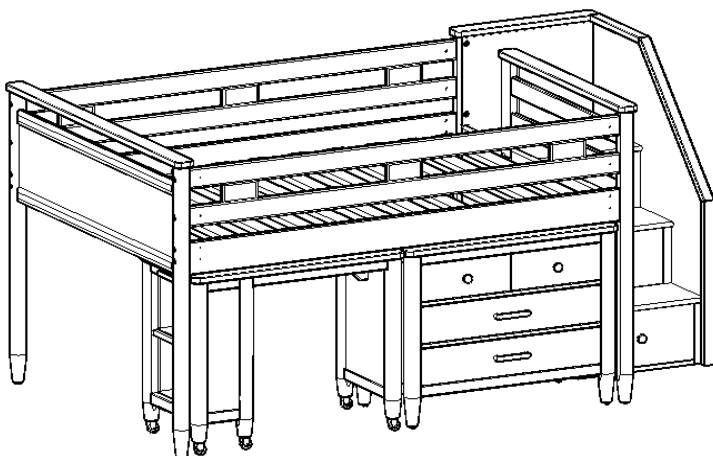

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide


Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide





Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

PARTS LIST

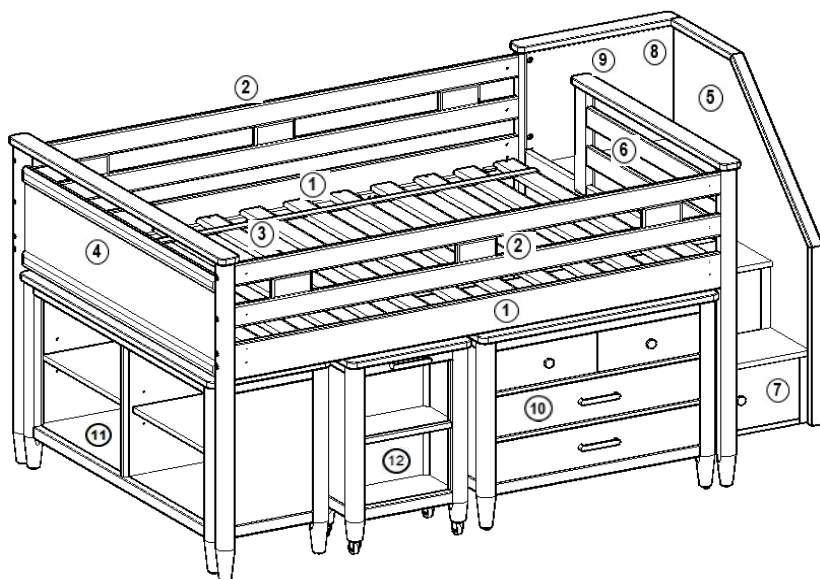

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

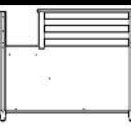PARTS LIST		QTY	PARTS LIST		QTY
1		2 Pcs	7		1 Pcs
2		2 Pcs	8		1 Pcs
3		1 Pcs	9		1 Pcs
4		1 Pcs	10		1 Pcs
5		1 Pcs	11		1 Pcs
6		1 Pcs	12		1 Pc

3661123P FULL LOW LOFT W/STEP END,CHEST DESK&BOOKCASE D-IRON ORE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511233	12D-163	REVERSIBLE LOW LOFT STEP UNIT
36111235	12D-165	FULL LOW LOFT SIDE PANELS
36211237	12D-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011233	12D-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611235	12D-403	3 DRW CHEST
36911231	12D-762	57" BOOKCASE
36711237	12D-602	CASTER DESK

3661124P FULL LOW LOFT W/STEP END,CHEST DESK&BOOKCASE E-SLATE BLUE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511245	12E-163	REVERSIBLE LOW LOFT STEP UNIT
36111247	12E-165	FULL LOW LOFT SIDE PANELS
36211249	12E-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011245	12E-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611247	12E-403	3 DRW CHEST
36911243	12E-762	57" BOOKCASE
36711249	12E-602	CASTER DESK

3661125P FULL LOW LOFT W/STEP END,CHEST DESK&BOOKCASE G-LIGHT GRAY		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511257	12G-163	REVERSIBLE LOW LOFT STEP UNIT
36111259	12G-165	FULL LOW LOFT SIDE PANELS
36211251	12G-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011257	12G-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611259	12G-403	3 DRW CHEST
36911255	12G-762	57" BOOKCASE
36711251	12G-602	CASTER DESK

3661126P FULL LOW LOFT W/STEP END,CHEST DESK&BOOKCASE W-WHITE		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511269	12W-163	REVERSIBLE LOW LOFT STEP UNIT
36111261	12W-165	FULL LOW LOFT SIDE PANELS
36211263	12W-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011269	12W-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611261	12W-403	3 DRW CHEST
36911267	12W-762	57" BOOKCASE
36711263	12W-602	CASTER DESK

3661127P FULL LOW LOFT W/STEP END,CHEST DESK&BOOKCASE A-PINK		
RTG SKU #	STYLE #	ITEM DESCRIPTION
36511271	12A-163	REVERSIBLE LOW LOFT STEP UNIT
36111273	12A-165	FULL LOW LOFT SIDE PANELS
36211275	12A-732	4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS
36011271	12A-703	FULL LOW LOFT BUNK END
36911281	100-171	12 PC FULL SLAT ROLL
36611273	12A-403	3 DRW CHEST
36911279	12A-762	57" BOOKCASE
36711275	12A-602	CASTER DESK

TOOLS NEEDED

Phillips screwdriver (not included)



4 mm allen wrench (included)



5 mm allen wrench (included)



HARDWARE LIST

12-732 4 PC SIDE RAILS W/ 2 FULL LENGTH RAILS



5/16-18x80 mm bolt 16x




5 mm allen wrench 1x



4 mm allen wrench 1x


Hardware pack
location




12-403 LOW LOFT STEP UNIT



Gold knobs 3x



5/16-18x40mm bolt 14x

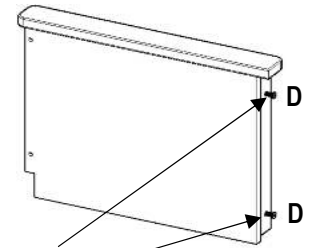

Hardware
location
Installed

100-170 12 PC FULL SLAT ROLL



6 x 1 1/4" Screw 10x


Hardware pack
location



12-164 TWIN LOW LOFT SIDE PANELS




1/4-20X30mm bolt 2x

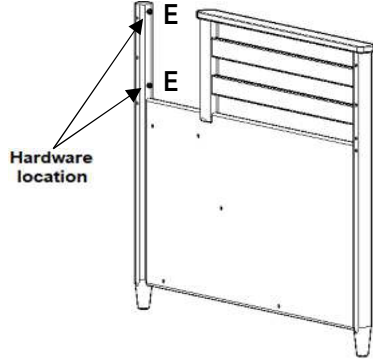

Hardware
location

Hardware pack
location

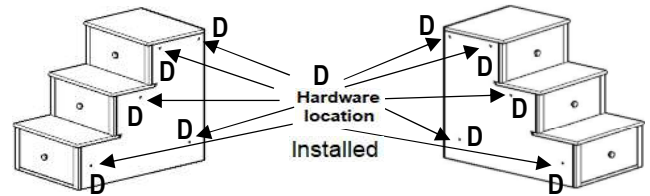

Installed


12-403 CHEST



Gold pulls 2x



Gold knobs 2x

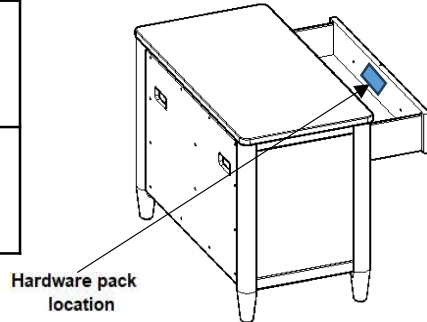

Hardware pack
location

12-602 CASTER DESK




Caster 6x



Caster socket 6x



Gold pulls 2x

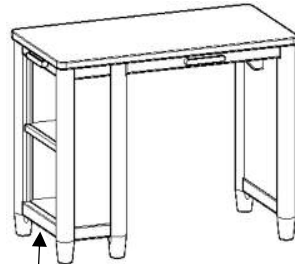


Hardware pack
location

ASSEMBLY INSTRUCTIONS

TIPS : SEE ILLUSTRATION BELOW

- 1- Use the long end of the allen wrench to fasten bolts loosely and quickly.
- 2- Use the short end of the allen wrench for final tightening


TIPS # 1

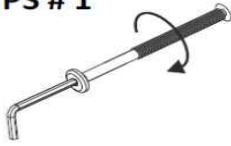

TIPS # 2




FIRST DETERMINE THE CONFIGURATION THAT FITS YOUR ROOM

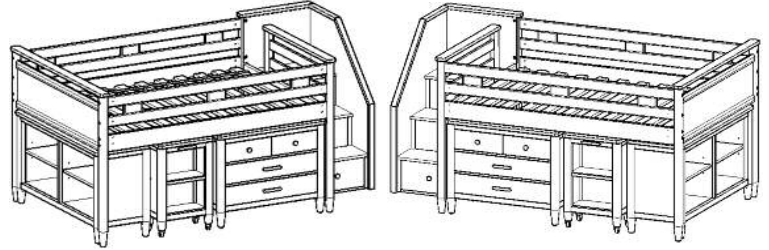


STAIRS ON THE RIGHT

STAIRS ON THE LEFT

STEP 1

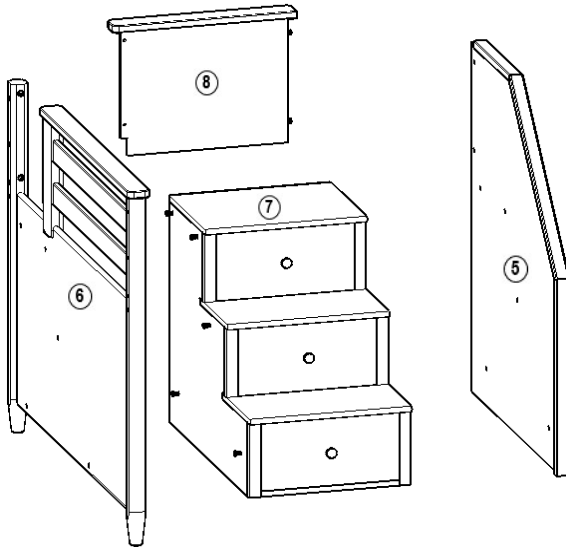


Assembly configuration for stairs on the right side.

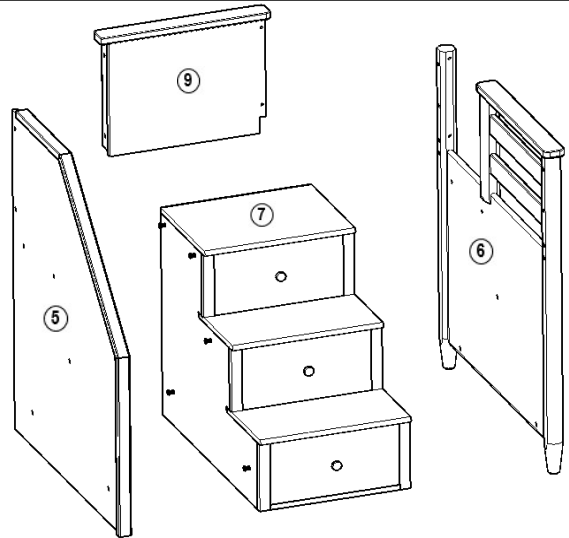


Assembly configuration for stairs on the left side.

STEP 2

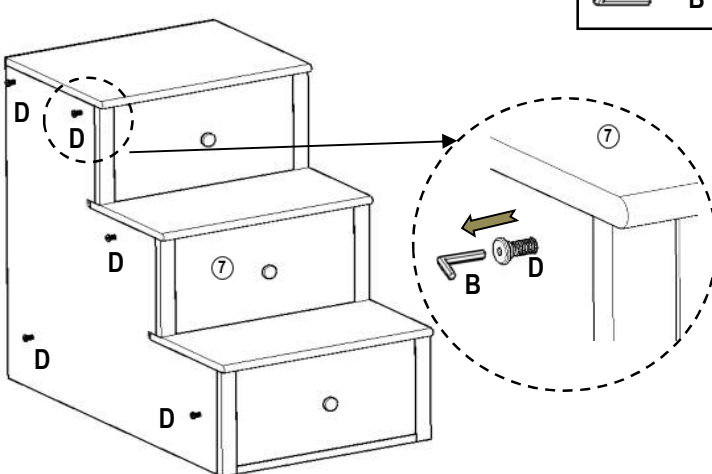

Remove all pre-installed bolts from both sides (10 pcs)
save them for next steps.


STEP 3

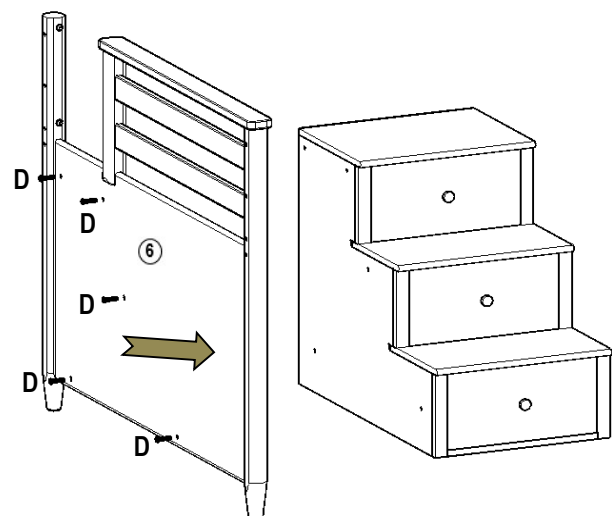

align holes then fasten with previously removed bolts.


ASSEMBLY INSTRUCTIONS

STEP 4

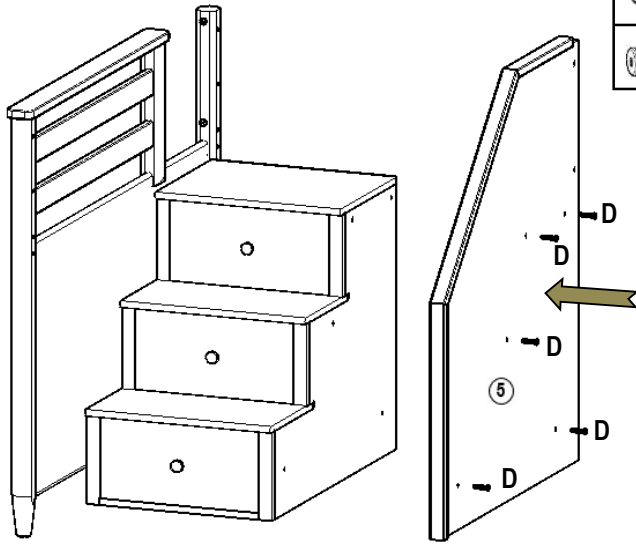


Repeat process for angle side panel.

STEP 5

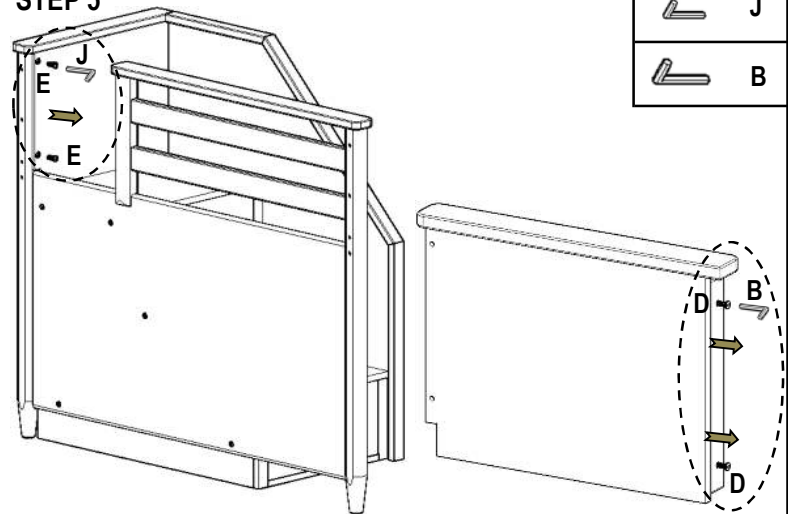


Removed bolts from side panel (2), and from step back panel (2). save them for next step.

STEP 6

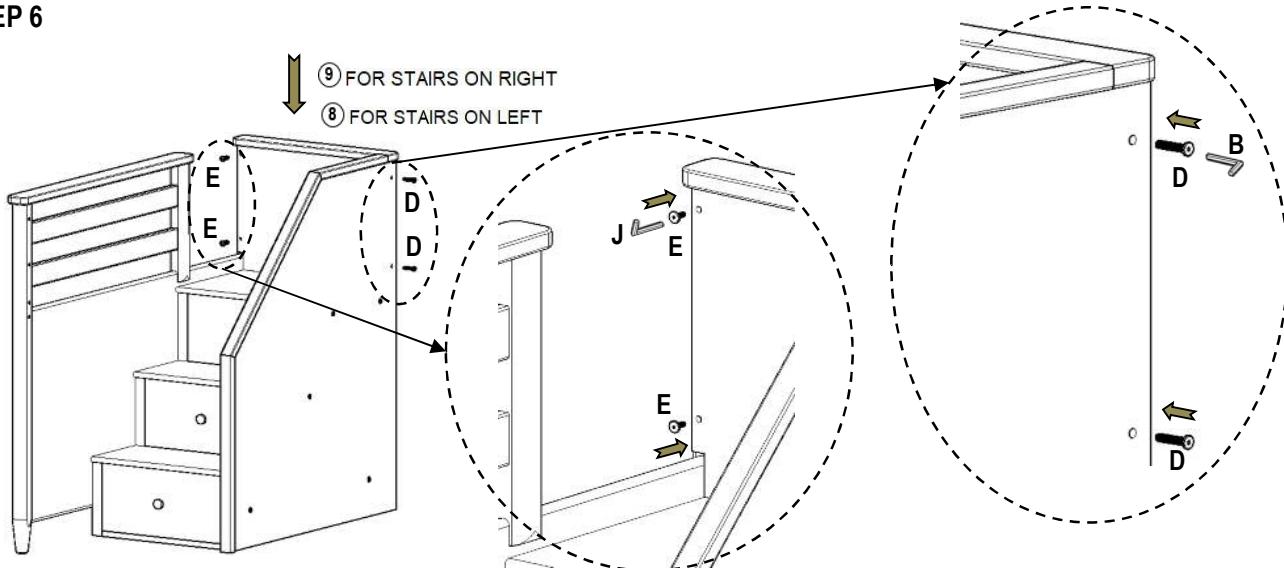


Assemble step back panel

STEP 7

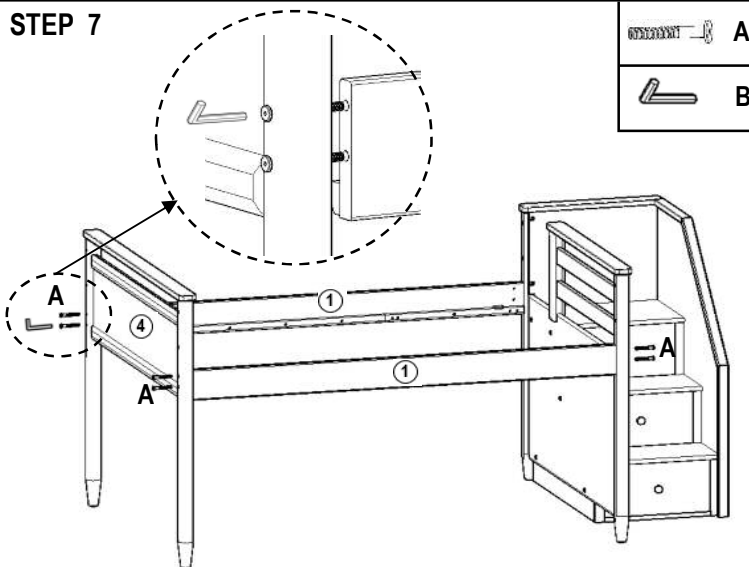

Assemble side rails.



STEP 8

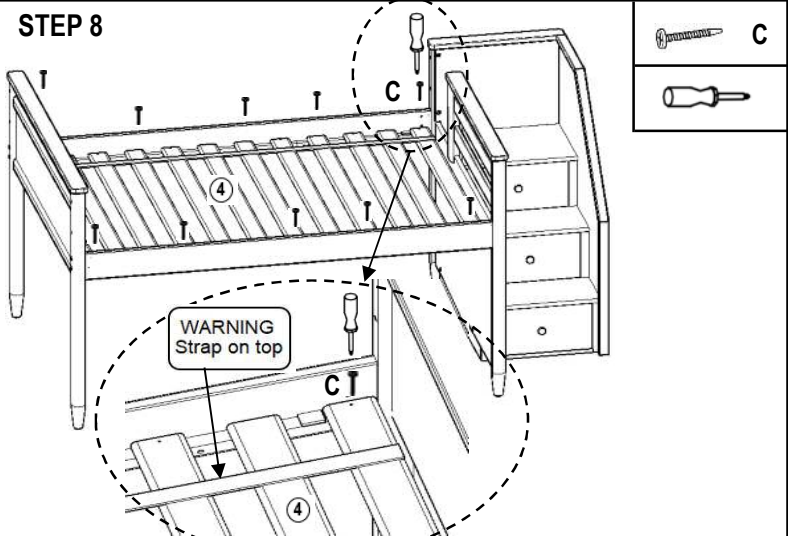

Install slat roll with straps facing up, secure both end slats with 1 1/4 screws then fasten the rest of the pre-bored slats.

ASSEMBLY INSTRUCTIONS


STEP 9

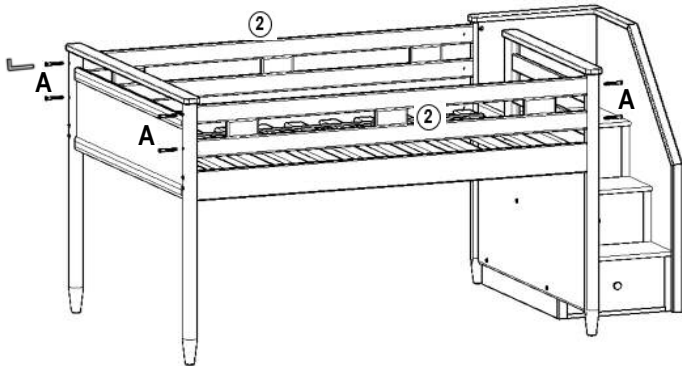

Assemble guardrails and tighten all bolts.


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

STEP 10

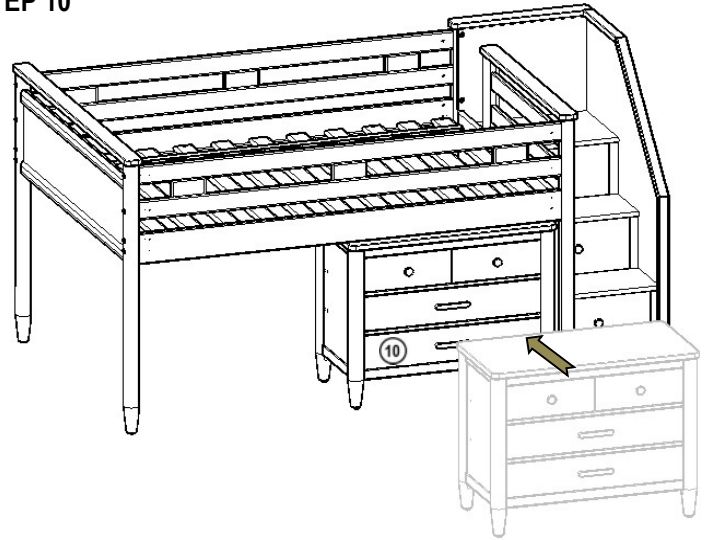


Slide 3 drw chest under loft bed

STEP 11

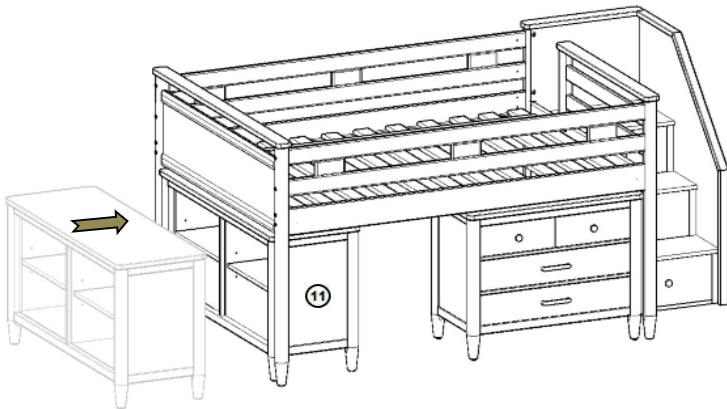


Slide bookcase under loft bed

STEP 12

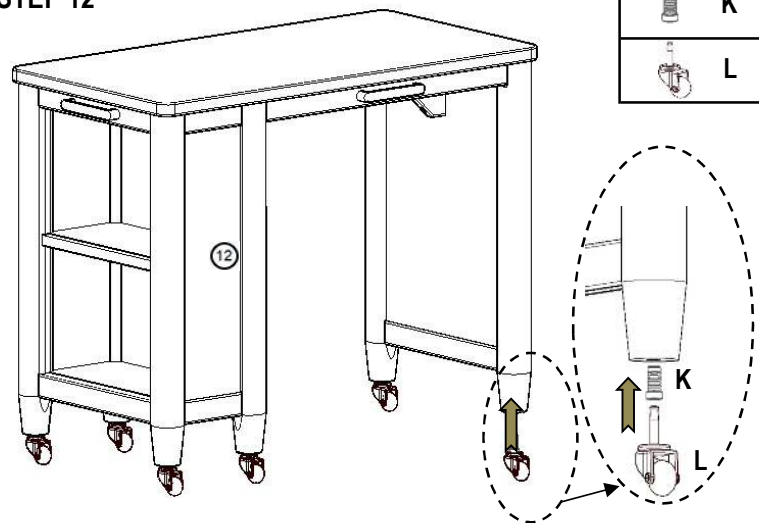

Install casters in all desk posts

STEP 13

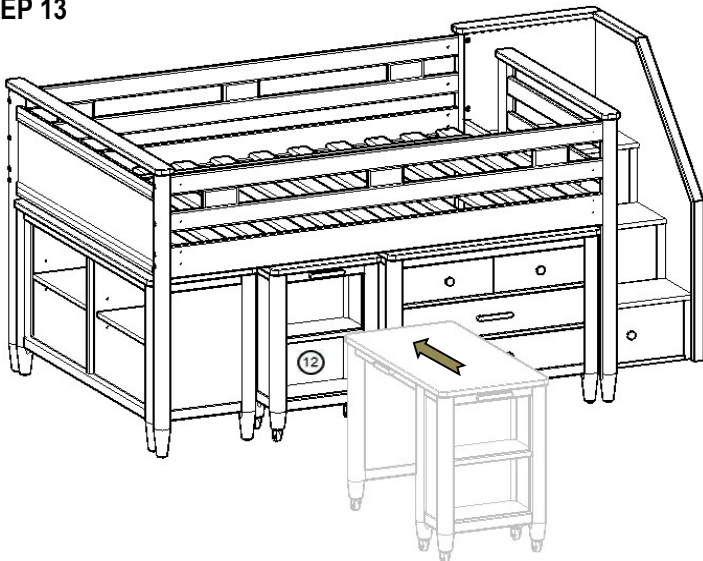

Slide caster desk under loft bed

Use only correct mattress dimensions and Slat roll:

Twin size mattress- 74" - 75" long and 37-1/2" - 38-1/2" wide

Twin size Slat roll- 75 1/4" long and 39" wide

Full size mattress- 74" - 75" long and 52-1/2" - 53-1/2" wide

Full size Slat roll- 75 1/4" long and 54" wide

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

