

(28-706) COTTAGE COLORS COLLECTION 1 PC BUNK BED END TWIN ASSEMBLY INSTRUCTIONS

THANK YOU FOR YOUR PURCHASE !


PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

READ ALL THE INSTRUCTIONS AND IDENTIFY ALL COMPONENTS AND CHOOSE YOUR CONFIGURATION AND BE SURE YOU HAVE ALL PARTS

TWO PEOPLE ARE NEEDED TO ASSEMBLE.

DO NOT COMPLETELY TIGHTEN ALL BOLTS UNTIL ALL COMPONENTS ARE CONNECTED.

CONFIGURATION TYPE # 1

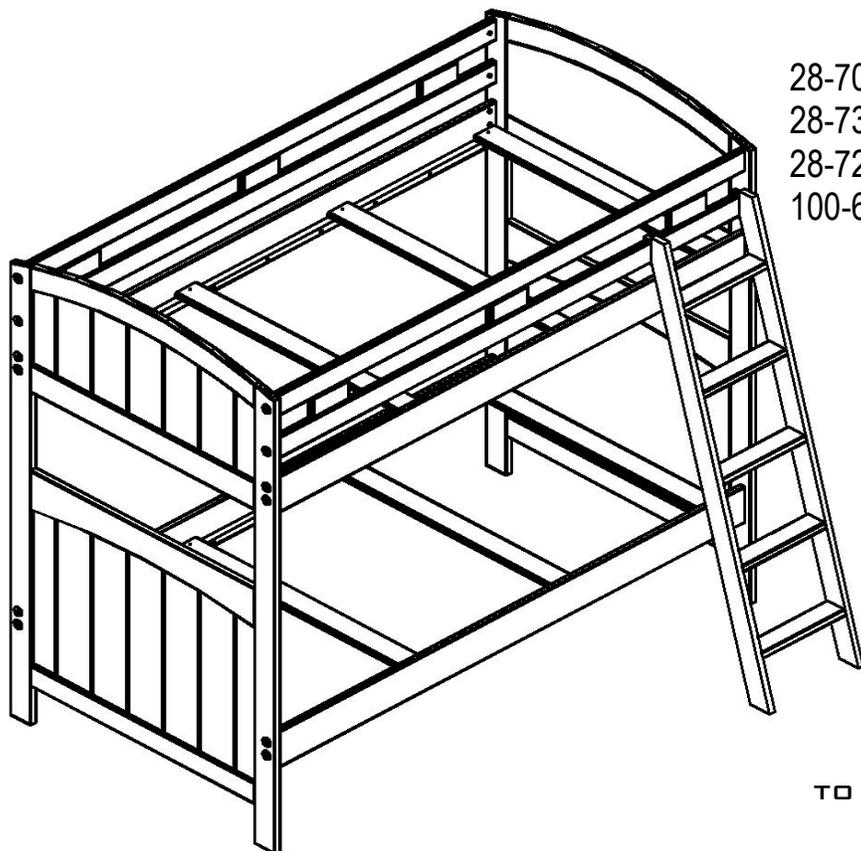

28-706 1 PC BUNK BED END TWIN (2 PCS)

28-730 6 PIECE RAILS

28-720 LADDER

100-645 TWIN SLATS (2 PCS)

WARNING:

THE BED SLATS WILL NO SUPPORT A MATTRES ALONE, A SLAT PACK OR A BUNKIE BOARD IS REQUIRED FOR PROPER SAFETY.


(NOT INCLUDED)

TO ASSEMBLE THIS BUNK BEDREQUIRES TWO PERSONS


TIPS : SEE ILLUSTRATION BELOW

- 1.- USE THE LONG END OF THE ALLEN WRENCH TO FASTEN BOLTS LOOSELY AND QUICKLY.
- 2.- USE THE SHORT END OF THE ALLEN WRENCH FOR FINAL TIGHTENING

TIPS #1

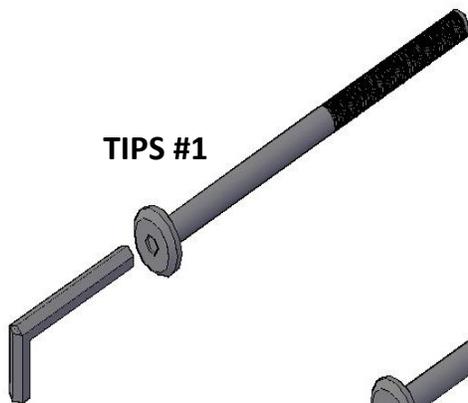

TIPS #2

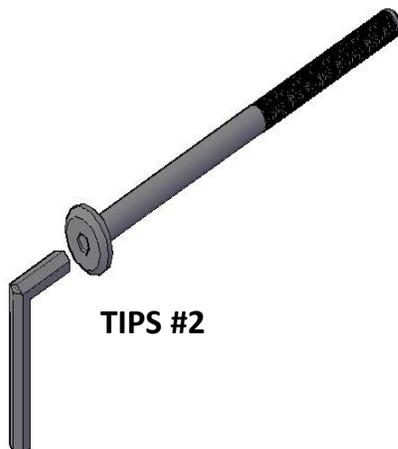

TOOLS NEEDED

PHILIPS HEADSCREWDRIVER (NOT INCLUDED)
5MM ALLEN WRENCH (INCLUDED)

1 PC BUNK BED END TWIN ASSEMBLY INSTRUCTIONS CONFIGURATION TYPE # 1

LIST OF CONTENTS
COTTAGE COLORS COLLECTION

1 PC BUNK BED END TWIN BOX (28-706) FIG.1 (2 PCS)

A.- (1) 1 PC BUNK BED END TWIN

6 PIECE RAILS BOX (28-730) FIG.2

B.- (4) SIDE RAILS

C.- (2) GUARD RAILS

HARDWARE PACK (HPK00104-0)

D.- (24) 80MM FLAT HEAD BOLTS

E.- (24) 5/16"-18 X 5/8" CROSS DOWEL NUTS BLACK

F.- (1) 5MM ALLEN WRENCH

TWIN SLATS BOX (100-645) FIG.3 (2 PCS)

G.- (4) 39" SLATS

HARDWARE PACK (HPK00016-0)

H.- (8) 1 1/4" SCREWS

LADDER BOX (28-720) FIG.4

I.- (1) LADDER

HARDWARE PACK (HPK00008-0)

J.- (2) METAL HOOK BRACKETS

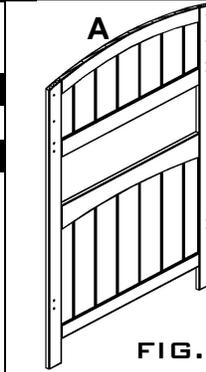


FIG. 1

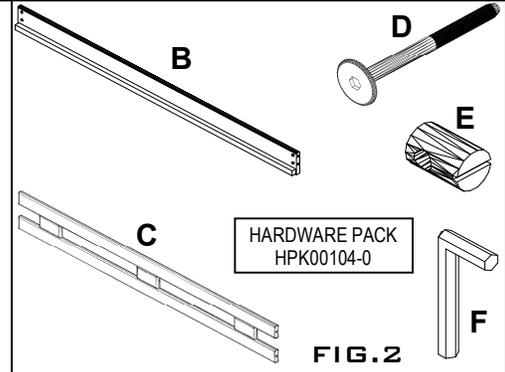


FIG. 2

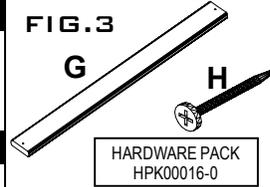


FIG. 3

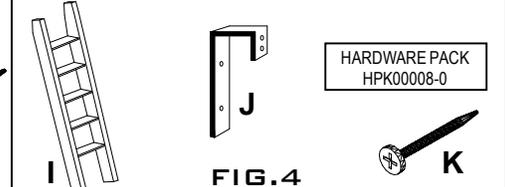


FIG. 4

1.- TO ASSEMBLE **TWIN OVER TWIN BUNK BED**, USING TWO 1 PC BUNK BED END TWINS (A), FOUR SIDE RAILS (B), AND TWO GUARD RAILS (C).

2.- INSERT 2 CROSS DOWEL NUTS (E) IN ACCESS HOLE INSIDE THE SIDE RAIL&GUARD RAIL, ALIGN CROSS DOWEL NUT, MAKE SURE THE GROOVE IS HORIZONTAL, **SEE FIG.5**
 3.- ATTACH TWO SIDE RAILS (B), &TWO GUARD RAILS (C) ON 1 PC BUNK BED END TWIN WITH THE GROVE LINES AS SHOWN IN **FIG.6**, INSERTING TWO 80MM FLAT BOLTS (D) INTO 1 PC BUNK BED END TWIN HOLES, USE THE 5MM ALLEN WRENCH (F) TO TIGHTEN BOTH BOLTS (DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER), **SEE FIG.6**, REPEAT THE SAME PROCESS AT ALL FOUR CORNERS.

4.- TO ATTACH BOTTOM SIDE RAILS, REPEAT THE SAME PROCESS AS SHOWN IN TOP SIDE RAILS, **SEE FIG.6**

5.- PLACE FOUR SLATS (G) ON TOP&BOTTOM SIDE RAIL CLEATS, ONE SLAT IN BOTH ENDS, PUSH THE SLATS AGAINST THE BED END POST (**FIG.A**)&TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT MUST BE FASTEN WITH TWO 1 1/4" SCREWS (H), **SEE FIG.7** (USE TWO TWIN SLATS, (100-645), AS SHOWN IN FIG.8)

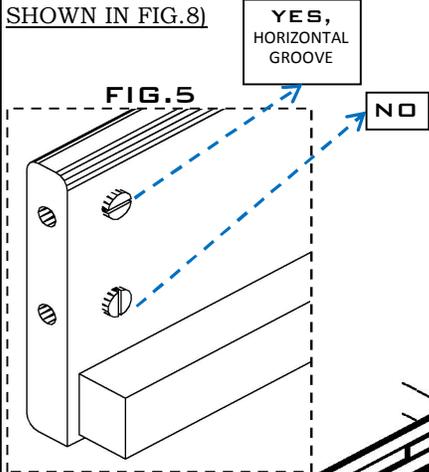


FIG. 5

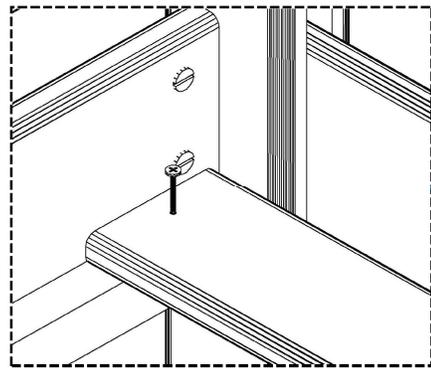


FIG. A

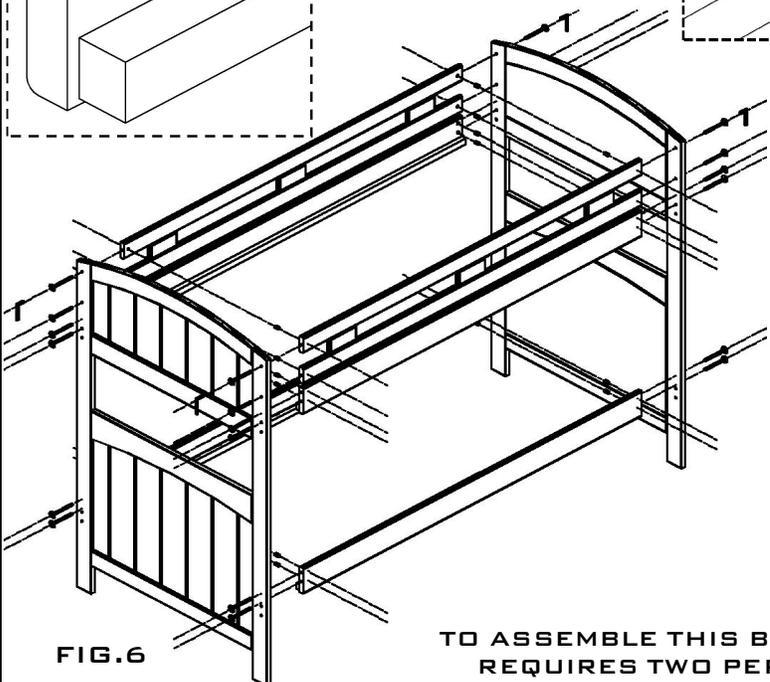


FIG. 6

TO ASSEMBLE THIS BUNK BED REQUIRES TWO PERSONS



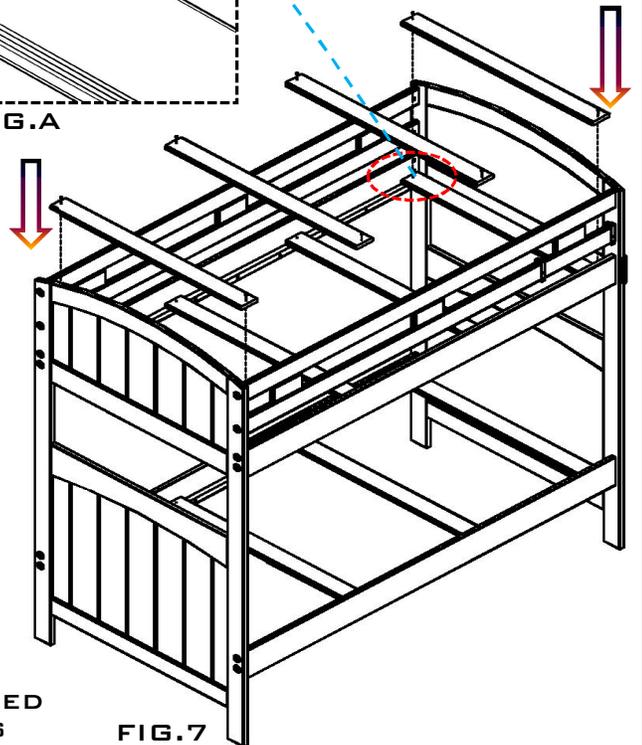


FIG. 7

LADDER ASSEMBLY INSTRUCTION

1.-ALIGN THE PRE-DRILLED HOLES IN LONG PART OF METAL HOOKS BRACKETS (J) WITH THE PRE-DRILLED HOLES IN THE LADDER (I),SECURE WITH TWO 1" SCREWS (K) USING PHILLIPS HEAD SCREWDRIVER (**NOT INCLUDED**),SEE FIG.B &HOOK THE LADDER IN THE PROPER POSITION, ADJUST&ALIGN THE PRE-DRILLED HOLES IN THE SHORT PART OF METAL HOOKS ON TOP GUARD RAIL &SECURE THE LADDER, AS SHOWN IN **FIG.1**

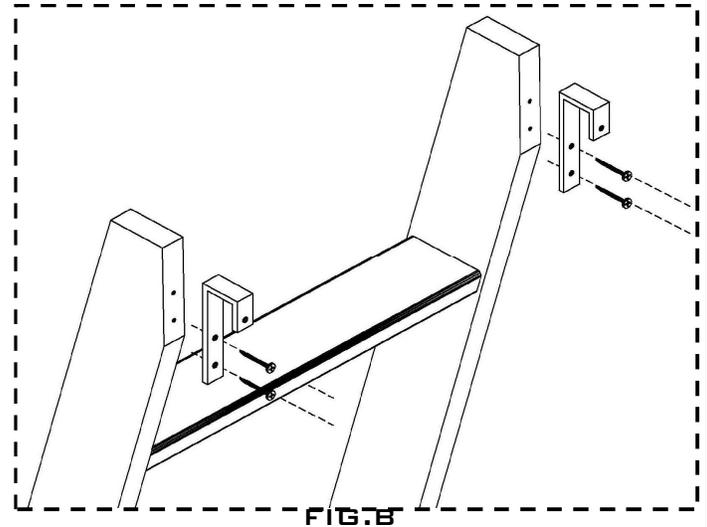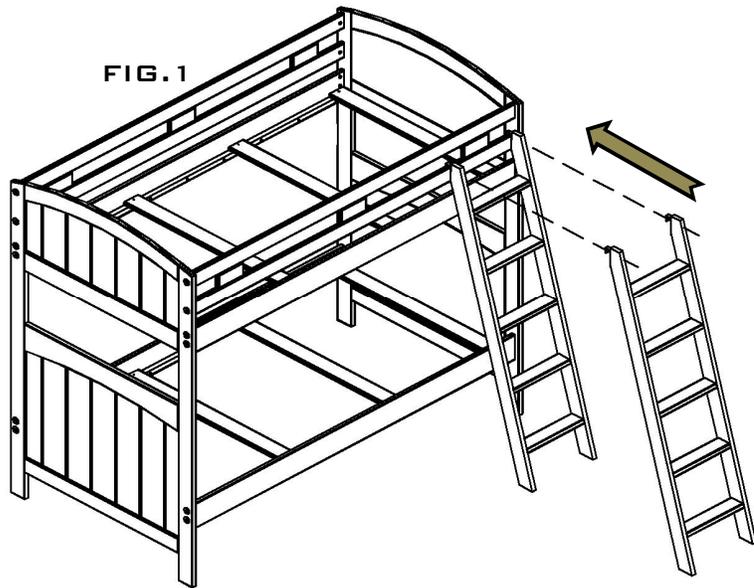

SAFETY WARNINGS

- 1.- FOLLOW THE INFORMATION ON THE WARNINGS APPEARING ON THE UPPER BUNK END STRUCTURE AND ON THE CARTON. DO NOT REMOVE WARNING LABEL FROM BED.
- 2.- ALWAYS USE THE RECOMMENDED SIZE MATTRESS OR MATTRESS SUPPORT, OR BOTH TO HELP PREVENT THE LIKELIHOOD OF ENTRAPMENT OR FALLS.
- 3.- SURFACE OF MATTRESS MUST BE AT LEAST 5 IN BELOW THE UPPER EDGE OF GUARDRAILS.
- 4.- DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE THE UPPER BUNK.
- 5.- PROHIBIT MORE THAN ONE PERSON ON UPPER BUNK.
- 6.- PERIODICALLY CHECK AND ENSURE THAT THE GUARD RAIL, LADDER AND OTHER COMPONENTS ARE IN THEIR PROPER POSITION, **FREE FROM DAMAGE**, AND THAT ALL CONNECTORS ARE TIGHT.
- 7.- DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
- 8.- ALWAYS USE THE LADDER FOR ENTERING AND LEAVING THE UPPER BUNK.
- 9.- DO NOT USE SUBSTITUTE PARTS. CONTACT THE MANUFACTURER OR DEALER FOR REPLACEMENT PARTS.
- 10.- USE OF A NIGHT LIGHT MAY PROVIDE ADDED SAFETY PRECAUTION FOR A CHILD USING THE UPPER BUNK.
- 11 - IF THE BUNK BED WILL BE PLACED NEXT TO THE WALL THE GUARD RAIL THAT RUNS THE FULL LENGTH OF THE BED SHOULD BE PLACED AGAINST THE WALL TO PREVENT ENTRAPMENT BETWEEN THE BED AND THE WALL.
- 12.- ALWAYS USE GUARDRAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
- 13.- THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
- 14.- **STRANGULATION HAZARD.**NEVER ATTACH OR HANG ITEMS TO ANY PART OF THE BUNK BED THAT ARE NOT DESIGNED FOR USE WITH THE BED, FOR EXAMPLE BUT NOT LIMITED TO HOOKS, BELTS AND JUMP ROPES.
- 15.- KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

SIZE OF MATTRESS AND FOUNDATION

THE UPPER&LOWER BUNK BED IS DESIGNED TO USE ONLY A MATTRESS WHICH IS **74" TO 75" LONG** AND **37 1/2" TO 38 1/2" WIDE** FOR **TWIN BED**.
 WHEN THE LOWER BUNK BED IS A FULL BED, THE LOWER BUNK IS DESIGNED TO USE ONLY A MATTRESS WHICH IS **74" TO 75" LONG** AND **52 1/2" X 53 1/2" WIDE**.
 THE BUNKIE BOARD IS REQUIRED TO **37 1/2" WIDE X 74" LONG** FOR **TWIN BED** AND **52 1/2" WIDE X 74" LONG** FOR **FULL BED**.

NOTE: ENSURE THICKNESS OF MATTRESS AND FOUNDATION COMBINED DOES NOT EXCEED **10"** AND MATTRESS IS AT LEAST **5"** BELOW UPPER EDGE OF GUARDRAILS.

REPLACEMENT PARTS

REPLACEMENT PARTS, INCLUDING ADDITIONAL GUARD RAILS, MAY BE OBTAINED FROM ANY OF OUR CANYON FURNITURE COMPANY DEALERS.