ROOMS TO GO

Assembly Instructions


GLOB 1497-15T-1, 06T/F-3, 15T-2 Twin Bookcase Bed SKU# 35114975, 35914971, 35214977 GLOB 1597-15T-1, 06T/F-3, 15T-2 Twin Bookcase Bed SKU# 35114987, 35914983, 35214989

Parts list				Q'ty			\searrow		
a		He	Headboard					*** To avoid breaking sliding hinges, please open & close panel by placing both hands	
b		Pc	st (L/R)		2pcs			at the center of the panel.	
C &	P .	B	Base frame		1pc	•	(//		
d ⊑		Sic	de Rail		2pcs				
e		Fo	ootboard		1pc				
f		<u> </u>	at		4pcs				
g		Co	rner bra	acket	2pcs				
Hardw	are list	1			<u> </u>				
воокс	ASE BED	WAL	L BED	Uar	dware		Q'TY		
Step	Code	Step	Code	Паі	uware		QII		
	Α		Α	Allen key 4mm			1 pc		
1	В			Bolt 1/4"x20x1-1/4"			4pcs		
1	С			Spring Washer 1/4"x	¢∮11x2mmT	O	4pcs		
1	D			Flat Washer 1/4"xø1	.9x2mmT	0	4pcs		
2	В	FOLLOW		Bolt 1/4"x20x1-1/4"			4pcs		
2	С		CASE	Spring Washer 1/4"x	φ11x2mmT		4pcs		
2	D	BED		Flat Washer 1/4"xø1	9x2mmT	<u> </u>	4pcs		
3	В		ΓEP	Bolt 1/4"x20x1-1/4"			2pcs		
3	С	1^{ϵ}	1~5 Spring Washer		ø11x2mmT	mmT 💿 2pcs			
3	D			Flat Washer 1/4"xø19x2mmT		2pcs	1		
4	В			Bolt 1/4"x20x1-1/4" Spring Washer 1/4"x\$\phi\$11x2mmT		4pcs	***NOTE: Q'TY PER BOOKCASE		
4	С					4pcs	HEADBOARD PACKAGE.		
4	D			Flat Washer 1/4"xø1			4pcs		
		6	Е	Bolt 1/4"x20x1-1/8"			1pc		
		6	F	Spring Washer 1/4">	 <φ11x2mm٦		1pc		
		6	G	Flat Washer 1/4"xø1			1pc		
		6	Н	T nut 1/4"x15mm			1pc		
		9	K	Connecting plate 152x25x			1pc		
			L	Screw #8x3/4"		(*)B00000>	4pcs		
∟ Hardwa	are list 2					-			
	ASE BED	WAL	L BED			OIT.			
Step	Code	Step	Code	Har	dware		Q'TY		
6	I	7	I	Screw #8x1"		O B222222	8pcs		
	are list 3							TOOLS DECLETED (NOT DECLETE)	
-	ASE BED		L BED	Hardware		Q'TY	TOOLS REQUIRED (NOT PROVIDED)		
Step	Code	Step	Code				PHILLIPS SCREWDRIVER		
6	J	8	J	Furniture tipping res	traint	D	1set		
Hardware Pack Location(s):									


Hardware Pack Location(s):

Hardware list 1&3 pack in GLOB 1497/1597-15T-1 Twin Bookcase Headboard SKU# 35114975/35114987 Hardware list 2 pack in GLOB 1497/1597-15T-2 Twin Low Footboard SKU# 35214977/35214989


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

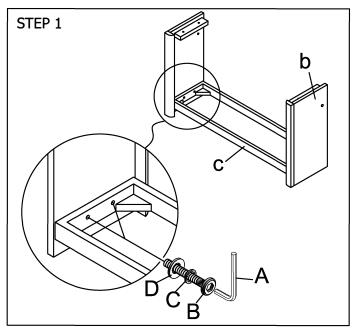


Assemble Base frame to Post (L/R).

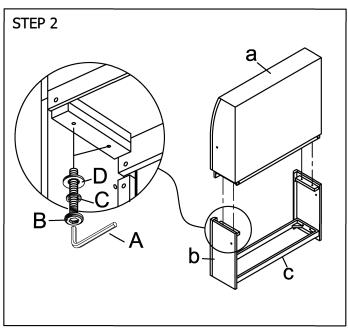

Assemble Headboard to Post (L/R).

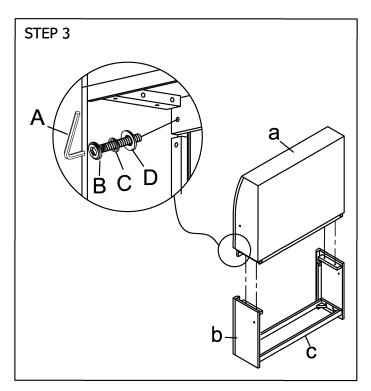

Assemble Headboard to Post (L/R).

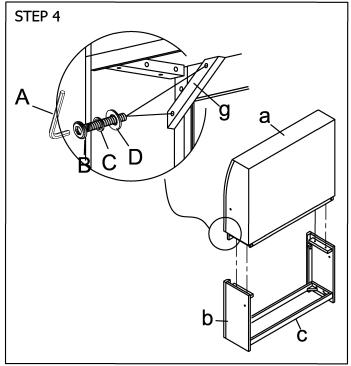


Assemble Corner bracket to Headboard and Post (L/R).




Assembly Instructions

GLOB 1497-15T-1, 06T/F-3, 15T-2 Twin Bookcase Bed SKU# 35114975, 35914971, 35214977 GLOB 1597-15T-1, 06T/F-3, 15T-2 Twin Bookcase Bed SKU# 35114987, 35914983, 35214989

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

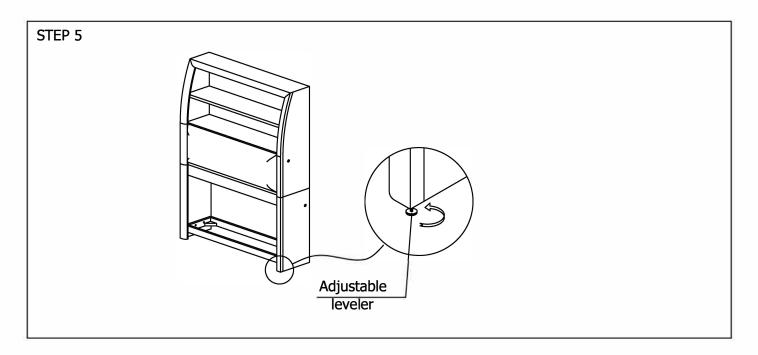

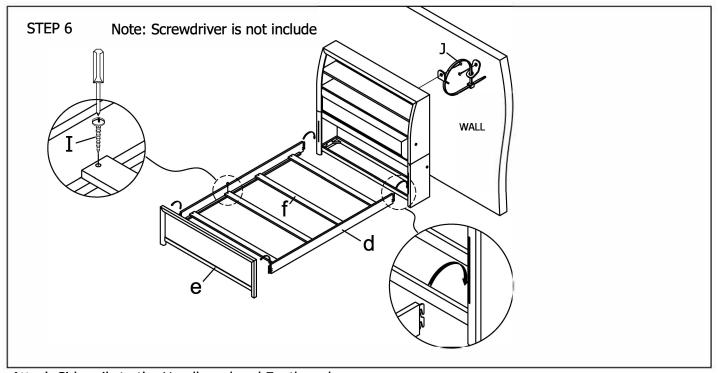

Attach Side rails to the Headboard and Footboard.


Then screw all slats to Side rails.



Assembly Instructions

GLOB 1497-15T-1, 06T/F-3, 15-3, 15T-2 or 15F-2 Wall Bed SKU# 35114975, 35914971, 36014974, 35214977 or 35814979 GLOB 1597-15T-1, 06T/F-3, 15-3, 15T-2 or 15F-2 Wall Bed SKU# 35114987, 35914983, 36014986, 35214989 or 35814981

	Parts list						
а		Headboard	1pc				
b		Post (L/R)	2pcs				
С		Base frame	1pc				
d		Side Rail	2pcs				
е		Footboard	1pc				
f	•	Slat	4pcs				
g	₹	Corner bracket	2pcs				
	lauduraus list 1						

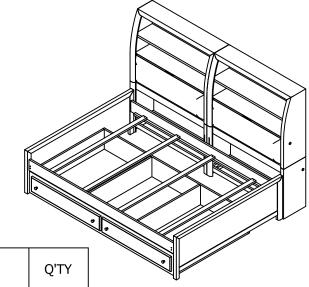

Н	lar	٠dw	<i>ı</i> ar	-е І	ist	•
	ıaı	u۷	vai	\subset 1	IJι	

BOOKCASE BED		WALL BED		Handriana	O'TV
Step	Code	Step	Code	Hardware	Q'TY
	Α		Α	Allen key 4mm	1 pc
1	В			Bolt 1/4"x20x1-1/4"	4pcs
1	С	FOLLOW BOOKCASE BED STEP 1~5		Spring Washer 1/4"xø11x2mmT 🕒	4pcs
1	D			Flat Washer 1/4"xø19x2mmT 🔘	4pcs
2	В			Bolt 1/4"x20x1-1/4"	4pcs
2	С			Spring Washer 1/4"xø11x2mmT 🕒	4pcs
2	D			Flat Washer 1/4"xø19x2mmT 🔘	4pcs
3	В			Bolt 1/4"x20x1-1/4"	2pcs
3	С			Spring Washer 1/4"xø11x2mmT 🕒	2pcs
3	D			Flat Washer 1/4"xø19x2mmT 🔘	2pcs
4	В			Bolt 1/4"x20x1-1/4"	4pcs
4	С			Spring Washer 1/4"xø11x2mmT 🕒	4pcs
4	D			Flat Washer 1/4"xø19x2mmT 🔘	4pcs
		6	Е	Bolt 1/4"x20x1-1/8"	1pc
			F	Spring Washer 1/4"xø11x2mmT 🕒	1pc
			G	Flat Washer 1/4"xø19x2mmT 🔘	1pc
			Н	T nut 1/4"x15mm 🕒	1pc
			K	Connecting plate 152x25x25x2.0mm	1pc
			L	Screw #8x3/4"	4pcs

Hardware list 2

	41 C 110 C E						
BOOKCASE BED		WALL BED		Hardware			Q'TY
Step	Code	Step	Code		Haraware		
6	I	7	I	Screw #8x1"		O 222222	8pcs

Hardware list 3

BOOKCASE BED		WALL BED		Hardware	O'TY
Step	Code	Step	Code	Tiaraware	٠٠
6	J	8	J	Furniture tipping restraint	1set

TOOLS REQUIRED (NOT PROVIDED)					
PHILLIPS SCREWDRIVER					

Hardware Pack Location(s):

Hardware list 1 pack in GLOB 1497/1597-15T-1 Headboard SKU# 35114975/35114987

Hardware list 2 pack in GLOB 1497/1597-15T-2 Twin Low Footboard SKU# 35214977/35214989





Assembly Instructions

GLOB 1497-15T-1, 06T/F-3, 15-3, 15T-2 or 15F-2 Wall Bed SKU# 35114975, 35914971, 36014974, 35214977 or 35814979 GLOB 1597-15T-1, 06T/F-3, 15-3, 15T-2 or 15F-2 Wall Bed SKU# 35114987, 35914983, 36014986, 35214989 or 35814981

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


STEP $1\sim5$ PLEASE REFER TO TWIN BOOKCASE BED ASSEMBLY INSTRUCTION PAGE $1\sim3$

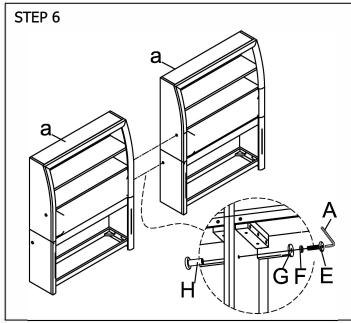


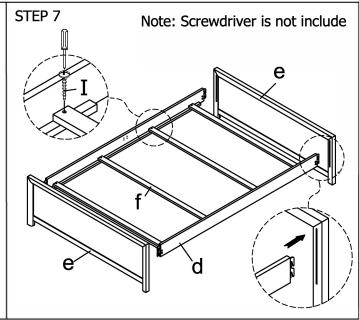

Assemble two Twin Bookcase Headboard together.

Attach Side rails to two Twin or Full Footboard. Then screw all slats to Side rails.

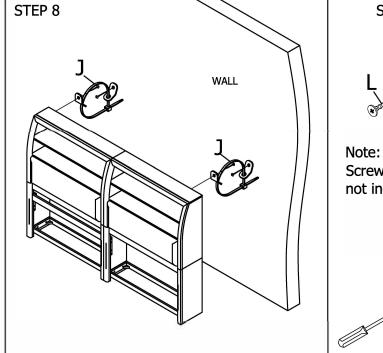

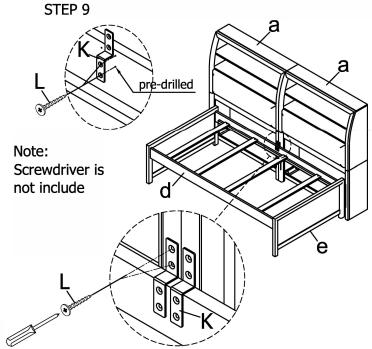

Attach bookcase headboard to Side Rail (d) using connecting plate (K) with screw (L) follow pre-drilled on the Side rail (d).