

(28-160) COTTAGE COLORS COLLECTION STEP BUNK UNIT ASSEMBLY INSTRUCTIONS

THANK YOU FOR YOUR PURCHASE !


PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

READ ALL THE INSTRUCTIONS AND IDENTIFY ALL COMPONENTS AND CHOOSE YOUR CONFIGURATION AND BE SURE YOU HAVE ALL PARTS

TWO PEOPLE ARE NEEDED TO ASSEMBLE.


DO NOT COMPLETELY TIGHTEN ALL BOLTS UNTIL ALL COMPONENTS ARE CONNECTED.

CONFIGURATION TYPE # 1

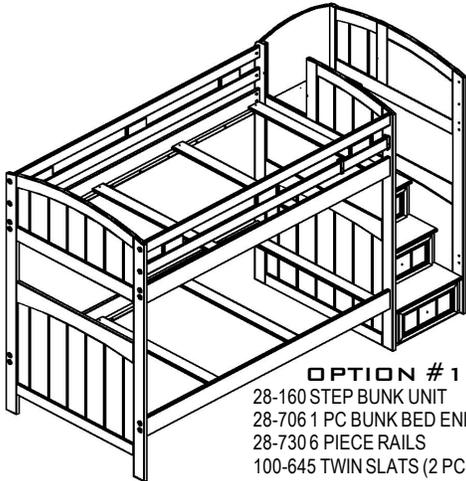

- OPTION # 1**
 28-160 STEP BUNK UNIT
 28-706 1 PC BUNK BED END TWIN
 28-730 6 PIECE RAILS
 100-645 TWIN SLATS (2 PCS)


- OPTION # 2**
 28-160 STEP BUNK UNIT
 28-706 1 PC BUNK BED END TWIN
 28-730 6 PIECE RAILS
 28-782 FULL EXTENDER KIT
 100-645 TWIN SLATS
 100-646 FULL SLATS

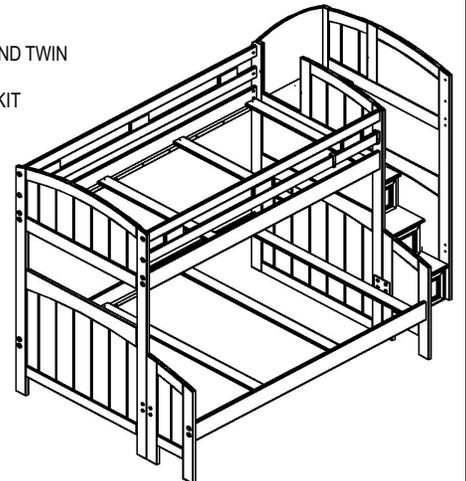


TOOLS NEEDED

- PHILIPS HEADSCREWDRIVER (NOT INCLUDED)
 5MM ALLEN WRENCH (INCLUDED)

CONFIGURATION TYPE # 2

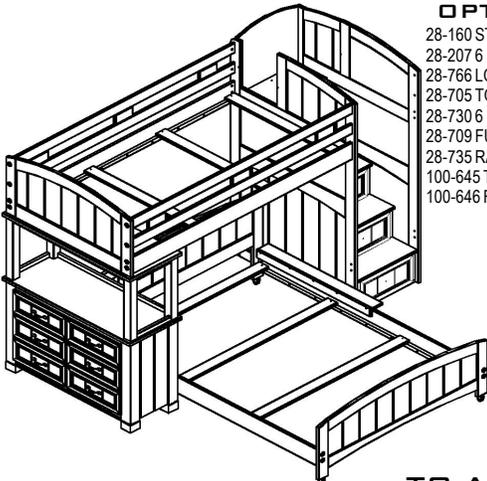


- OPTION # 1**
 28-160 STEP BUNK UNIT
 28-207 6 DRAWER LOFT DRESSER
 28-766 LOFT HUTCH
 28-705 TOP BUNK BED
 28-730 6 PIECE RAILS
 28-709 FULL BOTTOM HDBD&FTBD
 28-735 RAIL CAP
 100-645 TWIN SLATS
 100-646 FULL SLATS

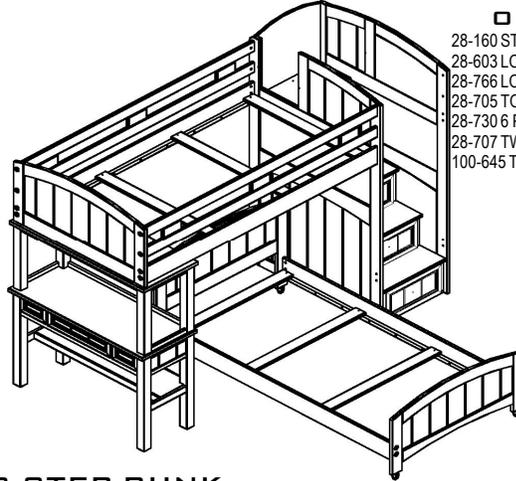


- OPTION # 2**
 28-160 STEP BUNK UNIT
 28-603 LOFT DESK
 28-766 LOFT HUTCH
 28-705 TOP BUNK BED
 28-730 6 PIECE RAILS
 28-707 TWIN BOTTOM HDBD&FTBD
 100-645 TWIN SLATS (2 PCS)

TO ASSEMBLE THIS STEP BUNK UNIT REQUIRES TWO PERSONS

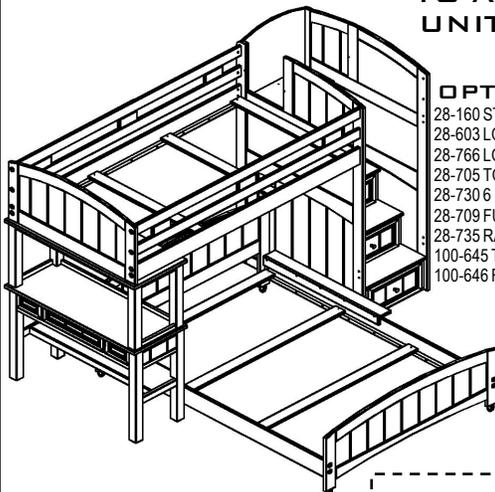

- OPTION # 3**
 28-160 STEP BUNK UNIT
 28-603 LOFT DESK
 28-766 LOFT HUTCH
 28-705 TOP BUNK BED
 28-730 6 PIECE RAILS
 28-709 FULL BOTTOM HDBD&FTBD
 28-735 RAIL CAP
 100-645 TWIN SLATS
 100-646 FULL SLATS

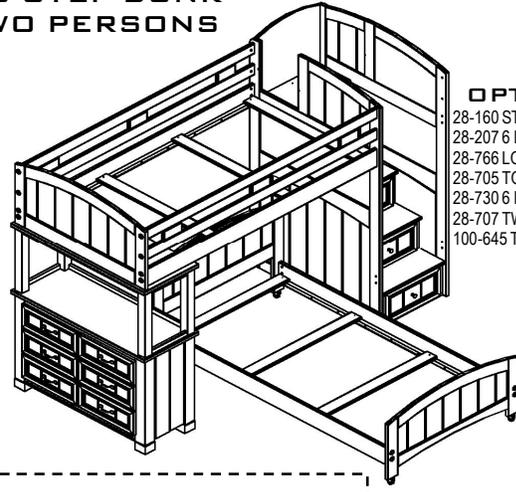

- OPTION # 4**
 28-160 STEP BUNK UNIT
 28-207 6 DRAWER LOFT DRESSER
 28-766 LOFT HUTCH
 28-705 TOP BUNK BED
 28-730 6 PIECE RAILS
 28-707 TWIN BOTTOM HDBD&FTBD
 100-645 TWIN SLATS (2 PCS)

WARNING:

THE BED SLATS WILL NO SUPPORT A MATTRES ALONE, A SLAT PACK OR A BUNKIE BOARD IS REQUIRED FOR PROPER SAFETY.

(NOT INCLUDED)

STEP BUNK UNIT ASSEMBLY INSTRUCTIONS CONFIGURATION TYPE # 1

LIST OF CONTENTS
COTTAGE COLORS COLLECTION

STEP BUNK UNIT BOX (28-160) FIG.1

A.- (1) STEP BUNK UNIT

1 PC BUNK BED END TWIN BOX (28-706) FIG.2

B.- (1) 1 PC BUNK BED END TWIN

6 PIECE RAILS BOX (28-730) FIG.3

C.- (4) SIDE RAILS

D.- (2) GUARD RAILS

HARDWARE PACK (HPK00104-0)

E.- (24) 80MM FLAT HEAD BOLTS

F.- (24) 5/16"-18 X 5/8" CROSS DOWEL NUTS BLACK

G.- (1) 5MM ALLEN WRENCH

TWIN/FULL SLATS BOX (100-645,100-646) FIG.4

H.- (4) SLATS

HARDWARE PACK (HPK00016-0)

I.- (8) 1 1/4" SCREWS

FULL EXTENDER KIT BOX (28-782) FIG.5

J.- (2) EXTENTION KIT

HARDWARE PACK (HPK00044-1)

K.- (2) METAL PLATES

L.- (8) 23MM CONECTOR BOLTS

M.- (8) CAP NUTS

G.- (1) 5MM ALLEN WRENCH

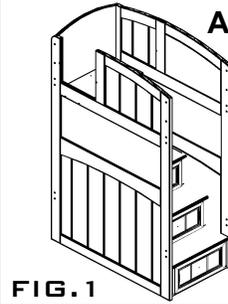


FIG. 1

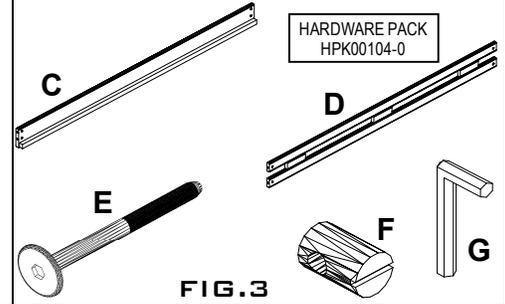


FIG. 3

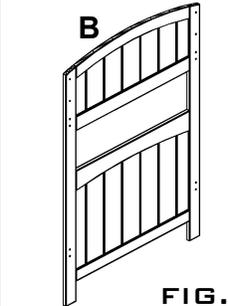


FIG. 2


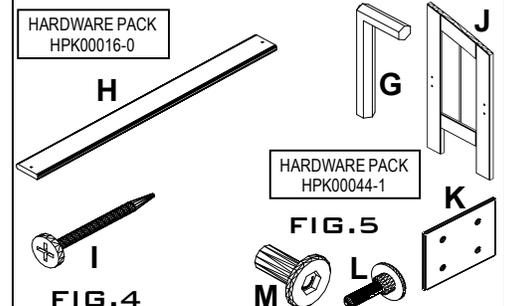


FIG. 4

FIG. 5

- 1.- PROCEED TO ASSEMBLE THIS STEP BUNK BED, FIRST CHOOSE THE CONFIGURATION THAT FITS YOUR ROOM, LEFT OR RIGHT SEE FIG.6, IF LEFT GO TO STEP #3 OR RIGHT GO TO STEP #2
- 2.- CHANGE **GUARD RAIL** THAT IS FACTORY INSTALLED IN LEFT SIDE TO THE RIGHT SIDE, USING PHILLIPS SCREWDRIVER (**NOT INCLUDED**) REMOVE SCREWS FROM STEP BUNK UNIT (SAVE THE SCREWS TO RE-ATTACH THE **GUARD RAIL** TO RIGHT SIDE), & INSTALL GUARD RAIL THE RIGHT SIDE, **SEE FIG.6**
- 3.- ASSEMBLE STEP BUNK BED, USING ONE STEP BUNK UNIT (A), ONE 1 PC BUNK BED END TWIN (B), FOUR SIDE RAILS (C), AND TWO GUARDRAILS (D).
- 4.- INSERT TWO CROSS DOWEL NUTS (F) IN ACCESS HOLE INSIDE THE SIDE RAIL&GUARD RAIL, ALIGN THE CROSS DOWEL NUT, MAKE SURE THE GROOVE IS HORIZONTAL, **SEE FIG.7**
- 5.- ATTACH TWO SIDE RAILS & TWO GUARD RAILS TO TOP 1 PC BUNK BED END TWIN & STEP BUNK UNIT, INSERTING TWO FLAT HEAD BOLST (E) INTO TOP 1 PC BUNK BED END TWIN & STEP BUNK UNIT HOLES, USE 5MM ALLEN WRENCH (G) TO TIGHTEN BOTH FLAT BOLTS, (DO NOT **TIGHTEN COMPLETELY** UNTIL ALL PIECES ARE CONNECTED TOGETHER), **SEE FIG.8**, REPEAT THE SAME PROCESS ON ALL FOUR CORNERS.
- 6.- PLACE FOUR SLATS (H) ON TOP&BOTTOM SIDE RAIL CLEATS, ONE SLAT IN BOTH ENDS, PUSH THE SLAT AGAINST THE BED END POST (FIG.A)&TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT MUST BE FASTEN WITH TWO 1 1/4" SCREWS (I), **SEE FIG.9**
- 7.- ATTACH EXTENTION KIT (J), USING ONE METAL PLATE (K), FOUR 23MM BOLTS (L), FOUR CAP NUTS (M), ALIGN THE EXTENTION KIT WITH THE BOTTOM 1 PC BUNK BED END TWIN AND STEP BUNK UNIT, & ALIGNED METAL PLATE GROOVE FROM INSIDE WITH BOTTOM 1 PC BUNK BED END TWIN&STEP BUNK UNIT&EXTENTION KIT HOLES, FASTEN BY INSERTING FOUR 23 MM BOLTS FROM INSIDE&FOUR CAP NUTS FROM OUTSIDE, USE 5MM ALLEN WRENCH (G) TO TIGHTEN BOLTS UNTIL SECURE, REPEAT THE SAME PROCESS IN EACH SIDE, **SEE FIG.B**
- 8.- ATTACH TWO SIDE RAILS TO BOTTOM 1 PC BUNK BED END TWIN, STEP BUNK UNIT&EXTENTION KIT, REPEAT THE SAME PROCESS LIKE **STEP # 5**

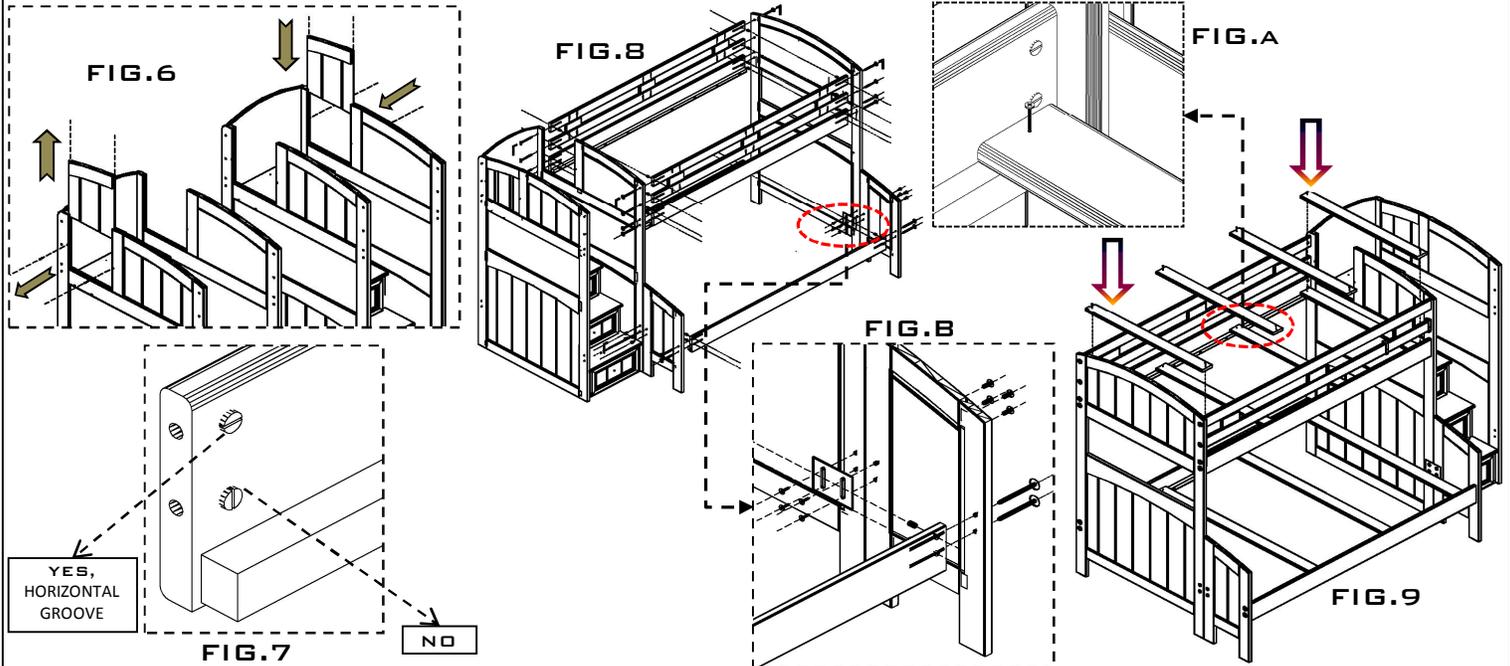

STEP BUNK UNIT ASSEMBLY INSTRUCTIONS CONFIGURATION TYPE # 2

LIST OF CONTENTS
COTTAGE COLORS COLLECTION

STEP BUNK UNIT BOX (28-160) FIG.1

A.- (1) STEP BUNK UNIT

6 DRAWER LOFT DRESSER BOX (28-207) FIG.2

P.- (1) LOFT DRESSER

6 PIECE RAILS BOX (28-730) FIG.3

C.- (4) SIDE RAILS

D.- (2) GUARD RAILS

HARDWARE PACK (HPK00104-0)

E.- (24) 80MM FLAT HEAD BOLTS

F.- (24) 5/16"-18 X 5/8" CROSS DOWEL NUTS BLACK

G.- (1) 5MM ALLEN WRENCH

TWIN/FULL SLATS BOX (100-645,100-646) FIG.4

H.- (4) 39", 54" SLATS

HARDWARE PACK (HPK00016-0)

I.- (8) 1 1/4" SCREWS

LOFT DESK BOX (28-603) FIG.5

Q.- (1) LOFT DESK

LOFT HUTCH BOX (28-766) FIG.6

R.- (1) LOFT HUTCH

HARDWARE PACK (HPK00012-0)

S.- (2) 4" METAL DOWEL PINS

TOP BUNK BED BOX (28-705) FIG.7

T.- (1) TOP BUNK BED

HARDWARE PACK (HPK00123-0)

S.- (2) 4" METAL DOWEL PINS

TWIN/FULL BOTTOM HDBD&FTBD BOX (28-707,28-709) FIG.8

U.- (1) HEADBOARD

V.- (1) FOOTBOARD

HARDWARE PACK (HPK00127-0)

W.- (4) CASTER SOCKETS

PHILLIPS SCREWDRIVER (NOT INCLUDED) REMOVE SCREWS FROM STEP BUNK UNIT (SAVE THE SCREWS TO RE-ATTACH THE GUARD TO RIGHT SIDE)&INSTALL GUARD THE RIGHT SIDE,SEE FIG.9

3.- ASSEMBLE STEP BUNK BED, USING ONE STEP BUNK UNIT (A), ONE LOFT DRESSER (P), OR ONE LOFT DESK (Q), ONE LOFT HUTCH (R), ONE TOP BUNK BED (T) 2 SIDE RAILS (C), & 2 GUARDRAILS (D).

4.- TAKE LOFT DRESSER (P) OR LOFT DESK (Q), THEN PLACED THEM IN DESIRED POSITION IN THE ROOM, (PLACE FRONT FACE OF DESK OUTWARDS).




5.- INSERT 2 METAL DOWEL PINS (S) ON TOP IN EACH OUTSIDE CORNER OF LOFT DRESSER OR LOFT DESK, TAKE THE LOFT HUTCH (R), & PLACE IT ON TOP OF LOFT DRESSER & LOFT DESK ALIGNING THE METAL DOWEL PIN WITH EACH PRE - DRILLED HOLE IN EVERY END OF THE LOFT HUTCH UNTIL THE METAL DOWEL PIN ARE ALL THE WAY IN THE HOLE OF THE LOFT HUTCH, REPEAT THE SAME PROCESS WITH TOP BUNK BED (T), **SEE FIG.10**

6.- INSERT TWO CROSS DOWEL NUTS (F) IN ACCESS HOLE INSIDE THE SIDE RAIL & GUARD RAIL, ALIGN THE CROSS DOWEL NUT, MAKE SURE THE GROOVE IS HORIZONTAL, **SEE FIG.B**

7.- ATTACH 2 SIDE RAILS & 2 GUARD RAILS TO LOFT DRESSER/LOFT HUTCH/TOP BUNK BED ASSEMBLY & STEP BUNK UNIT, INSERTING TWO FLAT BOLST (E) INTO LOFT DRESSER/LOFT HUTCH/TOP BUNK BED & STEP BUNK UNIT HOLES, USE 5MM ALLEN WRENCH (G) TO TIGHTEN BOTH BOLTS, (DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER), **SEE FIG.11**


8.- REPEAT THE SAME PROCESS ON ALL FOUR CORNERS.

9.- PLACE FOUR SLATS (H) ON TOP SIDE RAIL CLEATS, ONE SLAT IN BOTH ENDS, PUSH THE SLAT AGAINST THE BED END POST (FIG.A) AND TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT MUST BE FASTEN WITH TWO 1 1/4" SCREWS (I), **SEE FIG.12**

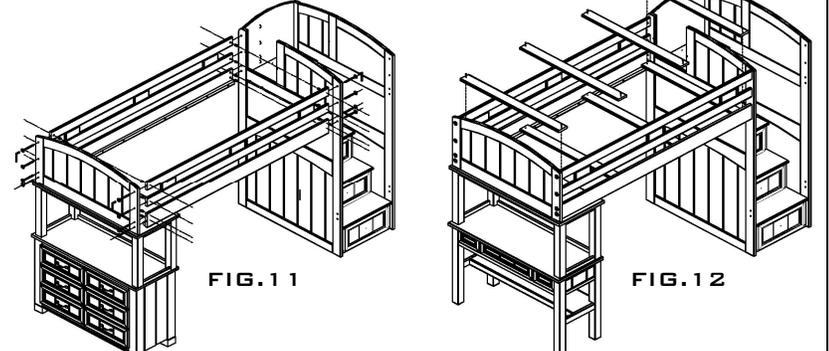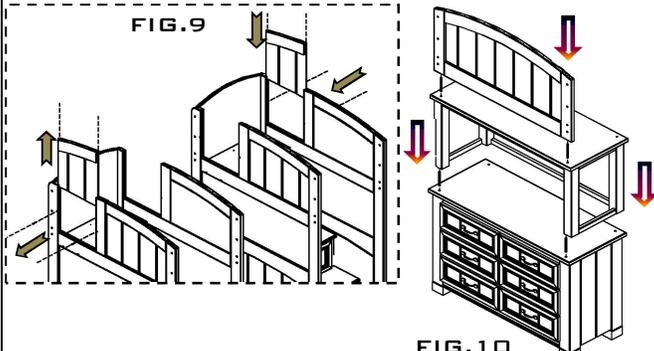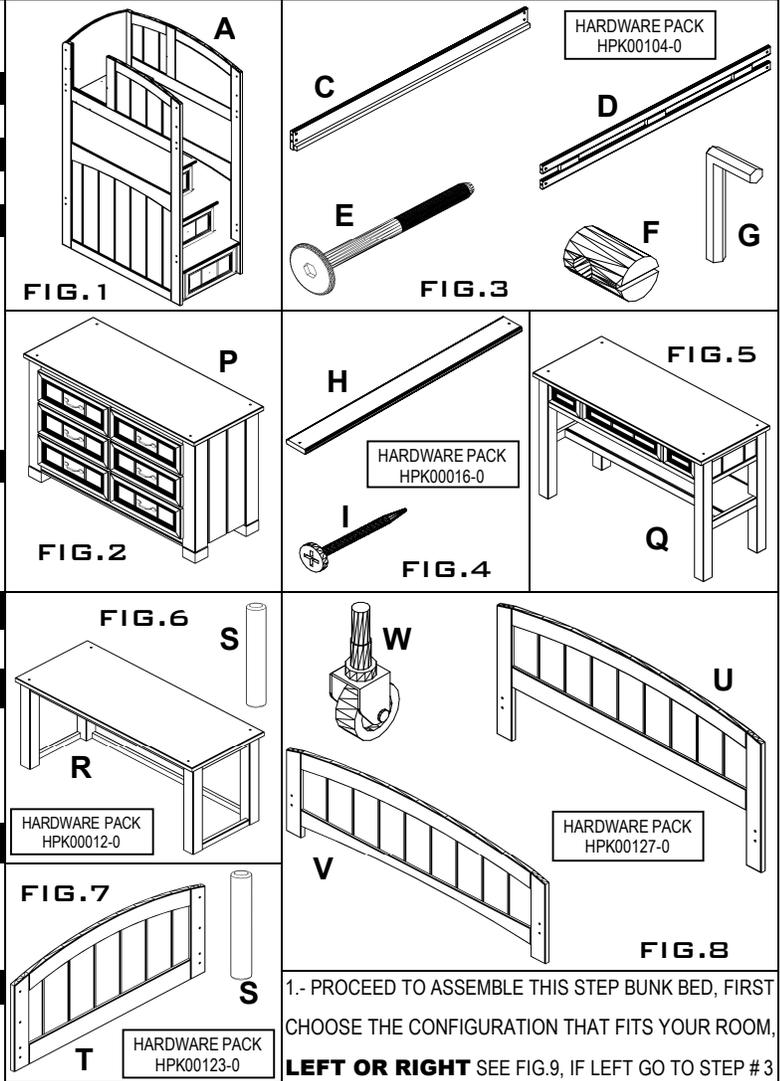


CANYON FURNITURE COMPANY
TWIN/FULL BOTTOM HDBD&FTBD ASSEMBLY INSTRUCTIONS

- 1.- ASSEMBLE TWIN/FULL BOTTOM HDBD&FTBD, USING ONE HEADBOARD (U), ONE FOOTBOARD (V) AND TWO SIDE RAILS (C).
- 2.- INSERT TWO CROSS DOWEL NUTS (F) IN ACCESS HOLE INSIDE THE SIDE RAIL, ALIGN THE CROSS DOWEL NUT, MAKE SURE THE GROOVE IS HORIZONTAL, **SEE FIG.B**
- 3.- ATTACH THE HDBD&FTBD INTO THE SIDE RAILS, INSERTING TWO FLAT HEAD BOLTS (E) INTO THE HDBD&FTBD HOLES, USE THE 5MM ALLEN WRENCH (G) TO TIGHTEN BOLTS UNTIL SECURE, **SEE FIG.1**
- 4.- PLACE FOUR SLATS (H) ON SIDE RAIL CLEATS, ONE SLAT IN BOTH ENDS, PUSH THE SLAT AGAINST THE BED END POST (**FIG.A**) AND TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT MUST BE FASTEN WITH TWO 1 1/4" SCREWS (I), **SEE FIG.2**
- 5.- INSERT THE CASTER SOCKETS (W) INTO BOTTOM CORNERS OF THE HEADBOARD&FOOTBOARD, **SEE FIG.C**
- 6.- ROLL THE TWIN/FULL BOTTOM HDBD&FTBD&PLACE IT BETWEEN LOFT DRESSER/LOFT HUTCH/TOP BUNK BED&STEP BUNK UNIT AS SHOWN IN **CONFIGURATION #2**

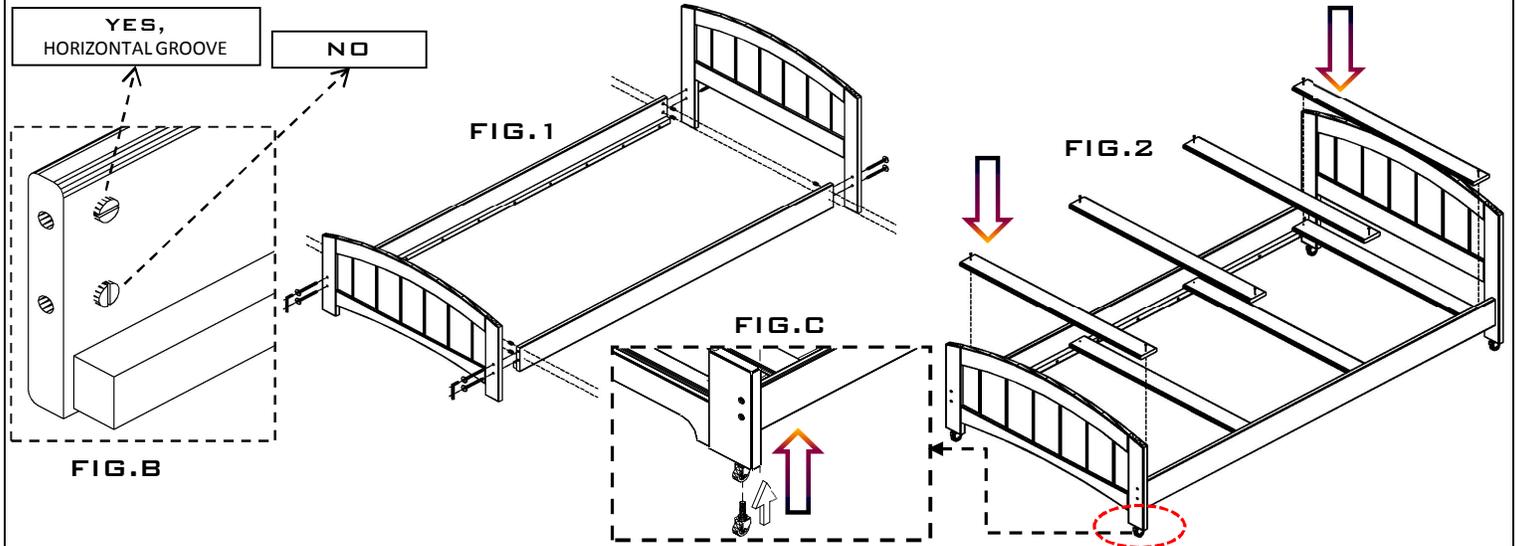

RAIL CAP ASSEMBLY INSTRUCTION

- 1.- WHEN PURCHASING FULL BOTTOM HDBD&FTBD, WE RECOMMEND YOU TO USE THE RAIL CAP (**28-735**)
- 2.- TO INSTALL THE RAIL CAP, PLACE IT AS **FIG.D**, MAKE SURE THE RAIL CAP IS INSERTED ON THE SIDE RAIL AND PUSHED TO THE HEADBOARD, **SEE FIG.2**
- 3.- ROLL FULL BOTTOM HDBD&FTBD & PLACE IT BETWEEN LOFT DRESSER/LOFT HUTCH/TOP BUNK BED ASSEMBLY & STEP BUNK UNIT AS SHOWN IN **CONFIGURATION TYPE #2** IN OPTION #1 & #3

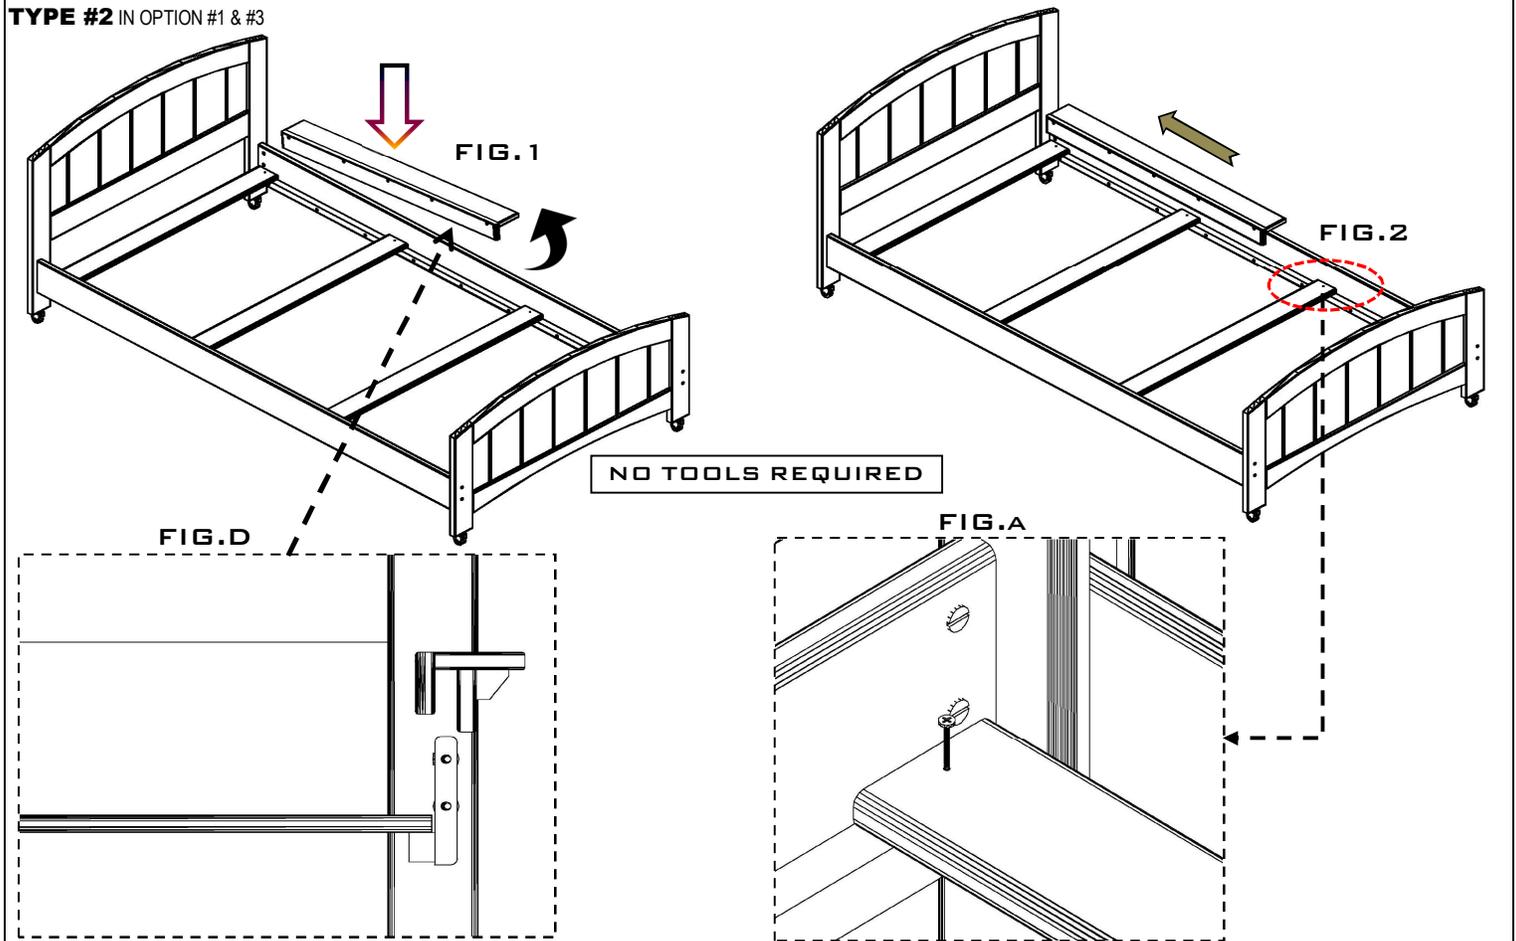

SAFETY WARNINGS

- 1.- FOLLOW THE INFORMATION ON THE WARNINGS APPEARING ON THE UPPER BUNK END STRUCTURE AND ON THE CARTON. DO NOT REMOVE WARNING LABEL FROM BED.
- 2.- ALWAYS USE THE RECOMMENDED SIZE MATTRESS OR MATTRESS SUPPORT, OR BOTH TO HELP PREVENT THE LIKELIHOOD OF ENTRAPMENT OR FALLS.
- 3.- SURFACE OF MATTRESS MUST BE AT LEAST 5 IN BELOW THE UPPER EDGE OF GUARDRAILS.
- 4.- DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE THE UPPER BUNK.
- 5.- PROHIBIT MORE THAN ONE PERSON ON UPPER BUNK.
- 6.- PERIODICALLY CHECK AND ENSURE THAT THE GUARDRAIL, LADDER AND OTHER COMPONENTS ARE IN THEIR PROPER POSITION, **FREE FROM DAMAGE**, AND THAT ALL CONNECTORS ARE TIGHT.
- 7.- DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
- 8.- ALWAYS USE THE LADDER FOR ENTERING AND LEAVING THE UPPER BUNK.
- 9.- DO NOT USE SUBSTITUTE PARTS. CONTACT THE MANUFACTURER OR DEALER FOR REPLACEMENT PARTS.
- 10.- USE OF A NIGHT LIGHT MAY PROVIDE ADDED SAFETY PRECAUTION FOR A CHILD USING THE UPPER BUNK.
- 11.- IF THE BUNK BED WILL BE PLACED NEXT TO THE WALL THE GUARDRAIL THAT RUNS THE FULL LENGTH OF THE BED SHOULD BE PLACED AGAINST THE WALL TO PREVENT ENTRAPMENT BETWEEN THE BED AND THE WALL.
- 12.- ALWAYS USE GUARDRAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
- 13.- THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
- 14.- **STRANGULATION HAZARD.** NEVER ATTACH OR HANG ITEMS TO ANY PART OF THE BUNK BED THAT ARE NOT DESIGNED FOR USE WITH THE BED, FOR EXAMPLE BUT NOT LIMITED TO HOOKS, BELTS AND JUMP ROPES.
- 15.- KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.


SIZE OF MATTRESS AND FOUNDATION

THE UPPER&LOWER BUNK BED IS DESIGNED TO USE ONLY A MATTRESS WHICH IS **74"** TO **75"** LONG AND **37 1/2"** TO **38 1/2"** WIDE FOR **TWIN BED**.
 WHEN THE LOWER BUNK BED IS A FULL BED, THE LOWER BUNK IS DESIGNED TO USE ONLY A MATTRESS WHICH IS **74"** TO **75"** LONG AND **52 1/2" X 53 1/2"** WIDE.
 THE BUNKIE BOARD IS REQUIRED TO **37 1/2"** WIDE X **74"** LONG FOR **TWIN BED** AND **52 1/2"** WIDE X **74"** LONG FOR **FULL BED**.

NOTE:ENSURE THICKNESS OF MATTRESS AND FOUNDATION COMBINED DOES NOT EXCEED 10" AND MATTRESS IS AT LEAST 5" BELOW UPPER EDGE OF GUARDRAILS.

TIPS : SEE ILLUSTRATION BELOW

- 1.- USE THE LONG END OF THE ALLEN WRENCH TO FASTEN BOLTS LOOSELY AND QUICKLY.
- 2.- USE THE SHORT END OF THE ALLEN WRENCH FOR FINAL TIGHTENING.

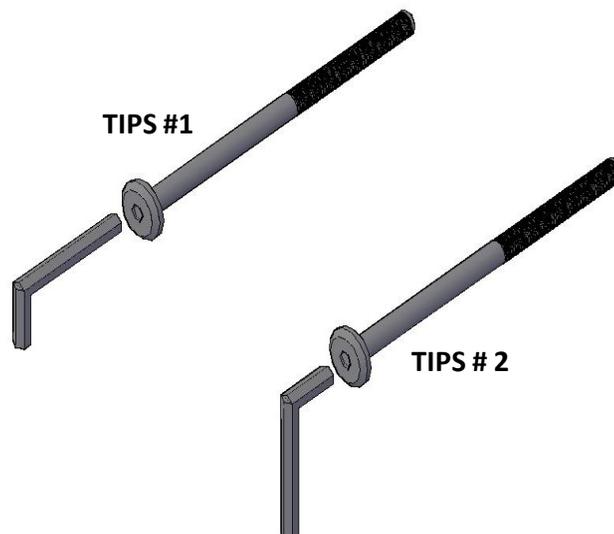**REPLACEMENT PARTS**

REPLACEMENT PARTS, INCLUDING ADDITIONAL GUARDRAILS, MAY BE OBTAINED FROM ANY OF OUR CANYON FURNITURE COMPANY DEALERS.