

CANYON FURNITURE COMPANY

(91/92/93-705) CHARCOAL COLLECTION STUDENT BUNK BED ASSEMBLY INSTRUCTIONS

THANK YOU FOR YOUR PURCHASE !


PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

READ ALL THE INSTRUCTIONS AND IDENTIFY ALL COMPONENTS AND CHOOSE YOUR CONFIGURATION AND BE SURE YOU HAVE ALL PARTS


TWO PEOPLE ARE NEEDED TO ASSEMBLE.

DO NOT COMPLETELY TIGHTEN ALL BOLTS UNTIL ALL COMPONENTS ARE CONNECTED.


CONFIGURATION TYPE # 1

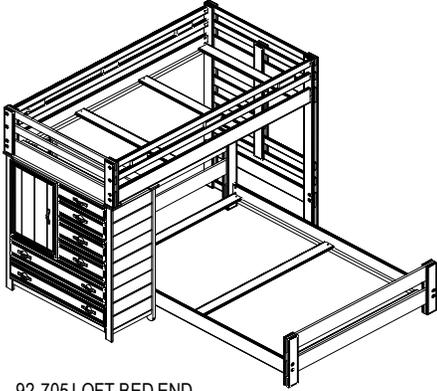

- 92-705 LOFT BED END
- 92-706 BUNK BED END
- 92-711 5 DRW STUDENT LOFT CHEST
- 92-730 6 PCS SIDE RAILS
- 92-709 FULL BED
- 92-645 4 PCS SLAT PACK 3/3
- 92-646 4 PCS SLAT PACK 4/6

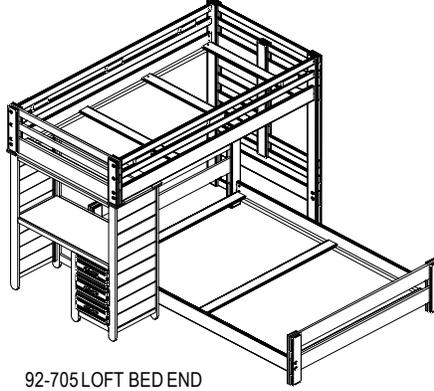


- 92-705 LOFT BED END
- 92-706 BUNK BED END
- 92-710 3 DRW STUDENT LOFT DESK
- 92-730 6 PCS SIDE RAILS
- 92-709 FULL BED
- 92-645 4 PCS SLAT PACK 3/3
- 92-646 4 PCS SLAT PACK 4/6

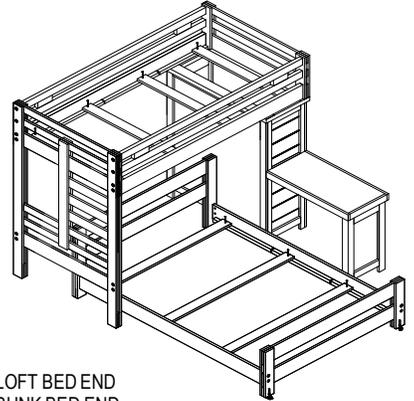


- 92-705 LOFT BED END
- 92-706 BUNK BED END
- 92-711 5 DRW STUDENT LOFT CHEST
- 92-730 6 PCS SIDE RAILS
- 92-709 FULL BED
- 92-601 FOLDING DESK
- 92-645 4 PCS SLAT PACK 3/3
- 92-646 4 PCS SLAT PACK 4/6

CONFIGURATION TYPE # 2

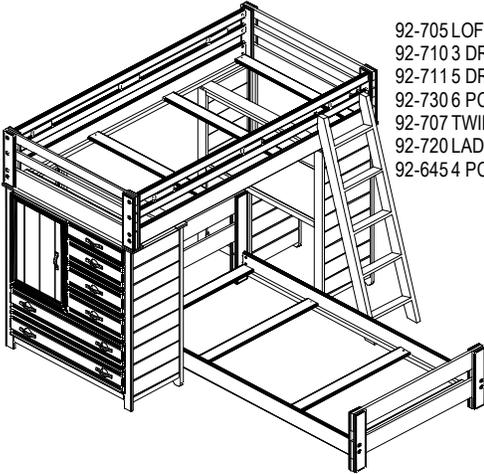

- 92-705 LOFT BED END (2 BOXES)
- 92-710 3 DRW STUDENT LOFT DESK
- 92-711 5 DRW STUDENT LOFT CHEST
- 92-730 6 PCS SIDE RAILS
- 92-707 TWIN BED
- 92-720 LADDER
- 92-645 4 PCS SLAT PACK 3/3 (2 BOXES)

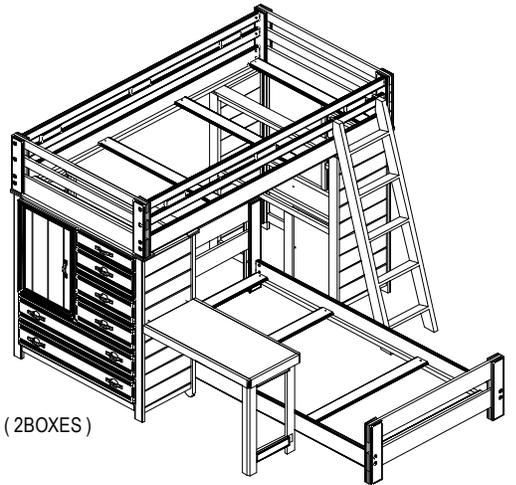


- 92-705 LOFT BED END (2 BOXES)
- 92-711 5 DRW STUDENT LOFT CHEST (2BOXES)
- 92-730 6 PCS SIDE RAILS
- 92-707 TWIN BED
- 92-720 LADDER
- 92-601 FOLDING DESK
- 92-645 4 PCS SLAT PACK 3/3 (2 BOXES)

TIPS : SEE ILLUSTRATION BELOW

- 1.- USE THE LONG END OF THE ALLEN WRENCH TO FASTEN BOLTS LOOSELY AND QUICKLY.
- 2.- USE THE SHORT END OF THE ALLEN WRENCH FOR FINAL TIGHTENING.

WARNING:
 THE BED SLATS WILL NO SUPPORT A MATTRESS ALONE, A SLAT PACK OR A BUNKIE BOARD IS REQUIRED FOR PROPER SAFETY.
 (NOT INCLUDED)

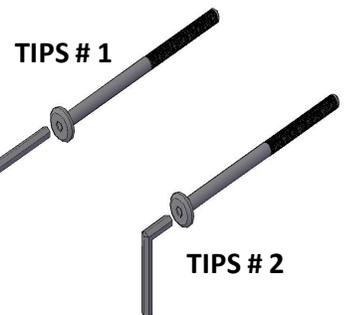

TOOLS NEEDED
 PHILIPS HEADSCREWDRIVER (NOT INCLUDED)
 5MM ALLEN WRENCH (INCLUDED)

TO ASSEMBLE THIS BUNK BED REQUIRES TWO PERSONS

STUDENT BUNK BED ASSEMBLY INSTRUCTIONS CONFIGURATION TYPE # 1

LIST OF CONTENTS

CHARCOAL COLLECTION

TWIN LOFT BUNK BED END BOX (92-706) FIG.1

A.- (1) HEADBOARD

3 DRAWER STUDENT LOFT DESK BOX (92-710) FIG.2 OR

B.- (1) 3 DRW STUDENT LOFT DESK

5 DRAWER STUDENT LOFT CHEST BOX (92-711) FIG.3

C.- (1) 5 DRW STUDENT LOFT CHEST

TWIN UPPER BUNK BED BOX (92-705) FIG.4

D.- (1) LOFT BED END

HARDWARE PACK (HPK00095)

E.- (2) METAL DOWEL PINS

6 PCS SIDE RAILS BOX (92-730) FIG.5

F.- (4) SIDE RAILS

G.- (2) GUARD RAILS

HARDWARE PACK (HPK00093)

H.- (24) 5/16" X 4" HEX TAP BOLTS

I.- (24) 5/8" CROSS DOWEL NUTS

J.- (24) 5/16" FLAT WASHERS

K.- (1) 5MM ALLEN WRENCH

4 PCS SLAT PACK 3/3 BOX (92-645) FIG.6

L.- (4) 39" SLATS

HARDWARE PACK (HPK00016)

M.- (8) 1 1/4" SCREWS









FULL BED BOX (92-709) FIG.7

N.- (1) HEADBOARD

O.- (1) FOOTBOARD

HARDWARE PACK (HPK00094)

P.- (4) CASTER SOCKETS

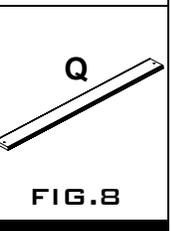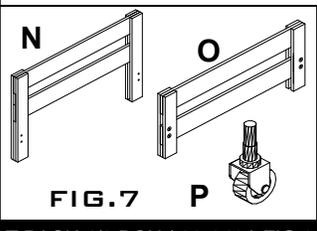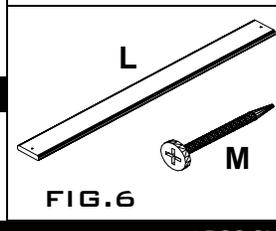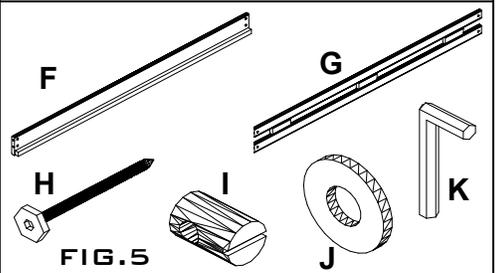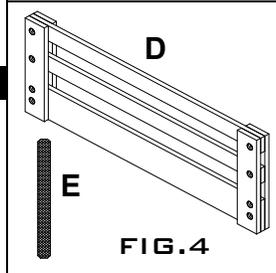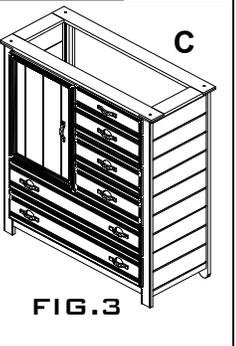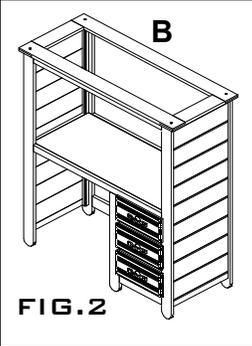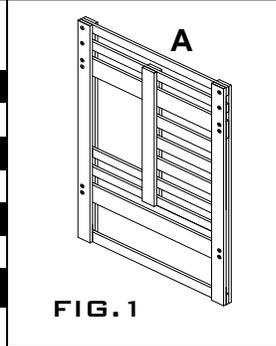

Q.- (4) 54" SLATS
HARDWARE PACK (HPK00016)
M.- (8) 1 1/4" SCREWS

1.- ASSEMBLE TWIN LOFT BUNK BED, USING ONE HEADBOARD (A),ONE LOFT BED END (D),TWO SIDE RAILS (F),TWO GUARDRAILS (G), 3 DRW STUDENT DESK (B) OR 5 DRW STUDENT CHEST(C).

2.- TAKE 3 DRAWER STUDENT DESK (B) OR 5 DRAWER STUDENT CHEST (C), THEN PLACED THEM IN DESIRED POSITION IN THE ROOM, **(PLACE FRONT FACE OF DESK OUTWARDS)**




3.- INSERT ONE METAL DOWEL PIN (E) IN EACH OUTSIDE CORNER OF 3 DRW LOFT DESK OR 5 DRW LOFT CHEST, TAKE THE LOFT BED END, AND PLACE IT ON TOP OF DESK OR CHEST ALIGNING THE METAL DOWEL PIN WITH EACH PRE - DRILLED HOLE IN EVERY END OF THE LOFT BED END UNTIL THE METAL DOWEL PIN ARE ALL THE WAY IN THE HOLE OF THE BED, SEE FIG.9

4.- INSERT TWO CROSS DOWEL NUTS (I) INTO THE SIDE RAIL AND GUARDRAILS HOLES, MAKE SURE THE GROOVE IS HORIZONTAL, SEE FIG.10

5.- ATTACH TWO SIDE RAILS & TWO GUARD RAILS TO HEADBOARD&LOFT BED END, INSERTING TWO HEX TAP BOLTS (H) TWO WASHERS (J) INTO HEADBOARD&LOFT BED END HOLES, USE THE 5MM ALLEN WRENCH (K) TO TIGHTEN BOTH HEX TAP BOLTS, **(DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER)**, SEE FIG.11

6.- REPEAT THE SAME PROCESS ON ALL FOUR CORNERS.

7.- PLACE FOUR SLATS (L) ON TOP SIDE RAIL CLEATS,ONE SLAT IN BOTH HEADBOARD&LOFT BED ENDS,PUSH THE SLAT AGAINST THE BED END POST (FIG.A) AND TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT END MUST BE FASTEN WITH ONE 1 1/4" SCREW (M), SEE FIG.12

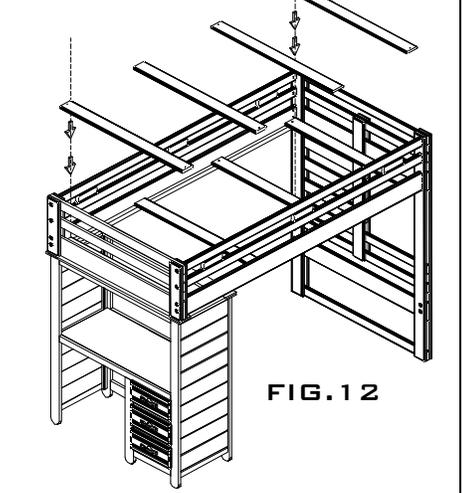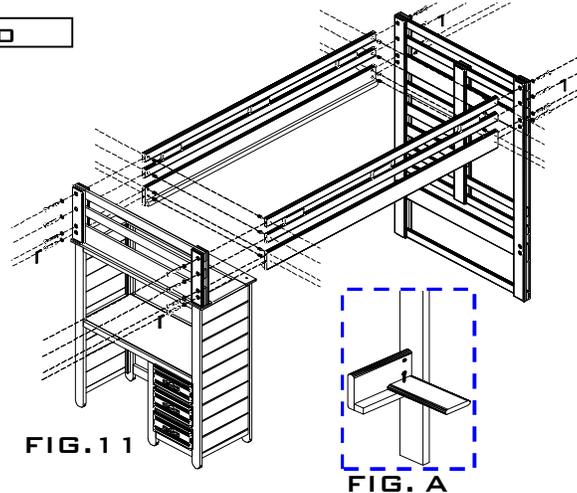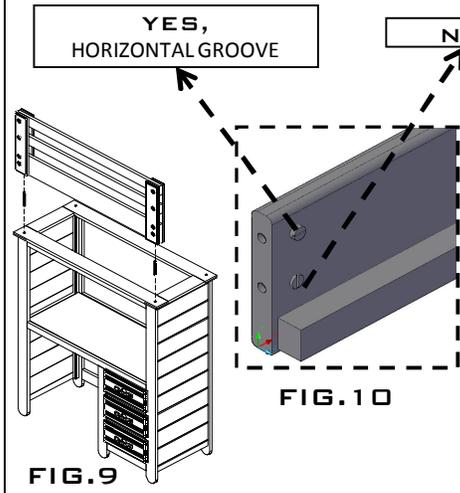

STUDENT BUNK BED ASSEMBLY INSTRUCTIONS CONFIGURATION TYPE # 2

LIST OF CONTENTS

CHARCOAL COLLECTION

TWIN UPPER BUNK BED BOX (92-705) FIG.1 (2 BOXES)

A.- (1) LOFT BED END

HARDWARE PACK (HPK00095)

B.- (2) METAL DOWEL PINS

3 DRW STUDENT LOFT DESK BOX (92-710) FIG.2

C.- (1) 3 DRW STUDENT LOFT DESK

5 DRW STUDENT LOFT CHEST BOX (92-711) FIG.3

D.- (1) 5 DRW STUDENT LOFT CHEST

6 PCS SIDE RAILS BOX (92-730) FIG.4

E.- (4) SIDE RAILS

F.- (2) GUARD RAILS

HARDWARE PACK (HPK00093)

G.- (24) 5/16" X 4" HEX TAP BOLTS

H.- (24) 5/8" CROSS DOWEL NUTS

I.- (24) 5/16" FLAT WASHERS

J.- (1) 5MM ALLEN WRENCH

LADDER BOX (92-720) FIG.5

K.- (1) LADDER

HARDWARE PACK (HPK00008)

L.- (2) METAL HOOK BRACKETS

M.- (6) 1" SCREWS

TWIN BED BOX (92-707) FIG.6

N.- (1) HEADBOARD

O.- (1) FOOTBOARD

HARDWARE PACK (HPK00094)

P.- (4) CASTER SOCKETS

4 PCS SLAT PACK 3/3 BOX (92-645) FIG.7 (2 BOXES)

Q.- (4) 39" SLATS








HARDWARE PACK (HPK00016)

R.- (8) 1 1/4" SCREWS

TOOLS NEEDED




PHILLIPS HEADSCREWDRIVER (NOT INCLUDED)

5MM ALLEN WRENCH (INCLUDED)

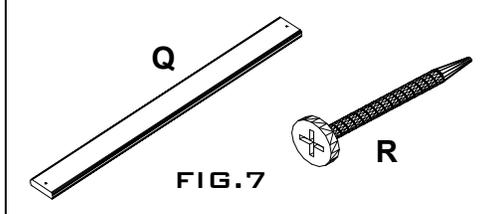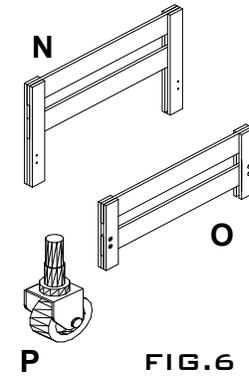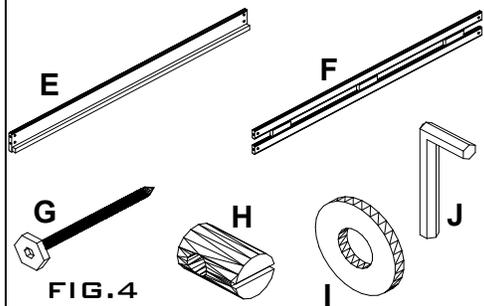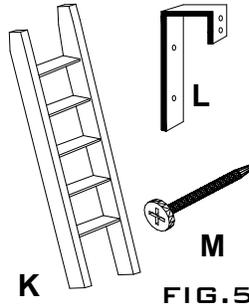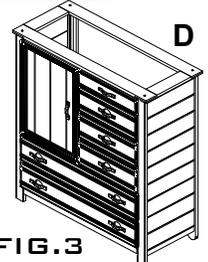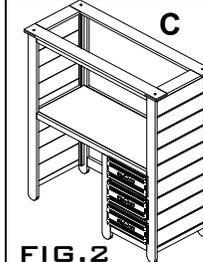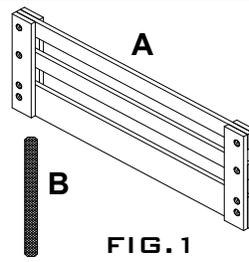


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

- 1.- ASSEMBLE TWIN UPPER BUNK BED, USING TWO LOFT BED ENDS (A), TWO SIDE RAILS (E), AND TWO GUARDRAILS (F).
- 2.- INSERT TWO CROSS DOWEL NUTS (H) INTO THE SIDE RAIL AND GUARDRAILS HOLES, MAKE SURE THE GROOVE IS HORIZONTAL, SEE FIG.8
- 3.- ATTACH TWO SIDE RAILS (E) AND TWO GUARD RAILS (F) TO BOTH LOFT BED ENDS (A), INSERTING TWO HEX TAP BOLTS (G) TWO WASHERS (I) INTO LOFT BED END HOLES, USE THE 5MM ALLEN WRENCH (J) TO TIGHTEN BOTH HEX TAP BOLTS (**DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES ARE CONNECTED TOGETHER**), SEE FIG.9
- 4.- REPEAT THE SAME PROCESS ON ALL FOUR CORNERS.
- 5.- PLACE FOUR SLATS (Q) ON TOP SIDE RAIL CLEATS, ONE SLAT IN BOTH LOFT BED ENDS, PUSH THE SLAT AGAINST THE BED END POST (FIG.A) AND TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT END MUST BE FASTEN WITH ONE 1 1/4" SCREW (R), SEE FIG.10

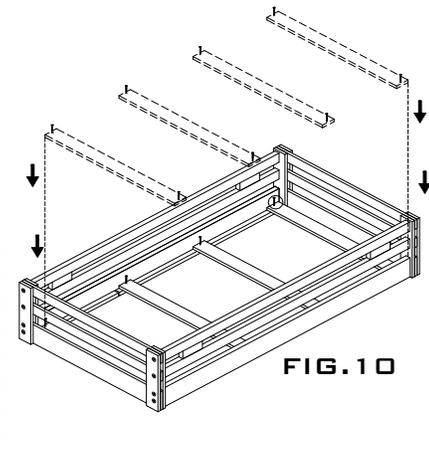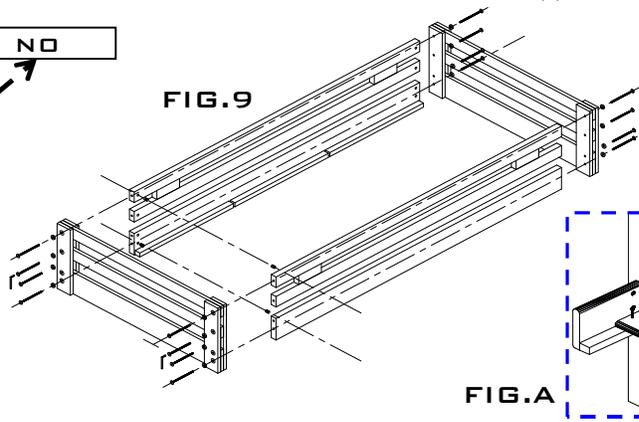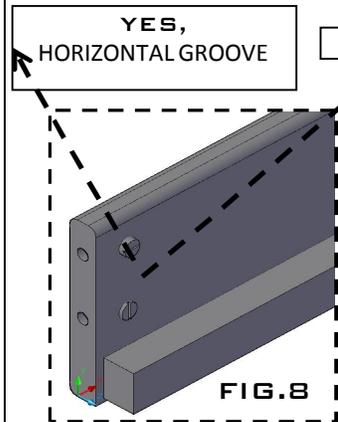


- 6.- TAKE 3 DRW STUDENT LOFT DESK (C) AND 5 DRW STUDENT LOFT CHEST (D), PLACED THEM IN DESIRED POSITION IN THE ROOM, (PLACE FRONT FACE OF DESK OUTWARDS).
- 7.- INSERT ONE METAL DOWEL PIN (B) IN EACH OUTSIDE CORNER OF 3 DRW LOFT DESK AND 5 DRW LOFT CHEST, SEE FIG.11
- 8.- TAKE THE ASSEMBLED **TWIN UPPER BUNK BED**, PLACE IT ON TOP OF BOTH CASES, ALIGNING THE METAL DOWEL PINS WITH EACH PRE- DRILLED HOLE IN EVERY CORNER OF THE BED UNTIL THE METAL DOWEL PIN ARE ALL THE WAY IN THE HOLES OF THE BED, SEE FIG.12
- 9.- ALIGN THE PRE - DRILLED HOLES IN LONG PART OF METAL HOOKS BRACKETS (L) WITH THE PRE-DRILLED HOLES IN THE LADDER (K), SECURE WITH 1" SCREWS (M) USING PHILLIP HEADSCREWDRIVER (**NOT INCLUDED**), SEE FIG.C AND HOOK THE LADDER IN THE PROPER POSITION, ADJUST AND ALIGN THE PRE-DRILLED HOLES IN THE SHORT PART OF METAL HOOKS ON TOP GUARDRAIL AND SECURE THE LADDER, AS SHOWN IN **CONFIGURATION TYPE # 2**

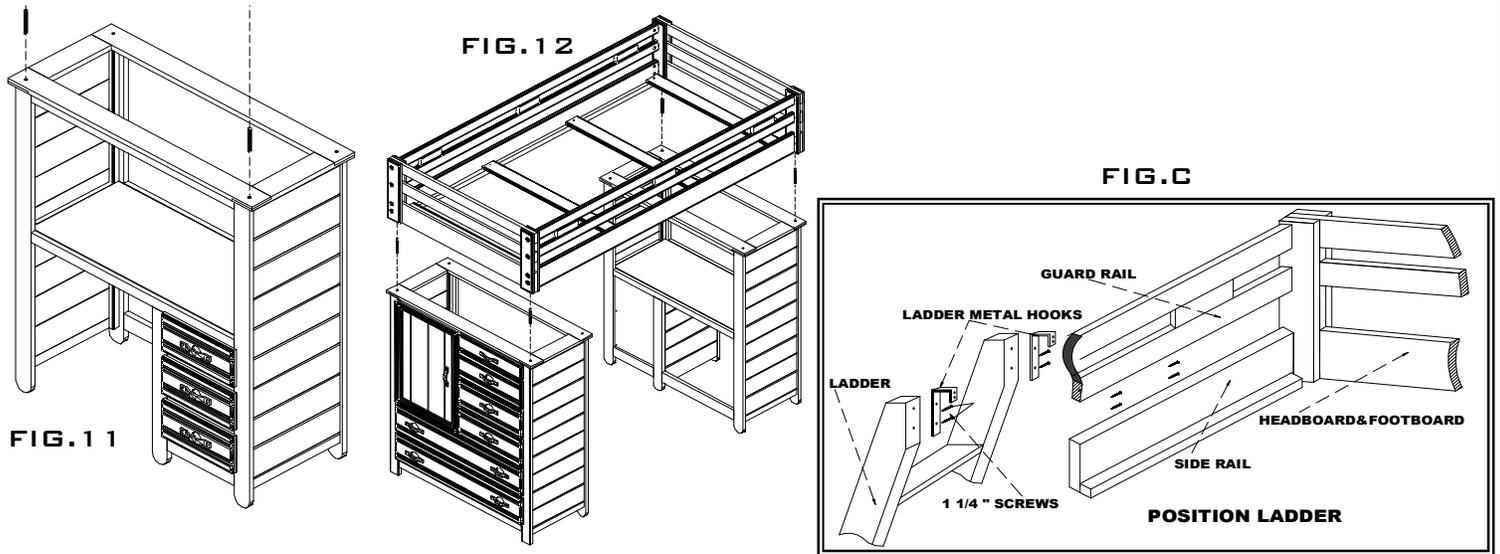

ROLL AWAY CASTER BED ASSEMBLY INSTRUCTIONS

- 1.- ASSEMBLE ROLL AWAY BED, USING ONE HEADBOARD (N), ONE FOOTBOARD (O) AND TWO SIDE RAILS (F).
- 2.- INSERT TWO CROSS DOWEL NUTS (I) INTO THE SIDE RAIL HOLES, MAKE SURE THE GROOVE IS HORIZONTAL, SEE FIG.1
- 3.- ATTACH THE HDBD&FTBD INTO THE SIDE RAILS, INSERTING TWO HEX TAP BOLTS (H) AND TWO WASHERS (J) INTO THE HDBD&FTBD HOLES, USE THE 5MM ALLEN WRENCH (K) TO TIGHTEN BOLTS UNTIL SECURE, SEE FIG.2
- 4.- PLACE FOUR SLATS (L,Q) ON SIDE RAIL CLEATS, ONE SLAT IN BOTH HDBD&FTBD ENDS, PUSH THE SLAT AGAINST THE BED END POST (FIG.A) AND TWO SLATS IN THE MIDDLE AT EQUAL DISTANCE FROM THE END SLATS, THEN EACH SLAT END MUST BE FASTEN WITH ONE 1 1/4" SCREW (M), SEE FIG.3
- 5.- INSERT THE CASTER SOCKETS (P) INTO BOTTOM CORNERS OF THE HEADBOARD&FOOTBOARD, SEE FIG.B
- 6.- ROLL THE BUNK BED AND PLACE IT BETWEEN 3 DRAWER STUDENT DESK AND LOFT BUNK BED AS SHOWN IN **CONFIGURATION TYPE # 1 AND TYPE # 2**

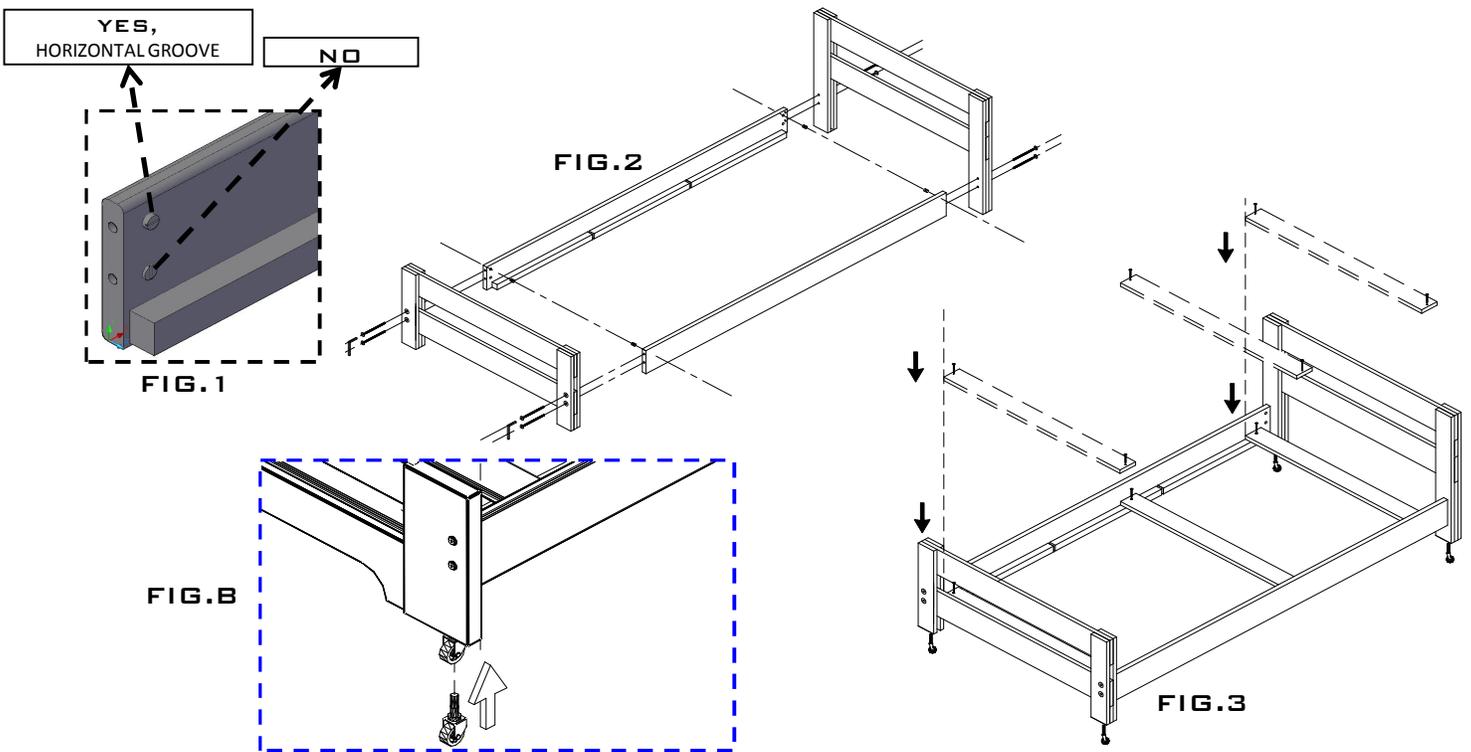

SAFETY WARNINGS

- 1.- FOLLOW THE INFORMATION ON THE WARNINGS APPEARING ON THE UPPER BUNK END STRUCTURE AND ON THE CARTON. DO NOT REMOVE WARNING LABEL FROM BED.
- 2.- ALWAYS USE THE RECOMMENDED SIZE MATTRESS OR MATTRESS SUPPORT, OR BOTH TO HELP PREVENT THE LIKELIHOOD OF ENTRAPMENT OR FALLS.
- 3.- SURFACE OF MATTRESS MUST BE AT LEAST 5 IN BELOW THE UPPER EDGE OF GUARDRAILS.
- 4.- DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE THE UPPER BUNK.
- 5.- PROHIBIT MORE THAN ONE PERSON ON UPPER BUNK.
- 6.- PERIODICALLY CHECK AND ENSURE THAT THE GUARDRAIL, LADDER AND OTHER COMPONENTS ARE IN THEIR PROPER POSITION, **FREE FROM DAMAGE**, AND THAT ALL CONNECTORS ARE TIGHT.
- 7.- DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
- 8.- ALWAYS USE THE LADDER FOR ENTERING AND LEAVING THE UPPER BUNK.
- 9.- DO NOT USE SUBSTITUTE PARTS. CONTACT THE MANUFACTURER OR DEALER FOR REPLACEMENT PARTS.
- 10.- USE OF A NIGHT LIGHT MAY PROVIDE ADDED SAFETY PRECAUTION FOR A CHILD USING THE UPPER BUNK.
- 11.- IF THE BUNK BED WILL BE PLACED NEXT TO THE WALL THE GUARDRAIL THAT RUNS THE FULL LENGTH OF THE BED SHOULD BE PLACED AGAINST THE WALL TO PREVENT, ENTRAPMENT BETWEEN THE BED AND THE WALL.
- 12.- ALWAYS USE GUARDRAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
- 13.- THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
- 14.- **STRANGULATION HAZARD.** NEVER ATTACH OR HANG ITEMS TO ANY PART OF THE BUNK BED THAT ARE NOT DESIGNED FOR USE WITH THE BED, FOR EXAMPLE, BUT NOT LIMITED TO HOOKS, BELTS AND JUMP ROPES.
- 15.- KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

SIZE OF MATTRESS AND FOUNDATION

THE UPPER AND LOWER BUNK BED IS DESIGNED TO USE ONLY MATTRESS WHICH IS 74" TO 75" LONG AND 37 1/2" TO 38 1/2" WIDE FOR **TWIN BED**.

THE UPPER AND LOWER BUNK BED IS DESIGNED TO USE ONLY MATTRESS WHICH IS 74" TO 75" LONG AND 57 1/2" TO 58 1/2" WIDE FOR **FULL BED**.

THE BUNKIE BOARD IS REQUIRED TO 37 1/2" WIDE X 74" LONG FOR **TWIN BED** AND 57 1/2" WIDE X 74" LONG FOR **FULL BED**.

NOTE: ENSURE THICKNESS OF MATTRESS AND FOUNDATION COMBINED DOES NOT EXCEED 8 1/2" AND MATTRESS IS AT LEAST 5" BELOW UPPER EDGE OF GUARDRAILS.

REPLACEMENT PARTS

REPLACEMENT PARTS, INCLUDING ADDITIONAL GUARDRAILS, MAY BE OBTAINED FROM ANY OF OUR CANYON FURNITURE COMPANY DEALERS.