

ROOMS TO GO

KIDS



Manufactured for Rooms to Go

MODERN COLORS COLLECTION

THANK YOU FOR YOUR PURCHASE

- Read all the instructions, identify all components, and be sure you have all parts prior to assembly
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.

TWIN DAYBED

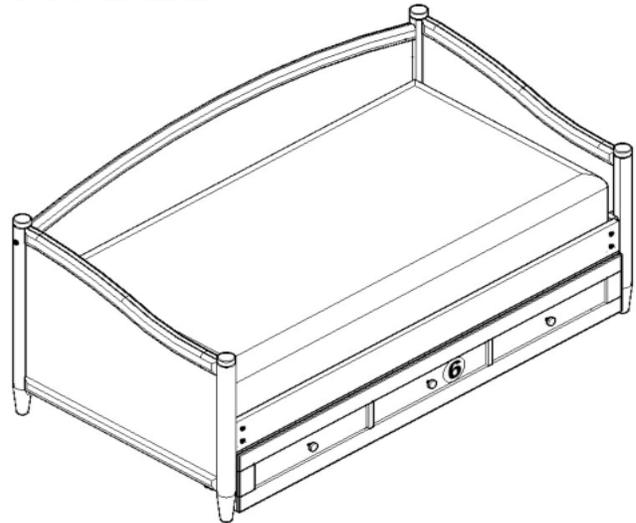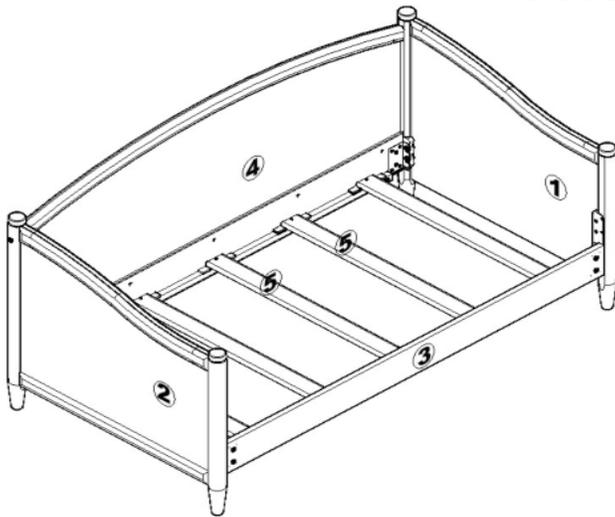

3761127P		TWIN DAYBED PINK
RTG SKU #	STYLE #	ITEM DESCRIPTION
37011272	12A-113	TWIN DAYBED SIDE PANELS
37311278	12A-938	DAYBED BACK PANEL
37211276	12A-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
35611272	12A-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711274	12A-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3761123P		TWIN DAYBED IRON ORE
RTG SKU #	STYLE #	ITEM DESCRIPTION
37011234	12D-113	TWIN DAYBED SIDE PANELS
37311230	12D-938	DAYBED BACK PANEL
37211238	12D-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
35611234	12D-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711236	12D-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3761124P		TWIN DAYBED SLATE BLUE
RTG SKU #	STYLE #	ITEM DESCRIPTION
37011246	12E-113	TWIN DAYBED SIDE PANELS
37311242	12E-938	DAYBED BACK PANEL
37211240	12E-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
35611246	12E-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711248	12E-745	TRUNDLE BED FRONT PANEL [OPTIONAL]


3761125P		TWIN DAYBED LIGHT GRAY
RTG SKU #	STYLE #	ITEM DESCRIPTION
37011258	12G-113	TWIN DAYBED SIDE PANELS
37311254	12G-938	DAYBED BACK PANEL
37211252	12G-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
35611258	12G-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711250	12G-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3761126P		TWIN DAYBED WHITE
RTG SKU #	STYLE #	ITEM DESCRIPTION
37011260	12W-113	TWIN DAYBED SIDE PANELS
37311266	12W-938	DAYBED BACK PANEL
37211264	12W-772	1 PCS SIDE RAIL
37511284	100-172	5 PCS TWIN SLAT PACK
35611260	12W-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711262	12W-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

WARNING:
THE BED SLATS WILL NOT SUPPORT A MATTRESS ALONE, THIS
BED REQUIRES A BOX SPRING OR BUNKIE BOARD. SOLD
SEPARATELY



PHILLIPS SCREWDRIVER [NOT INCLUDED]





ALLEN WRENCH [INCLUDED]





PART LIST

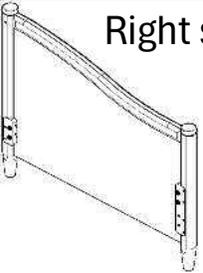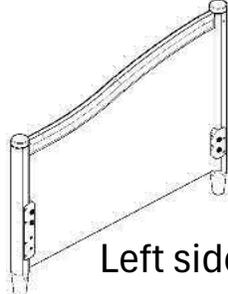[12-113] TWIN DAYBED SIDE PANELS		QTY
1	Right side 	1 PCS
2	Left side 	1 PCS

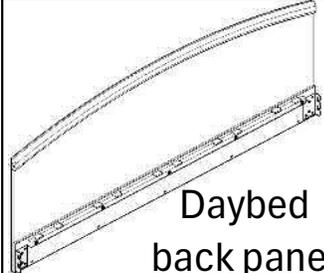
[12-938] DAYBED BACK PANEL		QTY
4	 Daybed back panel	1 PCS


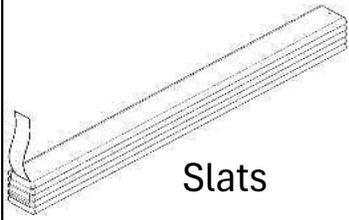
[100-172] 5 PCS TWIN SLAT PACK		QTY
5	 Slats	1 SET




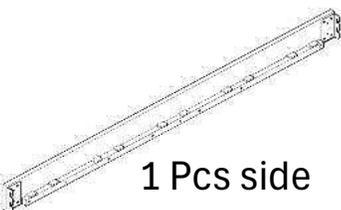
[12-772] 1PCS SIDE RAIL		QTY
3	 1 Pcs side rail	1 PCS

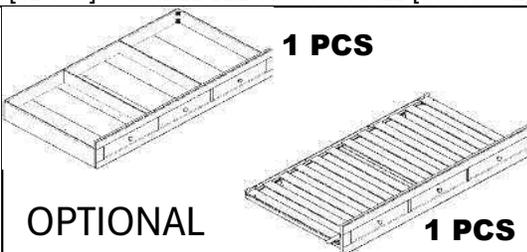[12-744] TWIN STORAGE TRUNDLE [OPTIONAL] OR [12-745] TRUNDLE BED FRONT PANEL [OPTIONAL]		QTY
6	 OPTIONAL 1 PCS	1 PCS

HARDWARE LIST

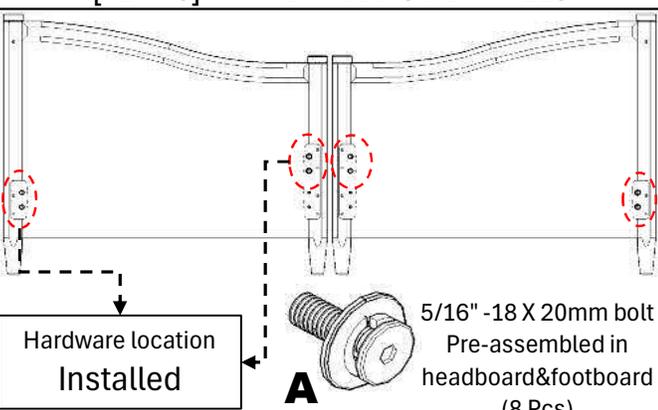
[12-113] TWIN DAYBED SIDE PANELS		QTY
	A 5/16" -18 X 20mm bolt Pre-assembled in headboard&footboard (8 Pcs)	

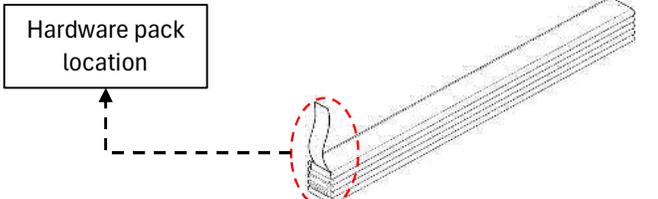[100-172] HARDWARE PACK (1 SET)		QTY
F 	6 X 1 1/4" Screw	10 PCS
	Hardware pack location	

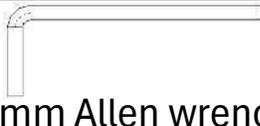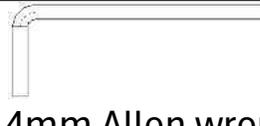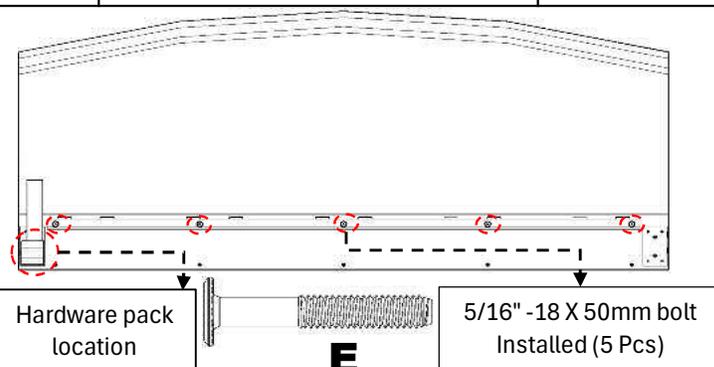[12-938] HARDWARE PACK (1 SET)		QTY
B 	5/16" - 18 X 80mm bolt	2 PCS
C 	5mm Allen wrench	1 PCS
D 	4mm Allen wrench	1 PCS
	E 5/16" -18 X 50mm bolt Installed (5 Pcs)	


ASSEMBLY INSTRUCTIONS

STEP 1-5

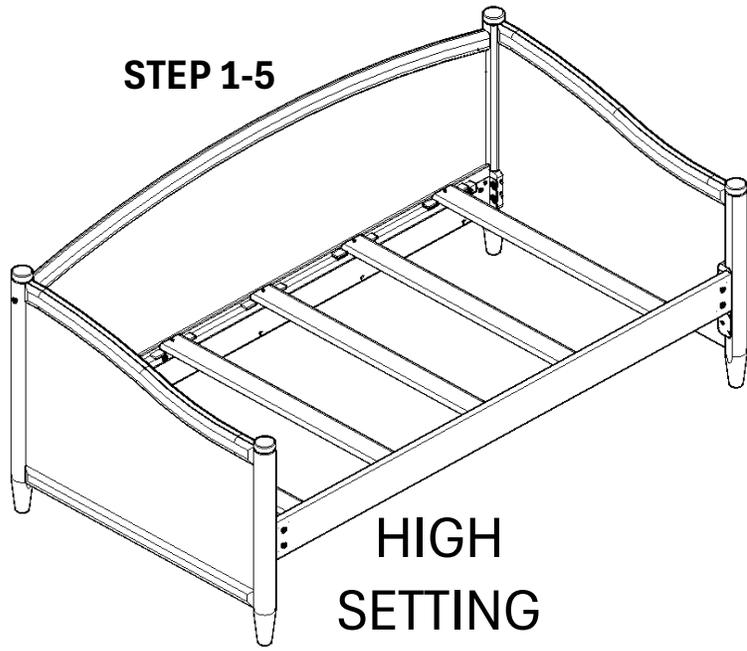

HIGH
SETTING

STEP 6-11




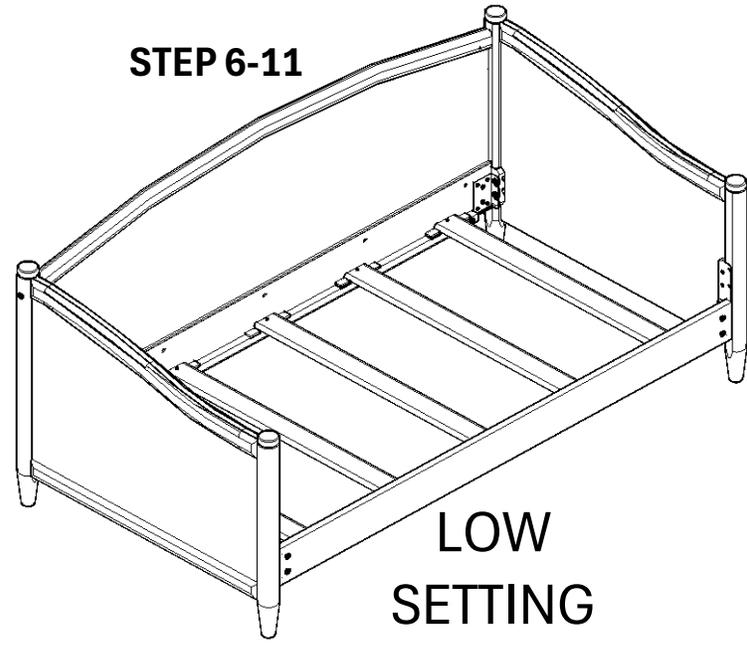


LOW
SETTING

THERE ARE TWO POSSIBLE SETTINGS, HIGH [Factory settings] AND LOW, IF YOU PURCHASE A TRUNDLE BED DO HIGH SETTINGS, IF NOT DO LOW SETTINGS.


STEP #1

HIGH SETTING

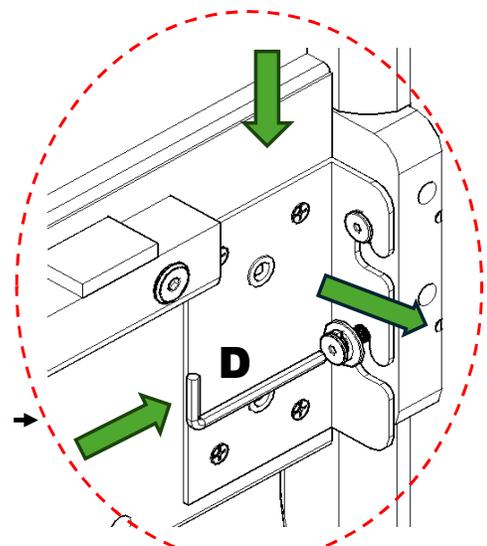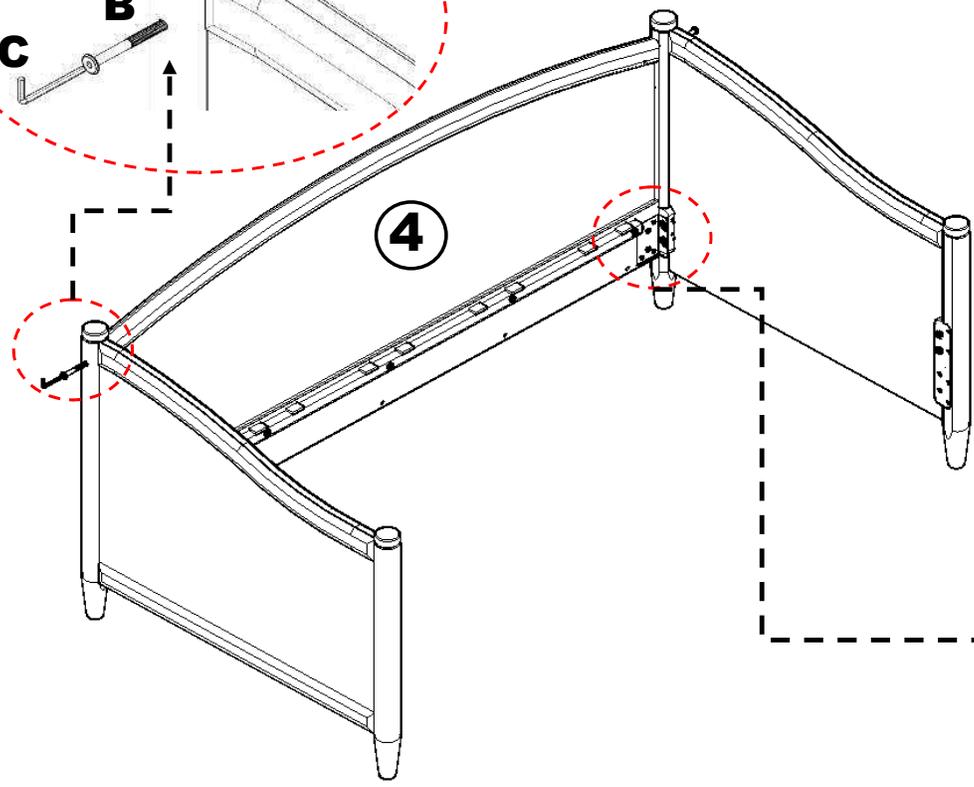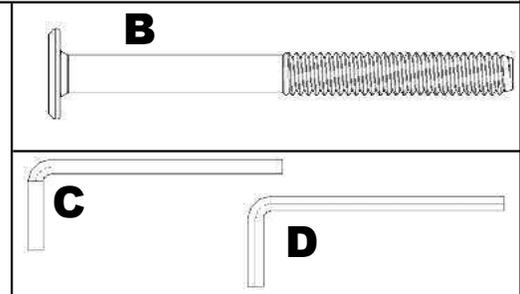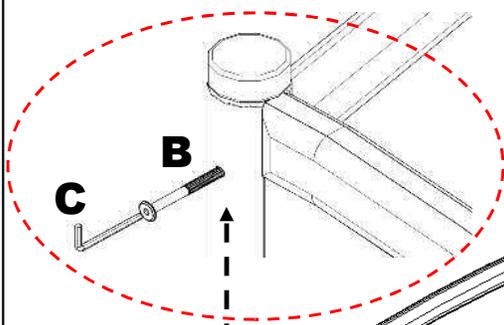


To assemble daybed back panel first loosen bolts 1/4" aprox. both side panels, proceed to place it see figure, do not tighten then assemble the long bolt in the back top side hole, then tighten all bolts.

STEP #2

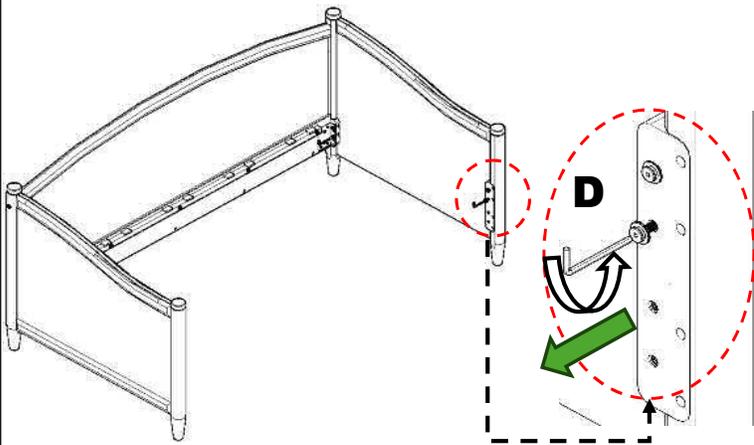




Loosen bolts in both side panels 1/4" approx. Do not remove
BOLTS ARE PRE-ASSEMBLED.

STEP #3

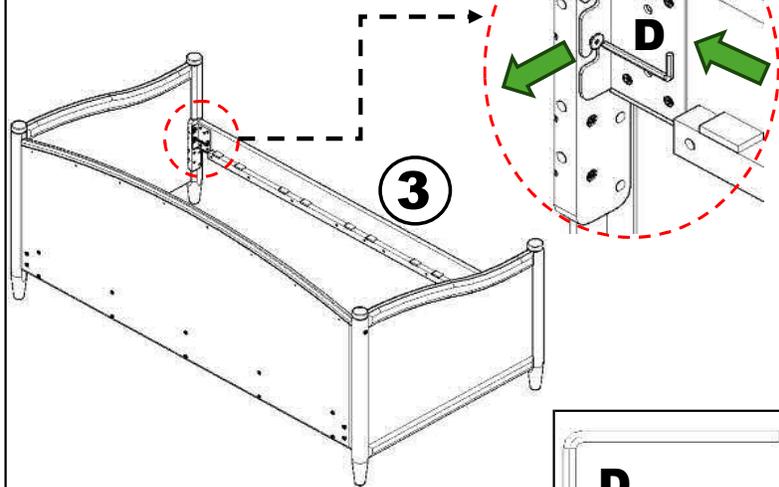


Assemble 1 pcs side rail.

STEP #4

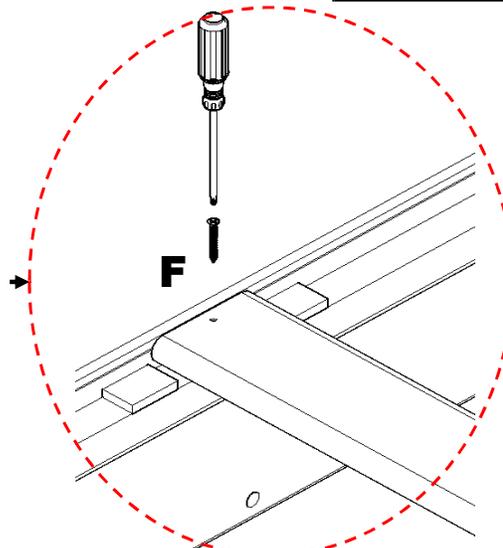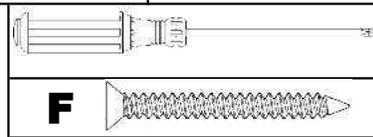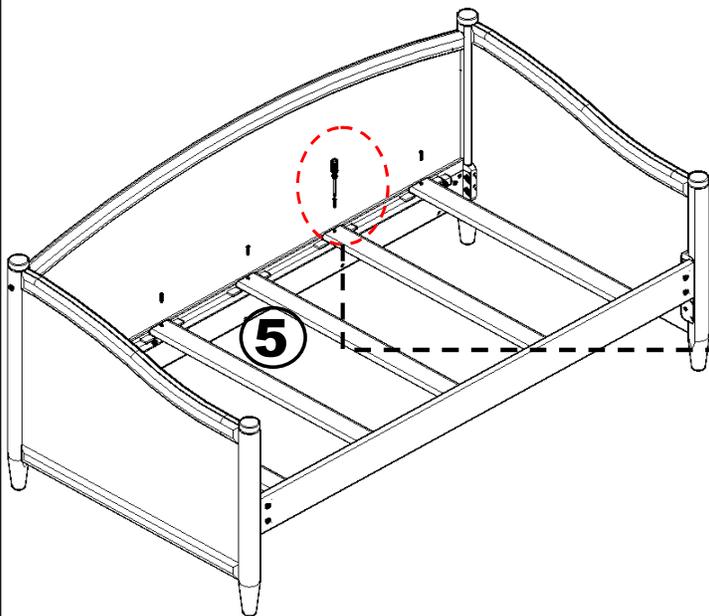


Install slats, one on each space between the small blocks and then fasten with 1 1/4" screws.

STEP #5

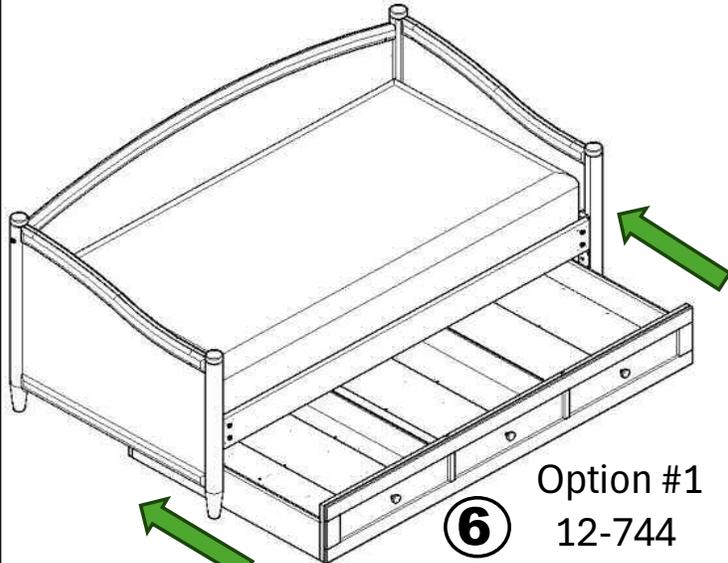

Option #1
6 12-744

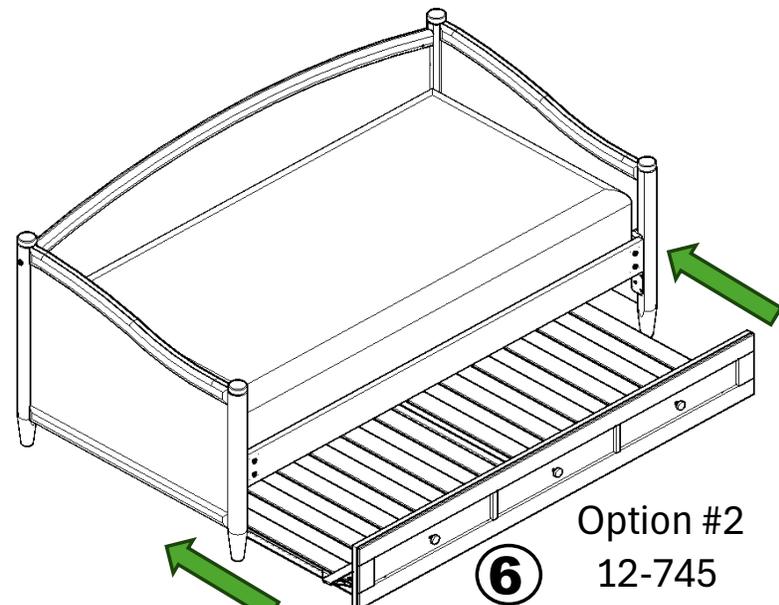


Option #2
6 12-745

For **OPTIONAL** Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.


STEP #6

LOW SETTING

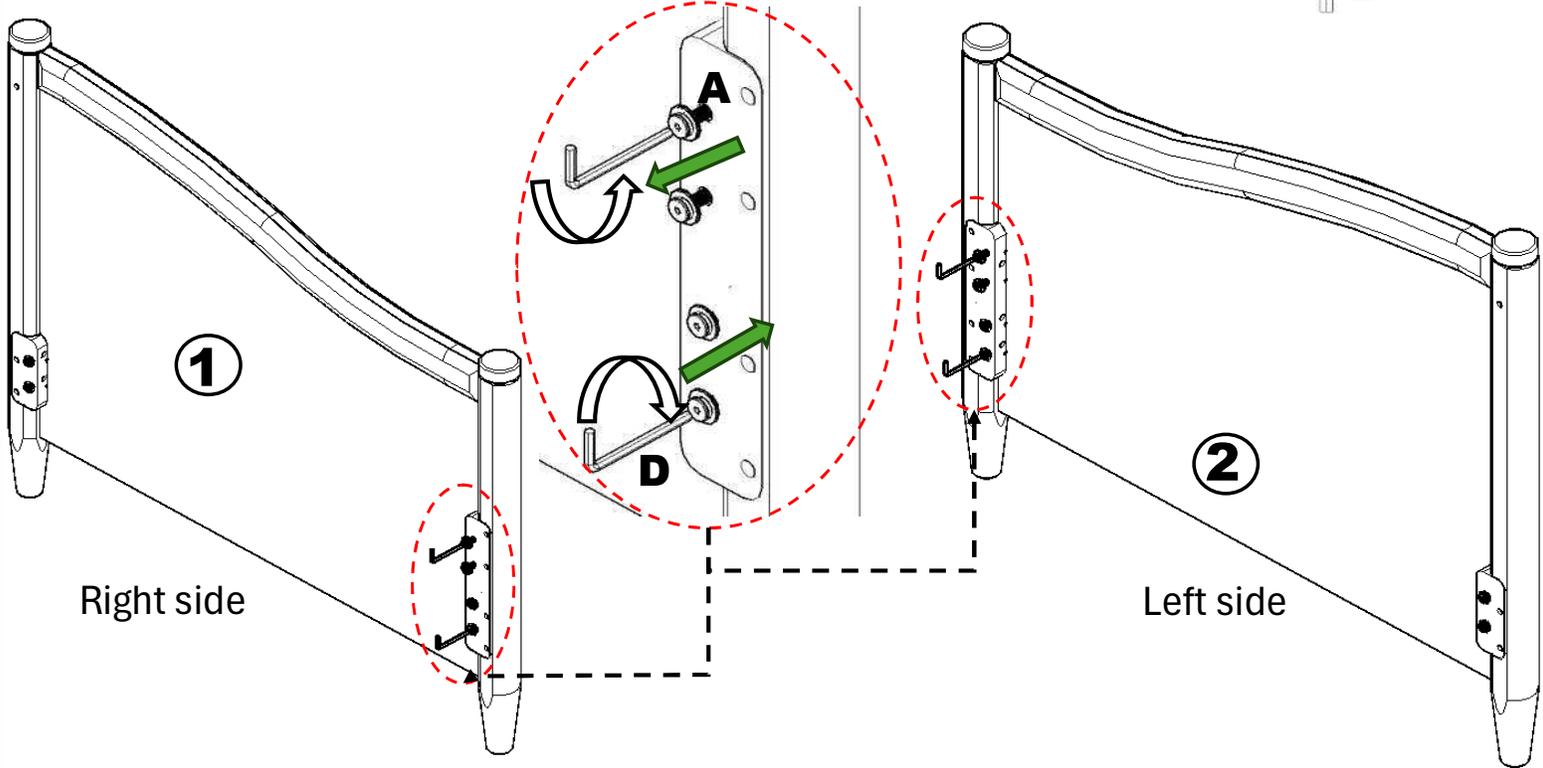


Remove bolts from top factory setting then installed in lower setting, see figure

STEP #7

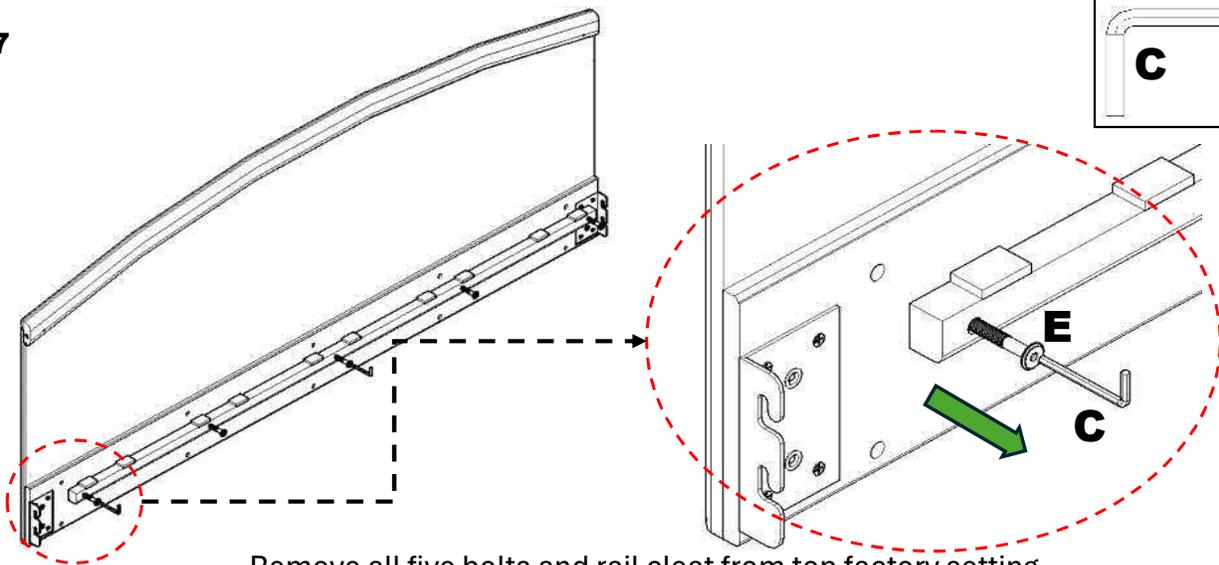


Remove all five bolts and rail cleat from top factory setting.

STEP #8

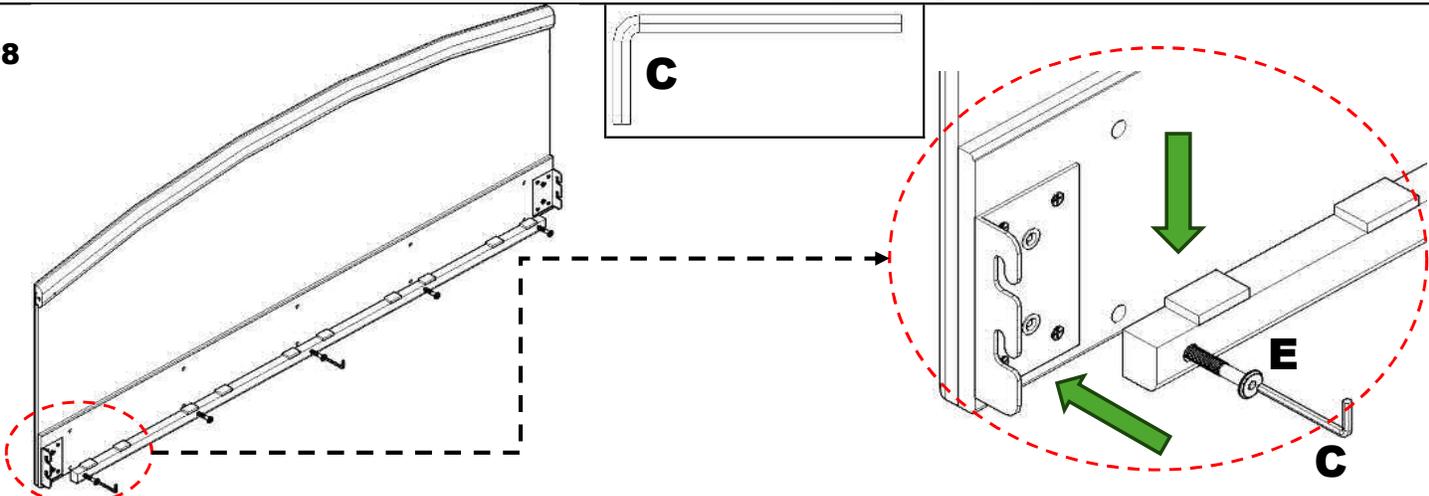


Assemble cleat in the low setting **MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY.**

STEP #9

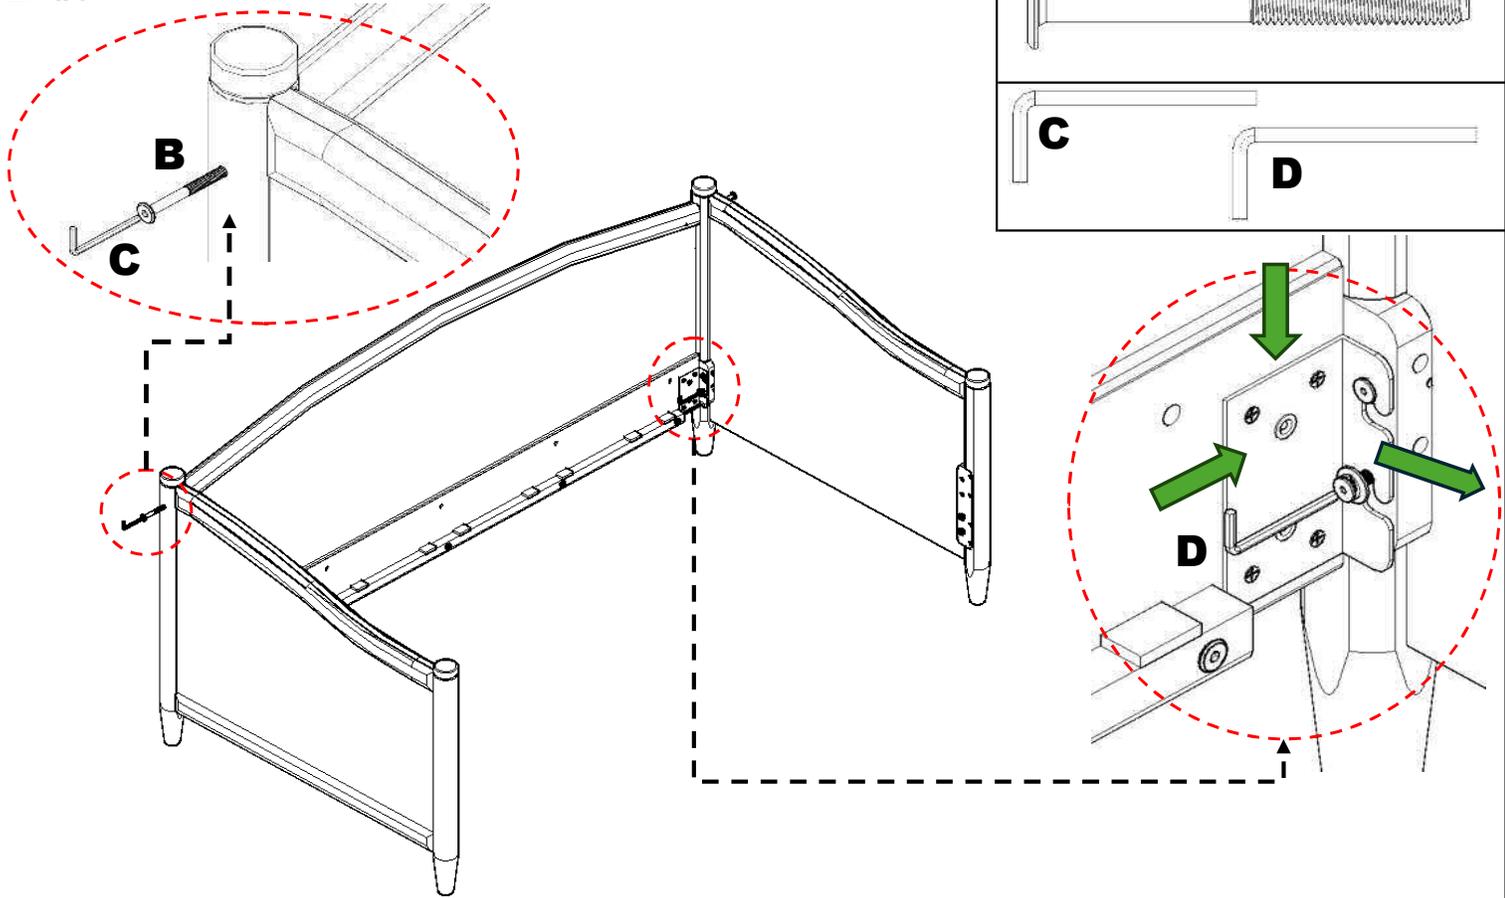


To assemble daybed back panel first loosen bolts 1/4" aprox. both side panels, proceed to place it see figure, do not tighten then assemble the long bolt in the back top side hole, then tighten all bolts.

STEP #10

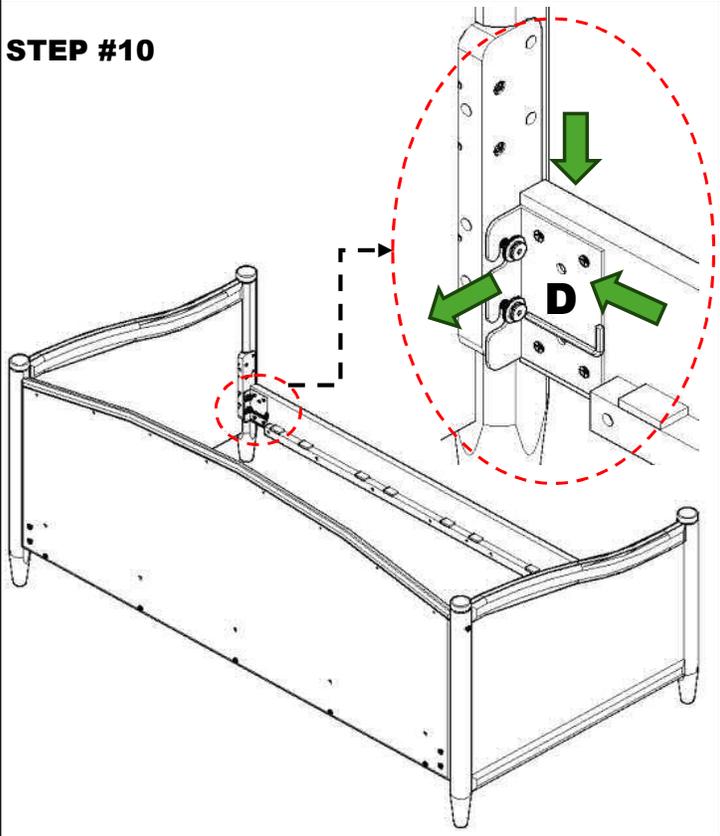

Assemble 1 pcs side rail.

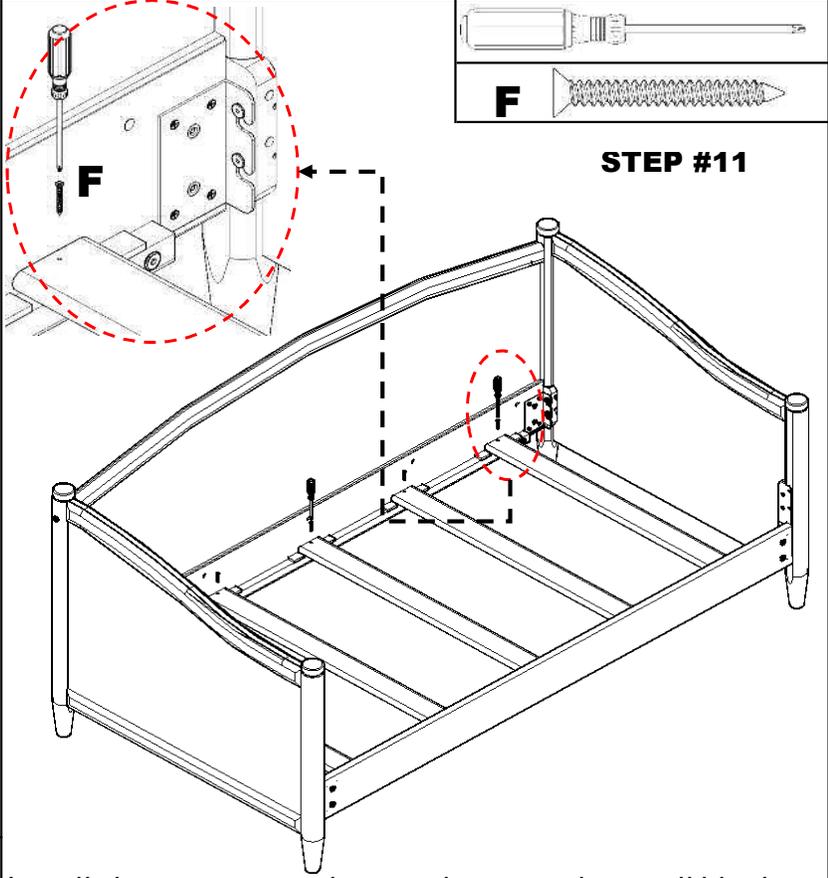

STEP #11

Install slats, one on each space between the small blocks and then fasten with 1 1/4" screws.

ROOMS TO GO

KIDS



Manufactured for Rooms to Go

MODERN COLORS COLLECTION

THANK YOU FOR YOUR PURCHASE

- Read all the instructions, identify all components, and be sure you have all parts prior to assembly
- DO NOT Use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.COM for replacement parts and instructional literature if needed.

FULL DAYBED

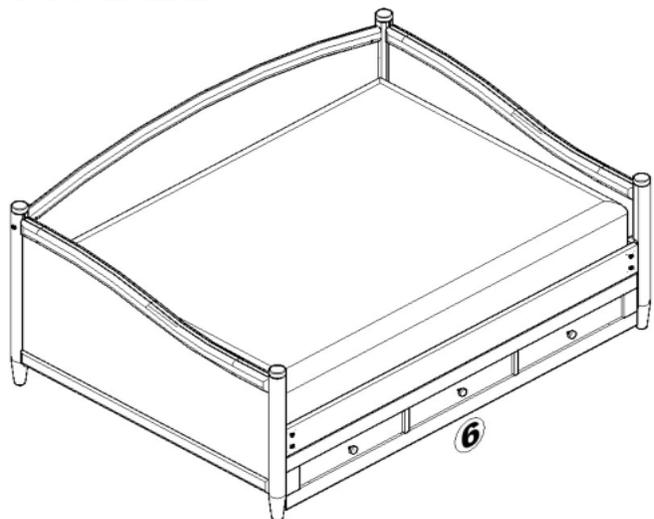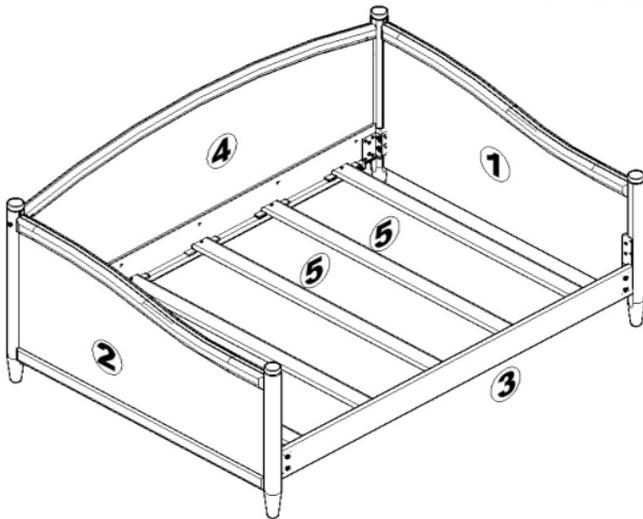

3771127P		FULL DAYBED PINK
RTG SKU #	STYLE #	ITEM DESCRIPTION
37111274	12A-114	FULL DAYBED SIDE PANELS
37311278	12A-938	DAYBED BACK PANEL
37211276	12A-772	1 PCS SIDE RAIL
37611286	100-173	5 PCS FULL SLAT PACK
35611272	12A-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711274	12A-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3771123P		FULL DAYBED IRON ORE
RTG SKU #	STYLE #	ITEM DESCRIPTION
37111236	12D-114	FULL DAYBED SIDE PANELS
37311230	12D-938	DAYBED BACK PANEL
37211238	12D-772	1 PCS SIDE RAIL
37611286	100-173	5 PCS FULL SLAT PACK
35611234	12D-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711236	12D-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3771124P		FULL DAYBED SLATE BLUE
RTG SKU #	STYLE #	ITEM DESCRIPTION
37111248	12E-114	FULL DAYBED SIDE PANELS
37311242	12E-938	DAYBED BACK PANEL
37211240	12E-772	1 PCS SIDE RAIL
37611286	100-173	5 PCS FULL SLAT PACK
35611246	12E-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711248	12E-745	TRUNDLE BED FRONT PANEL [OPTIONAL]

3771125P		FULL DAYBED LIGHT GRAY
RTG SKU #	STYLE #	ITEM DESCRIPTION
37111250	12G-114	FULL DAYBED SIDE PANELS
37311254	12G-938	DAYBED BACK PANEL
37211252	12G-772	1 PCS SIDE RAIL
37611286	100-173	5 PCS FULL SLAT PACK
35611258	12G-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711250	12G-745	TRUNDLE BED FRONT PANEL [OPTIONAL]


**TWO PEOPLE ARE NEEDED TO ASSEMBLE
DO NOT TIGHTEN COMPLETELY UNTIL ALL PIECES
ARE CONNECTED TOGETHER**

3771126P		FULL DAYBED WHITE
RTG SKU #	STYLE #	ITEM DESCRIPTION
37111262	12W-114	FULL DAYBED SIDE PANELS
37311266	12W-938	DAYBED BACK PANEL
37211264	12W-772	1 PCS SIDE RAIL
37611286	100-173	5 PCS FULL SLAT PACK
35611260	12W-744	TWIN STORAGE TRUNDLE [OPTIONAL]
35711262	12W-745	TRUNDLE BED FRONT PANEL [OPTIONAL]



WARNING:
THE BED SLATS WILL NOT SUPPORT A MATTRESS ALONE, THIS
BED REQUIRES A BOX SPRING OR BUNKIE BOARD. SOLD
SEPARATELY


PHILLIPS SCREWDRIVER [NOT INCLUDED]


ALLEN WRENCH [INCLUDED]





PART LIST

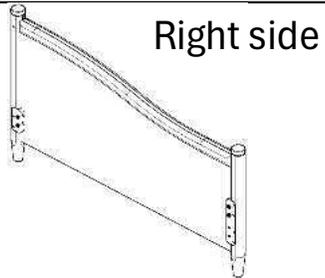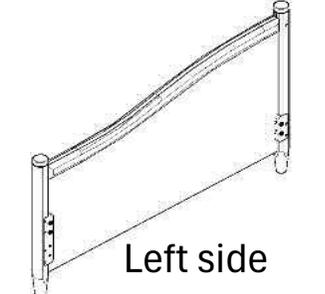[12-114] FULL DAYBED SIDE PANELS	QTY
<p>1 Right side</p>  <p>1 PCS</p>	
<p>2 Left side</p>  <p>1 PCS</p>	

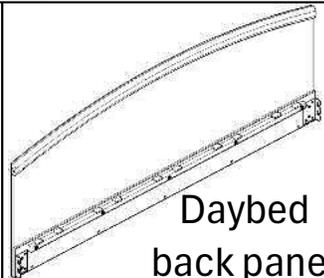
[12-938] DAYBED BACK PANEL	QTY
<p>4</p>  <p>Daybed back panel</p> <p>1 PCS</p>	


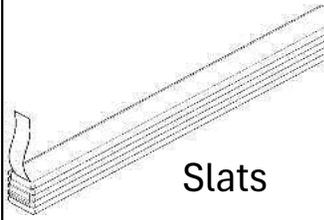
[100-173] 5 PCS FULL SLAT PACK	QTY
<p>5</p>  <p>Slats</p> <p>1 SET</p>	

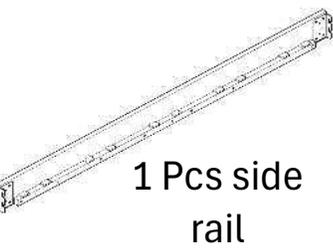
[12-772] 1PCS SIDE RAIL	QTY
<p>3</p>  <p>1 Pcs side rail</p> <p>1 PCS</p>	

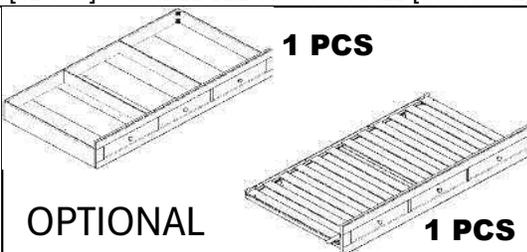[12-744] TWIN STORAGE TRUNDLE [OPTIONAL] OR [12-745] TRUNDLE BED FRONT PANEL [OPTIONAL]	QTY
<p>6</p>  <p>OPTIONAL 1 PCS</p> <p>1 PCS</p>	

HARDWARE LIST

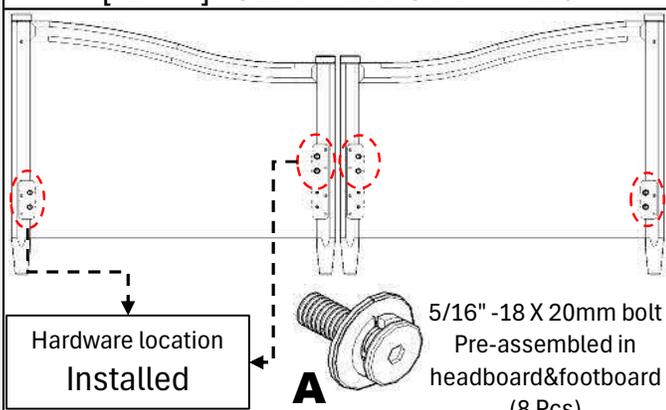
[12-114] FULL DAYBED SIDE PANELS	QTY
 <p>Hardware location Installed</p> <p>A 5/16" -18 X 20mm bolt Pre-assembled in headboard&footboard (8 Pcs)</p>	

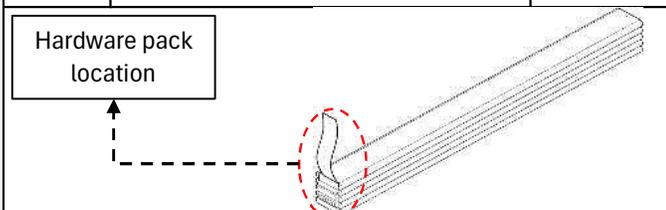[100-173] HARDWARE PACK (1 SET)	QTY
<p>F</p>  <p>6 X 1 1/4" Screw</p> <p>10 PCS</p>	
<p>Hardware pack location</p> 	

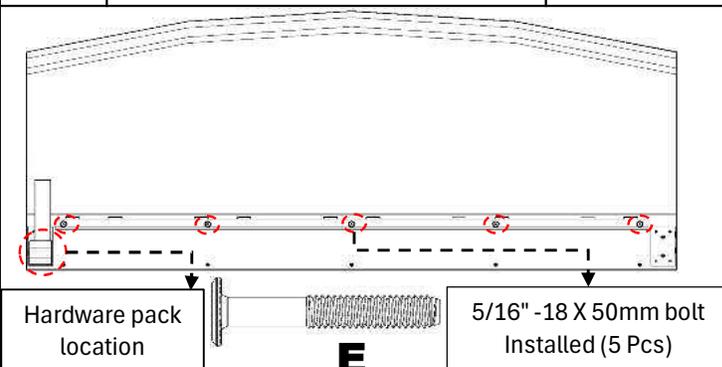[12-938] HARDWARE PACK (1 SET)	QTY
<p>B</p>  <p>5/16" - 18 X 80mm bolt</p> <p>2 PCS</p>	
<p>C</p>  <p>5mm Allen wrench</p> <p>1 PCS</p>	
<p>D</p>  <p>4mm Allen wrench</p> <p>1 PCS</p>	
 <p>Hardware pack location</p> <p>E 5/16" -18 X 50mm bolt Installed (5 Pcs)</p>	


ASSEMBLY INSTRUCTIONS

STEP 12-16

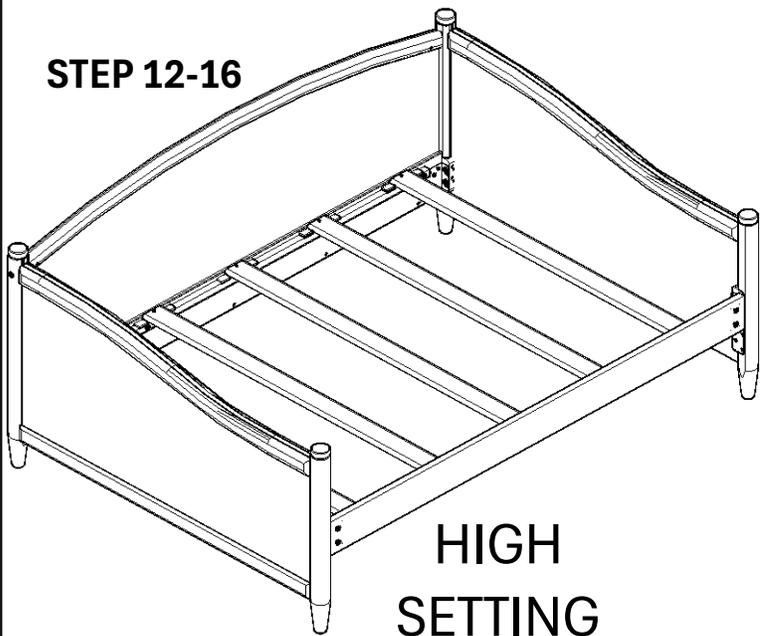

HIGH SETTING

STEP 17-22




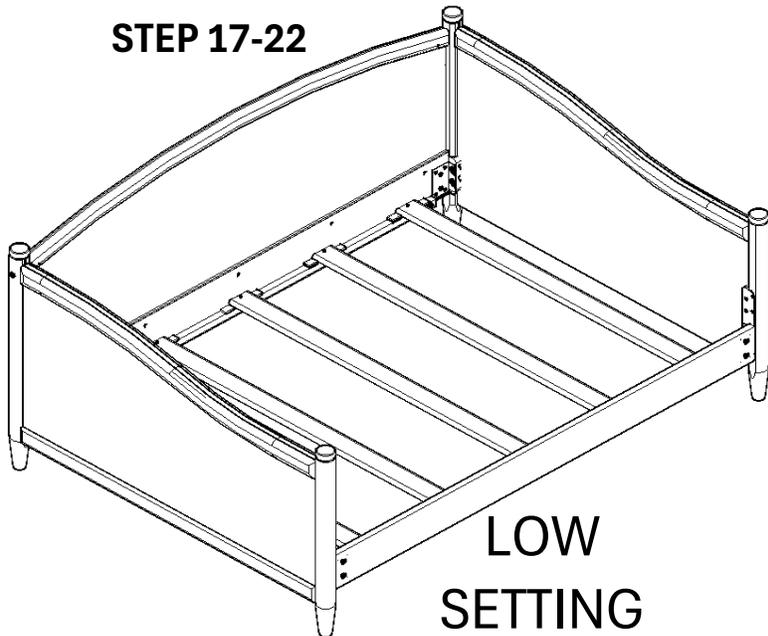


LOW SETTING

THERE ARE TWO POSSIBLE SETTINGS, HIGH [Factory settings] AND LOW, IF YOU PURCHASE A TRUNDLE BED DO HIGH SETTINGS, IF NOT DO LOW SETTINGS.


STEP #12

HIGH SETTING

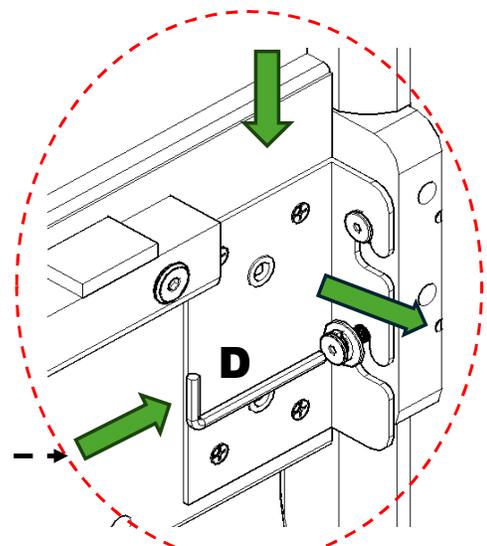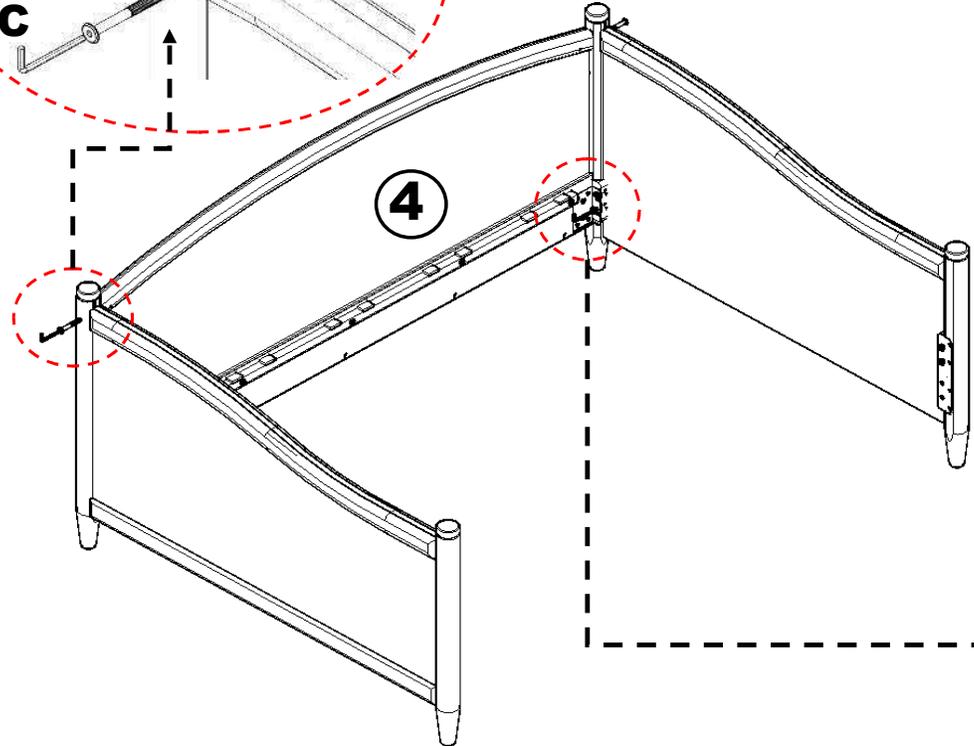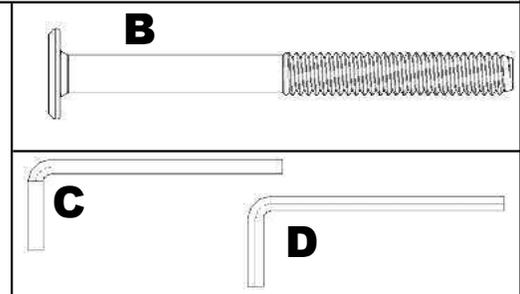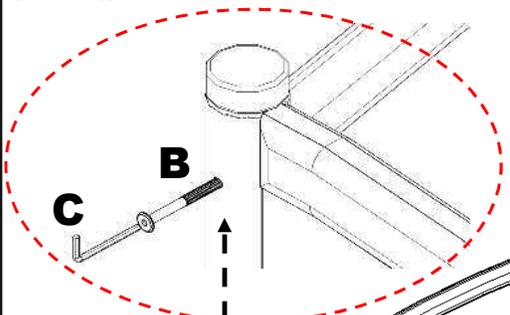


To assemble daybed back panel first loosen bolts 1/4" aprox. both side panels, proceed to place it see figure, do not tighten then assemble the long bolt in the back top side hole, then tighten all bolts.

STEP #13

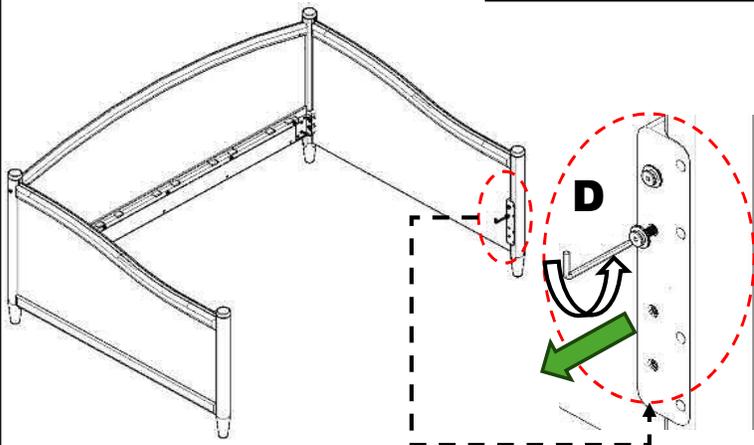


Loosen bolts in both side panels 1/4" approx. Do not remove
BOLTS ARE PRE-ASSEMBLED.

STEP #14

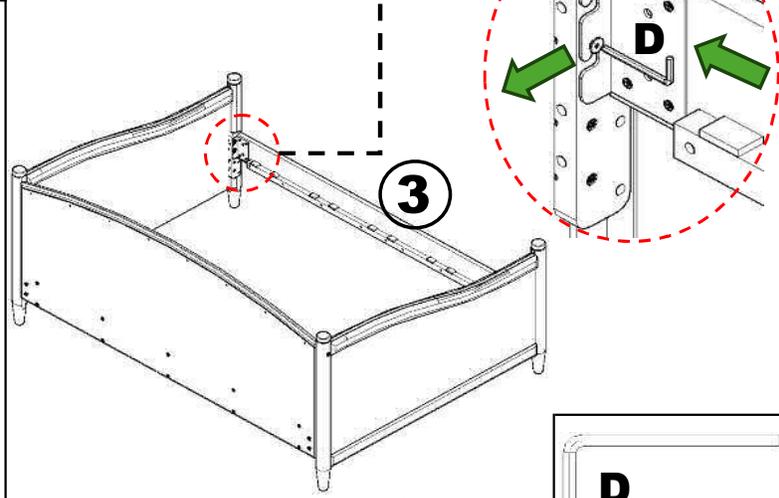


Assemble 1 pcs side rail.

STEP #15

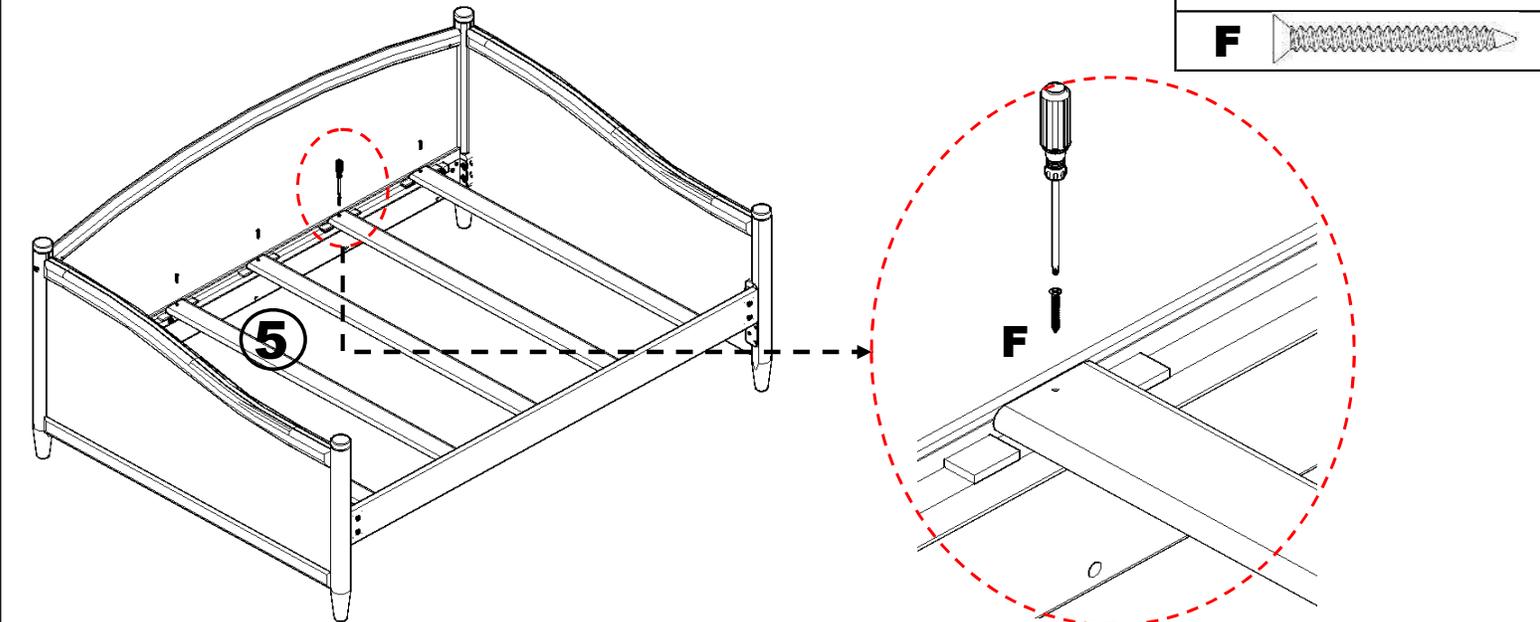

Install slats, one on each space between the small blocks and then fasten with 1 1/4" screws.


STEP #16

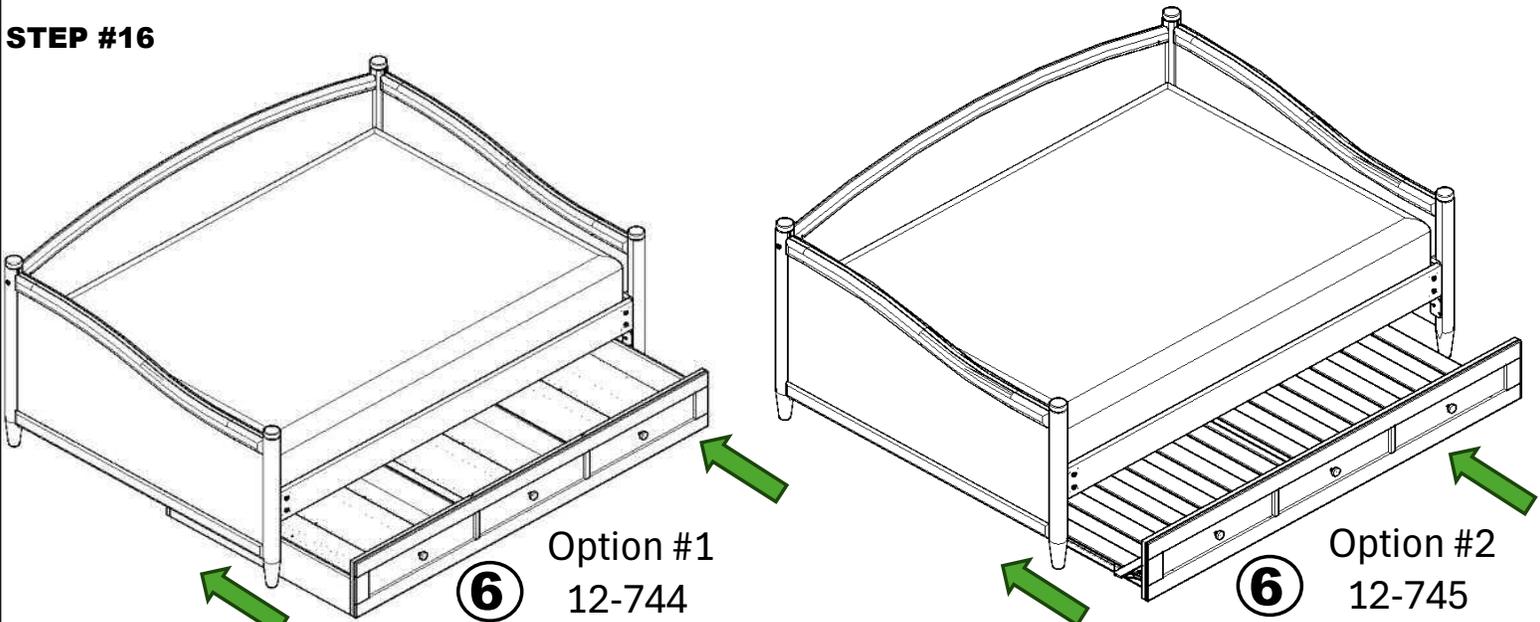

For **OPTIONAL** Trundle bed follow assembly instructions inside Trundle bed box, then slide under the bed as shown.


STEP #17

LOW SETTING

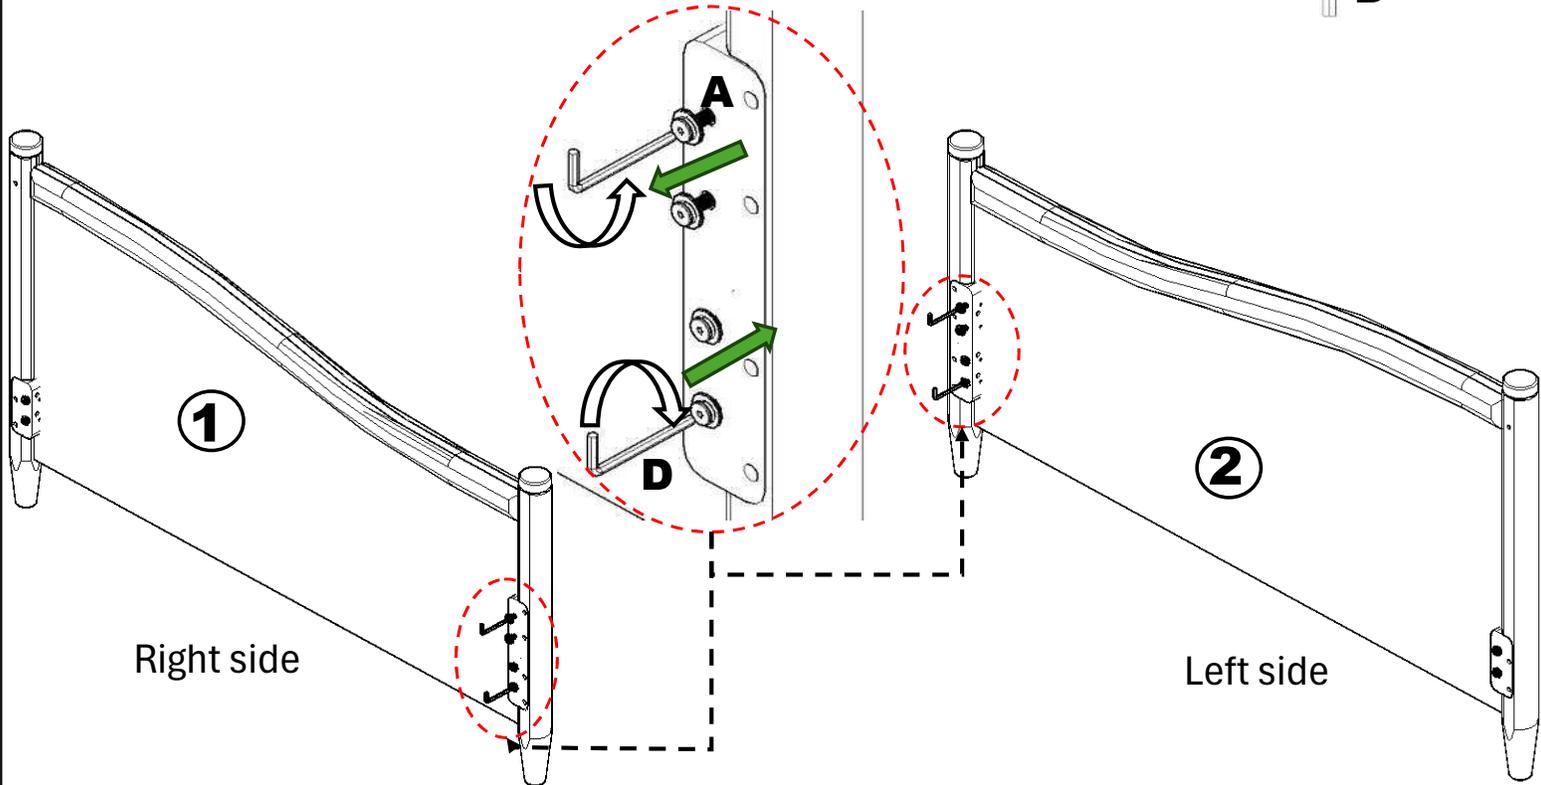


Remove bolts from top factory setting then installed in lower setting, see figure

STEP #18

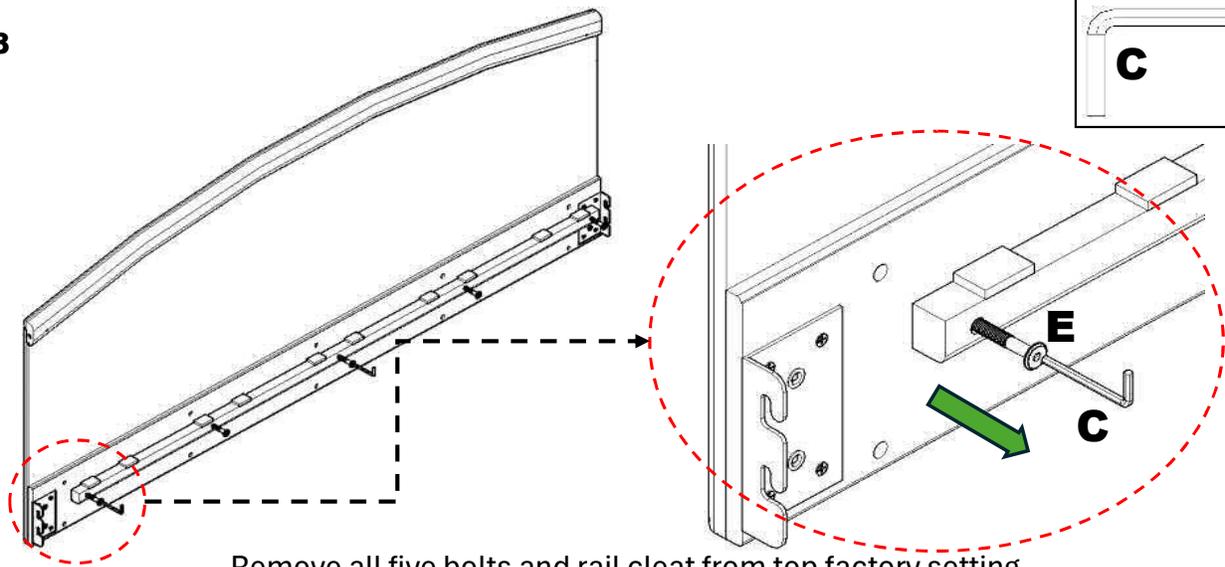


Remove all five bolts and rail cleat from top factory setting.

STEP #19

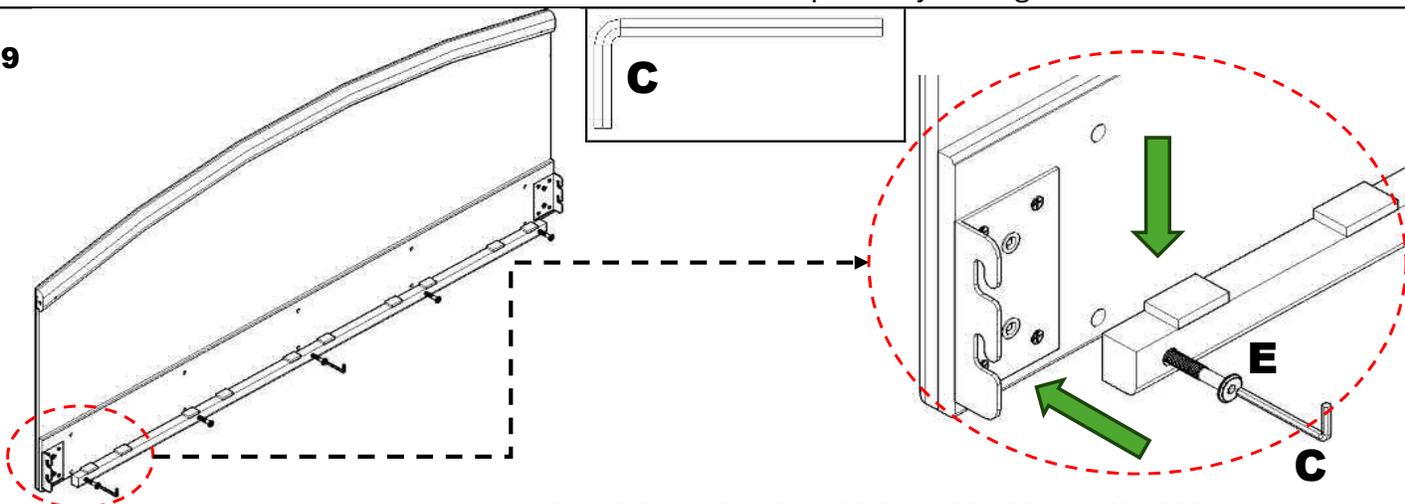


Assemble cleat in the low setting **MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY.**

STEP #20

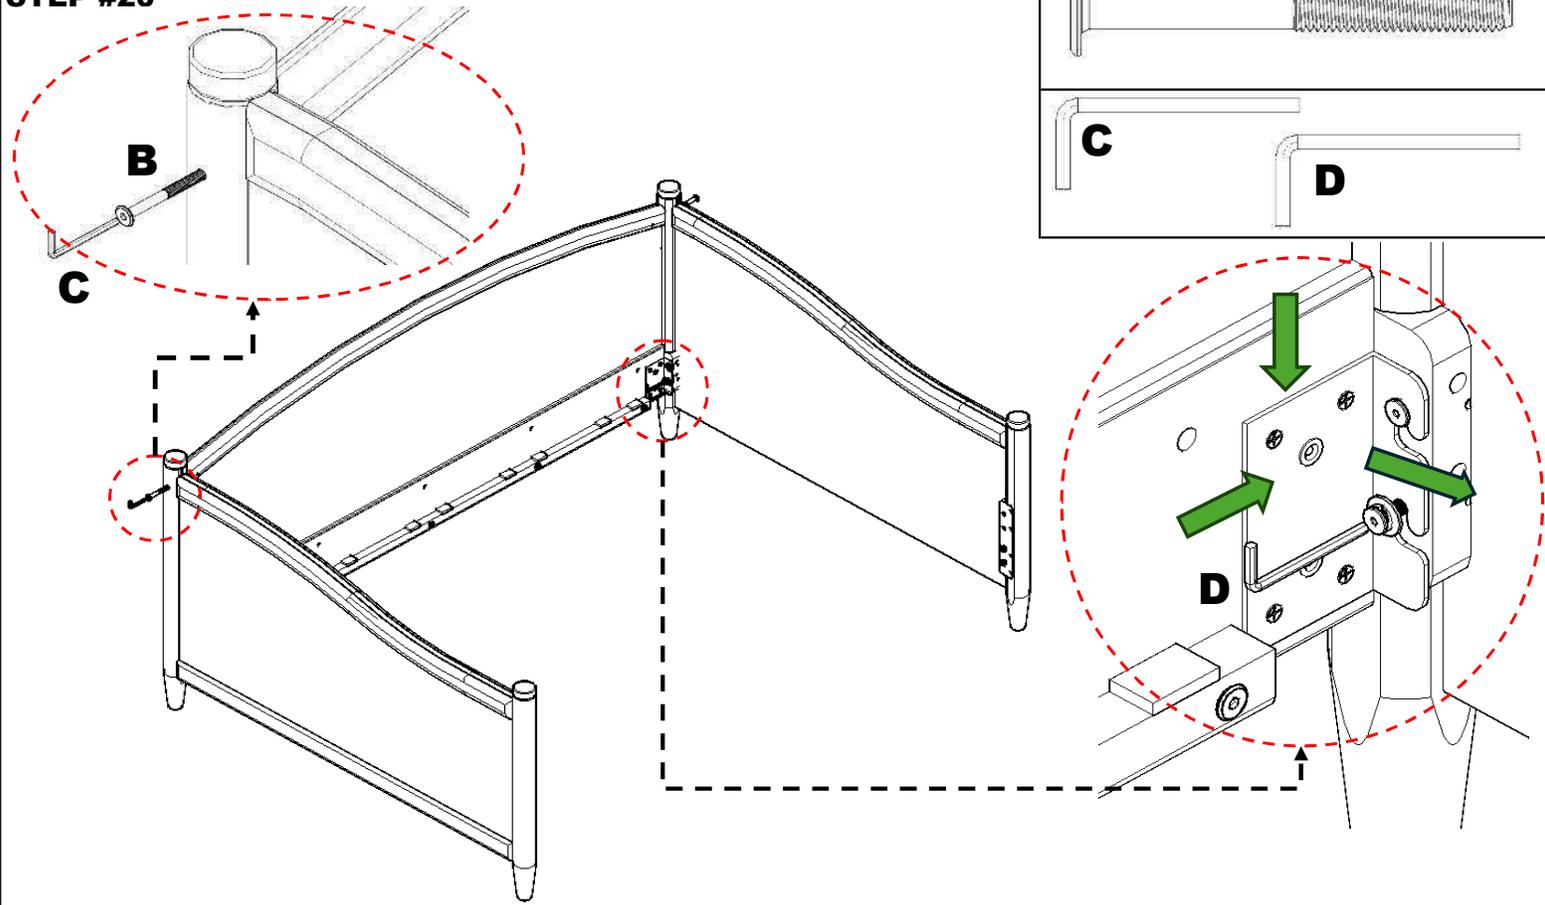


To assemble daybed back panel first loosen bolts 1/4" aprox. both side panels, proceed to place it see figure, do not tighten then assemble the long bolt in the back top side hole, then tighten all bolts.

STEP #21

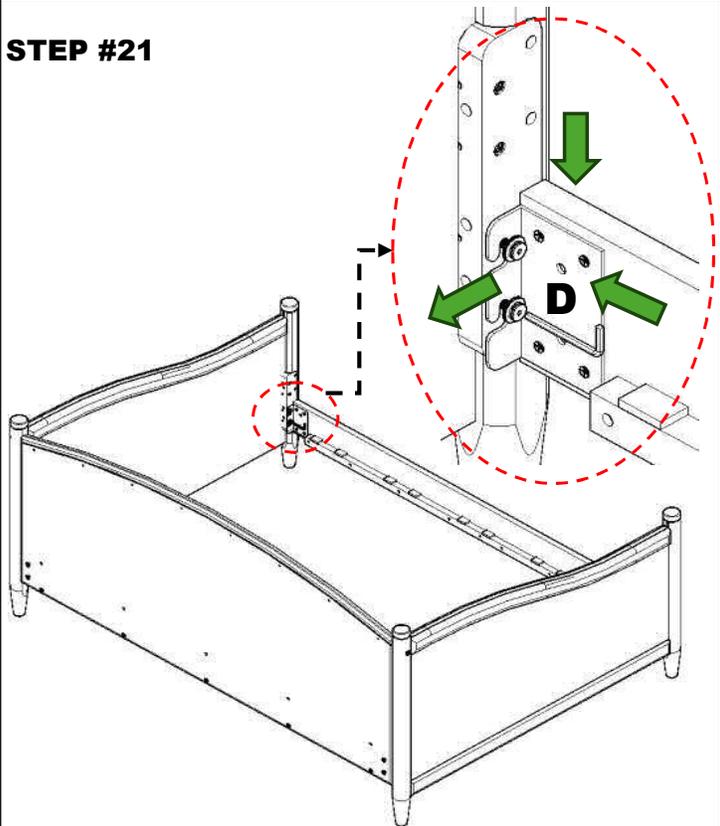

Assemble 1 pcs side rail.

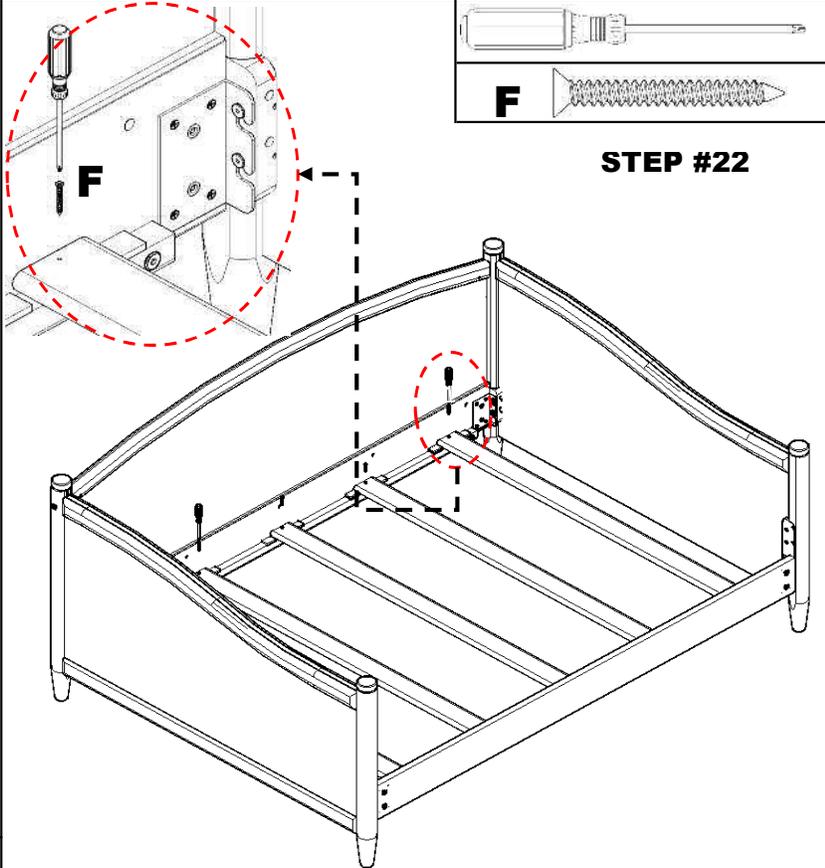

STEP #22

Install slats, one on each space between the small blocks and then fasten with 1 1/4" screws.