

ASSEMBLY INSTRUCTIONS

GLOB 8004-3BKR
GLOB 8004-3BWR
GLOB 8004-3GYR
GLOB 8004-3NVR
GLOB 8004-4REDR
GLOB 8004-3PNK



BLACK RECLINER
BROWN RECLINER
GRAY RECLINER
NAVY RECLINER
RED W/BLACK RECLINER
PINK RECLINER

SKU# 38080052
SKU# 38180054
SKU# 38280056
SKU# 38380058
SKU# 38480050
SKU# 38580052


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

**Assemble the product on flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.



NOTE: Do not tighten any bolts until all bolts have been started.

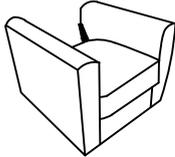PART NO.	SKETCH	DESCRIPTION	QTY	PART NO.	SKETCH	DESCRIPTION	QTY
A		RECLINER BASE	1	B		RECLINER BACK	1
C		LEGS	4				

HARDWARE LIST

STEP	CODE	SKETCH	DESCRIPTION	QTY
2	G		ALLEN WRENCH 5mm x 80mm	1
2	D		ALLEN BOLT 5/16" x "35" x 2"	4
			SPRING WASHER Ø5/16" x Ø11/20" x 2mmT	4
			FLAT WASHER Ø5/16" x Ø27/40" x 1.2mmT	4
3	H		FOOTPAD Ø3/4" x 0.6"	4

HARDWARE PACK & LEGS LOCATION

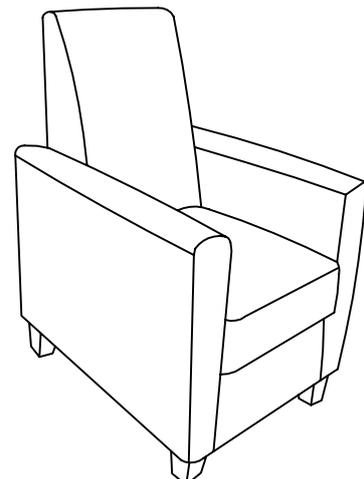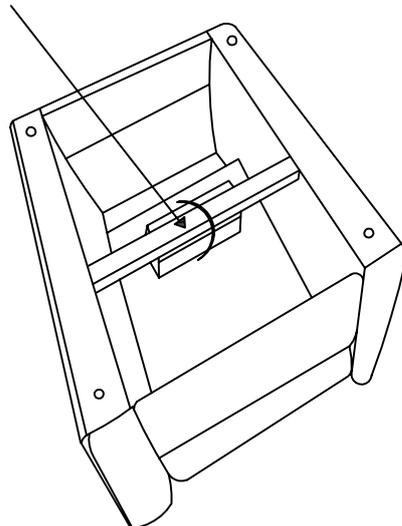

ASSEMBLY INSTRUCTIONS

GLOB 8004-3BKR
GLOB 8004-3BWR
GLOB 8004-3GYR
GLOB 8004-3NVR
GLOB 8004-4REDR
GLOB 8004-3PNK

BLACK RECLINER
BROWN RECLINER
GRAY RECLINER
NAVY RECLINER
RED W/BLACK RECLINER
PINK RECLINER


SKU# 38080052
SKU# 38180054
SKU# 38280056
SKU# 38380058
SKU# 38480050
SKU# 38580052

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

**Assemble the product on flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.


NOTE: Do not tighten any bolts until all bolts have been started.

Step 1

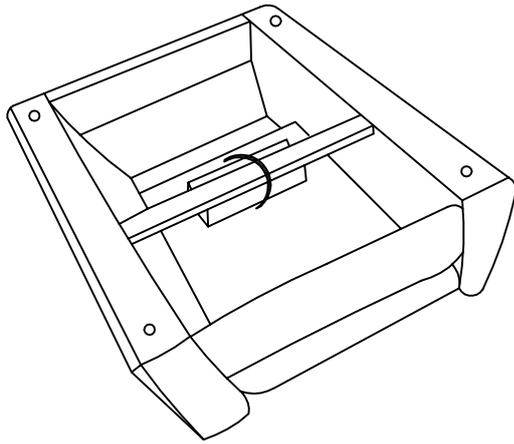


Turn Recliner Base up side down.
Take out small carton containing 4 legs & 1 hardware package.

Step 2

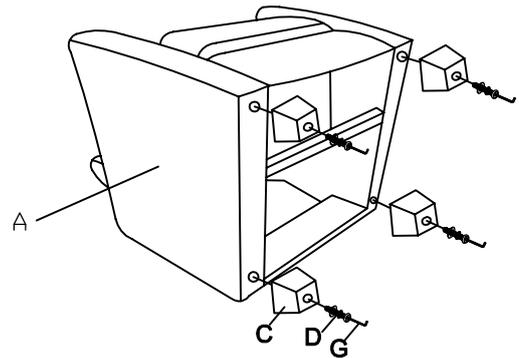


Screw Chair Leg to Recliner Base

Step 3

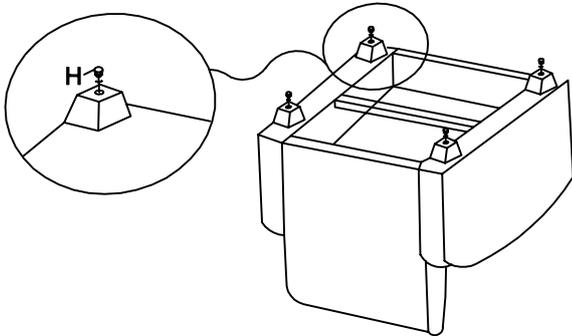


Screw footpad in the bottom of Chair Legs

Step 4

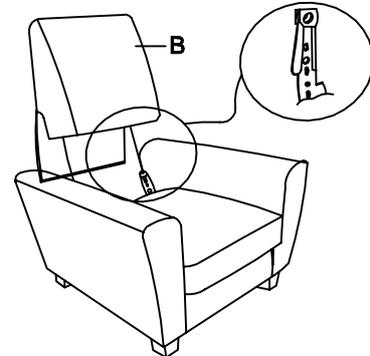


Attach Recliner Back into Recliner Base as above shown

Step 5

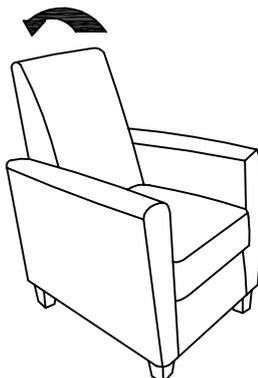

Push Recliner Back to right position

Step 6

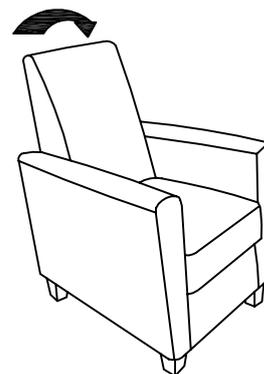

Fold Recliner Back to normal position