


ROOMS TO GO 
KIDS
 Manufactured for Rooms To Go Kids

SANTA CRUZ

1497/1597 TWIN DAYBED

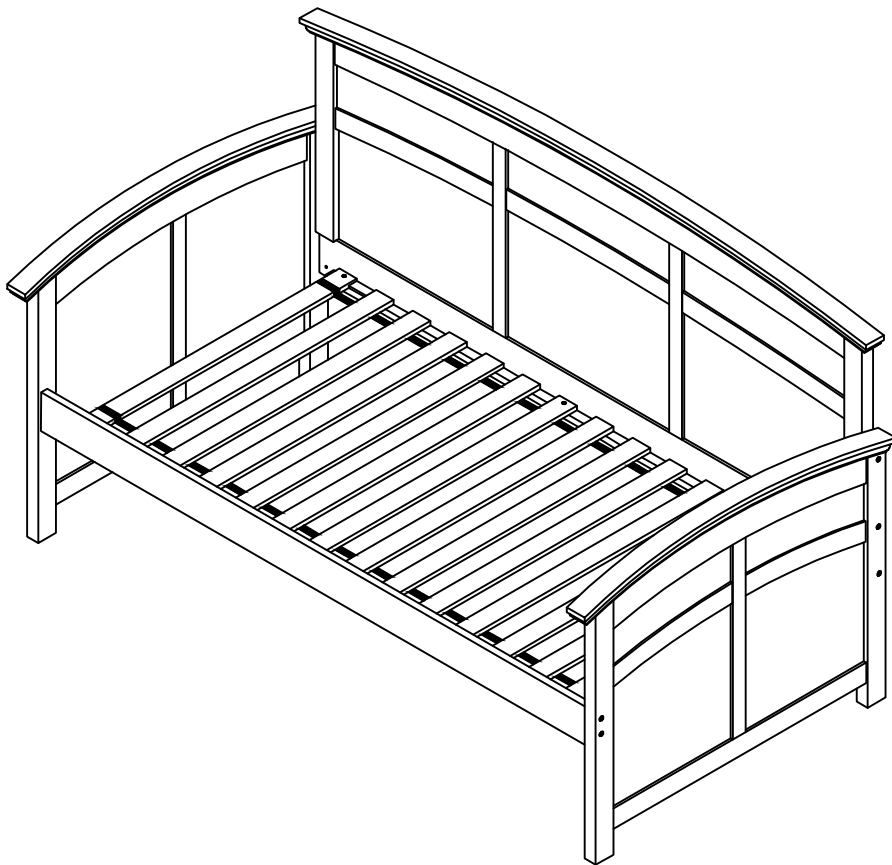

3911497P-CHERRY DAYBED			3911498P-GRAY DAYBED		
RTG SKU	STYLE#	DESCRIPTION	RTG SKU	STYLE#	DESCRIPTION
37414973	1497-51	Twin Daybed Arms & Slats	37414985	1597-51	Twin Daybed Arms & Slats
37514975	1497-52	Daybed Back Panel & Rail	37514987	1597-52	Daybed Back Panel & Rail






DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

ROOMS TO GO





KIDS

Manufactured for Rooms To Go Kids

Parts List


Parts	Picture	Description	Qty
A		Right Panel	1 Pc
B		Left Panel	1 Pc
C		Side Rail	1 Pc
D		Back Panel	1 Pc
E		Slat Roll	1 Set

Hardware List

No.	Picture	Description	Qty
①		Bolt 1/4"x18 x 2 3/8"	10 Pcs
②		Wood Screw M4 x 30mm	6 Pcs
③		Wood Dowel Ø10 x 35mm	4 Pcs
④		Allen Key M4	1 Pc

Hardware Pack Locations:

RTG SKU	Style#	Description
37514975	1497-52	Daybed Back Panel & Rail
37514987	1597-52	Daybed Back Panel & Rail

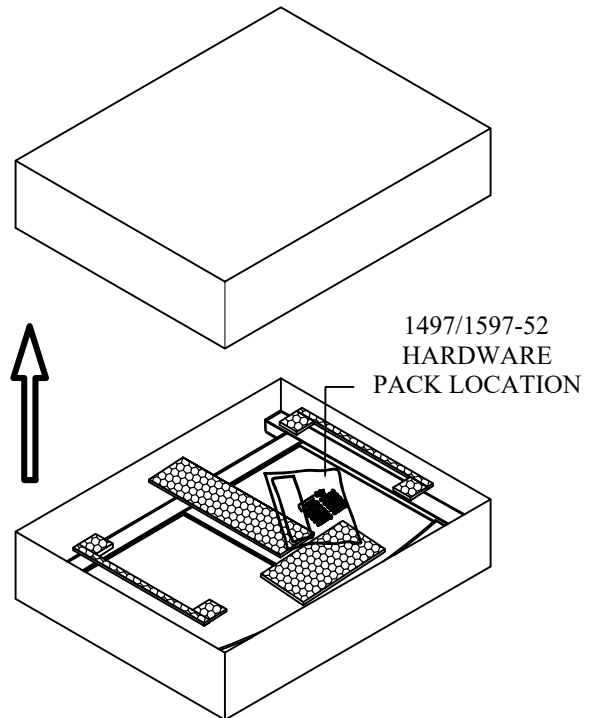

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

ROOMS TO GO




KIDS


Manufactured for Rooms To Go Kids

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list. Read all instructions before assembling furniture and keep these instructions for future reference.

ASSEMBLY INSTRUCTION

STEP 1

You will need	
No.1  10x Bolt 1/4"x18 x 2 3/8"	No.4  Allen Key M4
No.3  4x Wood Dowel Ø10 x 35mm	

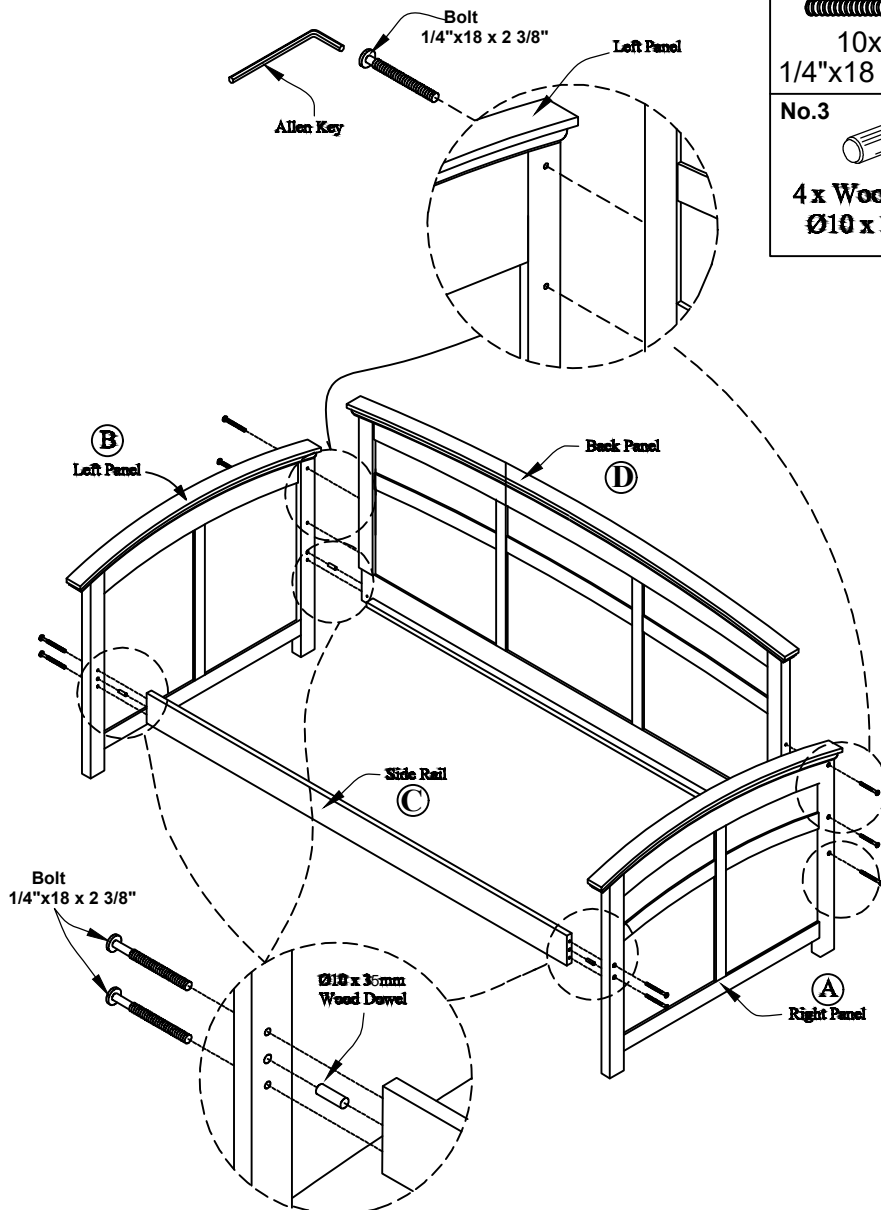


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

ASSEMBLY INSTRUCTION


STEP 2

You will need

No.2



6 x Wood Screw
M4 x 30mm

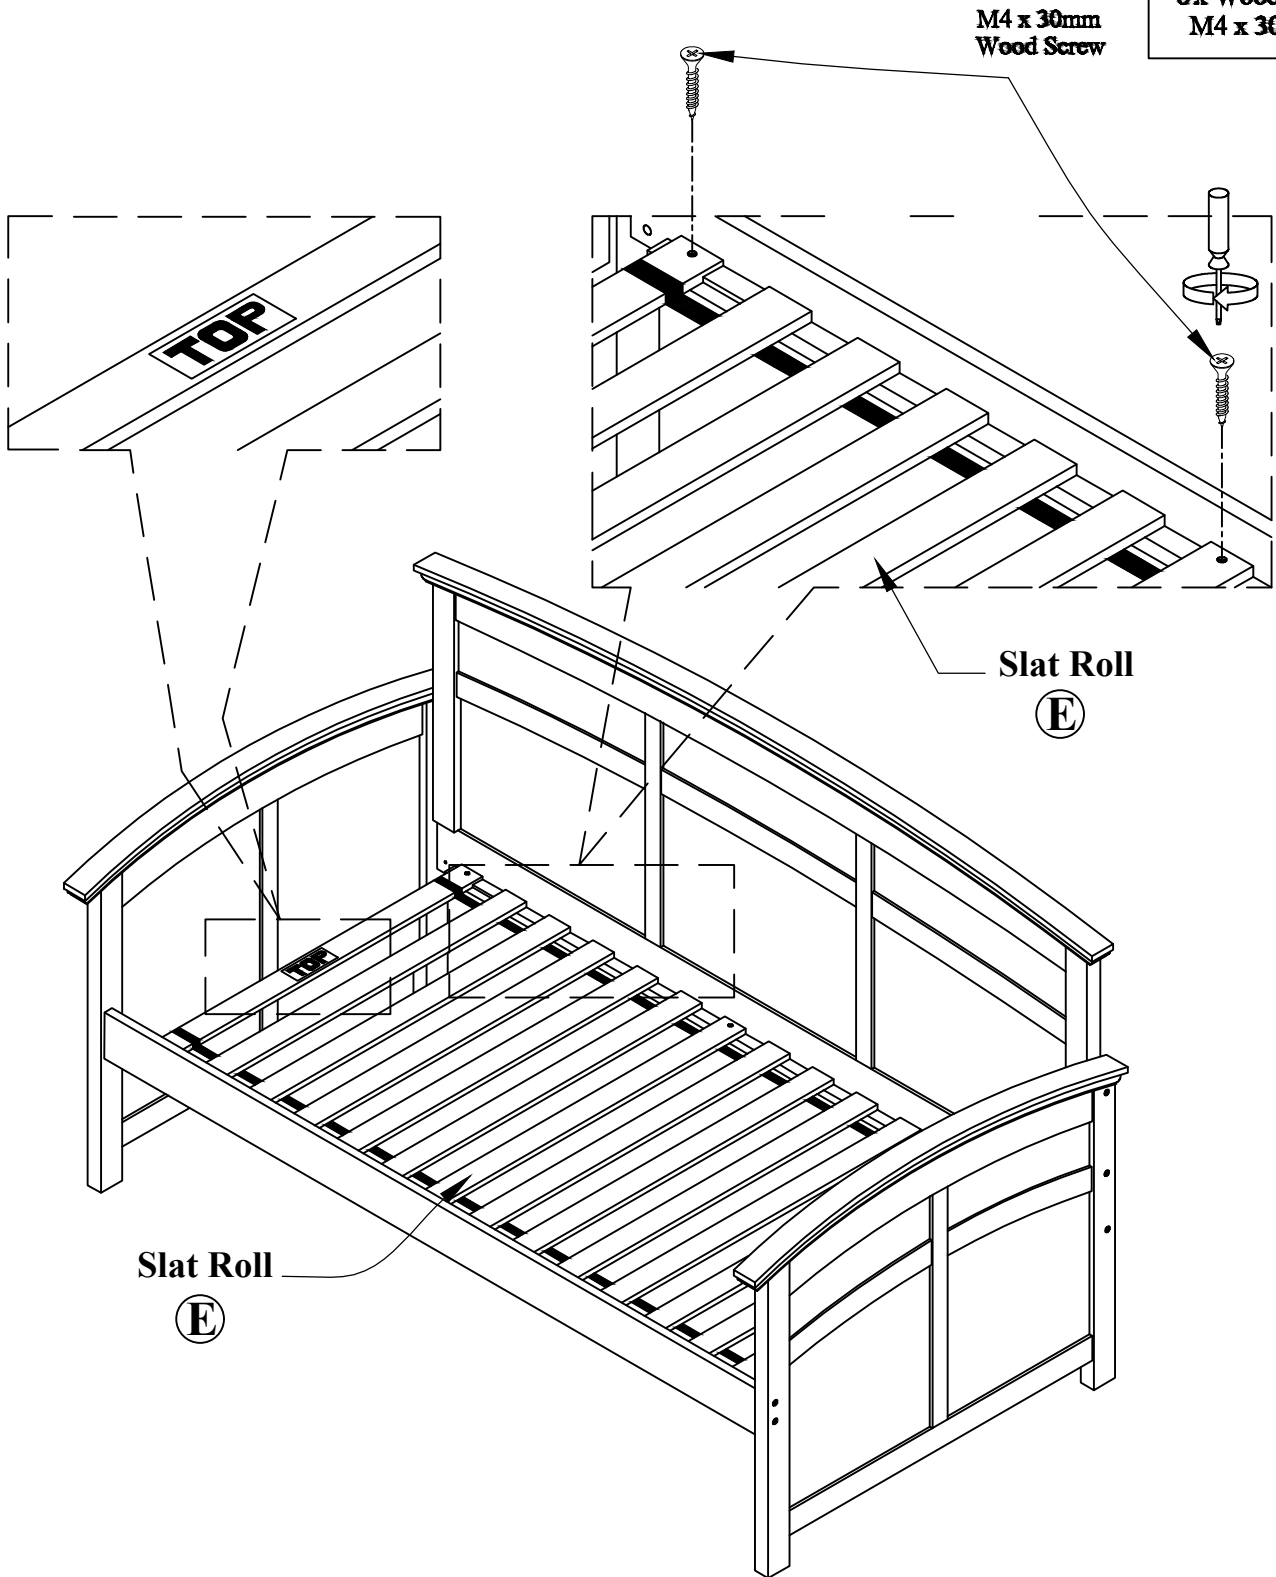

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST