
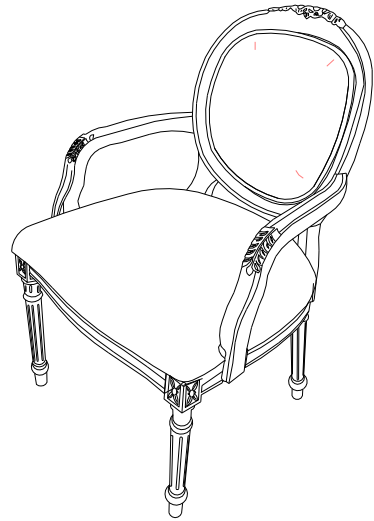


Additional Tools Required: **Allen wrench**

ASSEMBLY INSTRUCTIONS

1. Using the diagram included, identify all parts.
2. Use pliers to remove plastic hardware packet and staples from the wood frame.
3. Sort and pair all bolts, locking washers, washers and screws. Pair all bolts with locking washers and washers using the diagram, the locking washer always goes on the bolt first.
4. Lay chair back assembly on a clean protected surface, face side up.
5. Attach the seat assembly to the back assembly making sure the metal angle brackets on the seat assembly are top side up. The holes should align. **Using parts F,B, and A insert** bolt with washers **in the center** holes, hand tighten.
6. **Using parts F,B, and A insert bolts** into the left and right corner blocks on each side of the back of the seat assembly, hand tighten. (bolts should tighten easily, if needed adjust the angle of the seat to help with clearance.)
7. Attach front legs into front of the seat assembly **using parts A,B and F**. Hand tighten only.
8. Identify left and right arms. Attach by inserting the dowels on the bottom of the arm into the hole without metal inserts on the seat assembly. Now insert the dowel on the back of the arm into the hole on the back assembly that does not have a metal insert. **Insert parts E and D** into hole on backside of the chair back assembly. Hand tighten only.
9. Lay Chair on back side and **insert parts E,D and C** into holes on the bottom side of the seat assembly to attach the arm to the seat, hand tighten only.
10. **seat cushion is pre-attached to the seat frame in factory.**
11. Tighten all bolts $\frac{1}{4}$ turn beyond hand tightened using the tools provided, inset plastic cover into holes on the outside of back assembly. Your chair is now complete – Enjoy!!

CHAIR

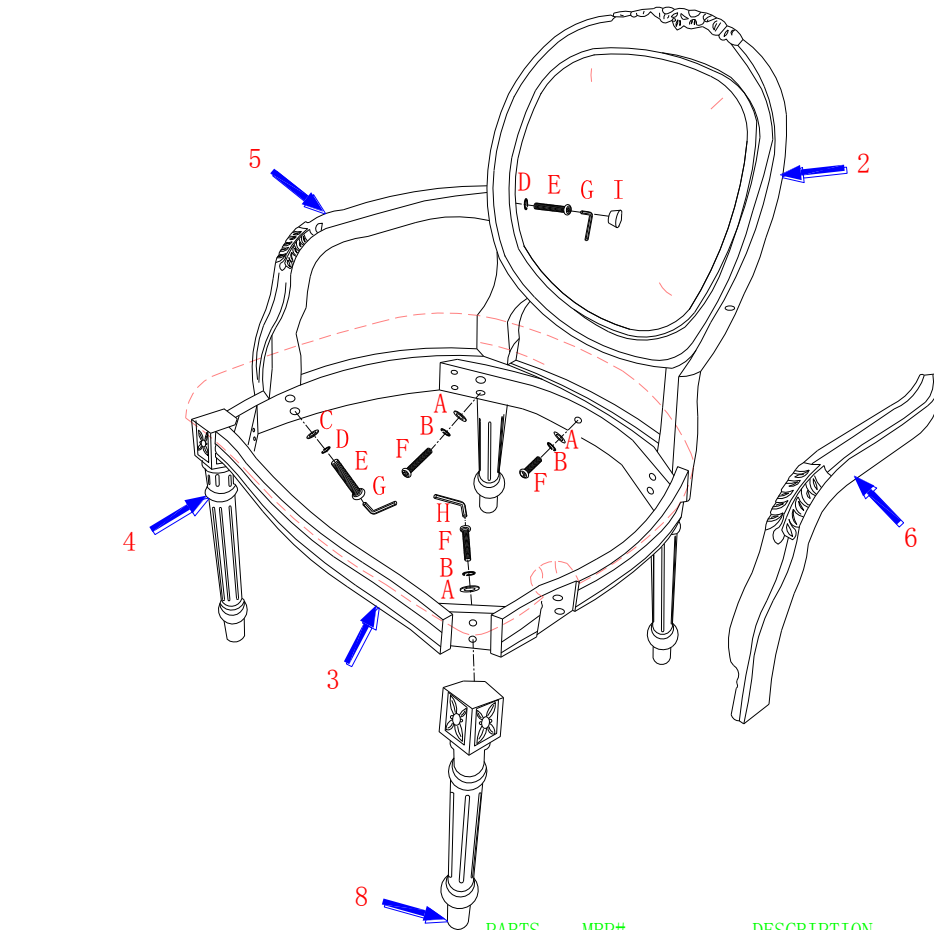

PARTS	MRP#	DESCRIPTION	Q' TY
A	1	Flat Washer (Φ5/16"×19mmL)	9
B		Lock Washer (Φ5/16")	9
C		Flat Washer (Φ1/4"×16mmL)	4
D		Lock Washer (Φ1/4")	6
E		Bolts (Φ1/4"×1-1/2"L)	6
F		Bolts (Φ5/16"×2"L)	9
G		Allen Wrench (4mm)	1
H		Allen Wrench (5mm)	1
I		Wood Plug (Φ14mm)	2
2	2	Chair Back	1
3	3	Seat Frame	1
4	4	Front Leg	2
5	5	Left Arm	1
6	6	Right Arm	1
7	7	Seat Cushion(Not Shown)	1
8	8	Floor Glide(Pre-assembled)	4