



MANHATTAN COMFORT

888-230-2225

help@manhattancomfort.com

319 RIDGE RD, DAYTON, NJ08810, NEW JERSEY - UNITED STATES



Hampton



sideboard 39.37"

Technical information

Maximum supported weight


Dimension:

W: 39.37" H: 33.86" D: 21.26"

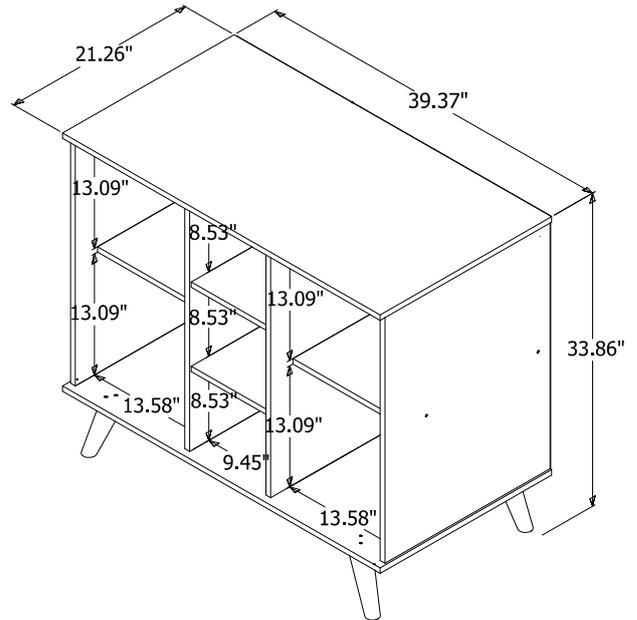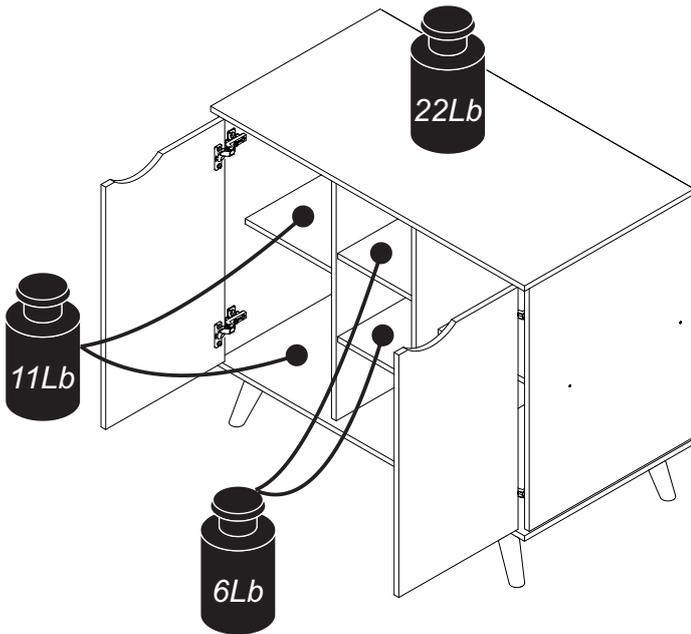


ASSEMBLY VIDEO


Tools needed (not included)

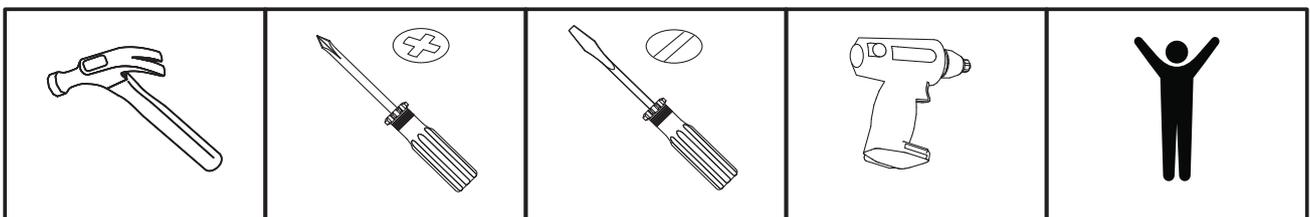

FRONT VIEW





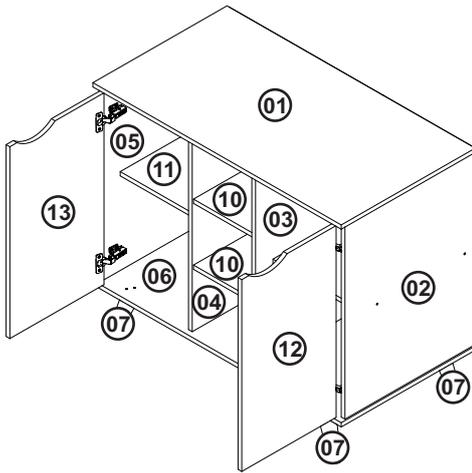


REAR VIEW

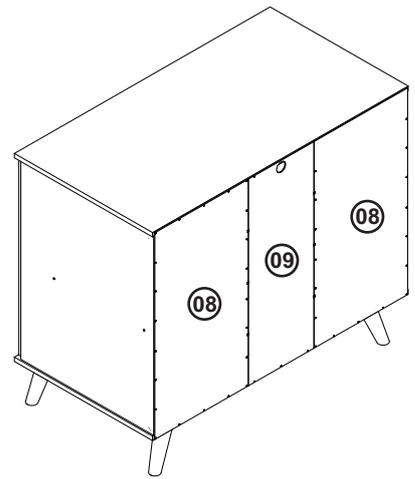


PART	DESCRIPTION	QUANTITY
01	TOP	01
02	RIGHT SIDE	01
03	RIGHT PARTITION	01
04	LEFT PARTITION	01
05	LEFT SIDE	01
06	BASE	01
07	FEET	04
08	BIGGER BACK COVER	02
09	SMALLER BACK COVER	01
10	CENTRAL SHELF	02
11	RIGHT/ LEFT SHELF	02
12	RIGHT DOOR	01
13	LEFT DOOR	01


HARDWARE

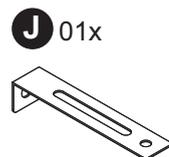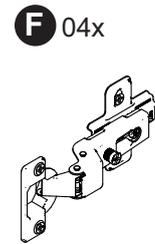


STEP 1

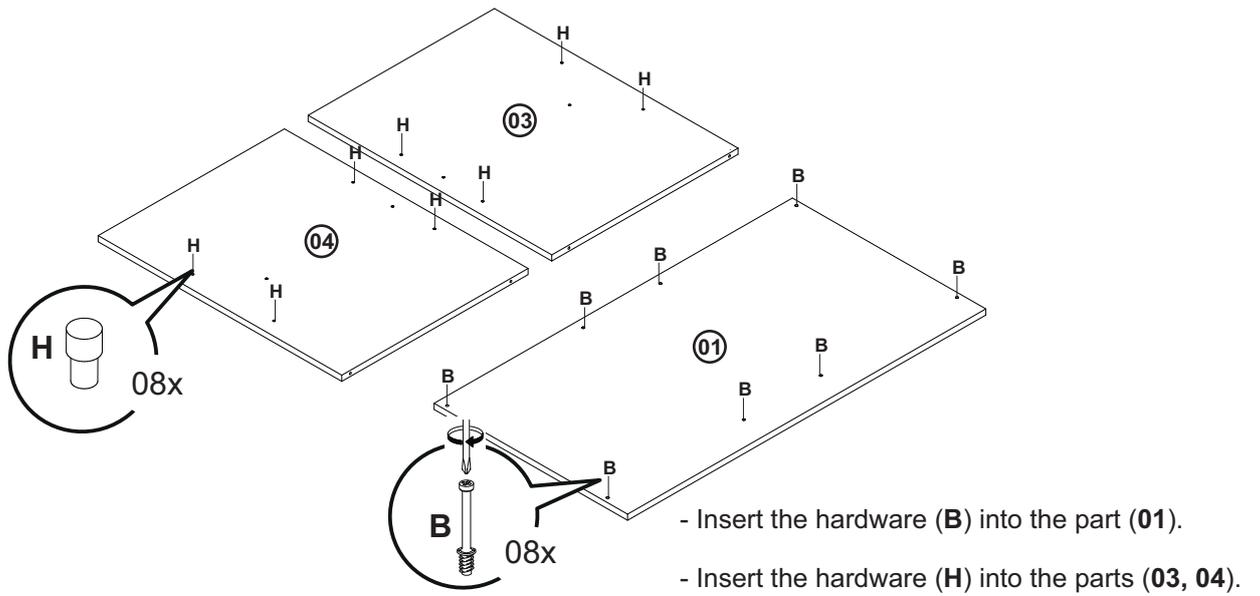

STEP 2


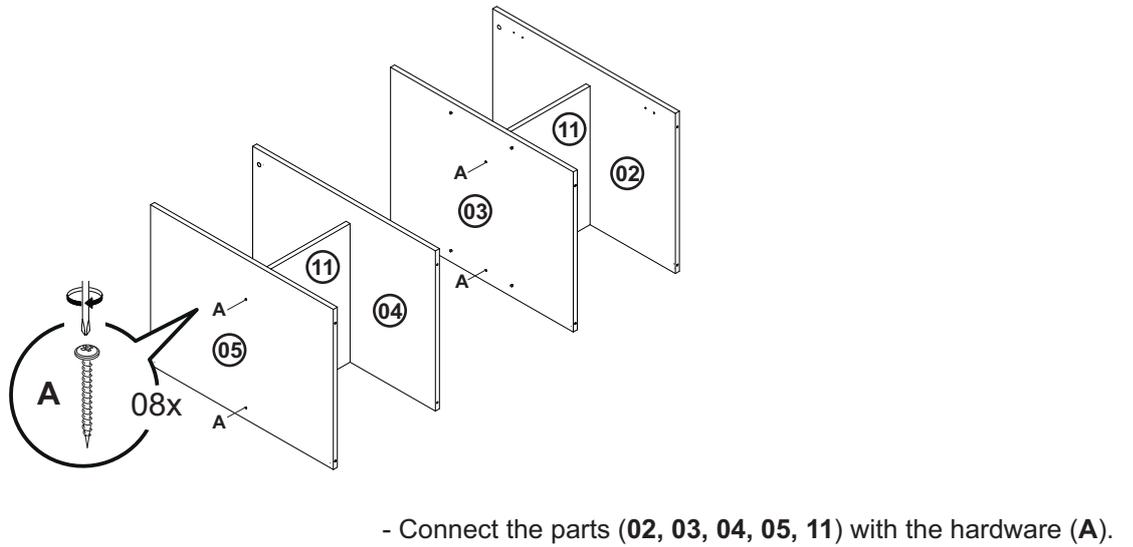


STEP 3

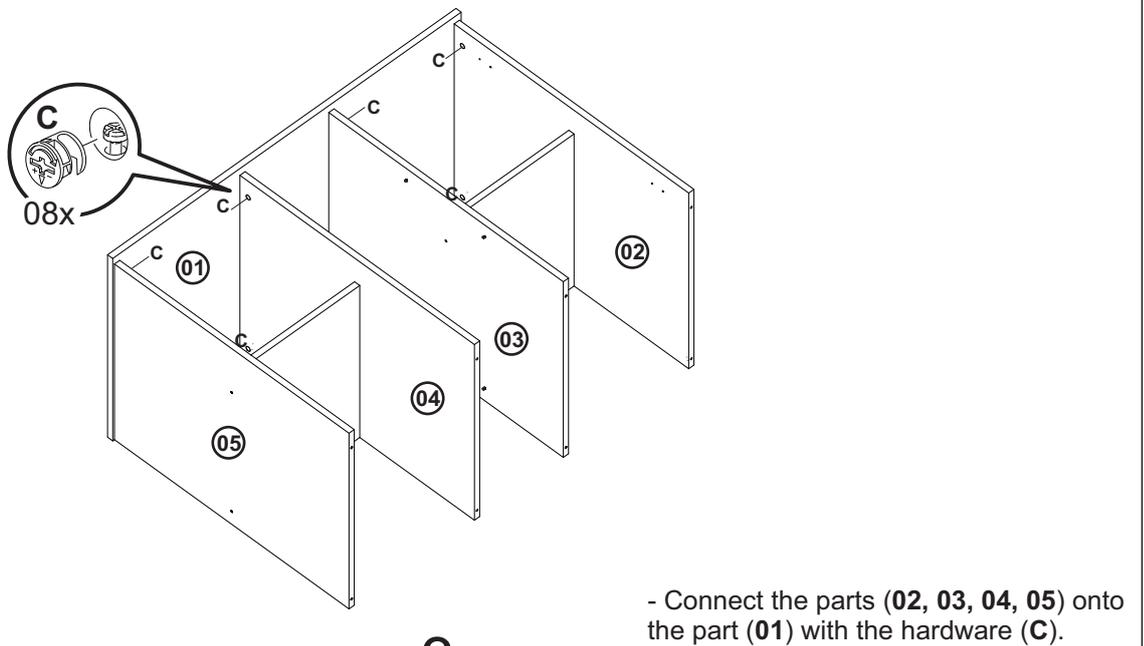


STEP 4


USE THE GLUE (L)
BEFORE FASTENING
THE FEET (07).

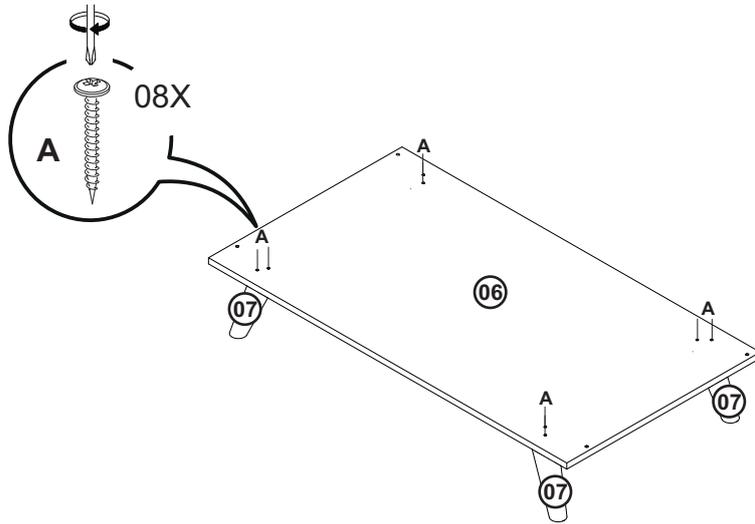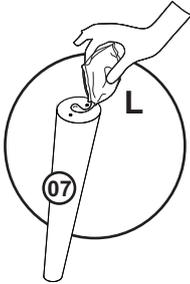


- Connect the parts (07) under the part (06) with the hardware (A).

STEP 5

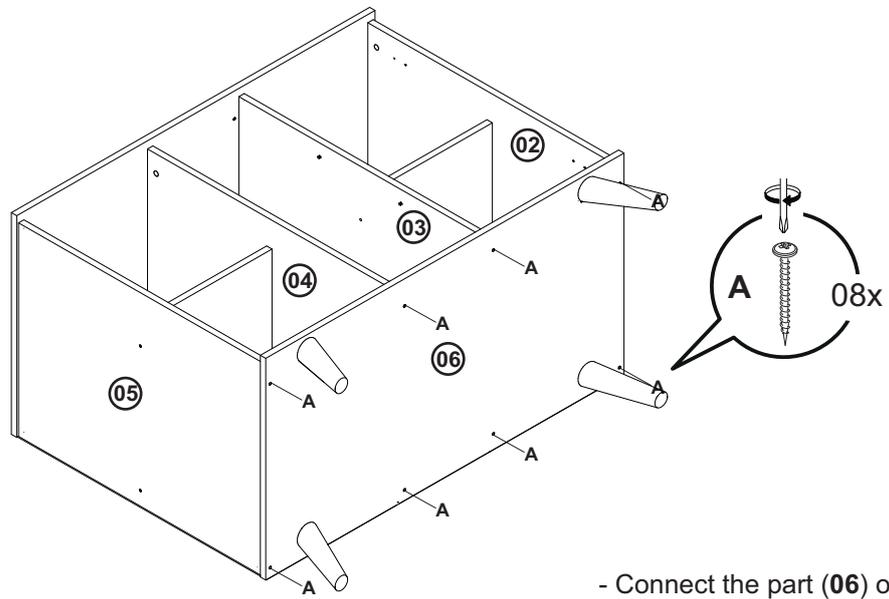


- Connect the part (06) onto the parts (02, 03, 04, 05) with the hardware (A).

STEP 6

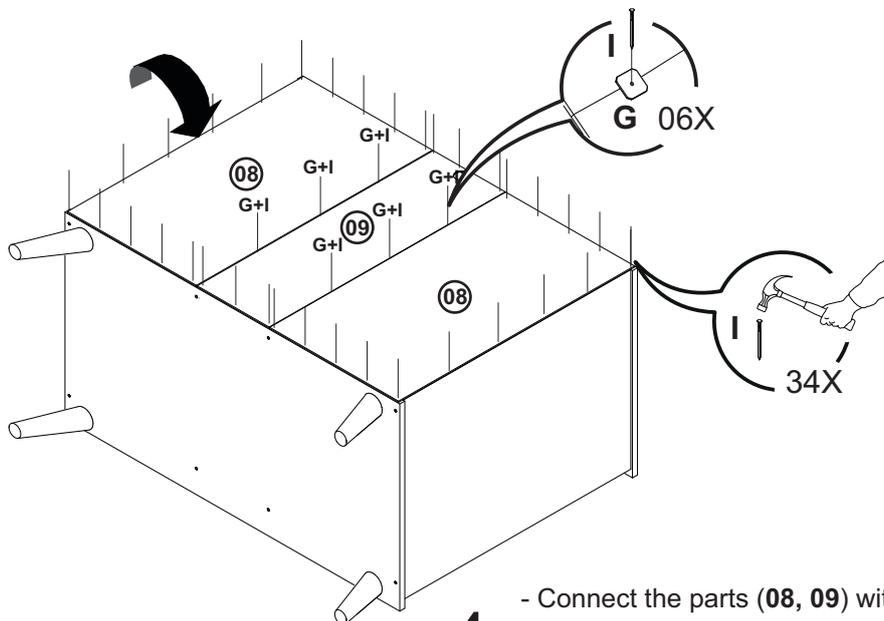


- Connect the parts (08, 09) with the hardware (I+G).

STEP 7

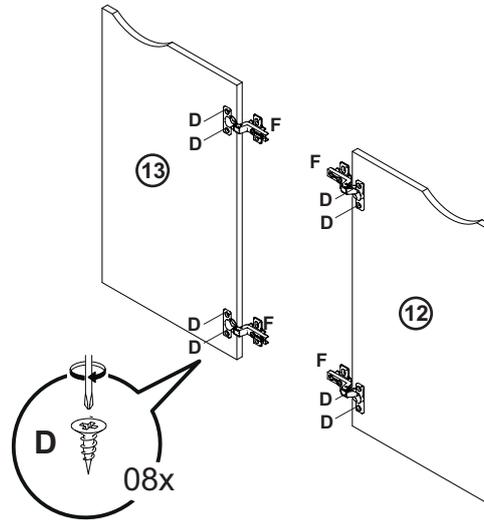

- Connect the hinges (F) into the parts (12, 13) with the hardware (D).

STEP 8

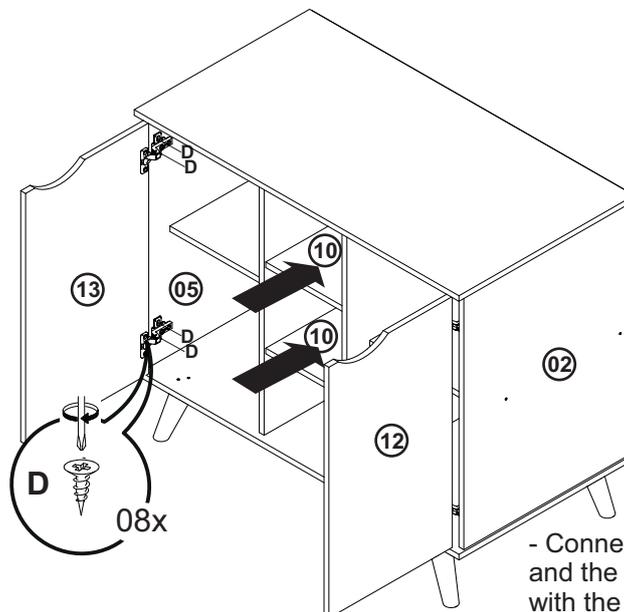


- Connect the part (12) onto the part (02) and the part (13) onto the part (05) with the hardware (D).

STEP 9


Attention! This step is very important!

You need to attach the furniture on the wall to avoid any tip over risk. Follow the procedures as showed below.

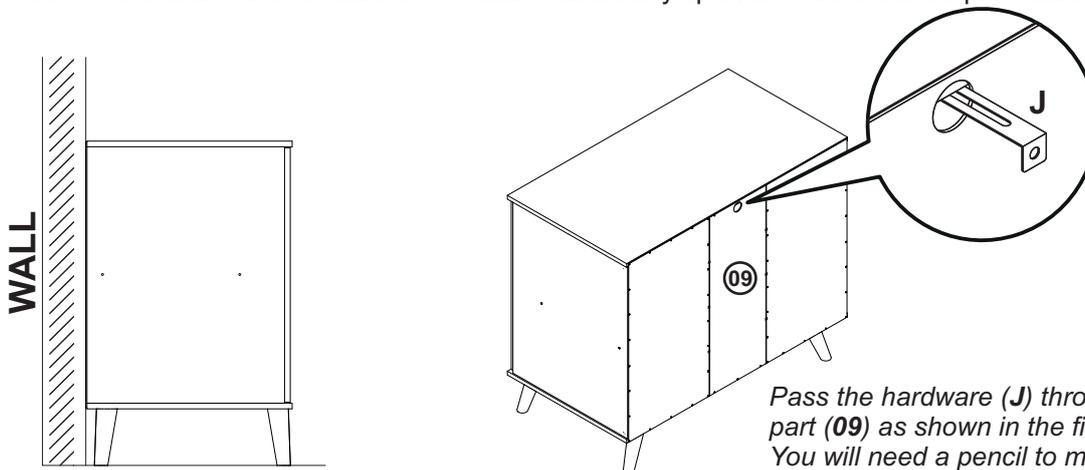


Approach as close as possible to the wall.

Pass the hardware (J) through the hole of the part (09) as shown in the figure. You will need a pencil to mark where you should drill the wall with a 3/8" drill bit to put in the hardware (E).

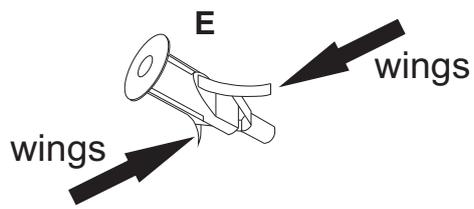

Press the hardware wings (E) to put in the hole that you drilled in the wall.

Hardware (E), plugged in the wall.

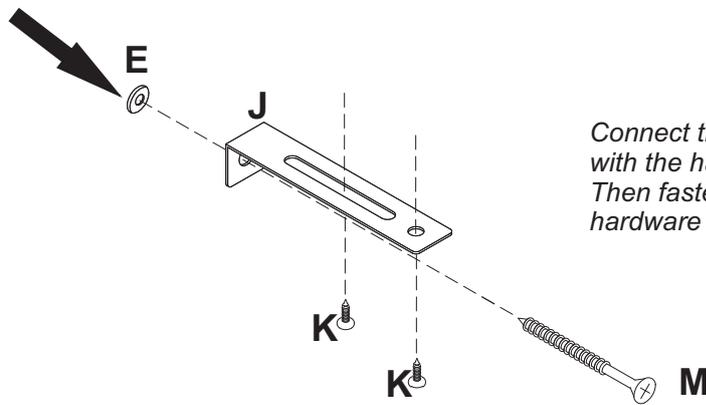

Connect the hardware (J) onto the wall with the hardware (M).
Then fasten with the hardware (K) the hardware (J) on the part (01).