

Item #: BU52STRATRO

Assembly Instruction




Please visit our website for the most current instructions, assembly tips report damage, or request parts. www.walkeredison.com


Revised 08/2019

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product .

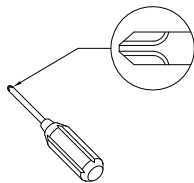








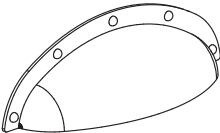
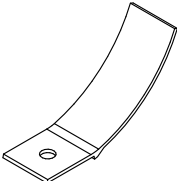
- VI. Power tools should not be used to assemble this product .

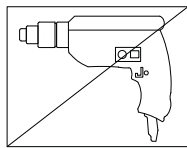






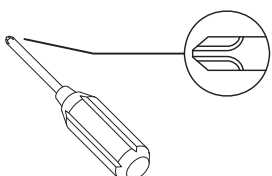
Parts List

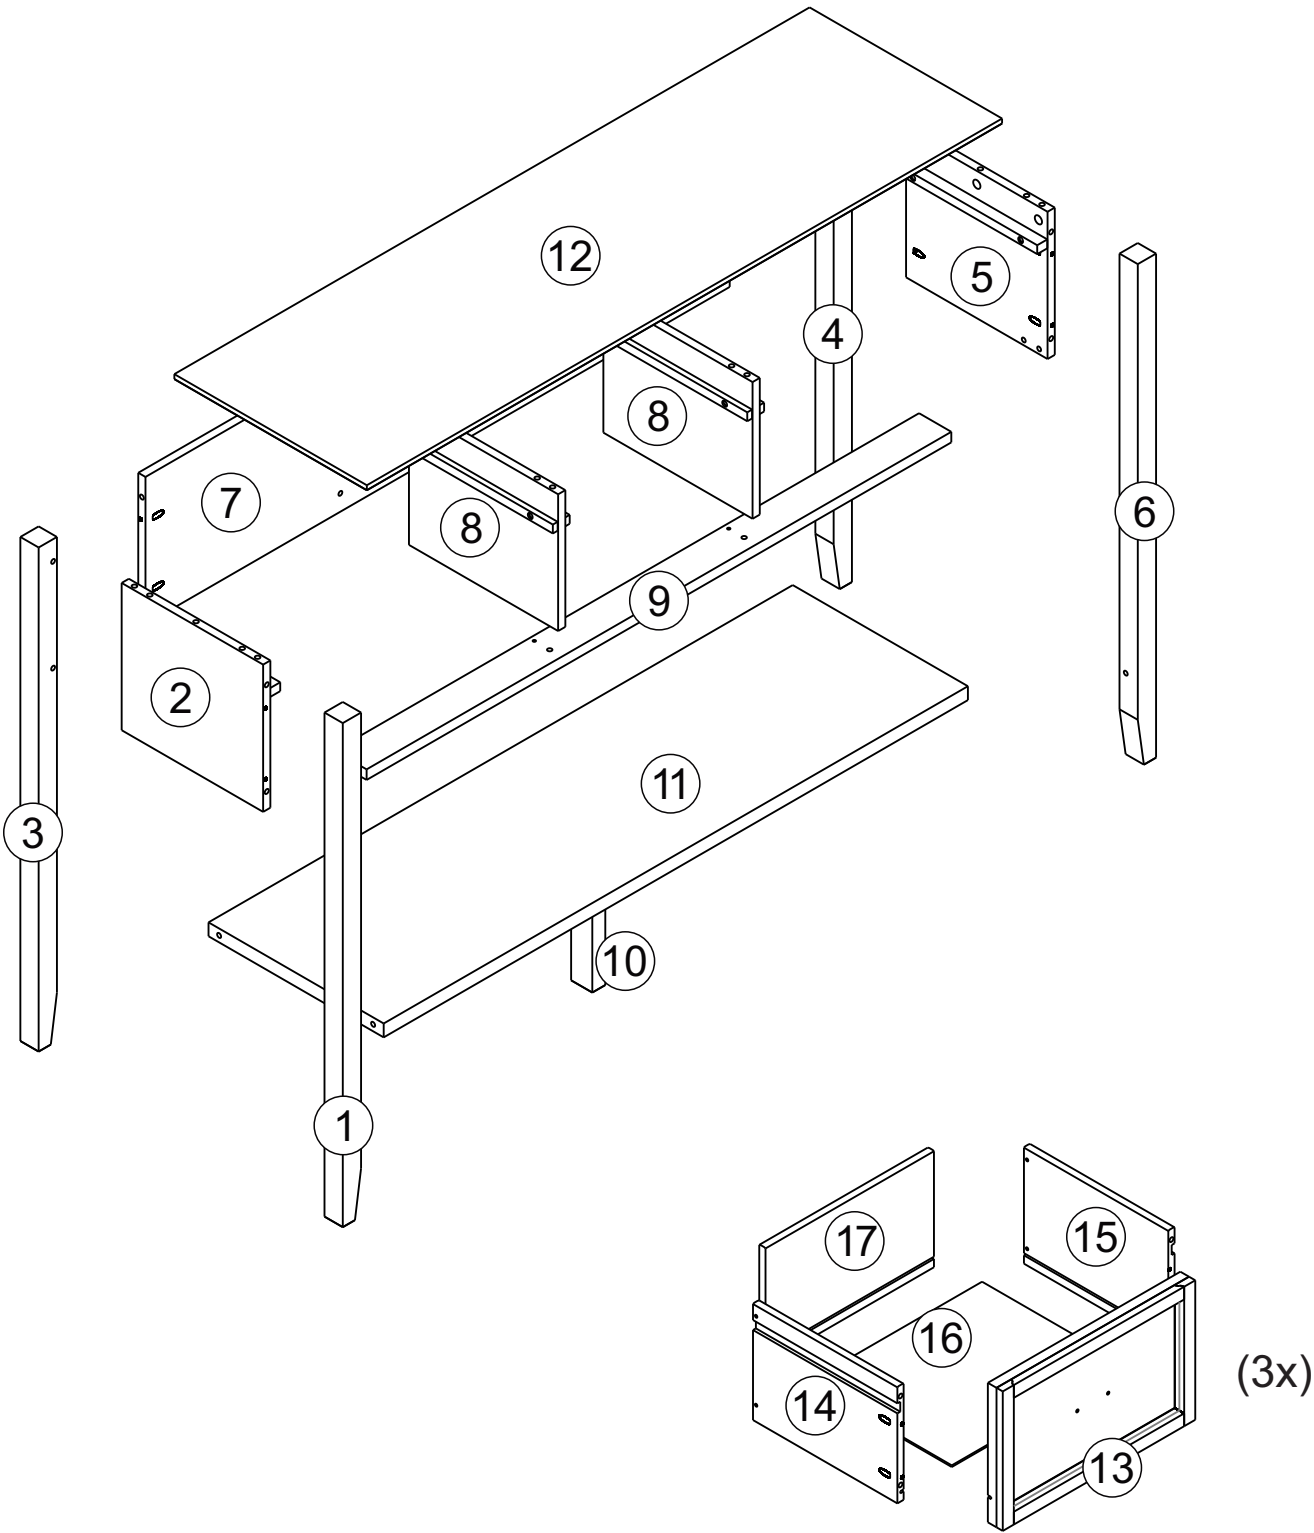

Hardware List

A		Ø 5,5x28mm	Cam Bolt	10 pcs
B		Ø 14x14mm	Cam Lock	10 pcs
C		M4x20mm	Screw	06 pcs
D		Ø 4,0x30 mm	Screw	48 pcs
E		Ø 3,0x16 mm	Screw	11 pcs
F		Ø 8,0x30 mm	Wood dowel	48 pcs
G			Bracket	04 pcs
H			Knob	03 pcs
I			Drawer Limiter	03 pcs

V		Ø 3,5x30mm	Screw	01 pc
W		Ø 6mm	Plastic Anchor	01 pc
X			Washer	02 pcs
Y			Strip	01 pc
Z		Ø 3,5x16mm	Screw	01 pc





Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*



Step 1

Insert wood dowel (F) into parts (2),(5),(7),(8),(9),(10),(14) and (15).

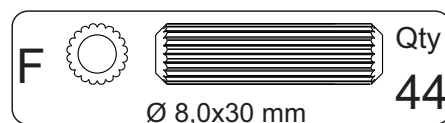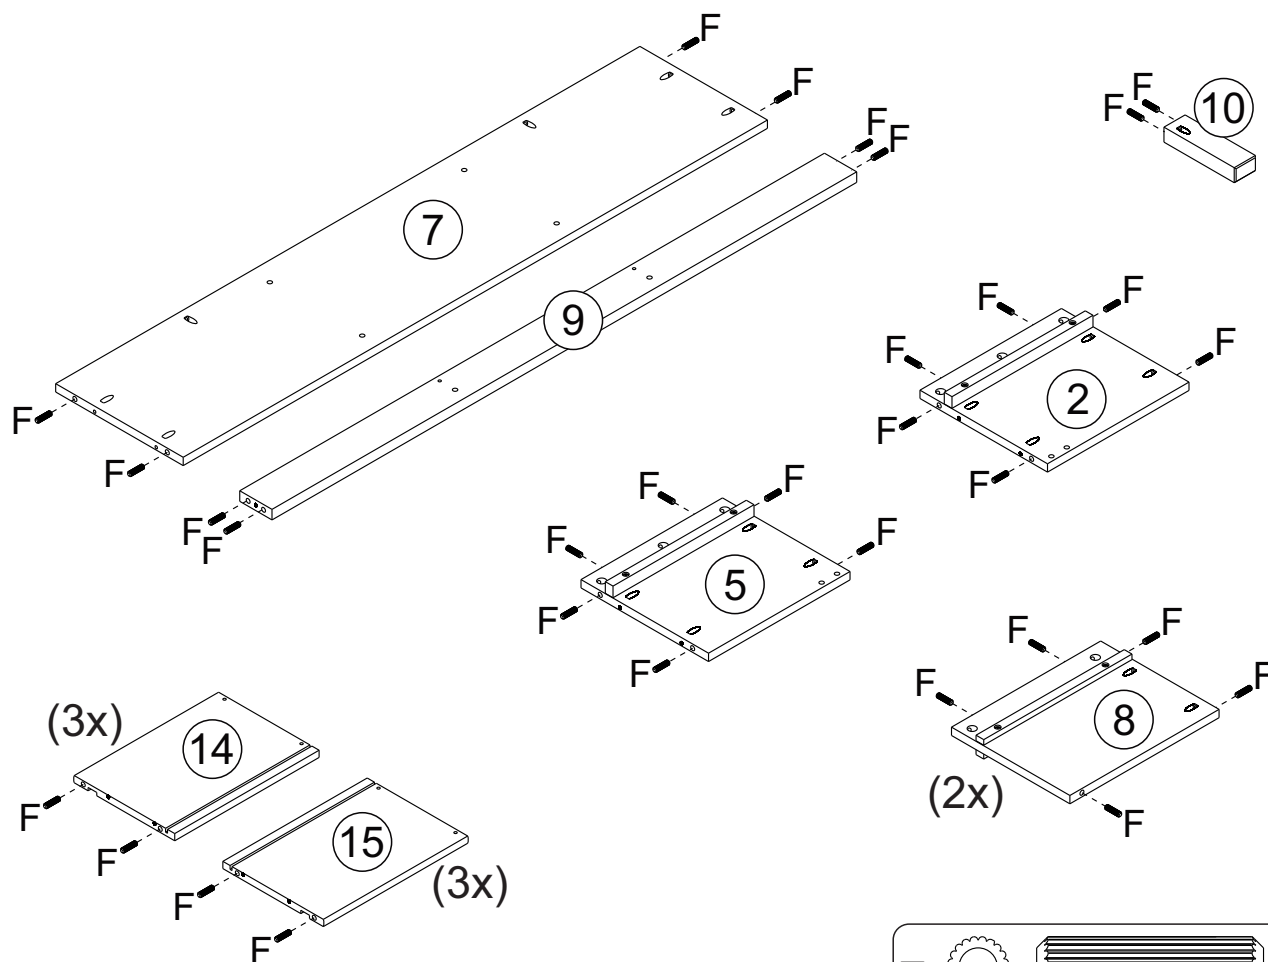




Step 2

Attach Bracket (G) using Screw (E) into part 11. Insert wood dowel.

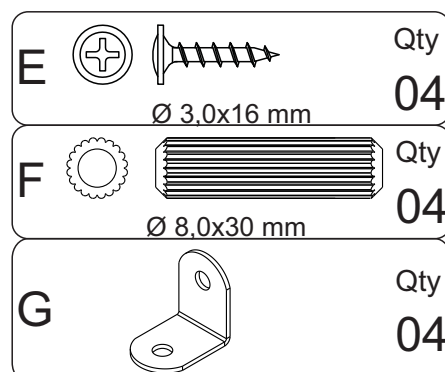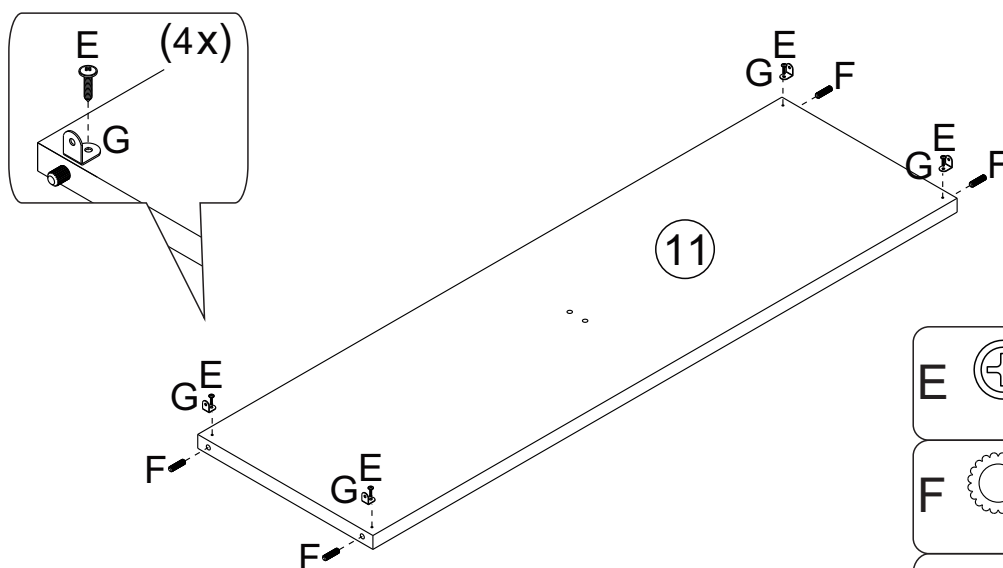




Step 3

Using Screw (D) attach parts 1,3 to 2 and 4,6 to 5.

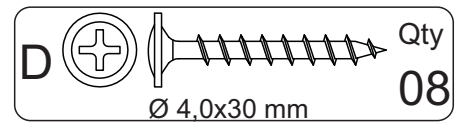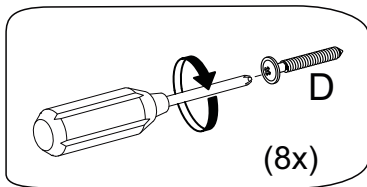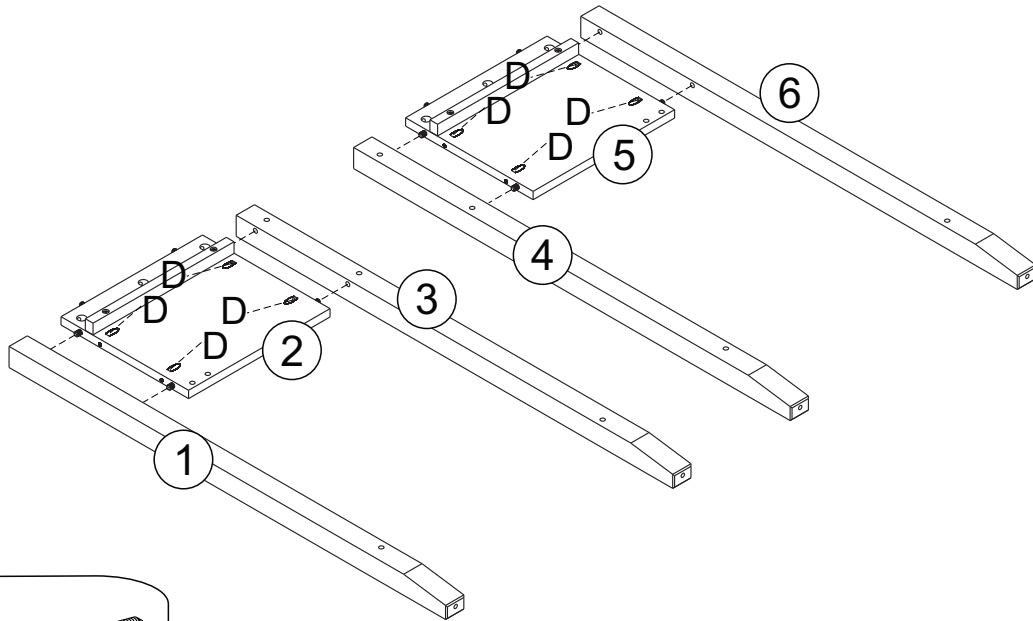


Step 4

Using Screw (D) attach parts 8,9 to part 7 and part 10 to part 11.

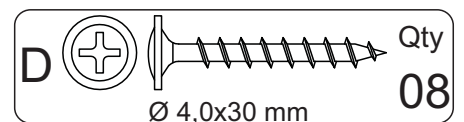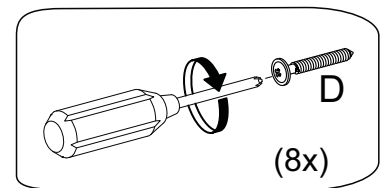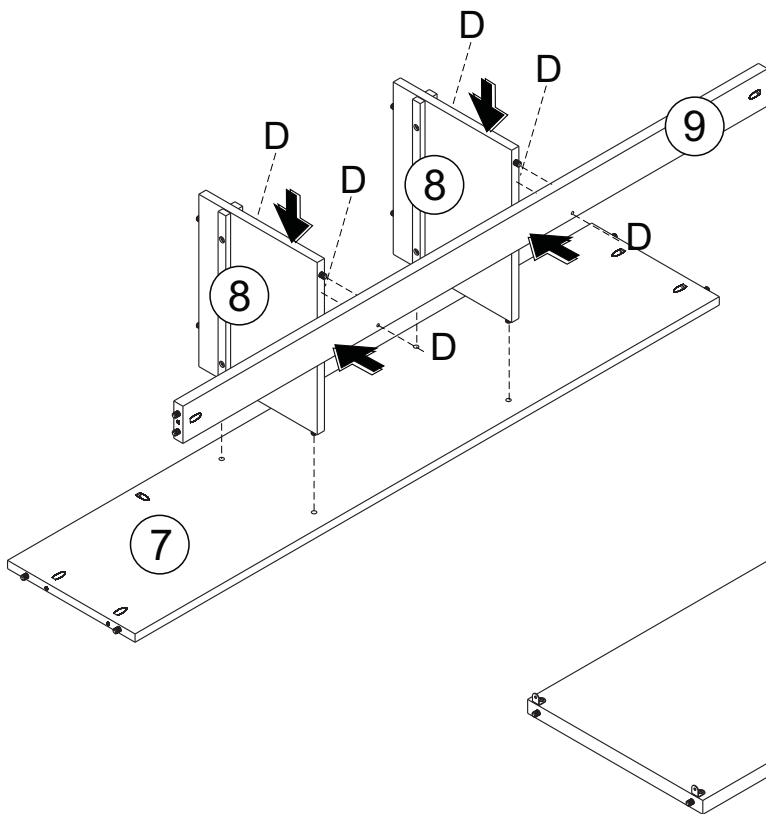


Step 5

Using Screw (D) attach part 7 to part 1,2,3 and using Screw (E) attach part 11 to part 1,3.

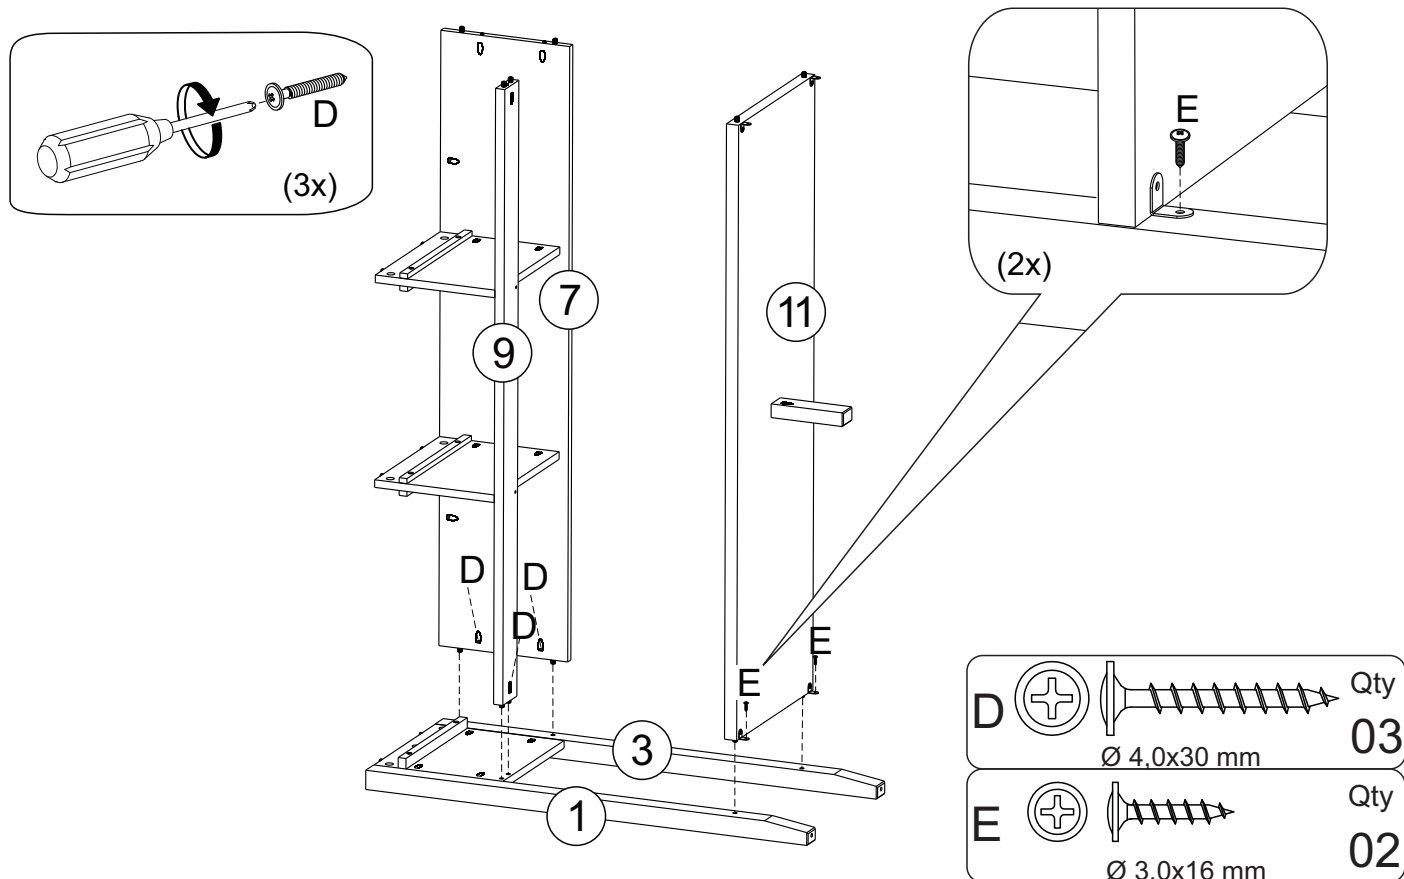


Step 6

Attach Parts 4,5,6 to parts 7,11 using Screw (D) and Screw (E).

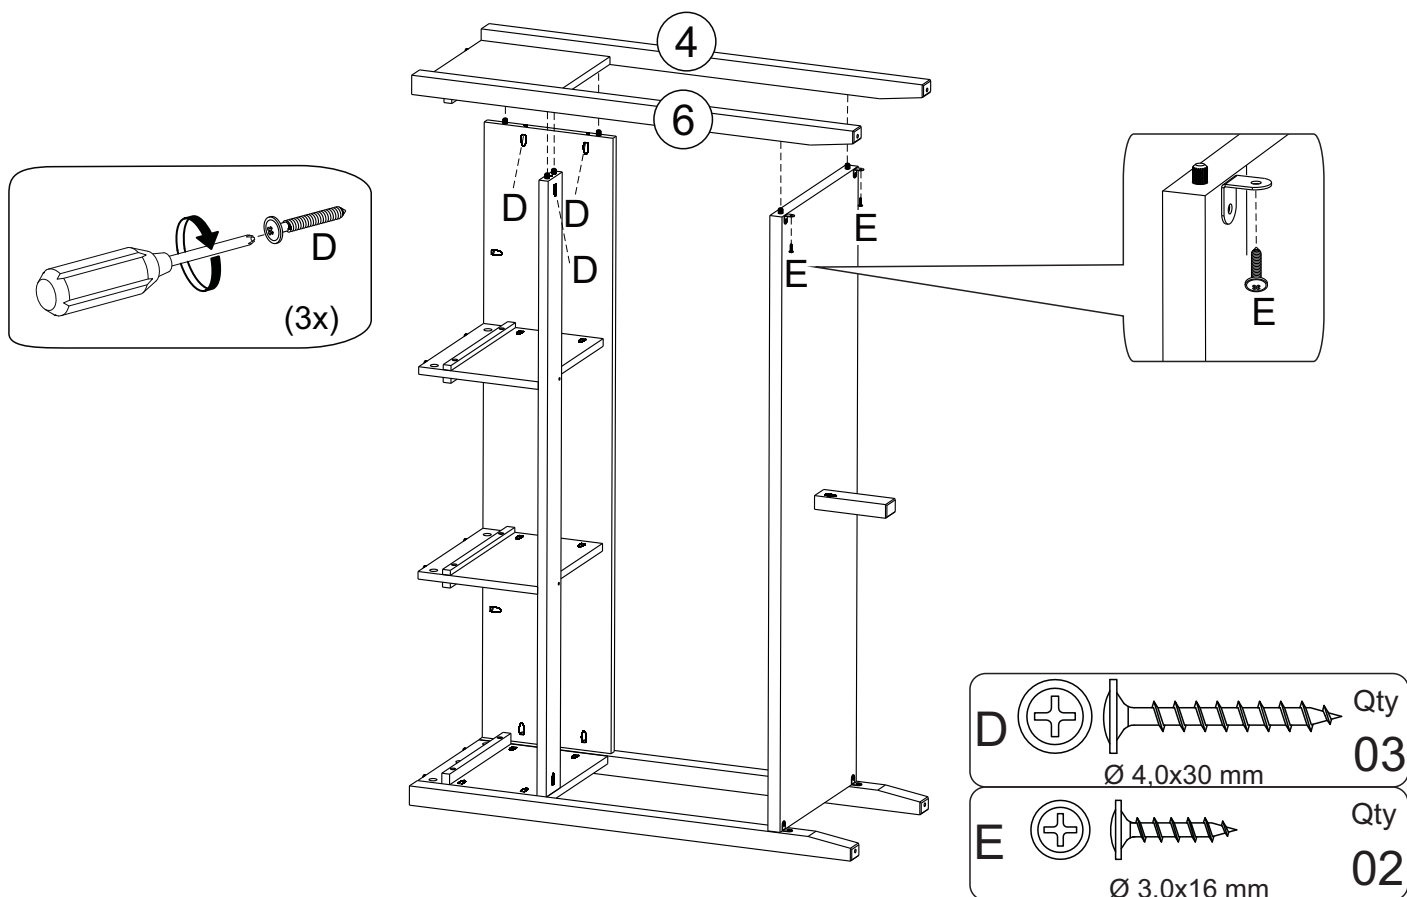

Step 7




Attach Cam Bolt (A) to part 12. Attach Drawer Limiter (I) to part 12 using Screw (E). Attach part 12 to body using Cam Locks (B).

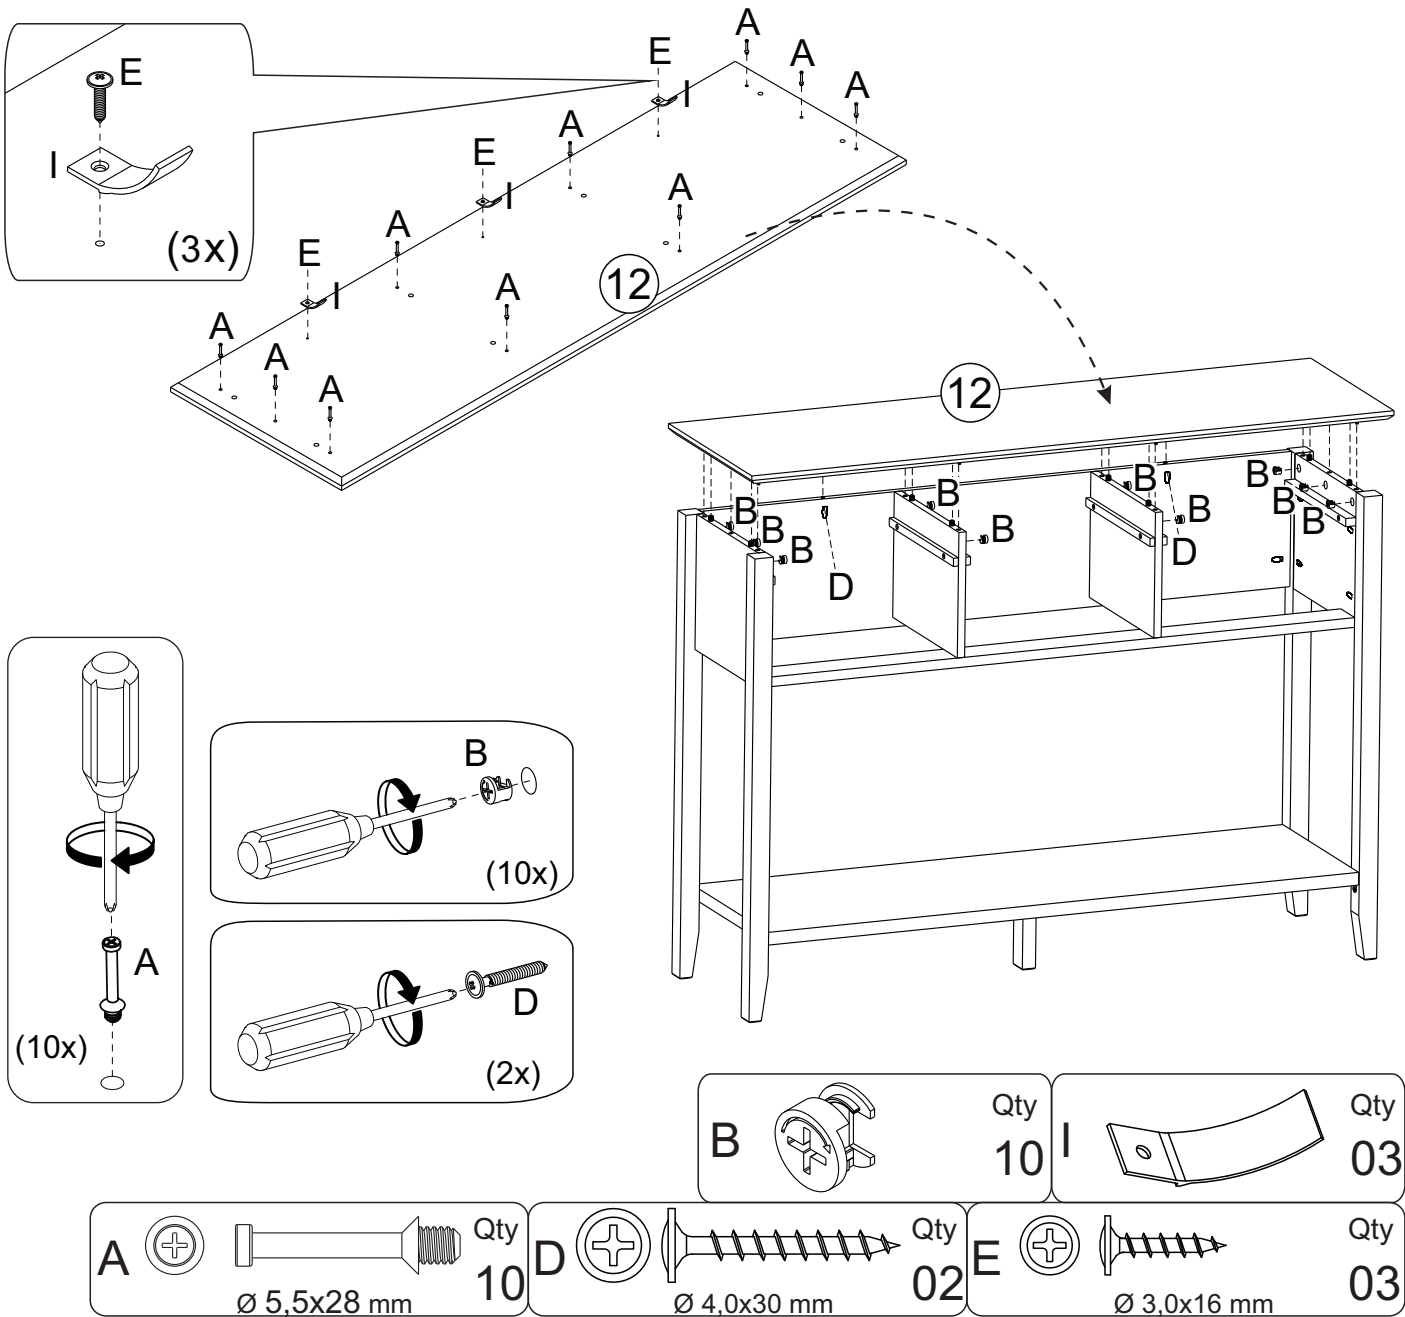

Step 8








Attach Parts 14,15 to part 13 using Screw (D).

3x

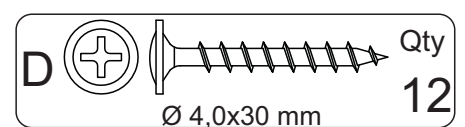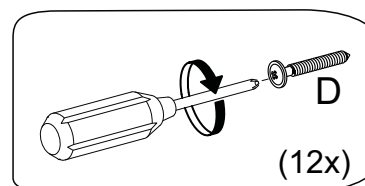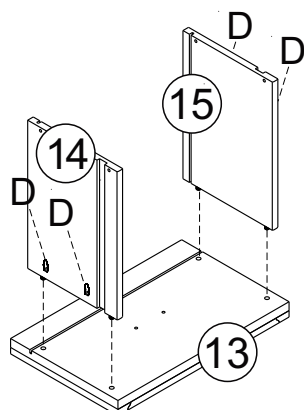


Step 9 Insert Part 16 into drawer. Attach Part 17 to drawer using Screw (D).
Attach Knob (H) using Screw (C).

3x

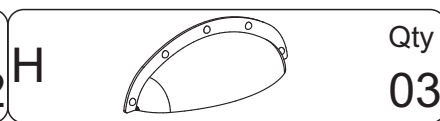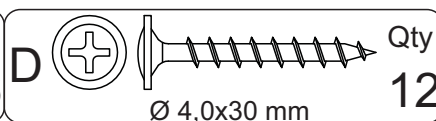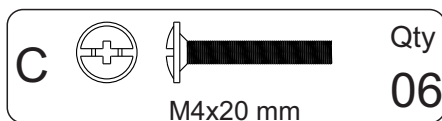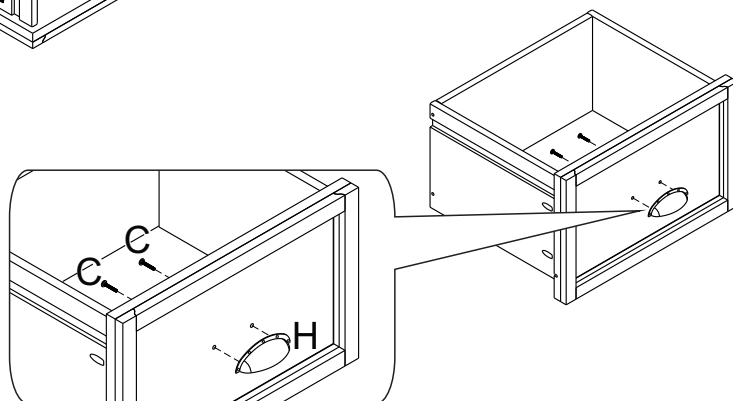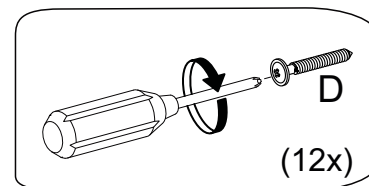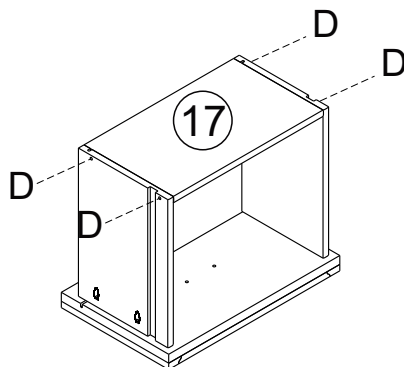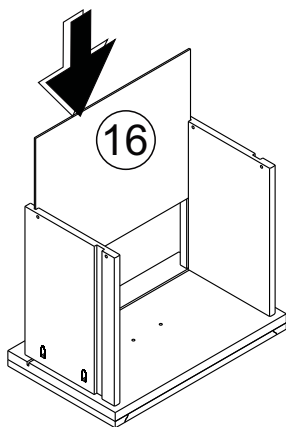



Step 10

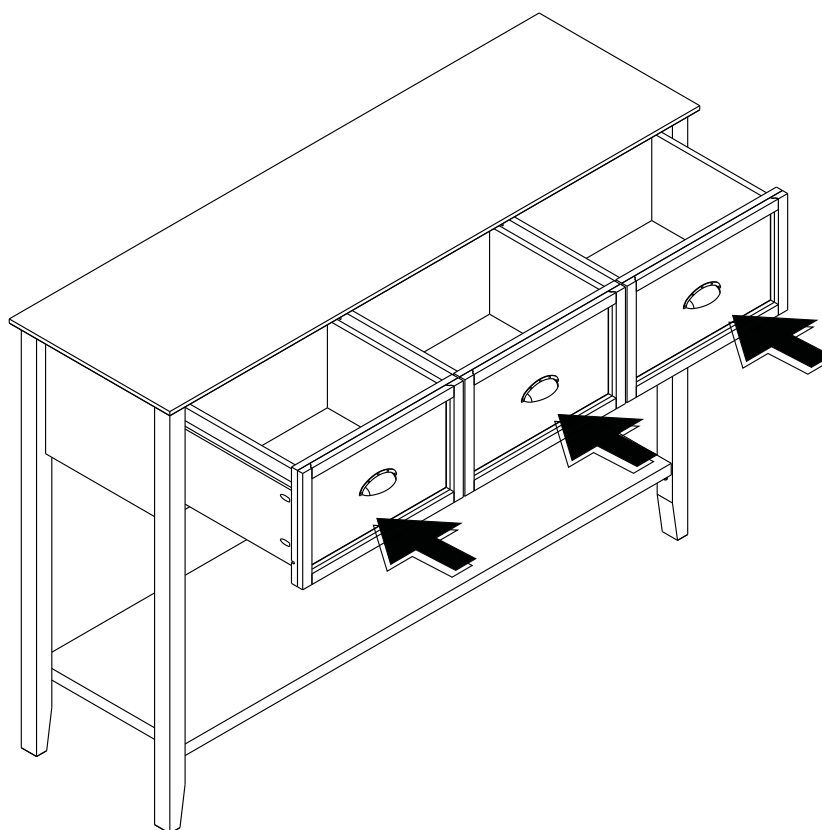






WARNING



Serious or fatal injuries can occur from furniture tipping over.
To prevent the furniture from tipping over we recommend
that it is permanently fixed to the wall.

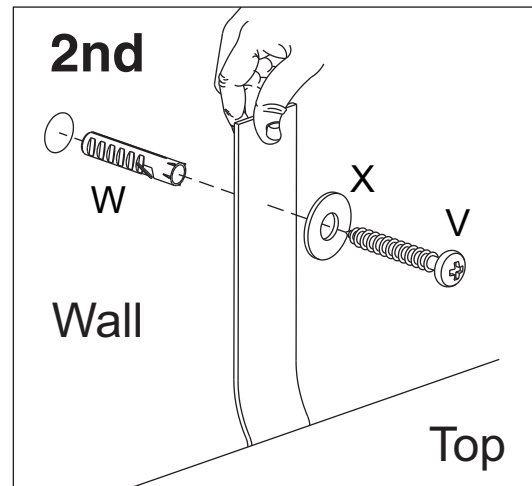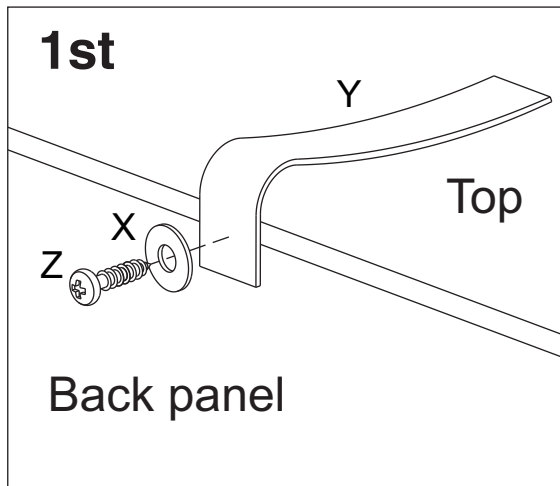Wall anchor and hardware are included with this product.
Please make sure hardware is suitable for your walls before installing,
as different wall materials may require different types of anchors.



Hardware of Wall Anchor

V	 $\text{Ø}3,5 \times 30\text{mm}$	01
W	 $\text{Ø}6\text{mm}$	01
X		02
Y		01
Z	 $\text{Ø}3,5 \times 16\text{mm}$	01

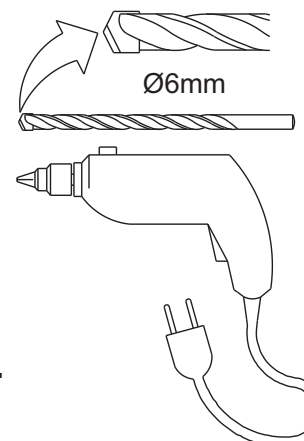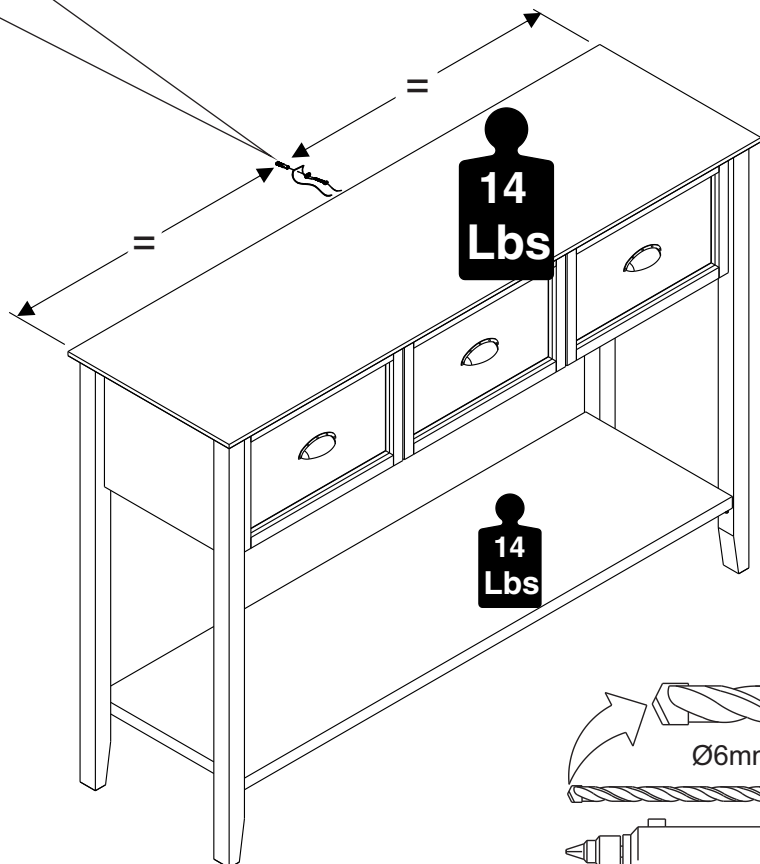

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

Final Assembly