


Item # : BU34COBC
Assembly Instructions

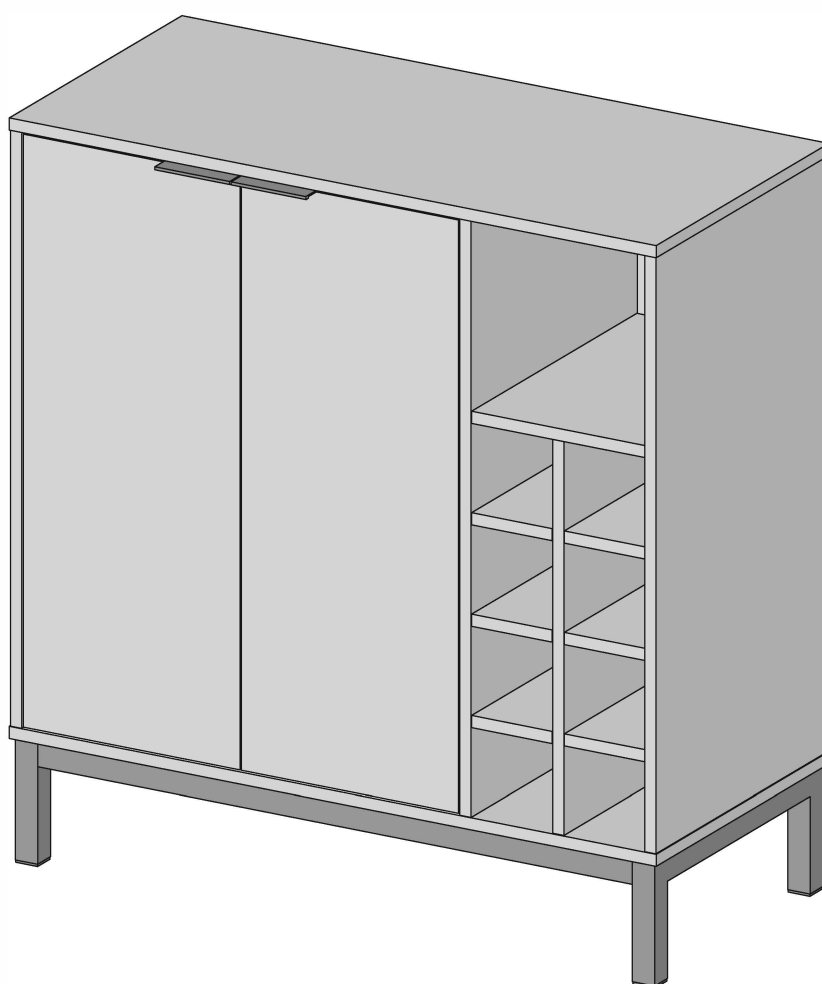


*Please visit our website for the most current instructions, assembly tips, report damage, or request parts. **www.walkerredison.com***


Revised 07/2017

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

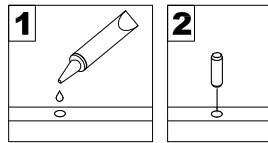


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

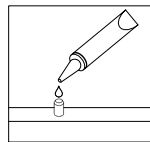


- VI. A Phillips head screwdriver is required for the assembly of this product .

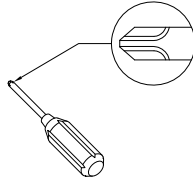


- VII. Power tools should not be used to assemble this product .

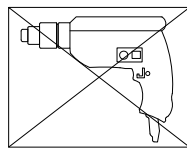


- VIII. Concealed hinges are three-way adjustable.

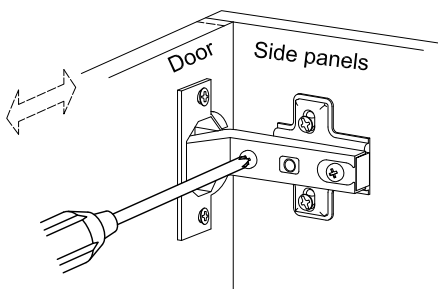

Horizontal
by screw adjustment

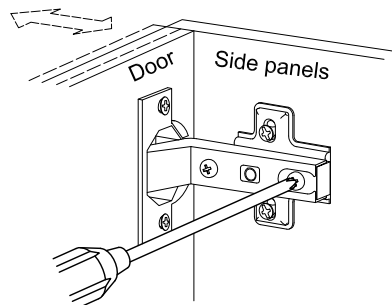


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

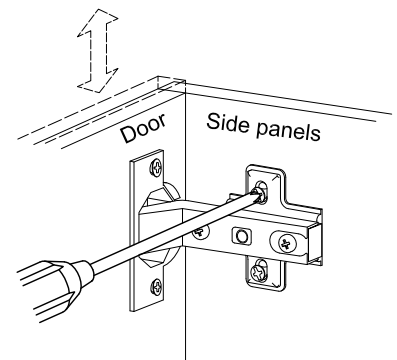
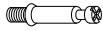









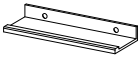



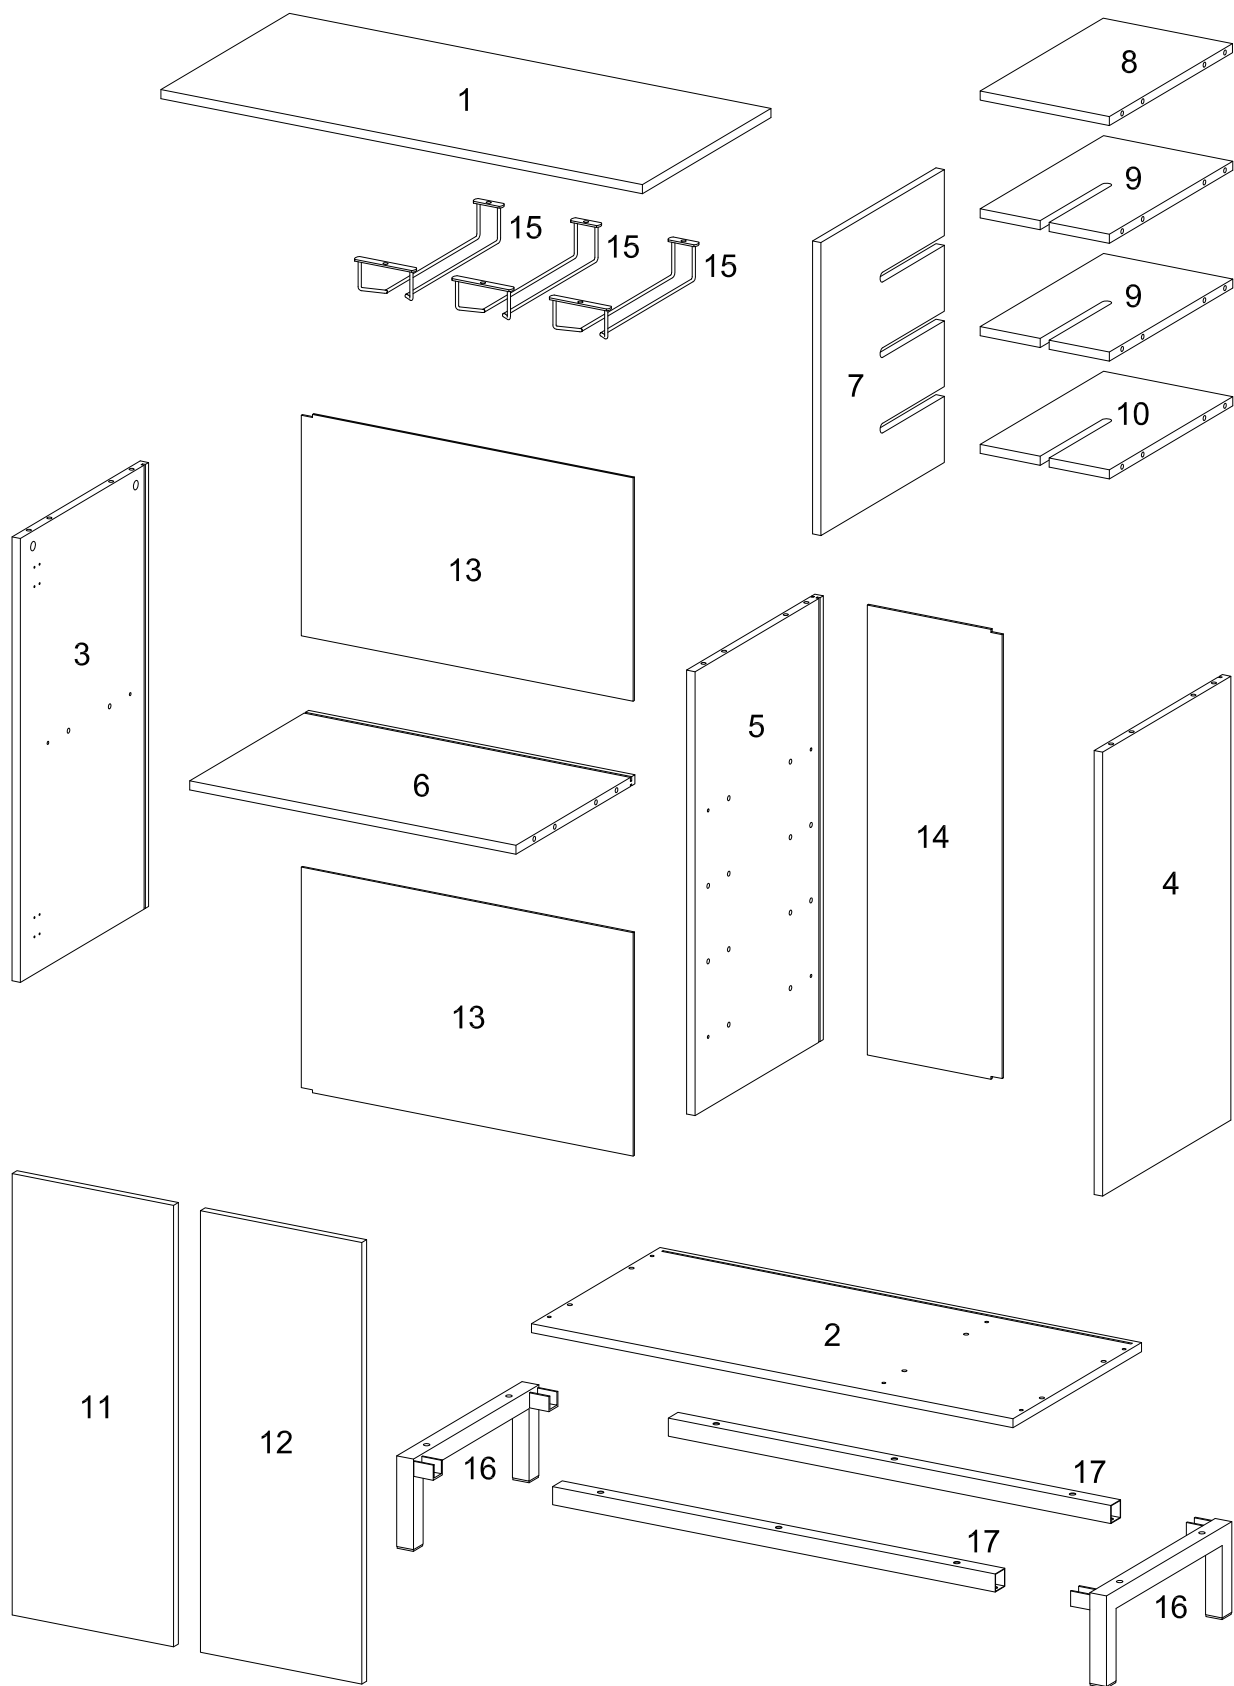



Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List

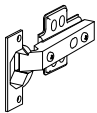

Hardware List

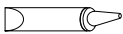
A		Ø8x30mm	Wooden dowel	40 pcs
B		Ø6x35mm	Cam bolt	18 pcs
C		Ø15x11mm	Cam lock	18 pcs
D		Ø6x50mm	Bolt	6 pcs
E			Hinge	4 pcs
F		Ø3.5x14mm	Screw	30 pcs
G		Ø6x40mm	Bolt	10 pcs
H		Ø6x12mm	Bolt	8 pcs
J		M6x16mm	Washer	18 pcs
K			Plastic wedges	14 pcs
L		Ø3x17mm	Screw	14 pcs
M			Handle	2 pcs
N		Ø3x12mm	Screw	4 pcs
P		Ø30mm	Sticker	18 pcs
Q		M4mm	Wrench	1 pc
R			Glue tube	2 pcs

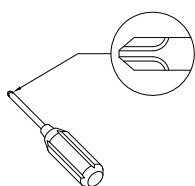

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

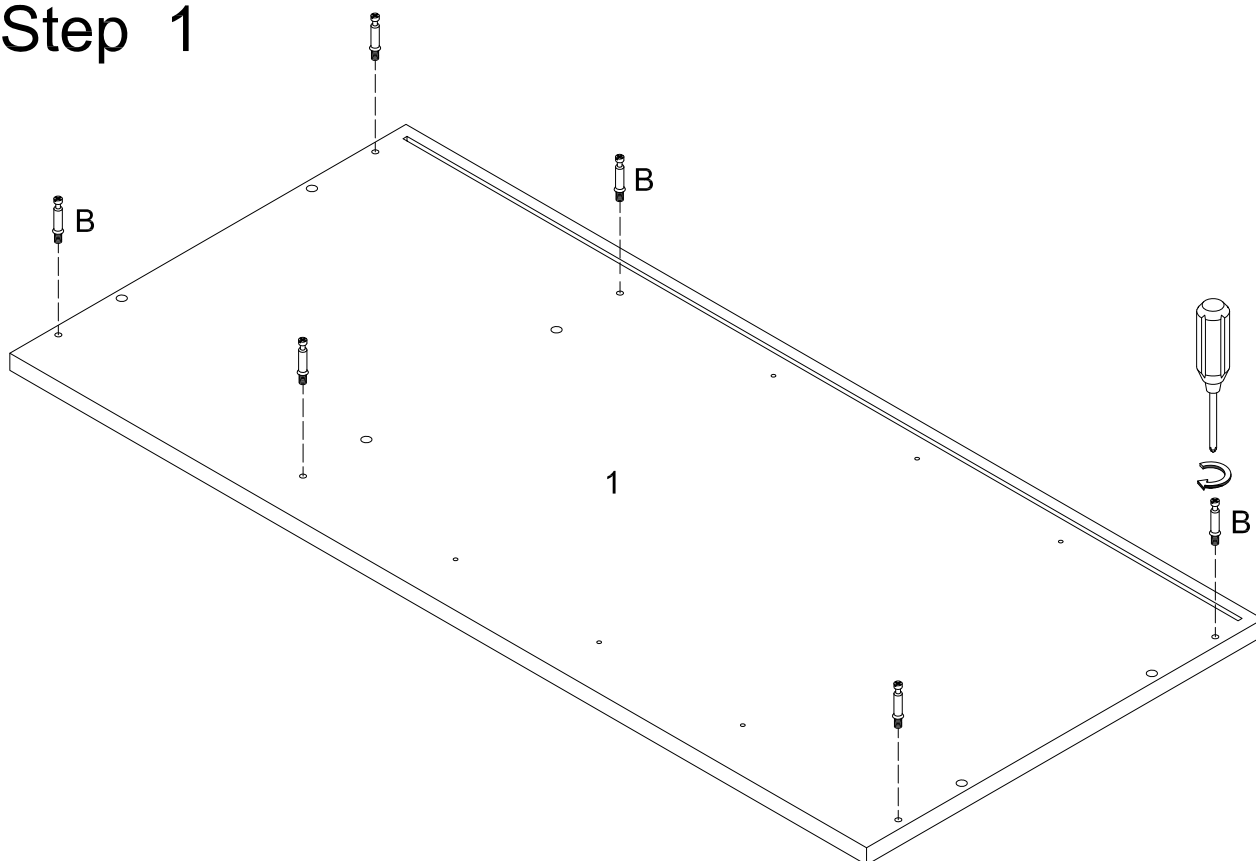


Secure cam bolt (B) to top panel (1).

Step 2

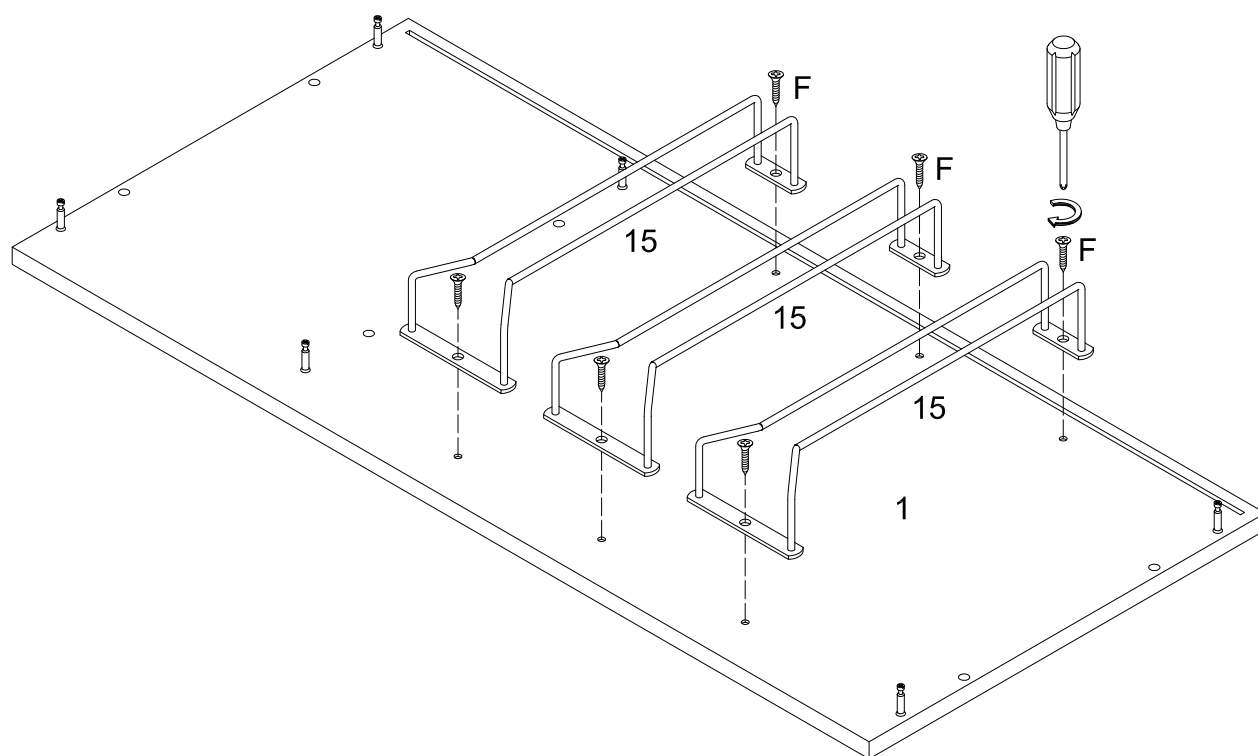


Secure wine glass rack (15) to top panel (1) with screw (F).

Step 3

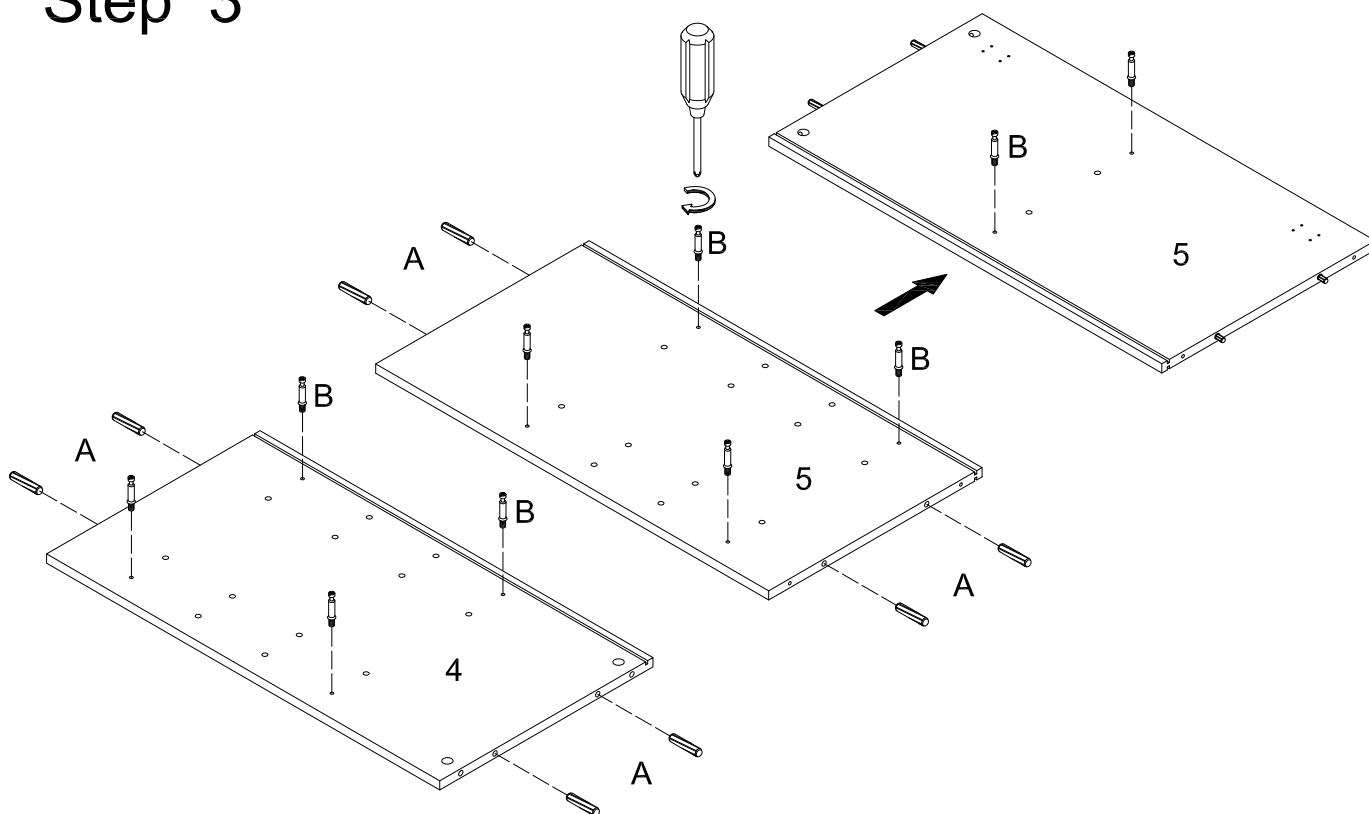



Insert wooden dowel (A) to side panel (4,5). Secure cam bolt (B) to side panel (4,5), then turn over side panel (5) and secure cam bolt (B) on it.

Step 4

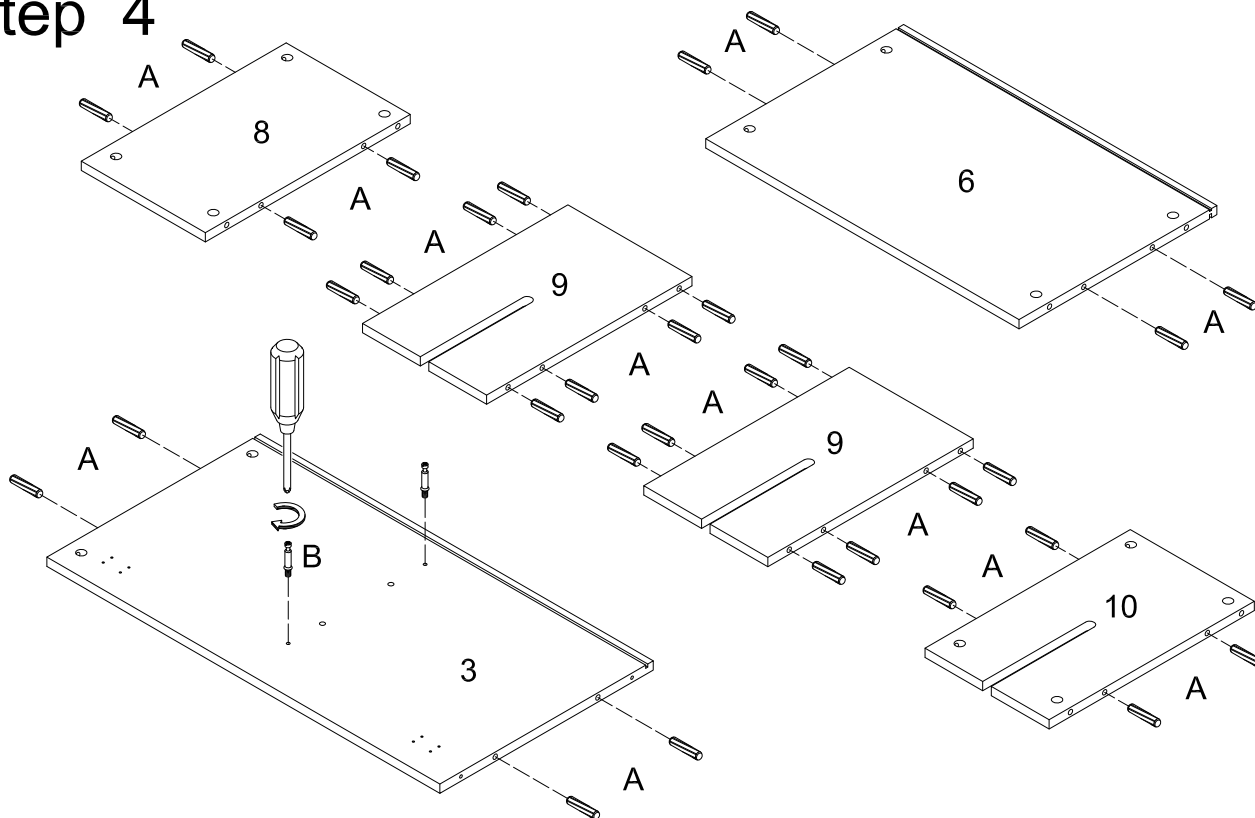



Insert wooden dowel (A) to side panel (3), shelf (6) and parts (8,9,10). Secure cam bolt (B) to side panel (3).

Step 5

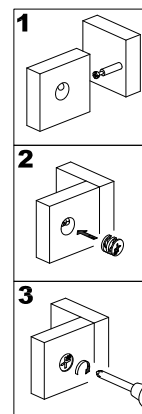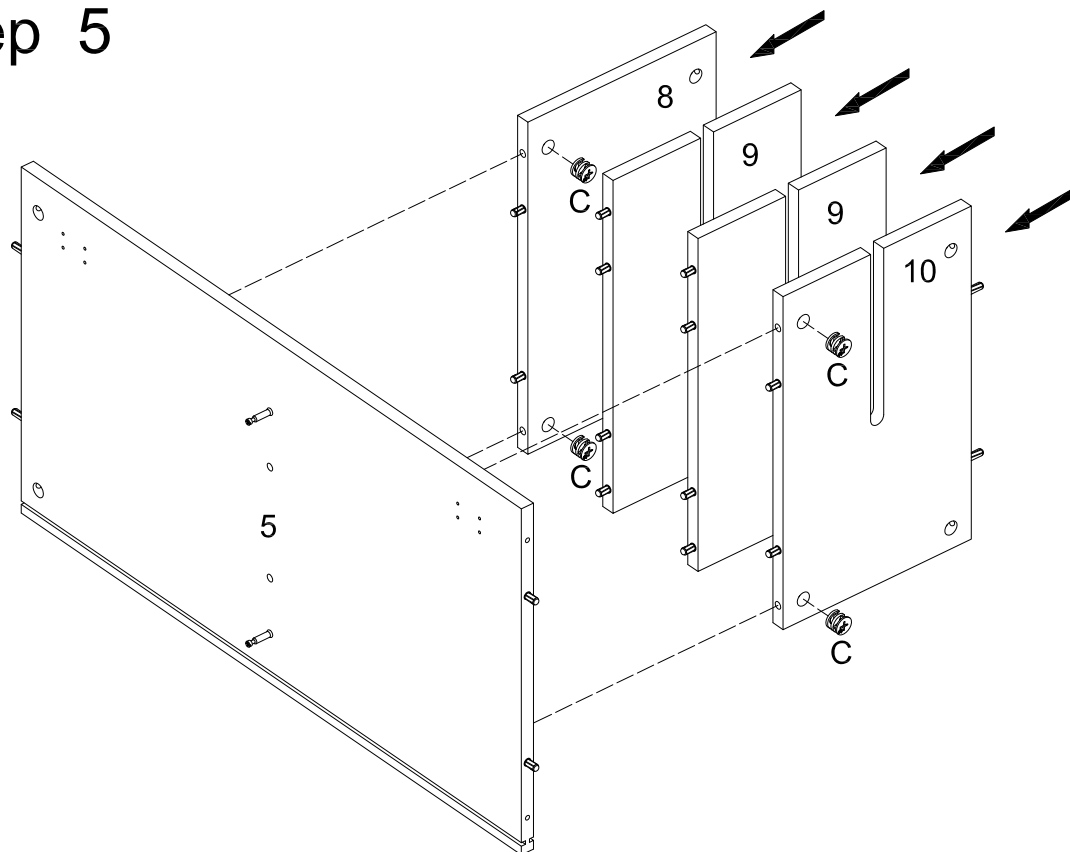



Insert parts (8,9,10) into side panel (5), then insert and secure cam lock (C) to parts (8,10) to lock it.

Step 6

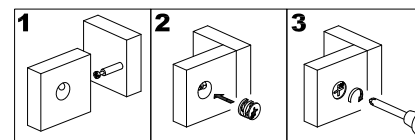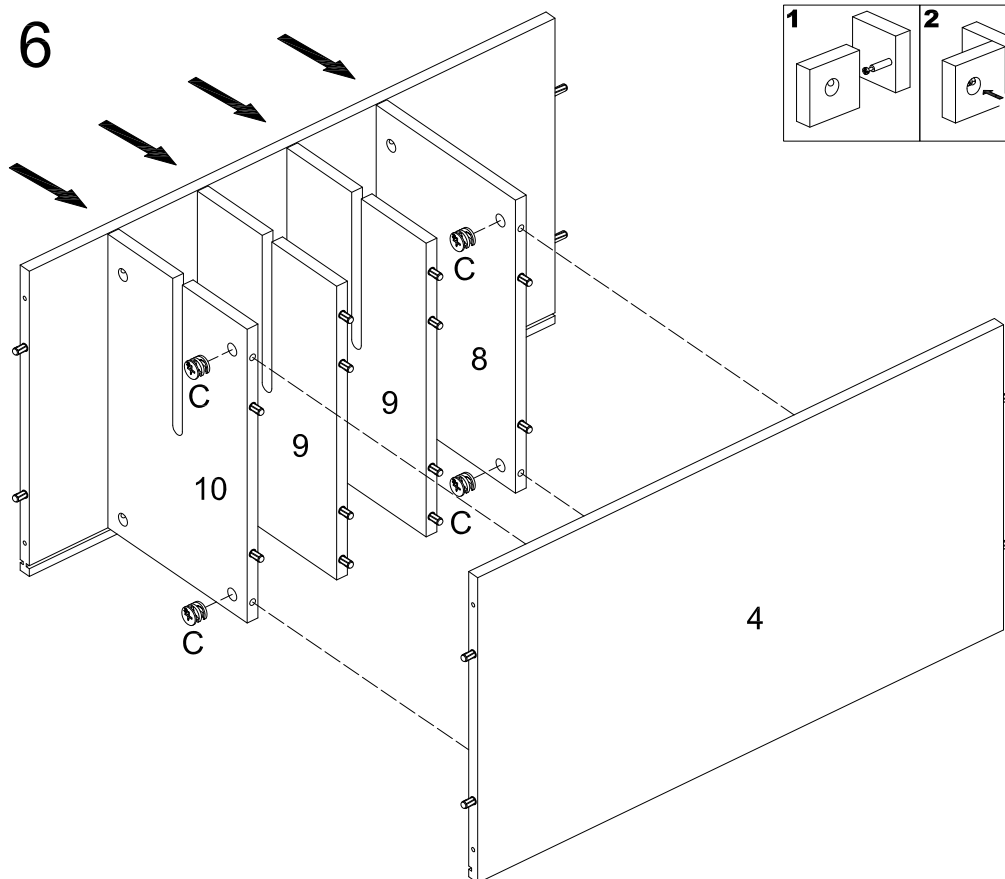


Insert parts (8,9,10) into side panel (4), then insert and secure cam lock (C) to parts (8,10) to lock it.

Step 7

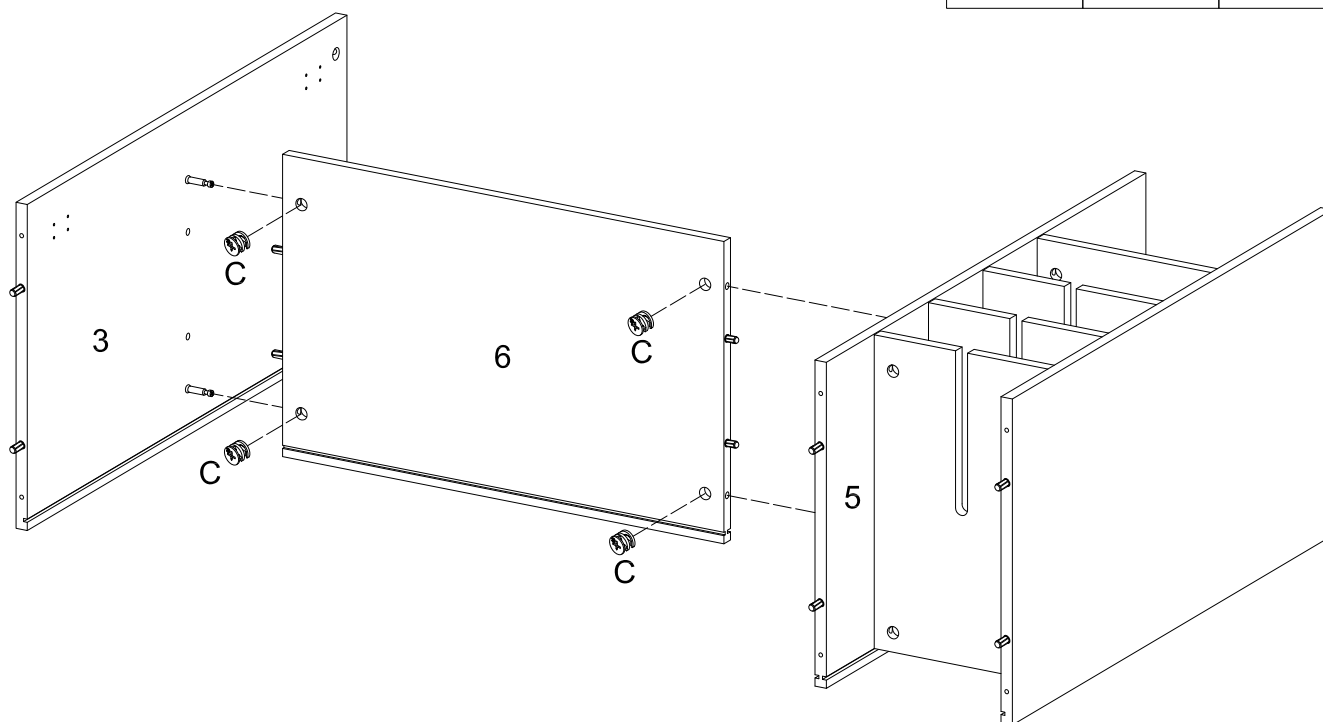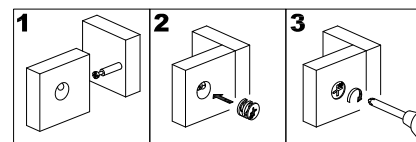


Insert shelf (6) into side panel (3,5), then insert and secure cam lock (C) to shelf (6) to lock it.

Step 8

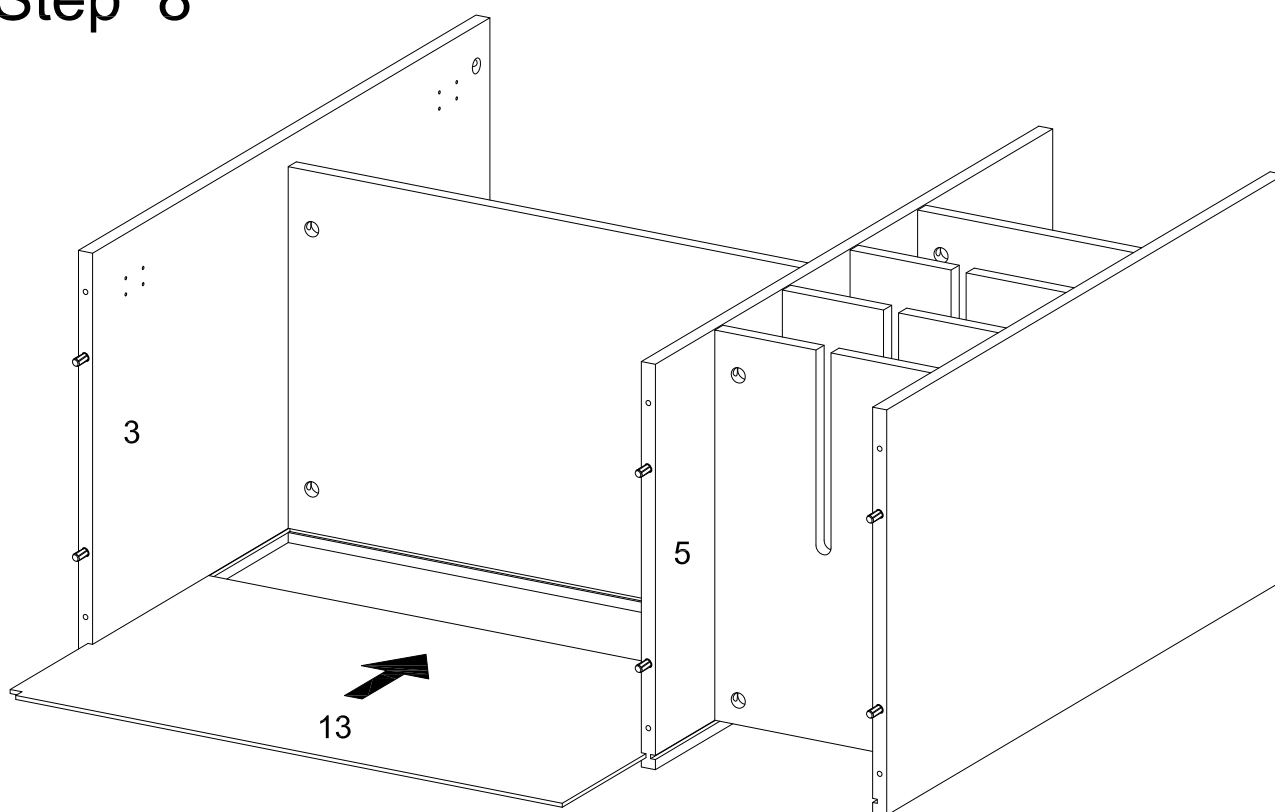


Insert back panel (13) through side panel (3,5).

Step 9

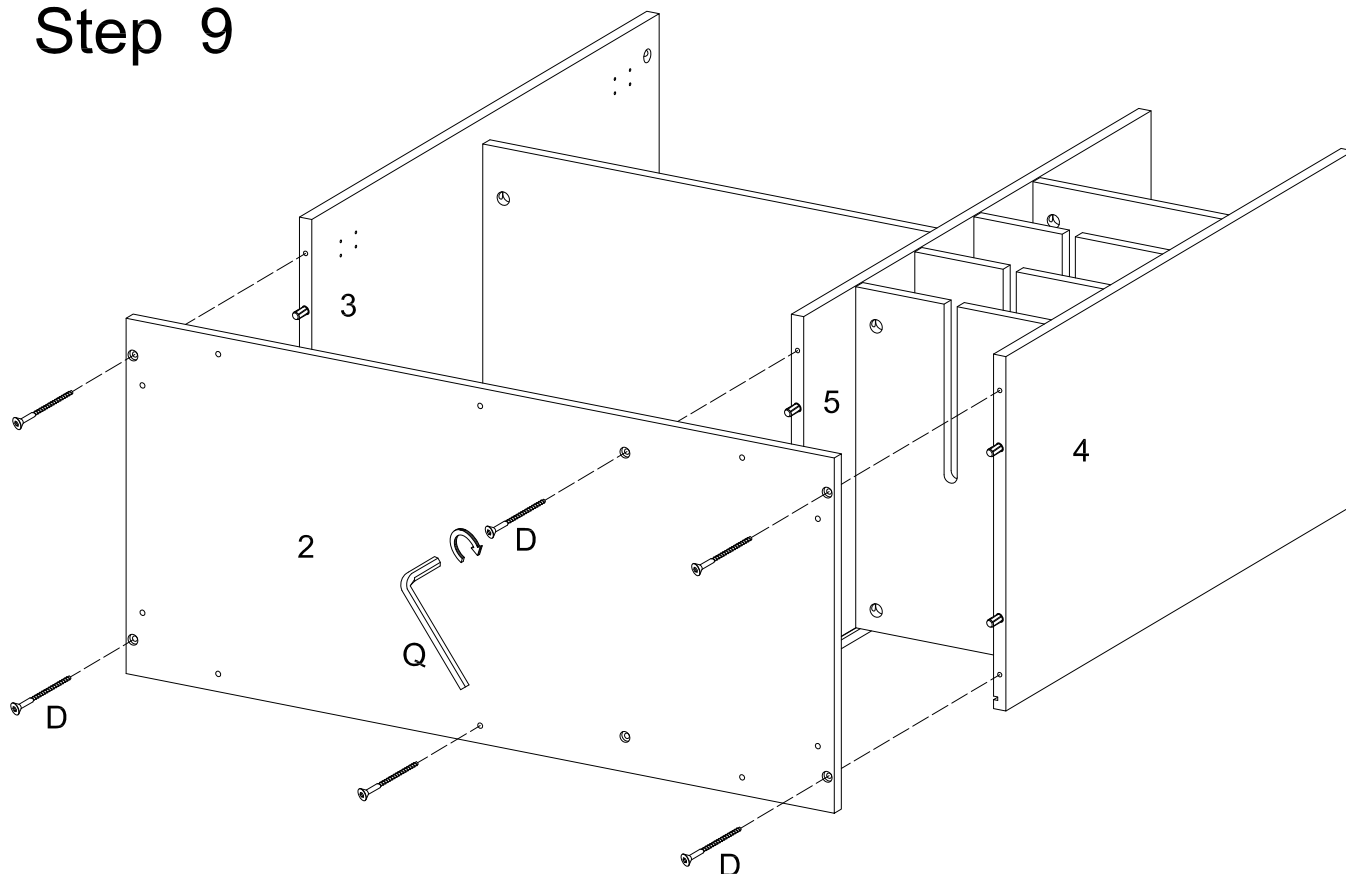


Use wrench (Q) to secure bottom panel (2) to side panel (3,4,5) with bolt (D).

Step 10

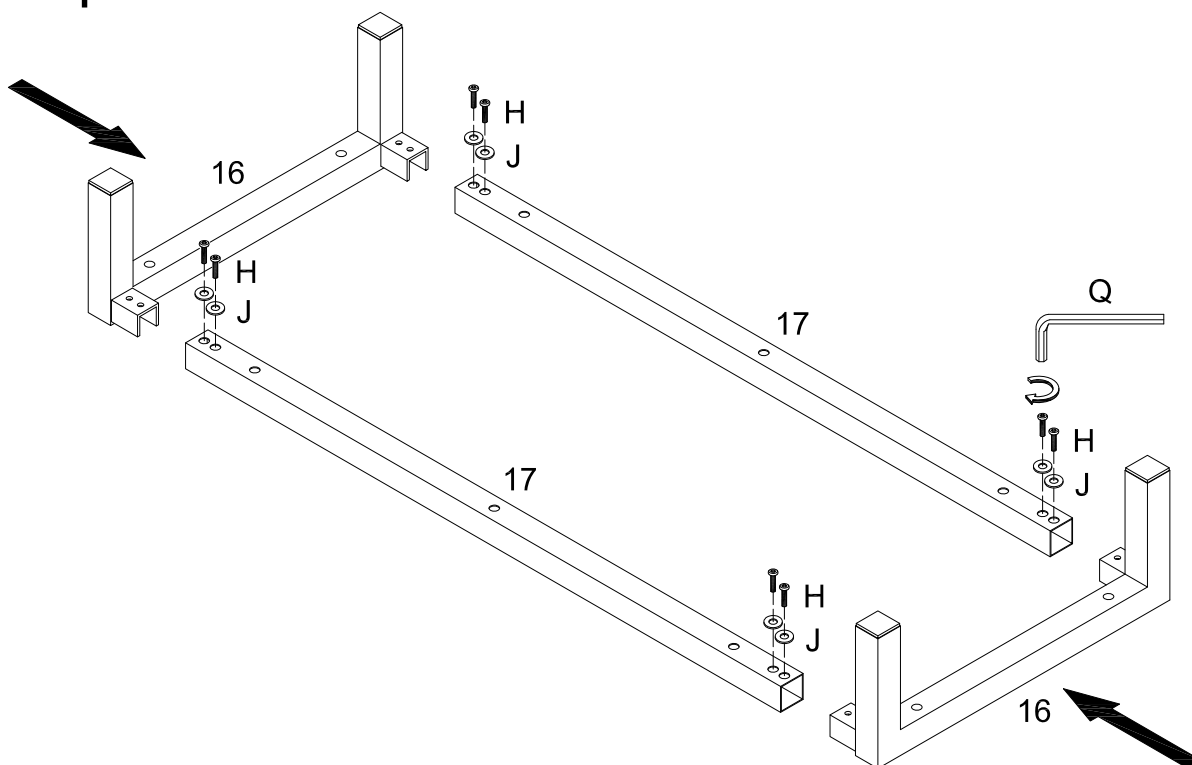


Insert parts (17) to leg (16), then use wrench (Q) to secure it with bolt (H) and washer (J).

Step 11

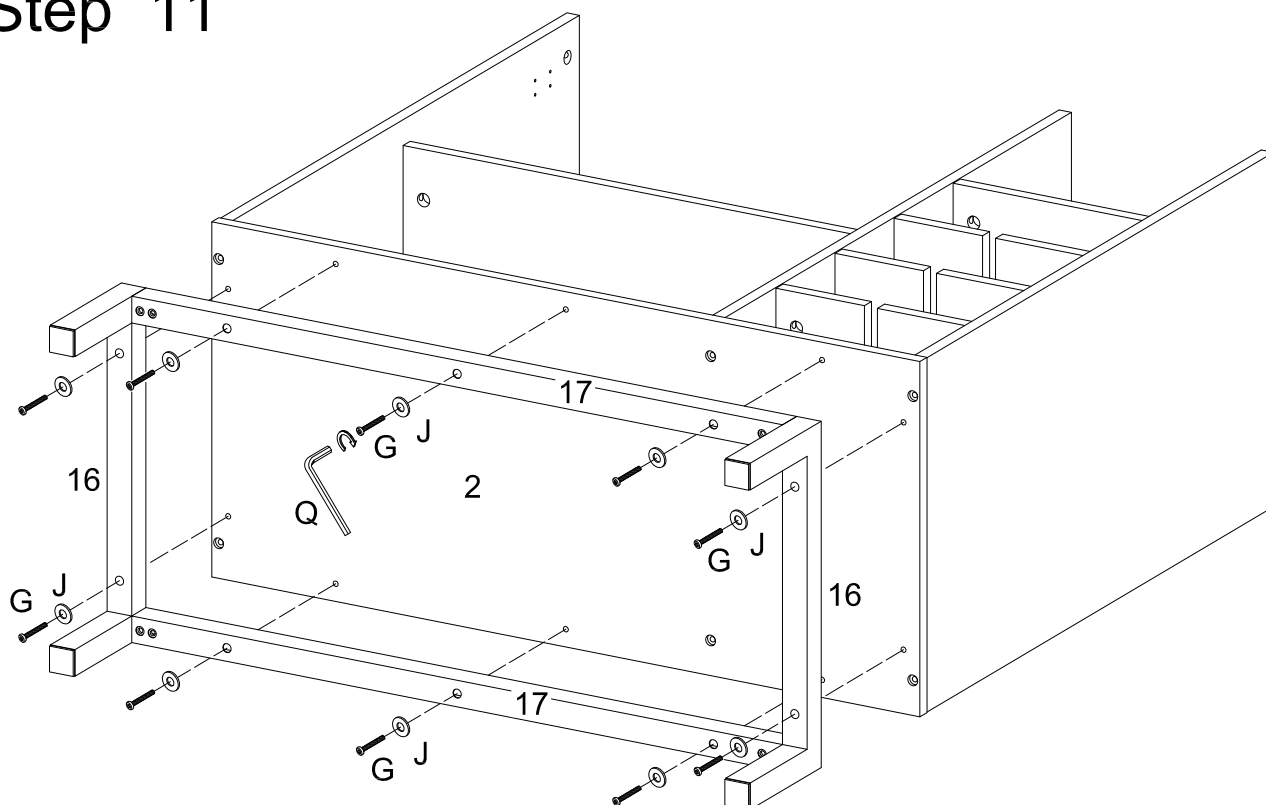



Use wrench (Q) to secure parts (17) and leg (16) to bottom panel (2) with bolt (G) and washer (J).

Step 12

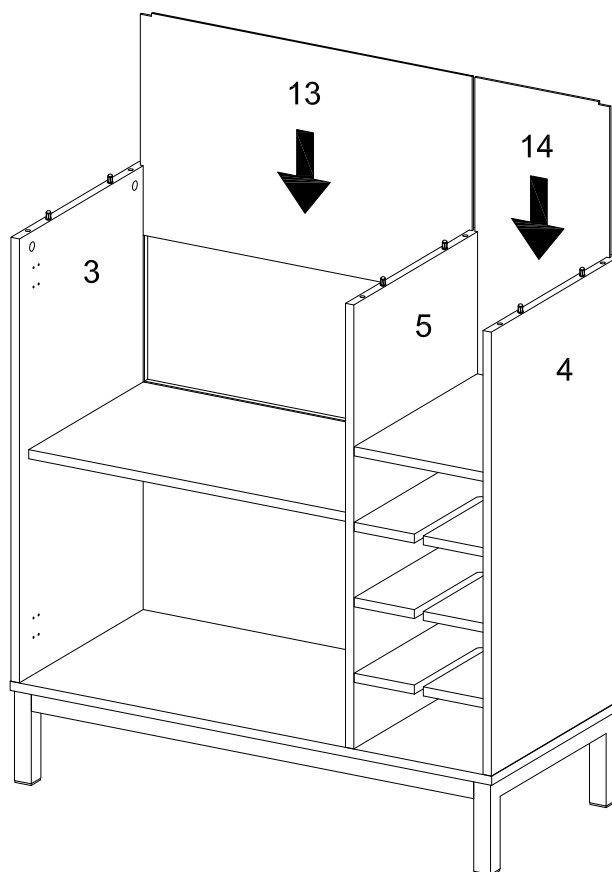


Insert back panel (13,14) through side panel (3,4,5).

Step 13

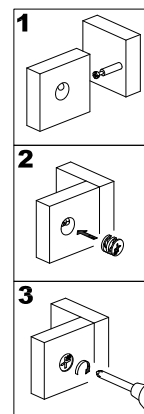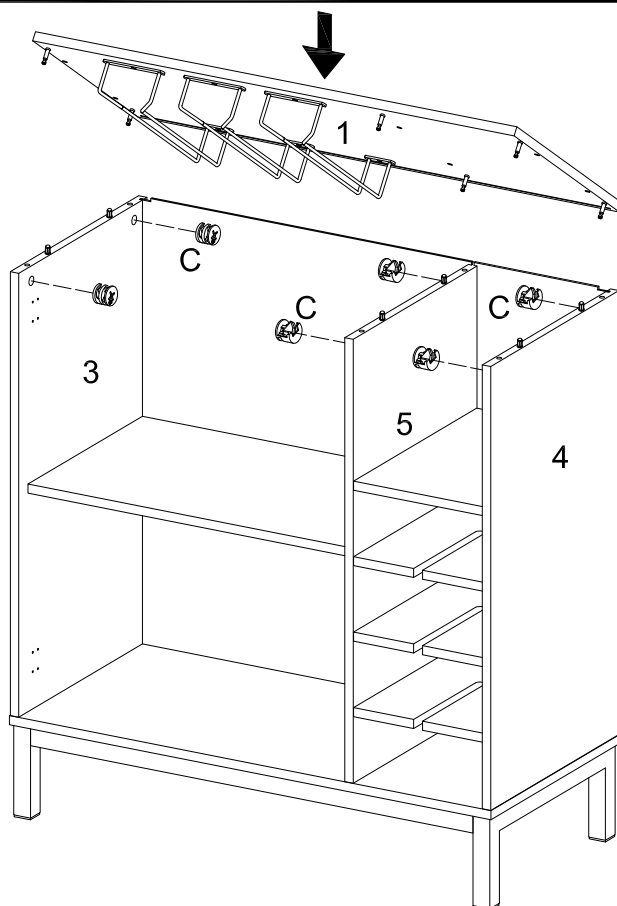


Insert top panel (1) into side panel (3,4,5), then insert and secure cam lock (C) to side panel (3,4,5) to lock it.

Step 14

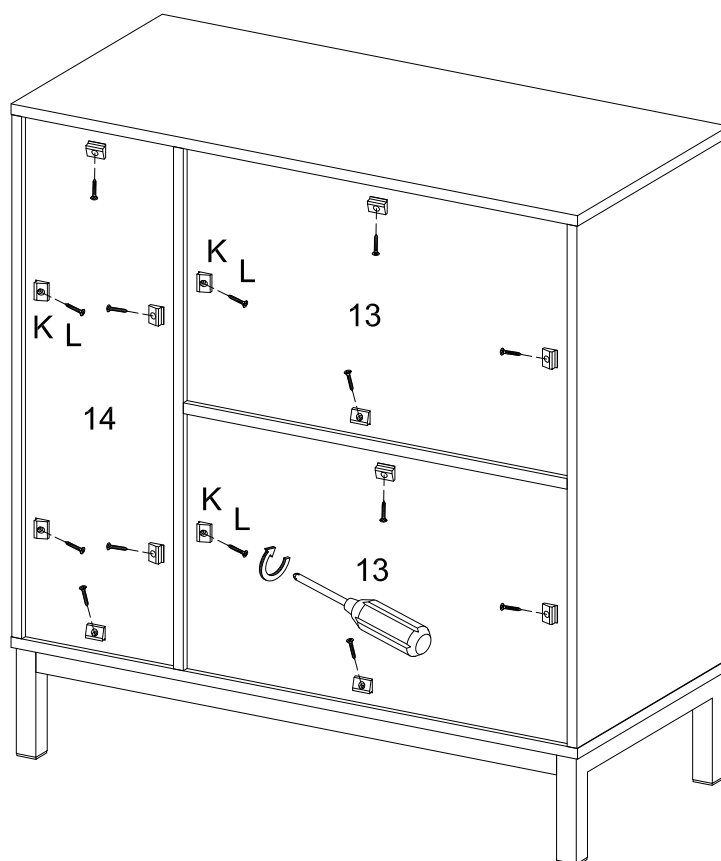


Secure plastic wedges (K) to back panel (13,14) with screw (L).

Step 15

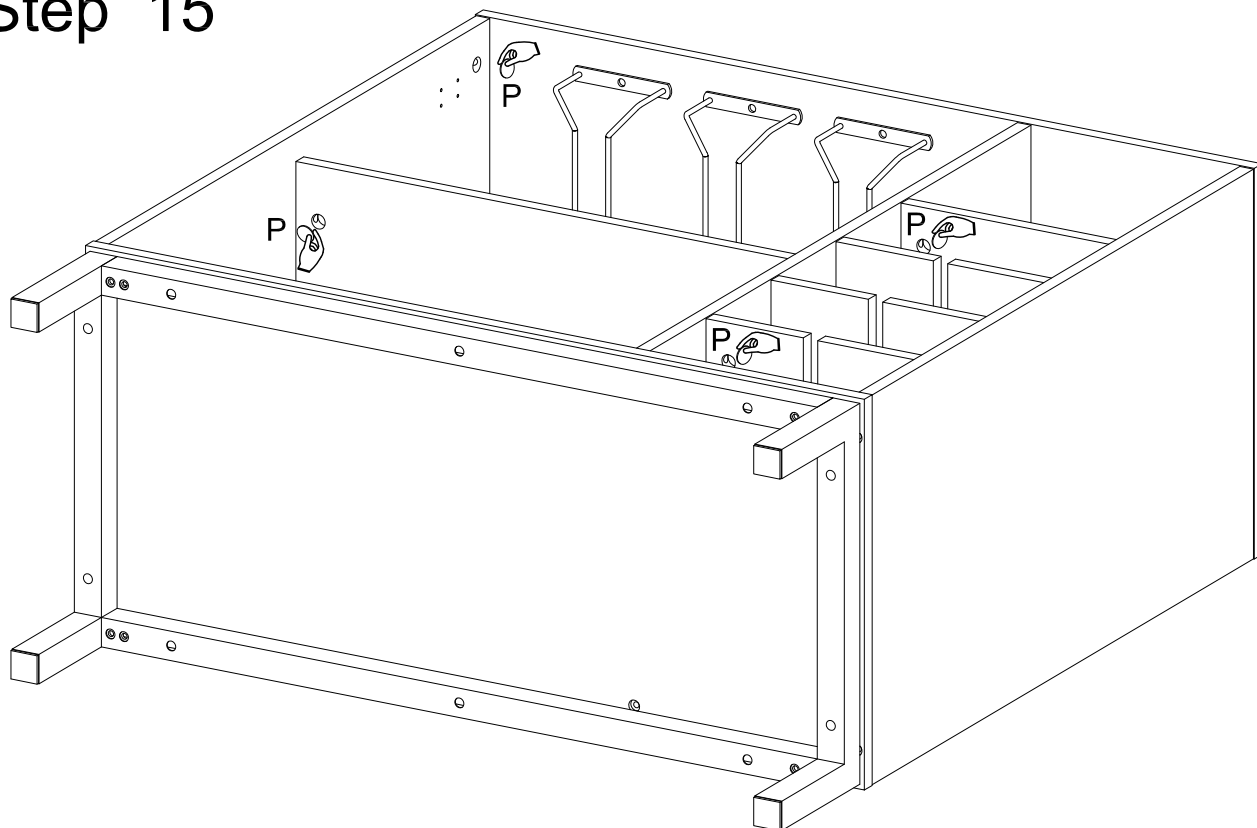


Place sticker (P) over holes as per diagram.

Step 16

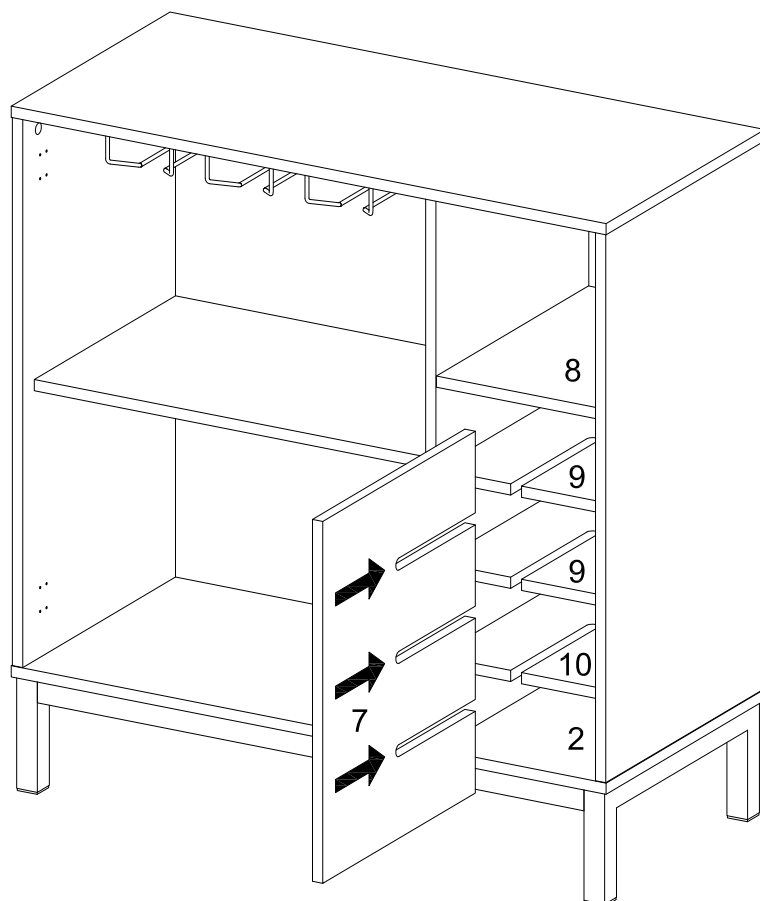


Insert part (7) as per diagram.

Step 17

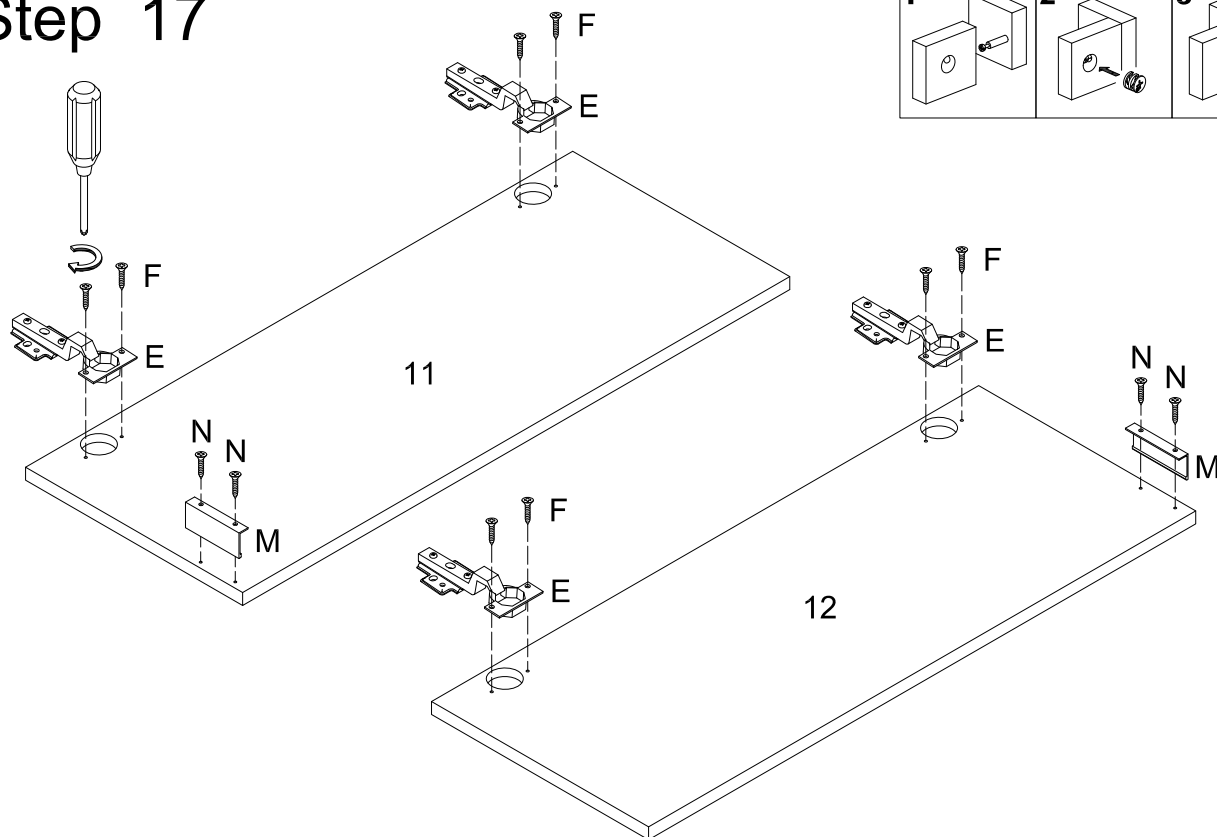


Secure hinge (E) to door (11,12) with screw (F), and secure handle (M) to door (11,12) with screw (N).

Step 18

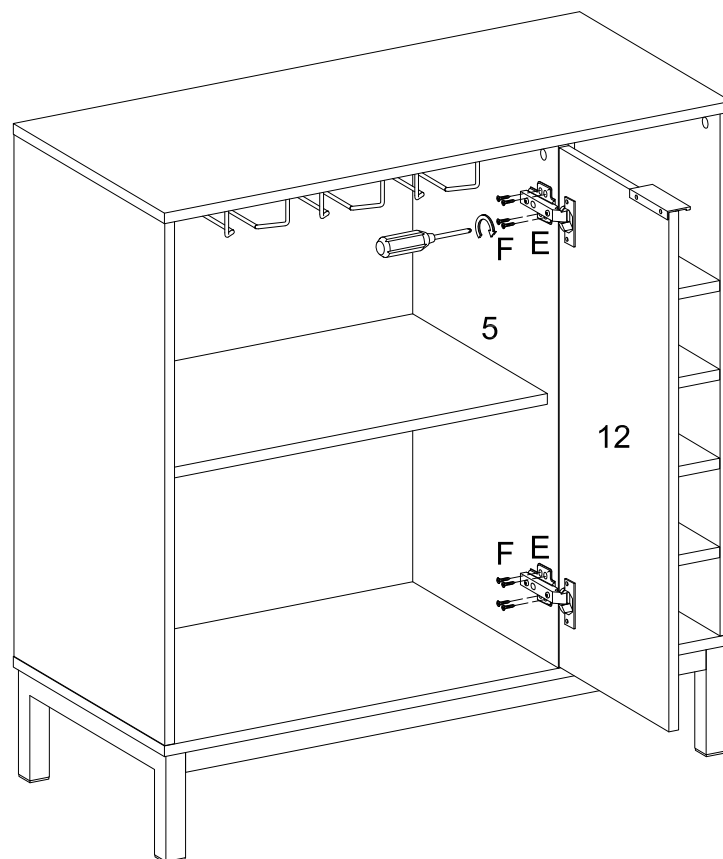


Hold the door (12) and secure hinge (E) to side panel (5) with screw (F).

Step 19

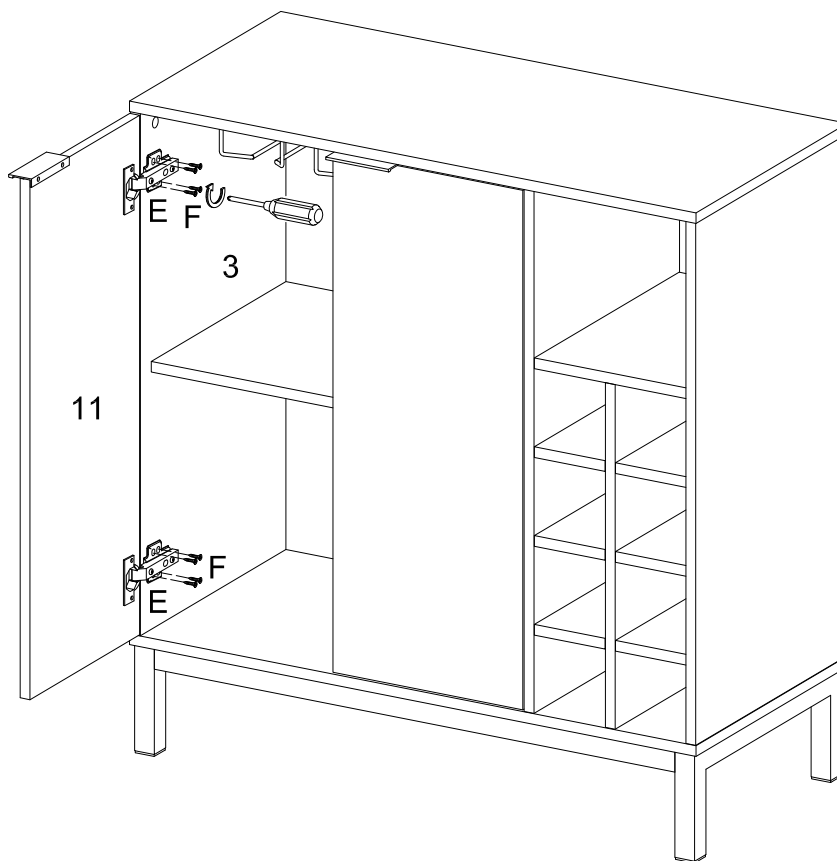

Hold the door (11) and secure hinge (E) to side panel (3) with screw (F).

Step 20

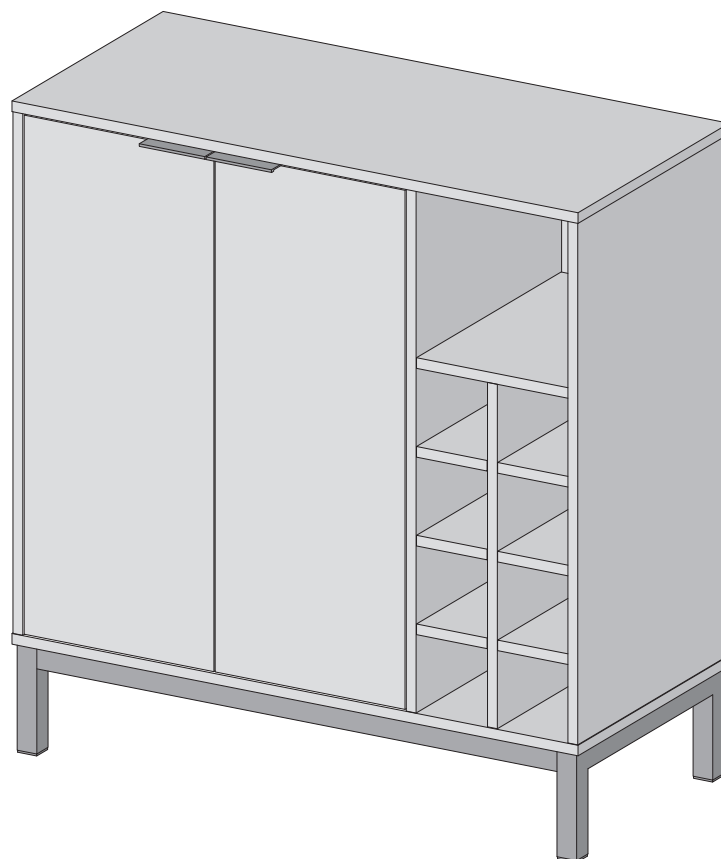

Final Assembly