








ITEM:

8304-BS  
CS

	Installing		Accessories			Tool	
	①	②	③	④	⑤	⑥	
			SCREW	NUT	GASKET	ALLEN KEY	
	SEAT	FRAME					
		Size	M6*25	M6	$\Phi_{18} \times 2 \times \Phi_8$	Size	$\Phi 4$
Pcs	1	1	4	4	4		1

**Step1**

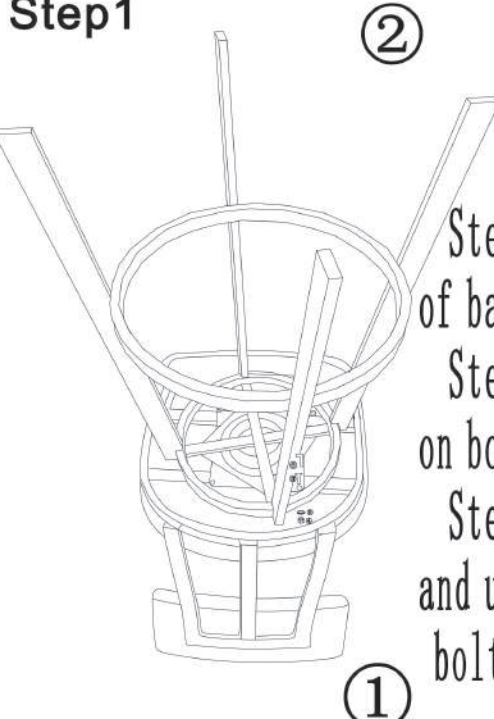

②

Step 1: Put the bolts(3) through holes of base and swivel.

Step 2: Put the gasket(5) and nut(4) on bottom of bolt as picture.

Step 3: Keep the nut not moving, and use allen key(6) to afix the bolt into nut until tighten.

①

**Step2**

