





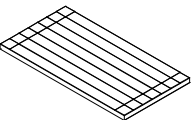
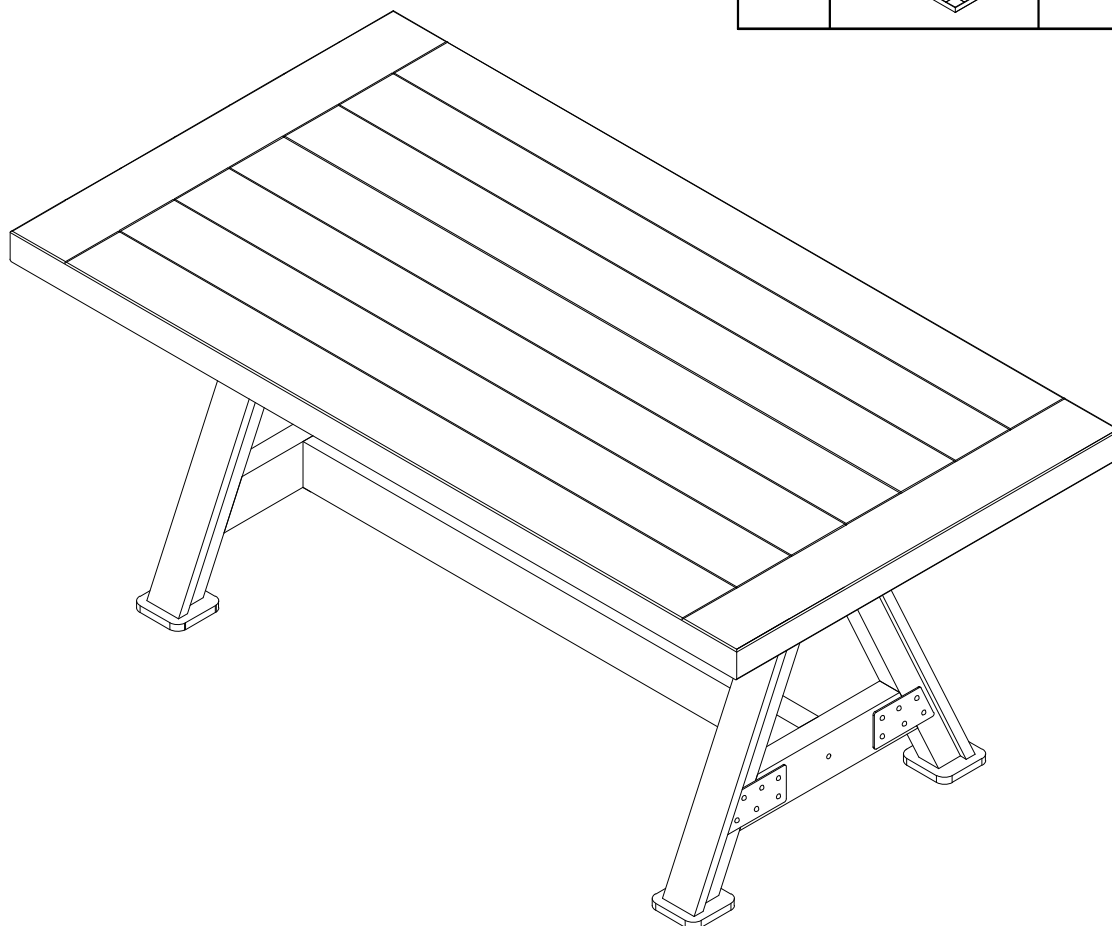


*** Caution : please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly

NO.	Hardware list		Q'TY
1		BOLT (1/4" * 20 * 3/4") LOCK WASHER (1/4") FLAT WASHER (1/4" * 13mm)	20
2		BOLT (1/4" * 63 * 2-1/2") LOCK WASHER (1/4") FLAT WASHER (1/4" * 13mm)	2
3		4MM HEX WRENCH	1

NO.	DRAWING	DESCRIPTION	Q' TY
A		Leg	2pcs
B		Lower Stretcher	1pc
C		Upper Stretcher	1pc
D		Top	1pc




NOTE: DO NOT FULL TIGHTEN BOLTS UNTIL PARTS COMPLETE ASSEMBLED

Cleaning instructions: Clean using soft cloth


Made in Viet Nam

*** Caution : please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly

STEP : 1 Insert upper stretcher (C) , lower stretcher (B) into leg (A) first at the same time . This is very important . Then screw bolts (1) as figure showed by allen key (3)
Screw bolts (2) as figure showed by allen key (4)

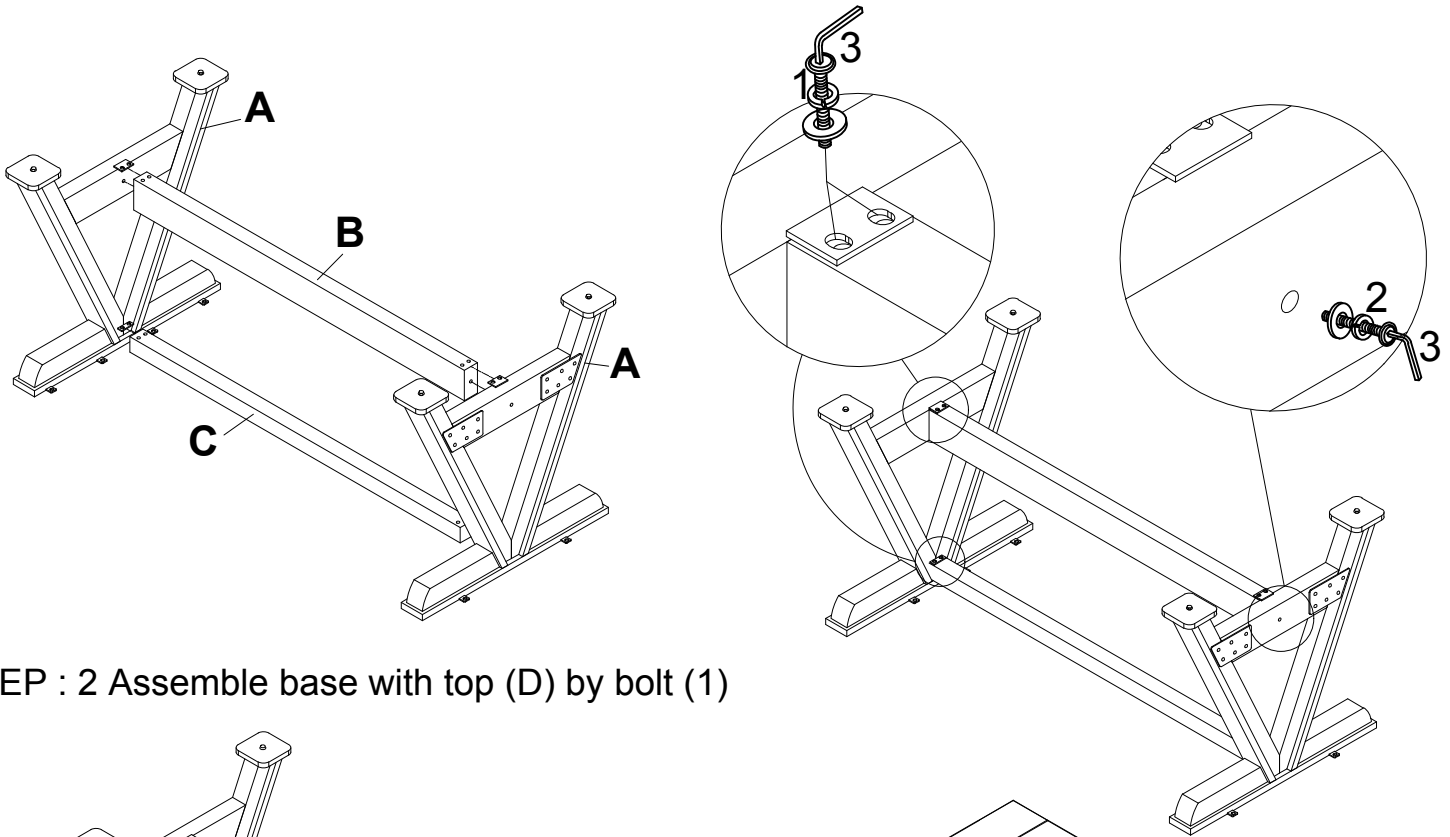

STEP : 2 Assemble base with top (D) by bolt (1)

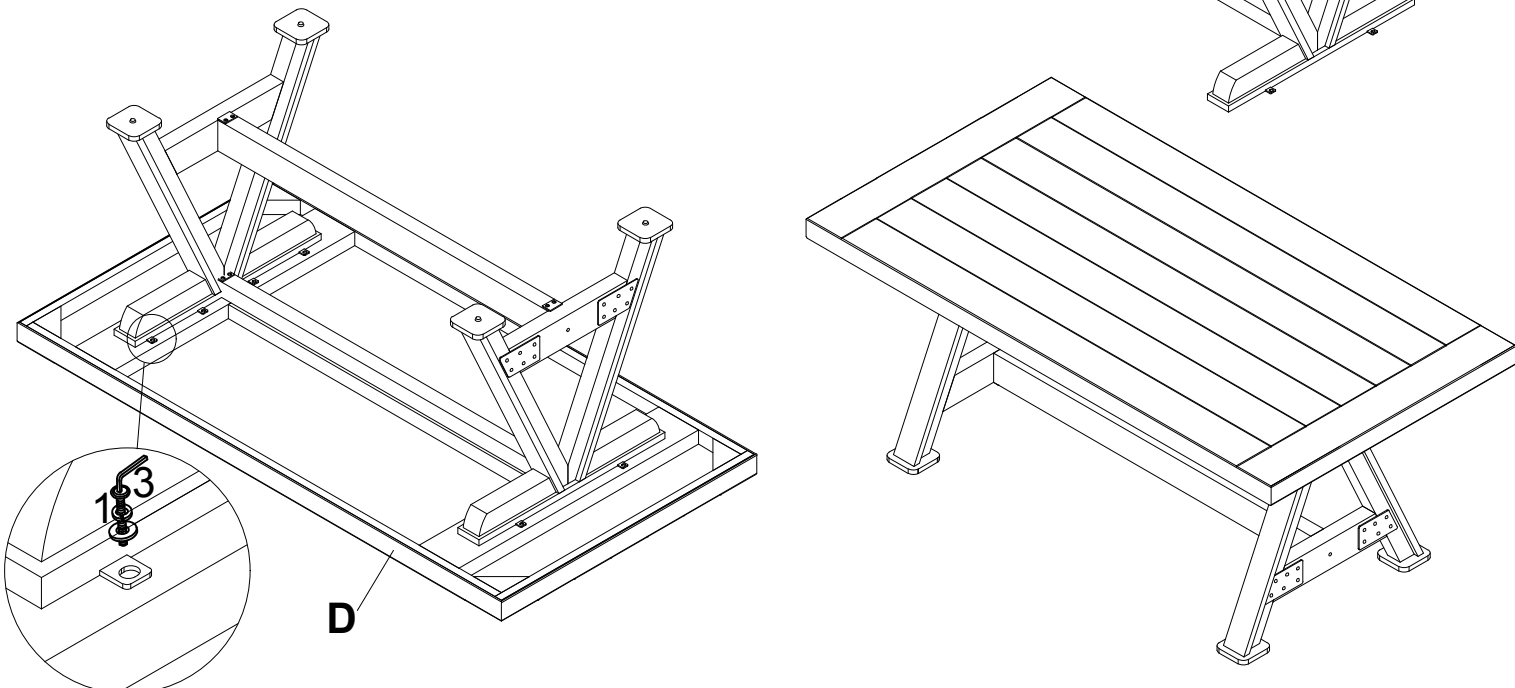

NOTE:DO NOT FULL TIGHTEN BOLTS UNTIL PARTS COMPLETE ASSEMBLED

Cleaning instructions:Clean using soft cloth

Made in Viet Nam