



Assembly Instructions

BFGP 339-510N

UPHOLSTERED CHAIR



SKU# 42403395

STEP	CODE	HARDWARE		Q'TY
2,3	A		Jcbc bolt 5/16"-18 * 2-1/2"	8PCS
			Lock washer 5/16"	8PCS
			Flat washer 5/16"x19mm*1mm	8PCS
2	B		Jcbc bolt 1/4"-20 * 1-3/4"	2PCS
			Lock washer 1/4"	2PCS
			Flat washer 1/4"x19mm*1mm	2PCS
	C		Allen key 4mm	1PC
2,3	D		Screw (Ø8*1-1/4")	4PCS

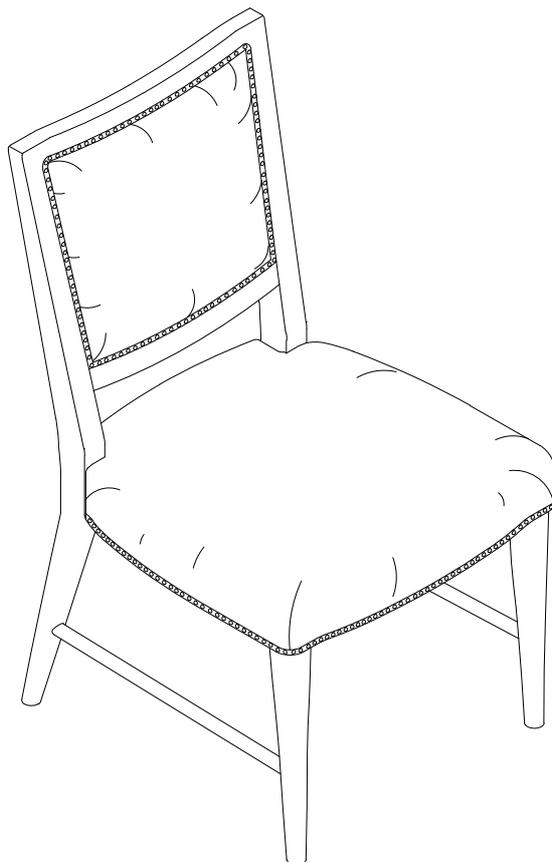

PART LISTS


1. Back frame - 1 PC

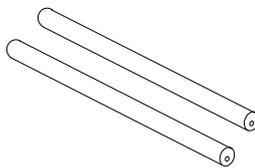2. Seat frame - 1 PC

3. Side stretcher - 2 PCS

4. Front leg (L) - 1 PC

5. Front leg (R) - 1PC

Hardware Pack Location(s):

BFGP 339-510N UPHOLSTERED CHAIR
SKU# 42403395

This product is manufactured by BFGP for

ROOMS TO GO ►

MADE IN VIETNAM

VERSIONS# 1 - 10/21/2023

1 OF 2

Assembly Instructions


BFGP 339-510N

UPHOLSTERED CHAIR

SKU# 42403395


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

STEP 1: Please find the KD feet's under Seat frame (2) by tear velcro fastener tape.

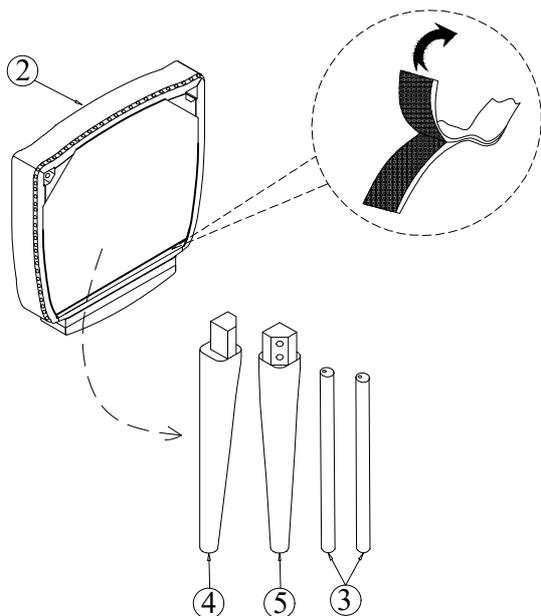


STEP 2: Attach Seat frame (2) to the Back frame (1) by using Bolt (A), (B) with Allen key (C). Attach Side stretcher (3) to the Back frame (1) by using Screw (D) with Screwdriver.

Note: Do not tighten all screws & bolts until the seat is fully assembled.

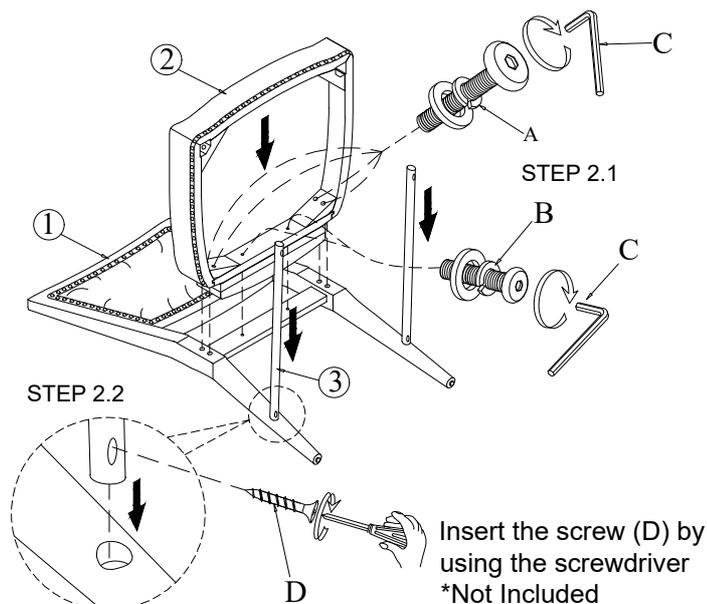


STEP 3: Attach Front legs (4), (5) to the Seat frame (2) by using Bolt (A) with Allen key (C). Attach Side stretcher (3) to Front legs (4), (5) by using Screw (D) with Screwdriver. After apply velcro fastener tape at the bottom Seat frame (2).

Note: Do not tighten all screws & bolts until the seat is fully assembled.

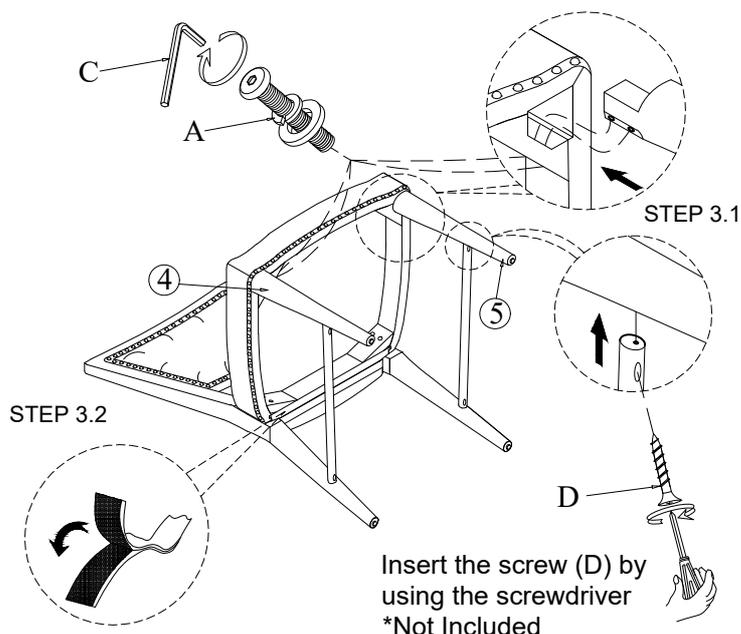

COMPLETED: Turn chair to the upright position, apply firm pressure to align and fully tighten all bolts and screws.

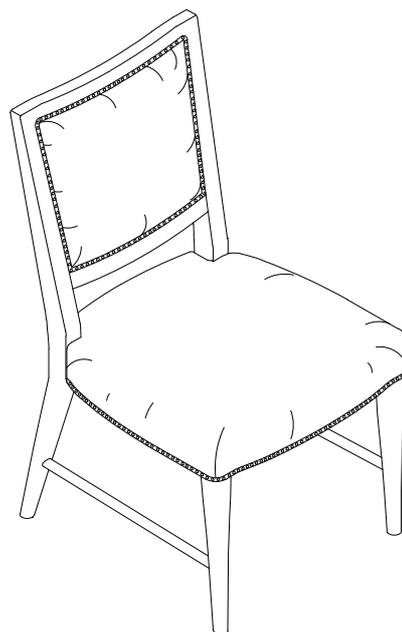

This product is manufactured by BFGP for

ROOMS TO GO

MADE IN VIETNAM

VERSIONS# 1 - 10/21/2023

2 OF 2