

Assembly Instructions

HMIS 161-03 SIDE SLAT CHAIR

SKU#: 42416164


Version 1 - 20250616


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

PARTS LIST			
1	Chair Back		1Pc
2	Cushion Seat		1Pc
3	Left Front Leg		1Pc
4	Right Front Leg		1Pc
5	H Frame Strecher		1Pc

TOOLS REQUIRED (NOT PROVIDED)	
Description	Sketch
Phillips screwdriver	

Do not tighten all bolts until chair is fully assembled.

Step	Code	Hardware List	
1+2	B	Allen Key - 4mm	
2		Flat Washer - Ø5/16"x19x1.5mm	
		Lock Washer - Ø5/16"	
		Bolt - Ø5/16"x18x83mm	
1	C	Flat Washer - Ø1/4"x19x1.5mm	
		Lock Washer - Ø1/4"	
		Bolt - Ø1/4"x20x38mm	
3	D	Hex Nut - Ø5/16"	
		Flat Washer - Ø5/16"x19x1.5mm	
		Lock Washer - Ø5/16"	
		Wrench - Ø5/16"	
4	H	Screw - #8x38mm	

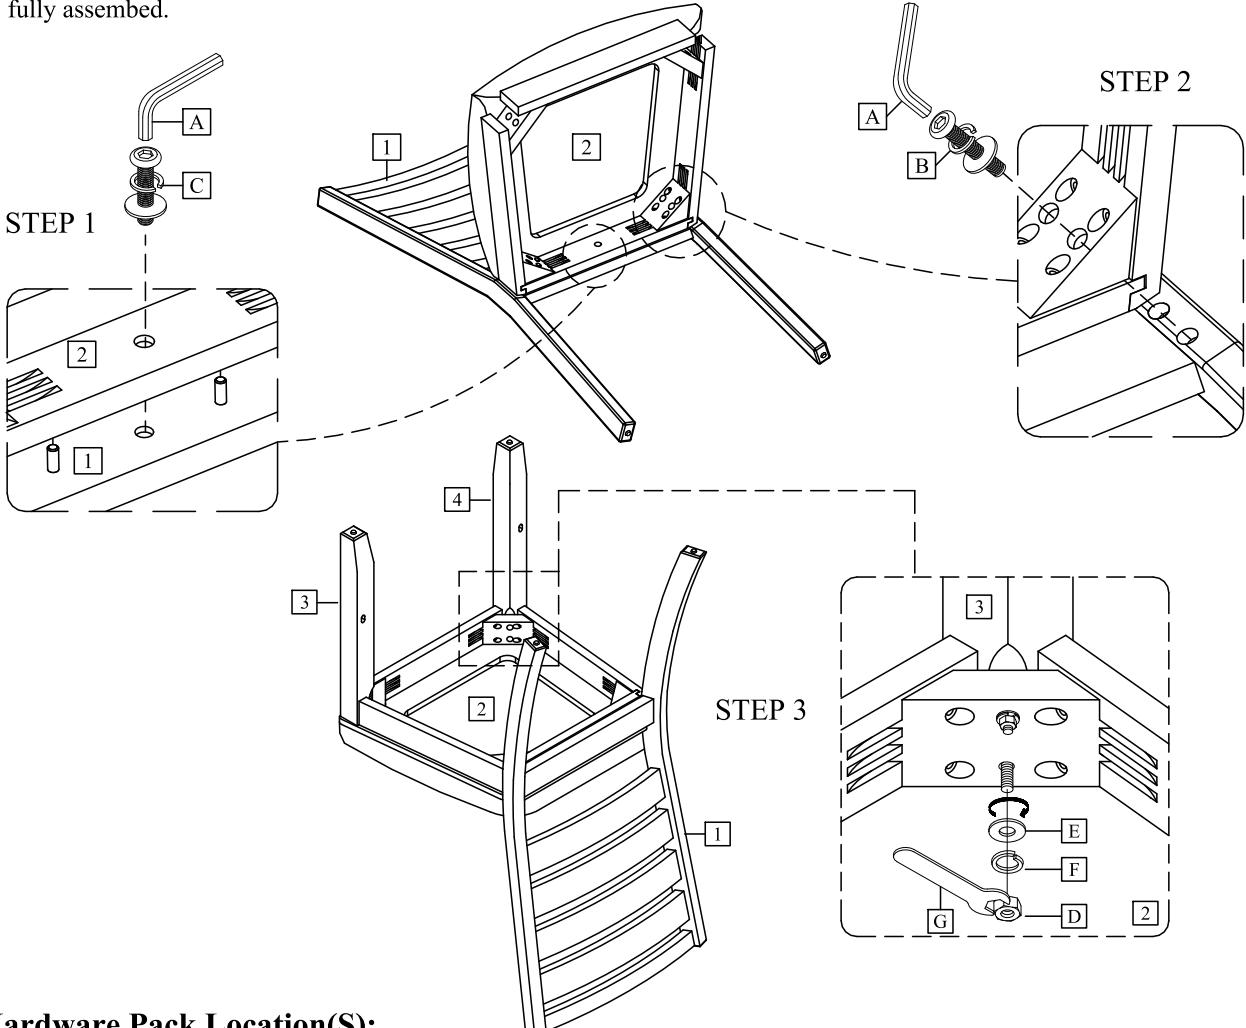

Hardware Pack Location(S):

HMIS 161-03 SIDE SLAT CHAIR , SKU# : 42416164

