ASSEMBLY INSTRUCTIONS

FFLA 1652-213, 1653-213 SLAT BACK SIDE CHAIR

Manufactured by FFLA for Rooms To Go **SKU#42416556, 42416532**

Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

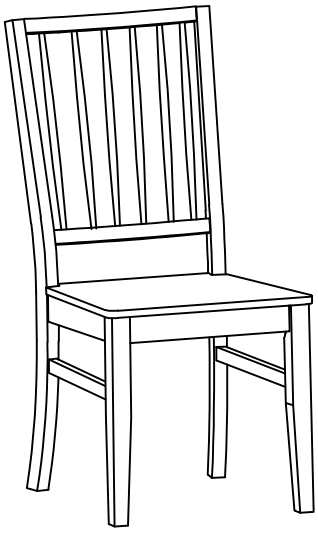

CAUTIONS :

1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tightened the screws and bolts as it may damage the threads.
4. Keep all hardware parts out of the reach of children.
5. Please "LIFT UP & MOVE" the chair when ever you want to shift it.

PARTS LIST

NO.	DESCRIPTION	QTY
1	BACK REST 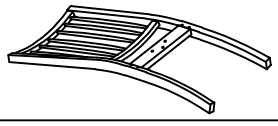	1 PC
2	BOX SEAT 	1 PC
3	FRONT LEG L 	1 PC
4	FRONT LEG R 	1 PC
5	SIDE STRETCHER L 	1 PC
6	SIDE STRETCHER R 	1 PC

HARDWARE LIST

NO.	DESCRIPTION		QTY
A	JCBB M8 x P1.25 x 90MM		4 PCS
	FLAT WASHER M8 x 22MM		4 PCS
	SPRING WASHER M8		4 PCS
B	JCBB M8 x P1.25 x 60MM		4 PCS
	FLAT WASHER M8 x 22MM		4 PCS
	SPRING WASHER M8		4 PCS
C	JCBB M8 x P1.25 x 35MM		3 PCS
	FLAT WASHER M8 x 22MM		3 PCS
	SPRING WASHER M8		3 PCS
D	CHIPBOARD SCREW M4 X 38MM		4 PCS
E	ALLEN KEY M4		1 PC
F	PHILIPS HEAD SCREW DRIVER (NOT INCLUDED)		1 PC

HARDWARE PACK LOCATION:

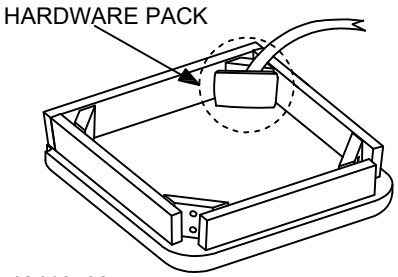

Assembly Instructions

FFLA 1652-213, 1653-213 SLAT BACK SIDE CHAIR

Manufactured by FFLA for Rooms To Go **SKU#42416556, 42416532**

STEP 1

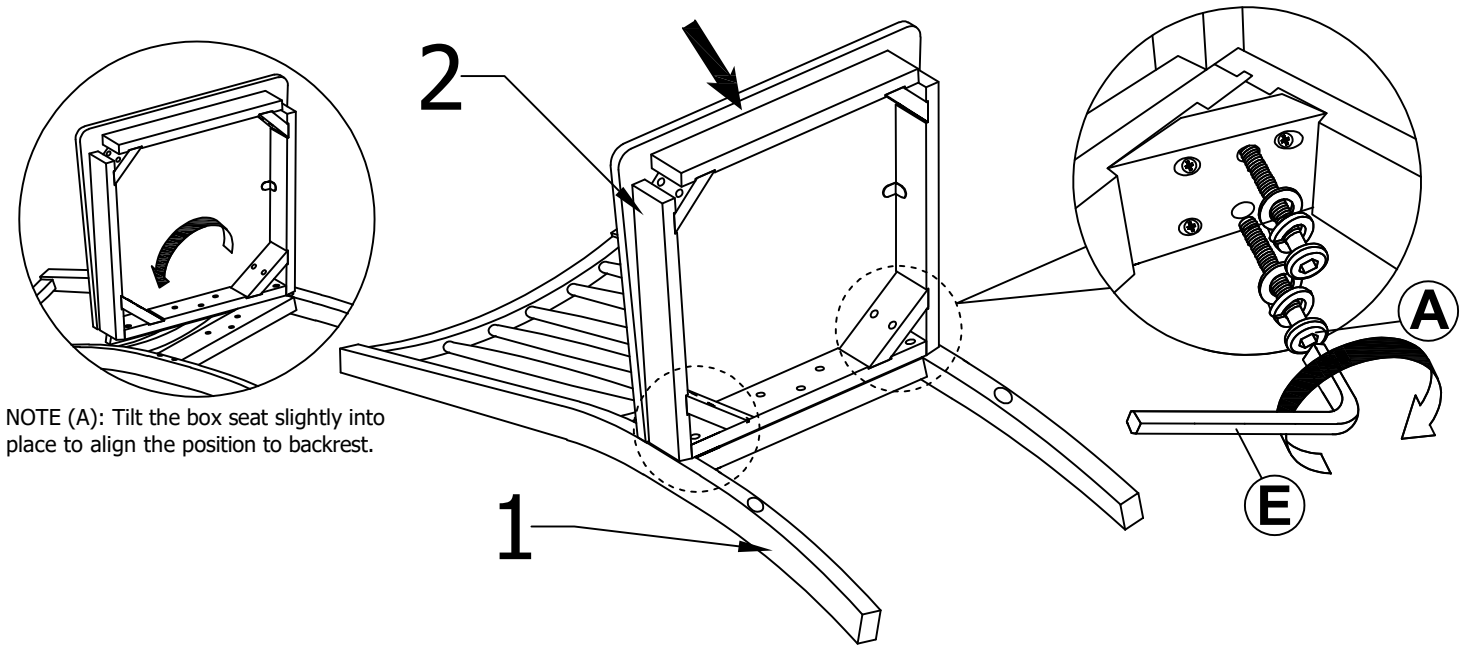

NOTE (A): Tilt the box seat slightly into place to align the position to backrest.

a) Attached the box seat (2) to back rest (1) and use JCBB Bolt (A) to tighten the left & right holes on corner block of (2). Refer NOTE (A).

STEP 2

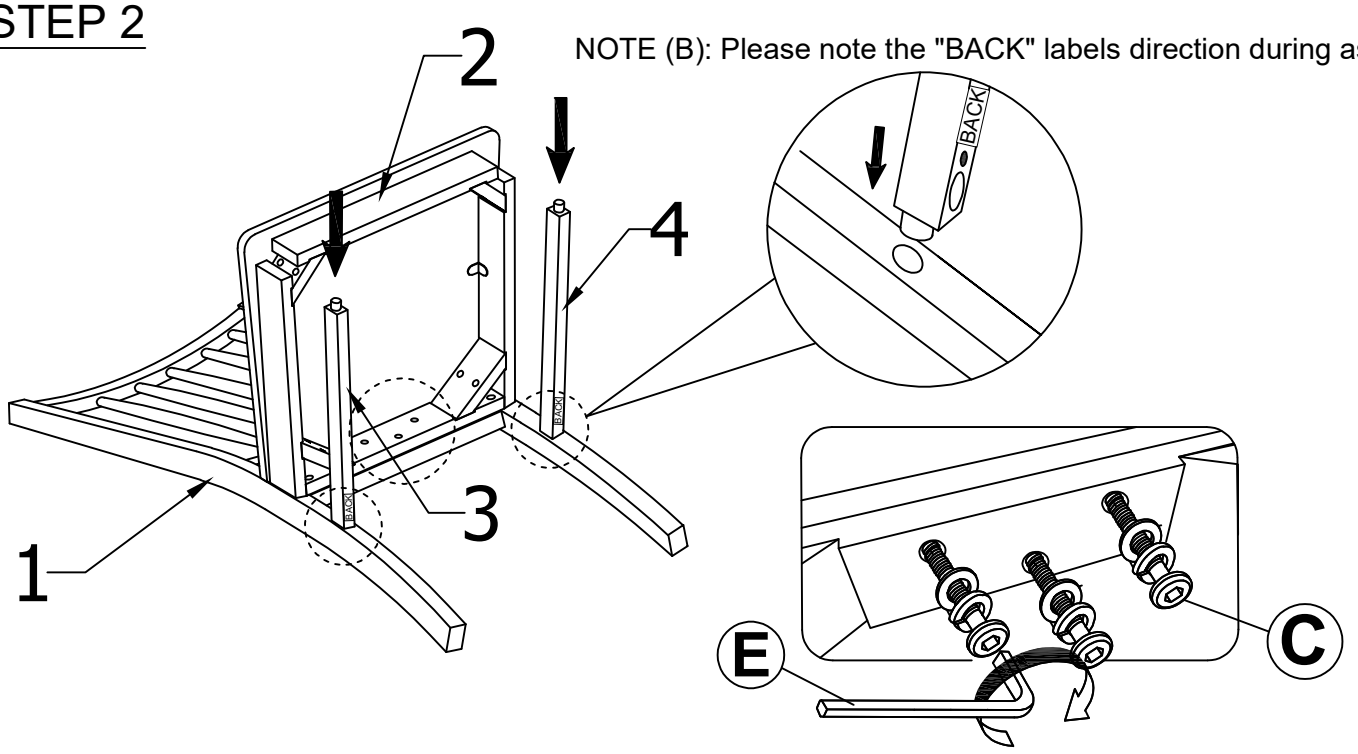

NOTE (B): Please note the "BACK" labels direction during assembly.

a) Use JCBB Bolt (C) to tighten the center holes on bottom of (2) as shown.

b) Insert the side stretcher (3) & (4) into the holes at bottom of (1). Make sure that the "BACK" labels face toward the end of the backrest (1). Refer NOTE (B).

ROOMS TO GO

Assembly Instructions

FFLA 1652-213, 1653-213 SLAT BACK SIDE CHAIR

Manufactured by FFLA for Rooms To Go **SKU#42416556, 42416532**

STEP 3

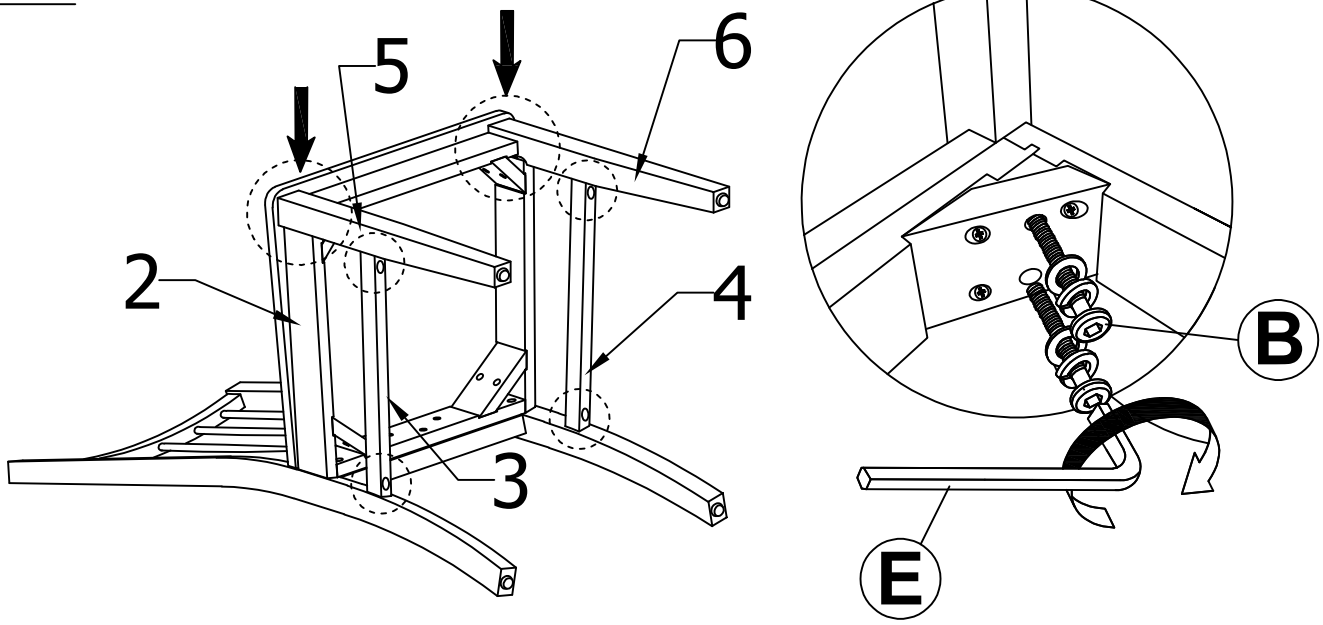

a) Fit the side stretcher (3) & (4) into the holes at front leg (5) & (6) as shown.
b) Attach the (5) & (6) to the front of box seat (2), use JCBB Bolt (B) to tighten the left & right holes on corner block of (2).

STEP 4

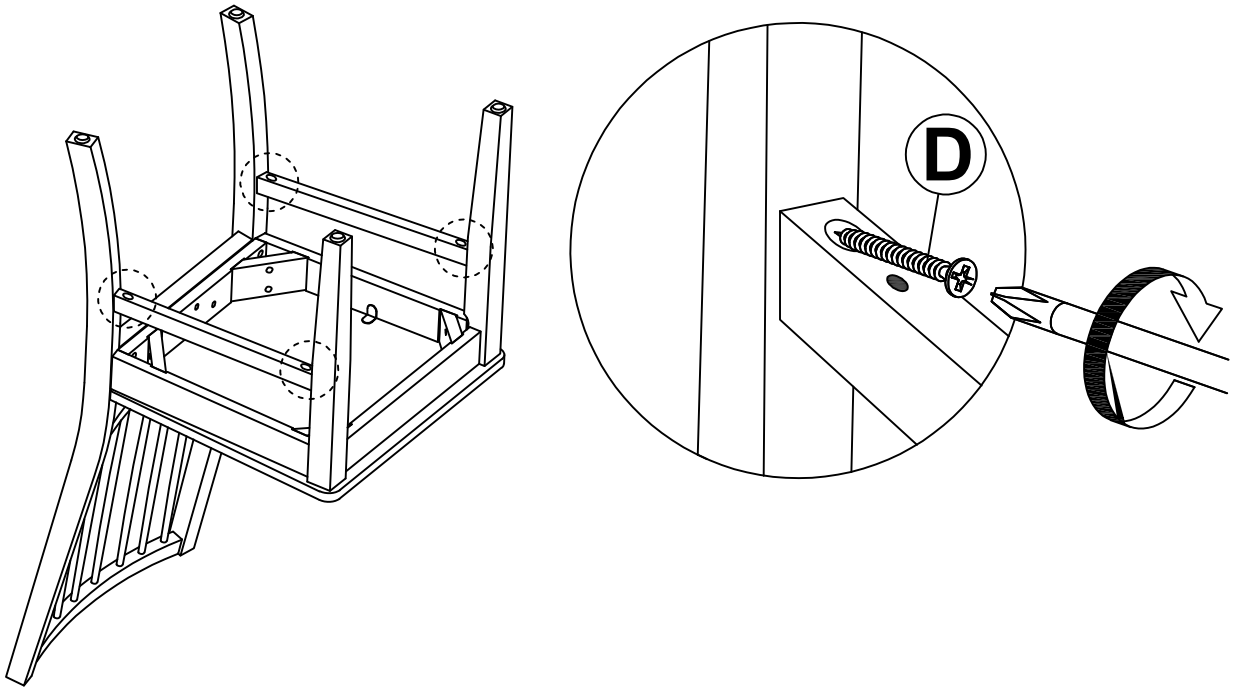

a) Position the leg facing up as shown, use Chipboard Screw (D) to fasten all stretcher to the front legs and back legs.
b) Set the chair right-side up.

Assembly Instructions

FFLA 1652-213, 1653-213 SLAT BACK SIDE CHAIR

Manufactured by FFLA for Rooms To Go **SKU#42416556, 42416532**

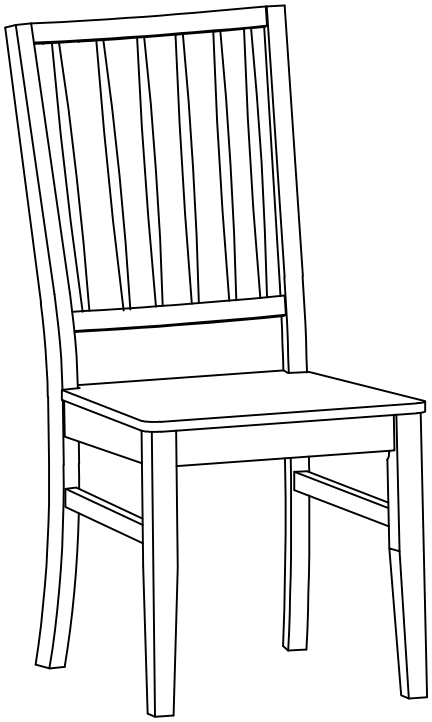

The assembly of chair is completely.