



This product is manufactured by CAVS for **Rooms To Go**


*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

*** Remark: DO NOT fully tighten all bolts until assembly is completed.

Code	PARTS LIST :		
A	Chair back		1Pc
B	Seat frame		1Pc
C	Front leg (left)		1Pc
D	Front leg (right)		1Pc
E	Side Stretcher (left)		1Pc
F	Side Stretcher (right)		1Pc

Code	HARDWARE LIST		
1	Ø5/16" x 19*2mm Flat Washer		5Pcs
	Ø5/16" Spring Washer		5Pcs
	Ø5/16" x 18 x 2" Allen Head Bolt		5Pcs
2	Ø5/16" x 19*2mm Flat Washer		4Pcs
	Ø5/16" Spring Washer		4Pcs
	Ø5/16" x 18 x 3-1/2" Allen Head Bolt		4Pcs
3	4mm Allen Key		1Pc
4	#8 x 1-1/2" Screw		4Pcs
Tool Required (not provided)			
		Phillip Screwdriver	

Step 1 Assemble seat frame (B) with chair back (A). Do not fully tighten the bolts.

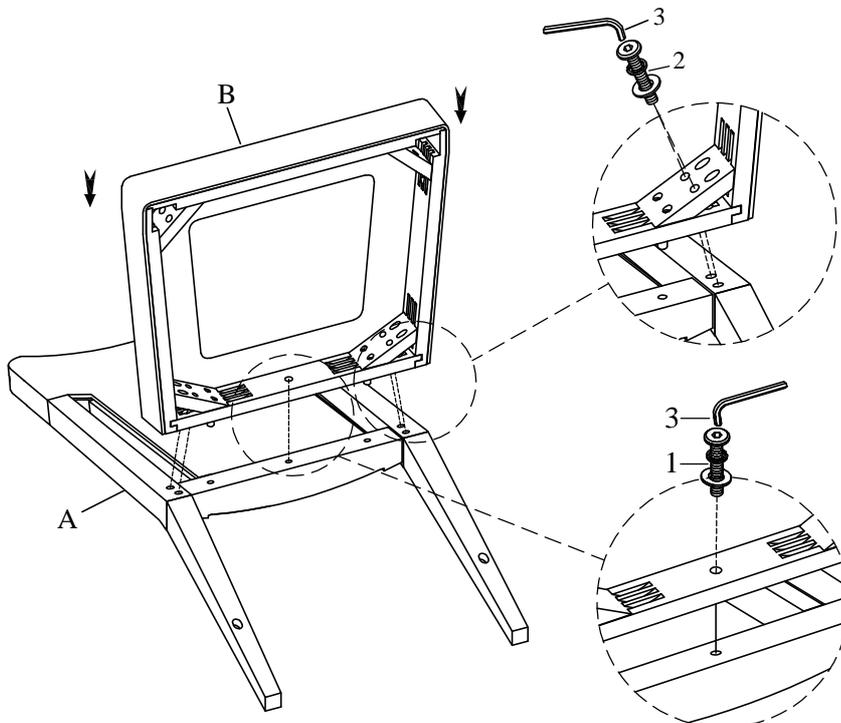

Hardware Pack Location (s):


3740-270 Upholstered Side Chair , SKU: 42437409

This product is manufactured by CAVS for Rooms To Go


*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

*** Remark: DO NOT fully tighten all bolts until assembly is completed.

Step 2: Assemble front leg (C&D) with seat frame (B). Do not fully tighten the bolts.

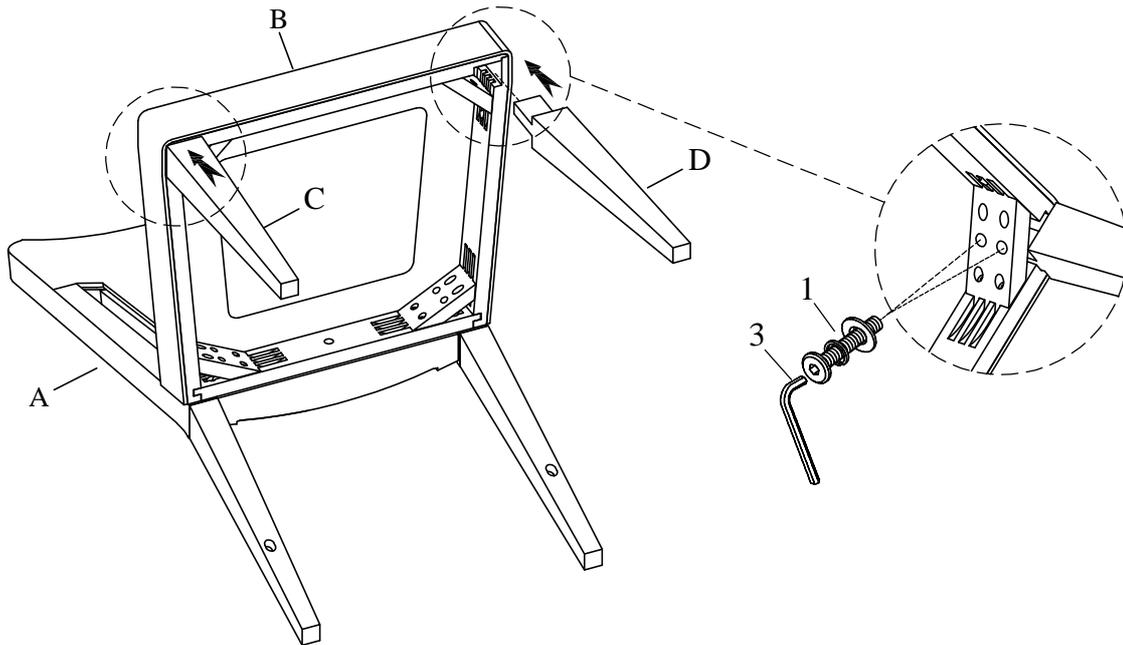

Step 3: Attach Side Stretcher (E&F) with chair back (A) and front leg (C&D), no need to attach Screws.

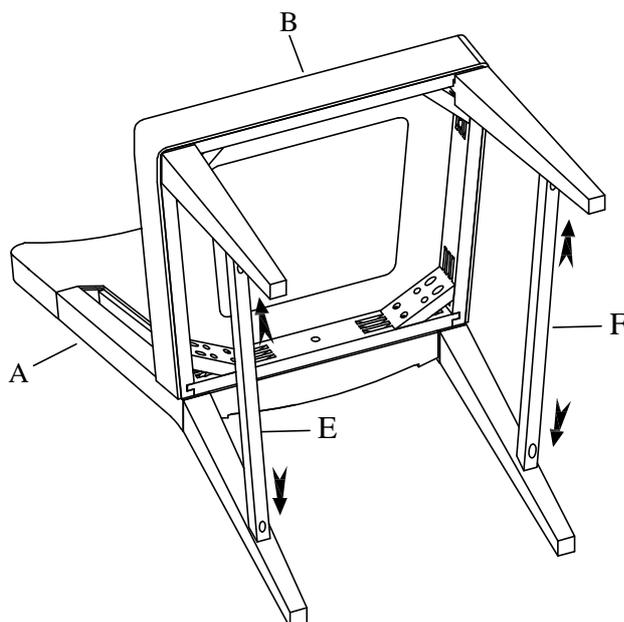


This product is manufactured by CAVS for Rooms To Go

*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

*** Remark: DO NOT fully tighten all bolts until assembly is completed.

Step 4: Using the Allen key, tighten all bolts, then assemble the screw.

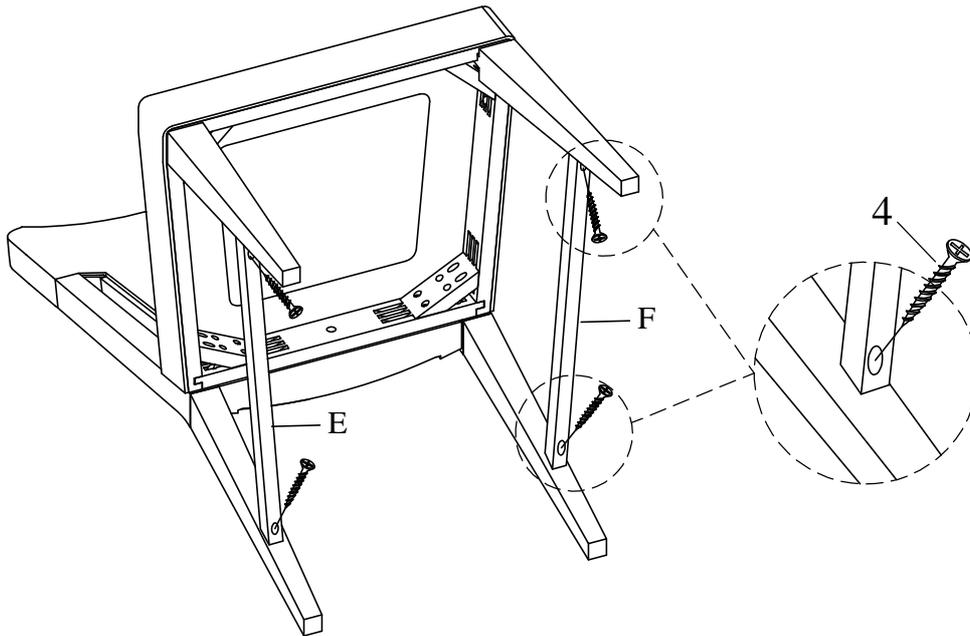

Complete Chair

