ROOMS TO GO

Assembly Instruction

Manufactured by KIZR for Rooms To Go

KIZR: 3991-260 WOOD BACK SIDE CHAIR


SKU# 42439910

Version #1 - 2024/09/09

- *** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly
- *** Note: Do not tighten all the bolts until the assembly is fully complete

| Code | PART LIST: | | |
|------|--------------|--|------|
| A | Chair Back | | 1PC |
| В | Seat Cushion | | 1PC |
| С | Leg (L) | | 1PC |
| D | Leg (R) | | 1PC |
| Е | Stretcher | | 2PCS |

| Code | HARDWARE LIST | | | |
|------|-----------------------------|----------|------|--|
| F | Allen Bolt Ø1/4"-20*1-3/4" | | 2PCS | |
| G | Nut Ø5/16"*12 | 6 | 4PCS | |
| Н | Lock washer Ø5/16"*Ø12*3 | @ | 8PCS | |
| I | Flat washer Ø5/16"*Ø19*2 | 0 | 8PCS | |
| J | Lock washer Ø1/4"*Ø12*3 | @ | 2PCS | |
| K | Flat washer Ø1/4"*Ø16*2 | 0 | 2PCS | |
| L | Allen Key 4mm | | 1PC | |
| M | Open Wrench 12mm | 2 | 1PC | |
| N | Screw 8#*1-1/2" | Q | 4PCS | |
| О | Allen Bolt Ø5/16"-18*3-1/4" | | 4PCS | |

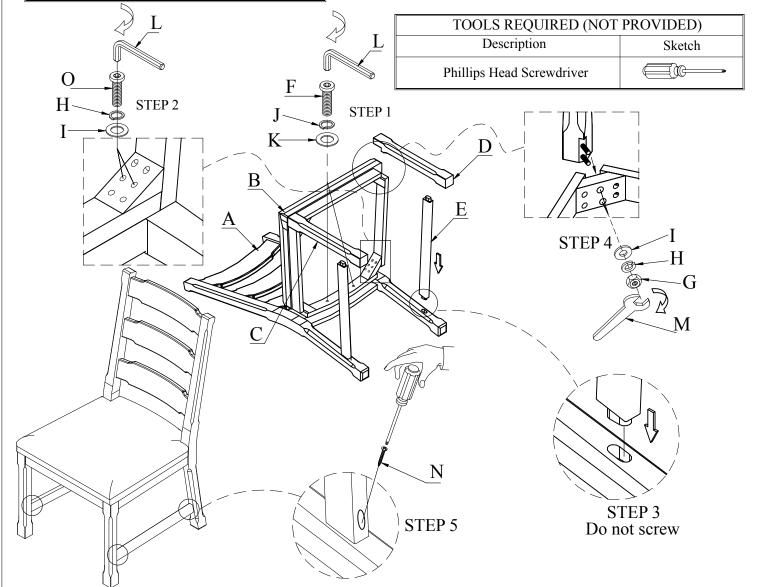

Hardware Pack Location(s):

3991-260 Wood Back Side Chair, SKU# 42439910