




ASSEMBLY INSTRUCTION


CRAM 5260-03 SIDE CHAIR SKU 42452603
CRAM 5260-11 SIDE CHAIR SKU 42652607

As pictured, place chair cushion upside down and attach leg frame with 2 short bolts in front and 2 long bolts in back (B) tighten fully

STEP1

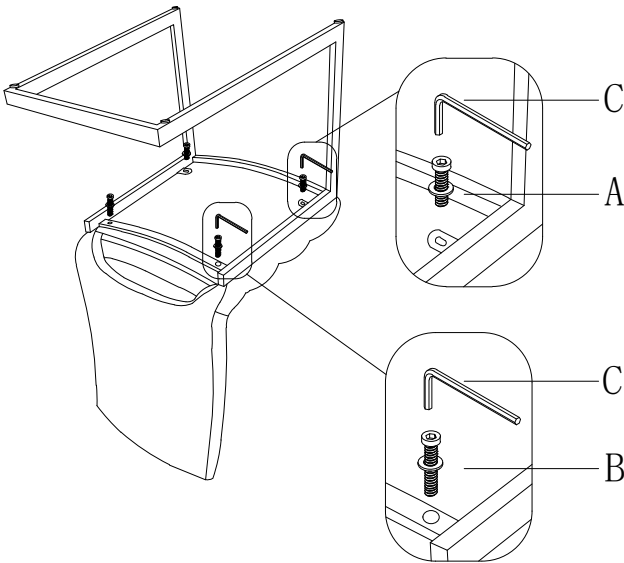

STEP2

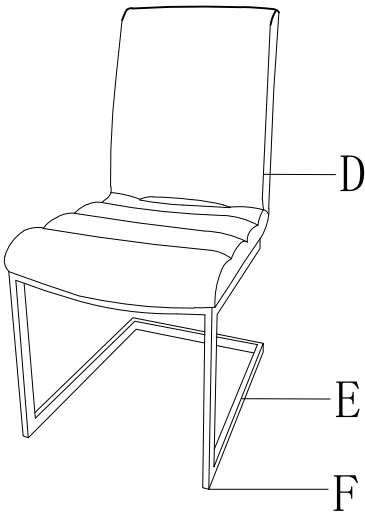

HARDWARE LIST

PARTS LIST

STEP	CODE	DESCRIPTION		QTY		NO	DESCRIPTION	SKETCH	QTY
1	A		Bolt M6*15	2pcs		D	LEG FRAME		1pc
			Washer ø18						
	B		Bolt M6*30	2pcs		E	CHAIR CUSHION		1pc
			Washer ø18						
	C		Allen Wrench 4mm	1pc		F	GLIDE (size)	 (ø16*15)	4pcs

HARDWARE PACK LOCATION : CRAM 5260-03 SIDECCHAIR SKU42452603
HARDWARE PACK LOCATION : CRAM 5260-11 SIDECCHAIR SKU42652607