

Assembly Instructions

Manufactured for Rooms To Go


HMIS D8586-03 UPHOLSTERED SIDE CHAIR

SKU # 42485866

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

Code	Parts List				
1	Chair Back	Ø	1Pc		
2	Cushion Seat		1Pc		
3	Front Legs	and the same of th	2Pcs		

Step	Code	Hardware List		
3	А	Allen Bolt - Ø5/16x18x38mm		1Pc
		Flat washer - Ø5/16x19x1.5mm		1Pc
		Lock washer - Ø5/16"		1Pc
2	В	Allen Bolt - Ø5/16x18x76mm		4Pcs
		Flat washer - Ø5/16x19x1.5mm		4Pcs
		Lock washer - Ø5/16"		4Pcs
1	С	Nut - Ø5/16"	9	4Pcs
	D	Flat washer - Ø5/16x19x1.5mm	0	4Pcs
	E	Lock washer - Ø5/16"		4Pcs
2+3	F	Allen Key - 4mm		1Pc
1	G	Wrench - Ø5/16"		1Pc

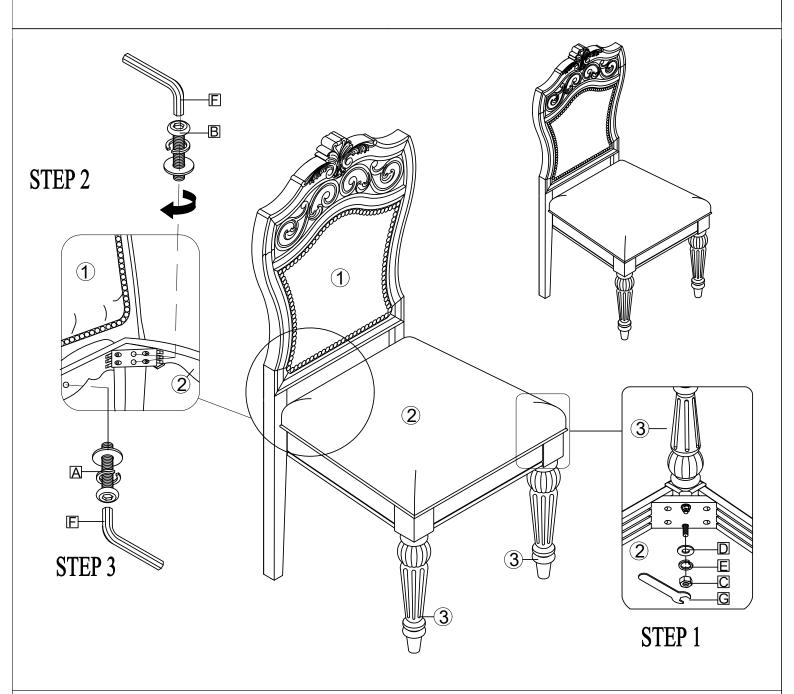

MADE IN VIETNAM 1 OF 1