

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.



PARTS LIST			
NO.	Description	Sketch	Q' TY
A	Chair Back		1 pc.
B	Seat Cushion		1 pc.
C	Front Leg (Left)		1 pc.
D	Front Leg (Right)		1 pc.
E	Stretcher (Left)		1 pc.
F	Stretcher (Right)		1 pc.

HARDWARE LIST				
NO.	Description		Sketch	Q' TY
1	Allen Head Bolt	Ø1/4"-20 x 2"		2 pcs.
	Spring Washer	Ø1/4"		
	Flat Washer	Ø1/4" x 19 x 2mm		
2	Allen Head Bolt	Ø5/16"-18 x 3-1/8"		4 pcs.
	Spring Washer	Ø5/16"		
	Flat Washer	Ø5/16" x 19 x 2mm		
3	Hex Nut	Ø5/16" x 6mm		4 pcs.
	Spring Washer	Ø5/16"		
	Flat Washer	Ø5/16" x 19 x 2mm		
4	Wrench	13mm		1 pc.
5	Allen Key	4mm		1 pc.
6	Wood Screw	Ø4x45mm		4 pcs.
Tool Required (Not provided) Phillips Screwdriver				

Remarks : DO NOT tighten all bolts and Screws until the assembly is completed

Step 1 : Install seat cushion (B) to chair back (A) by using the bolts (1) to attach

Step 2 : Install seat cushion (B) to chair back (A) by using the bolts (2) to attach

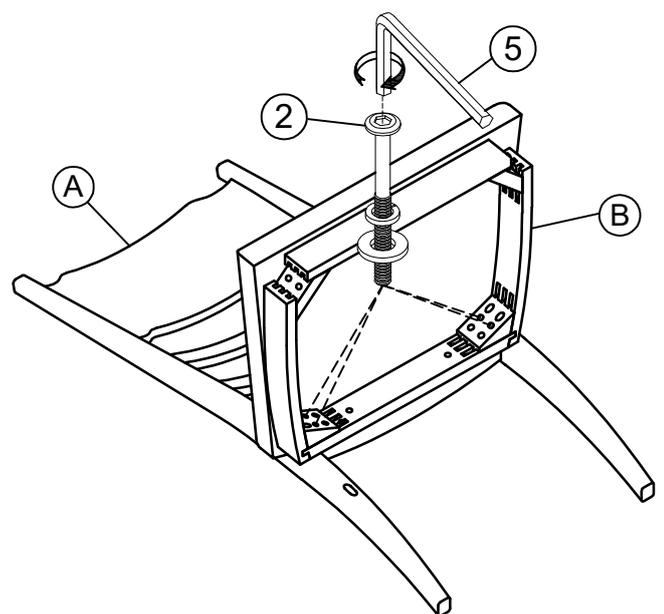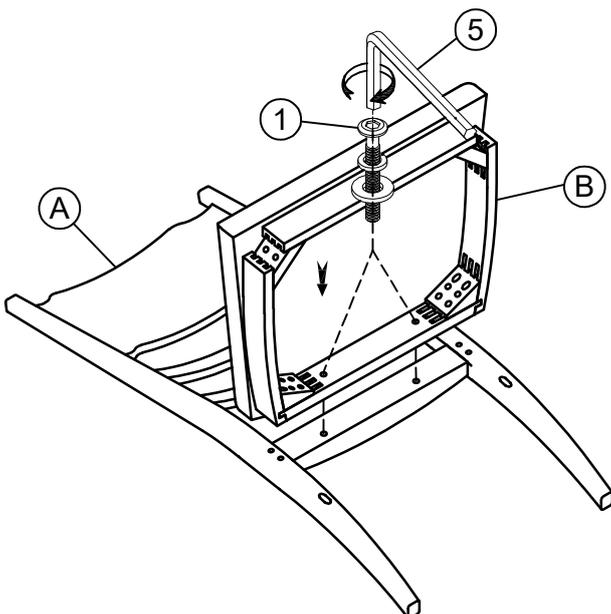


Hardware Pack Location:

Inside Box: RVID 9410-57: LADDER BACK SIDE CHAIR


SKU: 42494106

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

Step 3 : Install Stretcher (E & F) to chair back (A) by using Screws (6) to attach

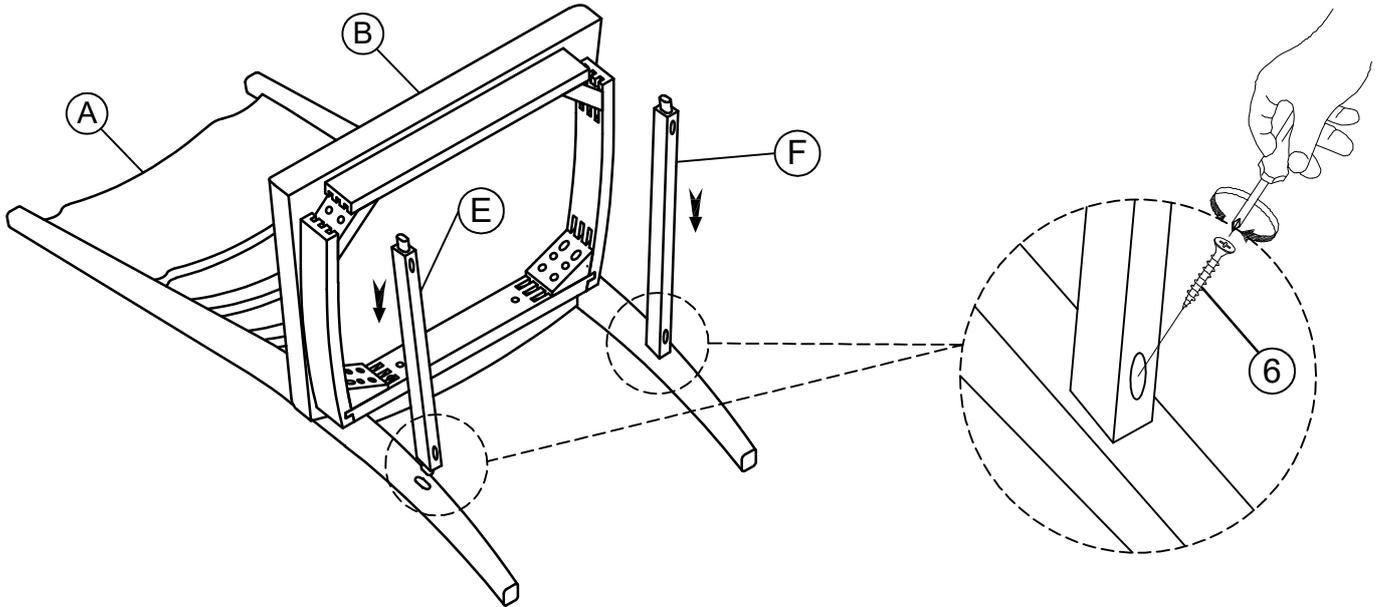

Step 4: Install front Legs (C & D) to Seat Cushion (B) by using Hex nut (3) and then attach the Stretcher (E & F) to front legs (C & D) by using Screws (6) to attach

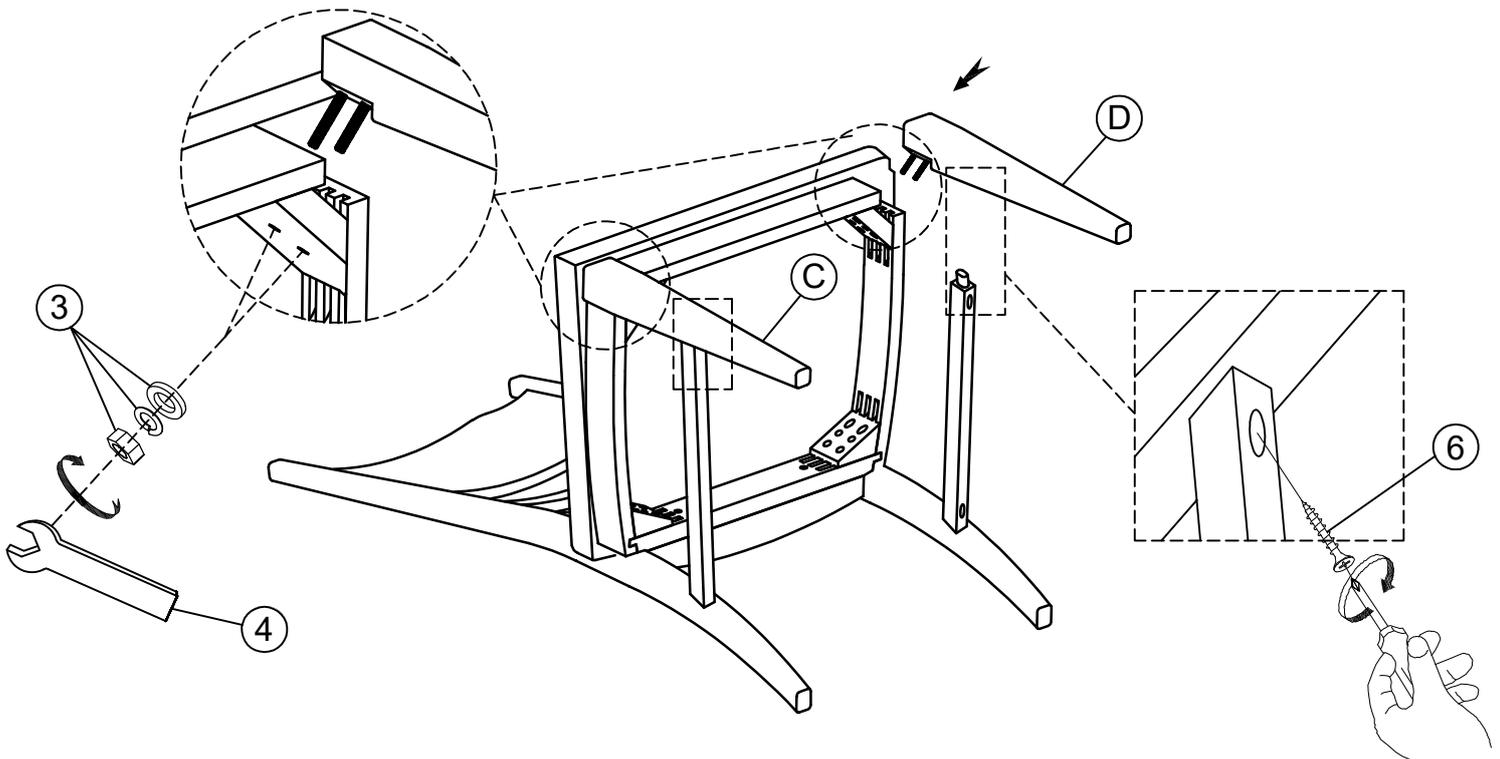


Hardware Pack Location:

Inside Box: RVID 9410-57: LADDER BACK SIDE CHAIR

SKU: 42494106

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

Completed

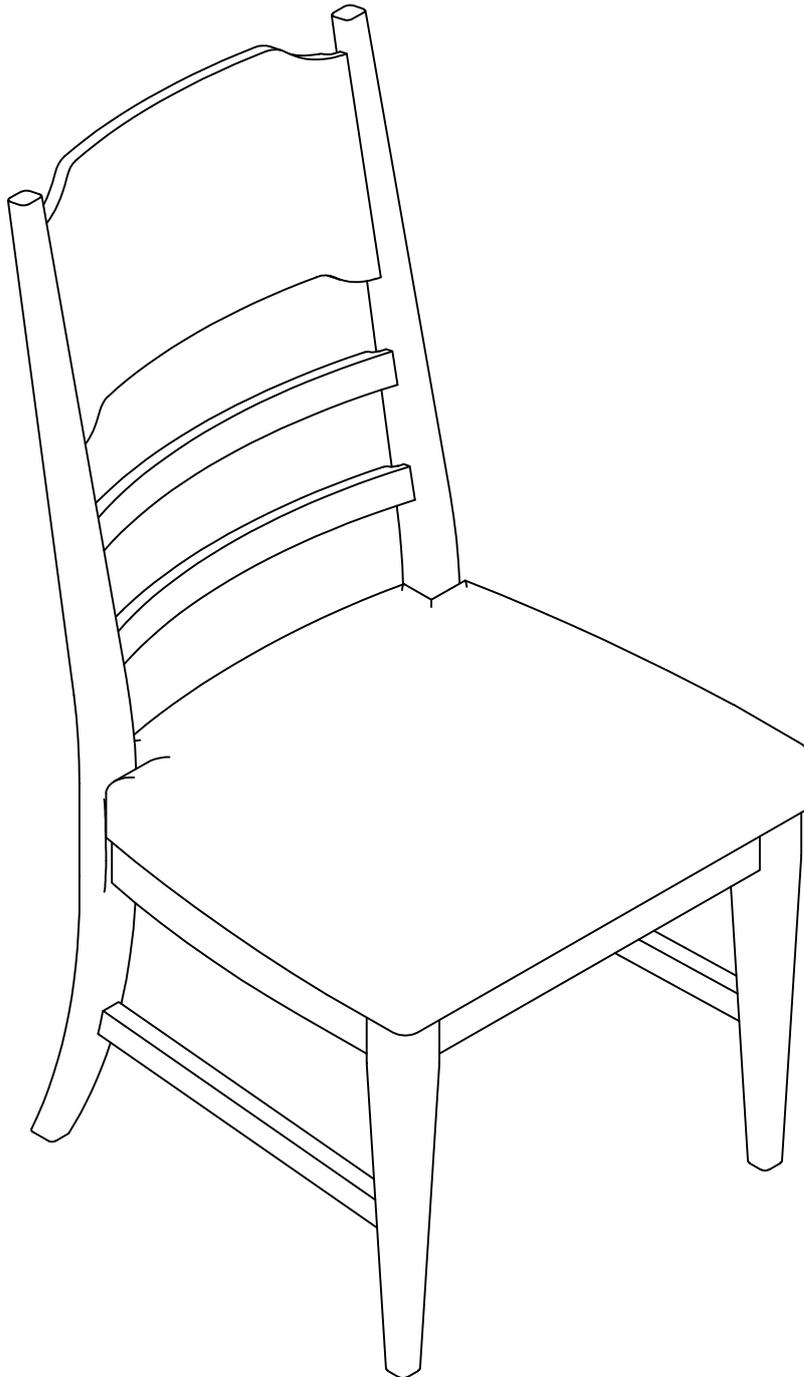

Hardware Pack Location:

Inside Box: RVID 9410-57: LADDER BACK SIDE CHAIR

SKU: 42494106