ROOMS TO GO. Manufactured by PNWD for Rooms To Go.

4.

Assembly Instructions

PNWD

1733-HC HOST CHAIR - SKU#42517334 1533-HC HOST CHAIR - SKU#42515330

Version #1 -2024/07/05

Step	Code	Hardware		Q'TY
	Α	Allen key 4mm dia.		1 Pc
1	В	Bolt 5/16" x 18 x 2 1/8"		4 Pcs
		Spring Washer 5/16" x 19 x 2mmT		
		Flat Washer 5/16" x 11 x 2mmT		
2	С	Wood Screws 5/32" x 1 3/4"	Accessed (1)	2 Pcs
3	В	Bolt 5/16" x 18 x 2 1/8"	0	4 Pcs
		Spring Washer 5/16" x 19 x 2mmT		
		Flat Washer 5/16" x 11 x 2mmT		
	С	Wood Screws 5/32" x 1 3/4"	-accacaca_{\right\}	2 Pcs


Tool Required: Phillips screwdriver (not provided)



1. Seat Frame With Back - 1 Pc



2. Left Back Legs - 1 Pc



3. Right Back Legs - 1 Pc



4. Left Front Legs - 1 Pc



5. Right Front Legs - 1 Pc



6. Left Side Stretchers - 1 Pc



7. Right Side Stretchers - 1 Pc

HARDWARE PACK FOR 2 PCS HOST CHAIR LOCATION(S):

PNWD 1733-HC HOST CHAIR - SKU#42517334 1533-HC HOST CHAIR - SKU#42515330

PAGE 10F2

ROOMSTO GOD Manufactured by PNWD for Rooms To Go.


Assembly Instructions

DNIMD


1733-HC HOST CHAIR - SKU#42517334 1533-HC HOST CHAIR - SKU#42515330

Version #1 -2024/07/05


***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

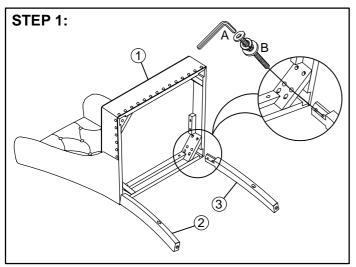


Attach the back legs to the seat frame with back Note: Do not tighten all screws & bolts until the seat is fully assembled.

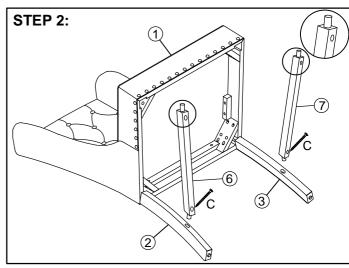

Attach the side stretchers to the back legs.

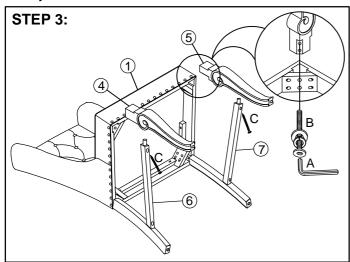

Attach the front legs to side stretcher and seat. Secure the side stretchers to the front legs.

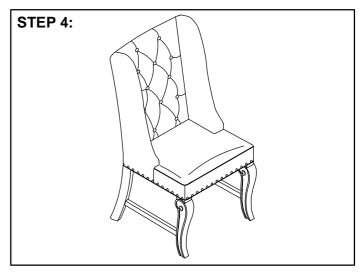

Turn host chair to the upright position, apply firm pressure to align and fully tighten all bolts and screws.

PAGE 20F2