




ASSEMBLY INSTRUCTION

GLOB : 2360D-4S WOOD BACK SIDE CHAIR SKU #:42523604

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.


No.	Description	Drawing	Q'ty	No.	Description	Drawing	Q'ty	No.	Description	Drawing	Q'ty
1	Chair Back		1	2	Front legs		2	3	Seat		1

STEP 1

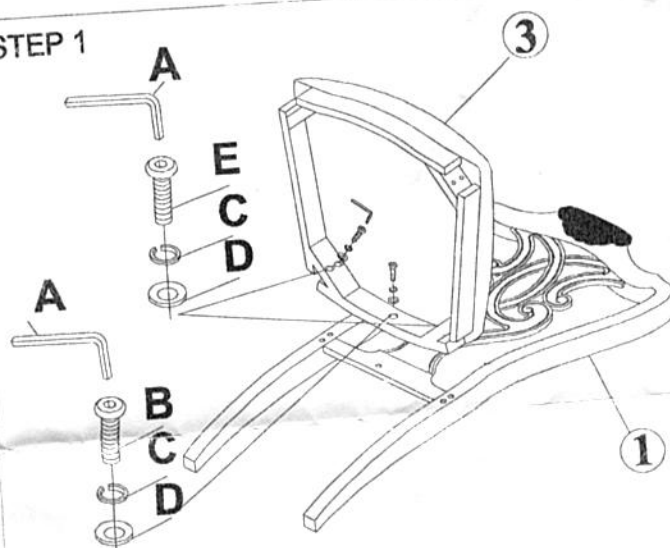

Attach the seat to the chair back, corner using bolts (E), spring washer (C), flat washer (D) and allen key (A). center using bolts (B), spring washer (C), flat washer (D) and allen key (A).

STEP 2

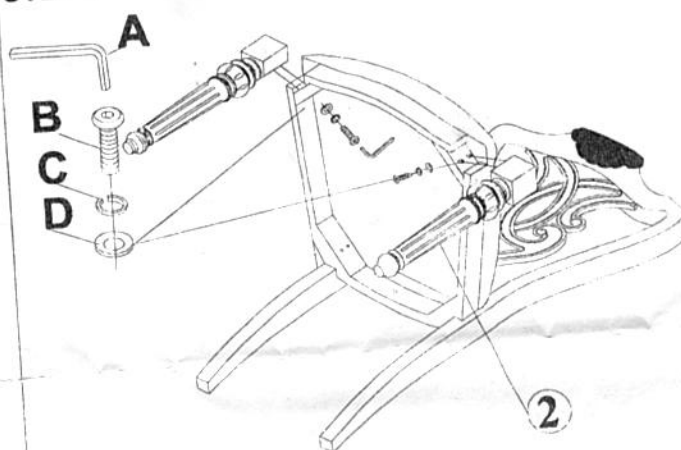

Attach Front legs to the seat, using bolts (B), spring washer (C), flat washer (D) and allen key (A).

Note: Do not tighten all bolts until the seat is fully assembled.

Hardware List

Step	Code	Hardware	Q'ty
	A	Allen key 4 x 57 x 23mm	1
1	B	Bolt 5/16" x 18 x 2"	1Pc
1	C	Spring washer 5/16" x 11 x 2mm	1Pc
1	D	Flat Washer 5/16" x 19 x 2mm	1Pc
1	E	Bolt 5/16" x 18 x 3 1/4"	4Pcs
1	C	Spring washer 5/16" x 11 x 2mm	4Pcs
1	D	Flat Washer 5/16" x 19 x 2mm	4Pcs
2	B	Bolt 5/16" x 18 x 2"	4Pcs
2	C	Spring washer 5/16" x 11 x 2mm	4Pcs
2	D	Flat Washer 5/16" x 19 x 2mm	4Pcs

Hardware pack location (s) :
wood back side chair, SKU #:42523604

