



# Assembly Instructions

## PHOM 6116 CURVED DINING BENCH


This product is manufactured by PHOM for Rooms To Go

SKU# 42561161


### Hardware List:

Step	Code	Component	Qty
	1	Allen Wrench M4 X 55mm	1 Pc
1	2	JCBC Bolt With Washer 5/16" X 18T X 2"	8 Pcs
		Spring Washer 1/16" X 13mm	8 Pcs
		Flat Washer 1/16" X 18mm	8 Pcs
2	2	JCBC Bolt With Washer 5/16" X 18T X 2"	2 Pcs
		Spring Washer 1/16" X 13mm	2 Pcs
		Flat Washer 1/16" X 18mm	2 Pcs
	3	Chipwood Screw #10 X 11T X 1 1/2"	4 Pcs


### Parts List:

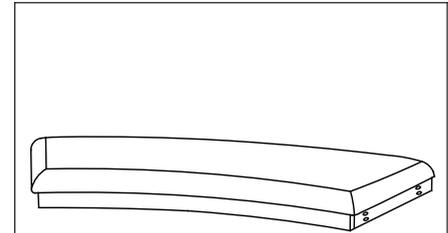


A. Cushion Seat With Frame 1Pc

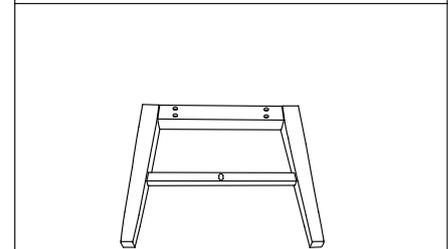


B. Side Leg 2Pcs



C. Center Leg 1Pc




D. Left Stretcher 1Pc



E. Right Stretcher 1Pc

1. We recommend that you should assemble this product with the assistance of another person, this will make assembly easier and will eliminate damage to the product or injury to person during assembly.
2. Please do not over tighten bolts until assembly in complete.
3. Please put all parts on a non-abrasive floor before assembly, and follow assembly steps to assemble your newly purchased product correctly and efficiently.

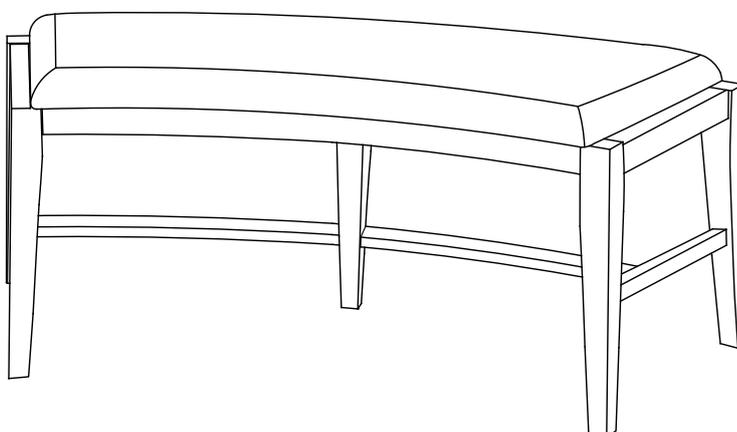

### Hardware Pack Location(s):

BENCH SKU# 42561161



# Assembly Instructions


## PHOM 6116 CURVED DINING BENCH

This product is manufactured by PHOM for Rooms To Go

SKU# 42561161


**\*\*\*Cautions: Please read all instructions carefully before starting the assembly. These parts are cumbersome and heavy. Therefore two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly. Do not fully tighten the bolts initially until all the bolts are in place. To avoid causing damages to the thread, do not over tighten the bolts.**

### STEP 1:

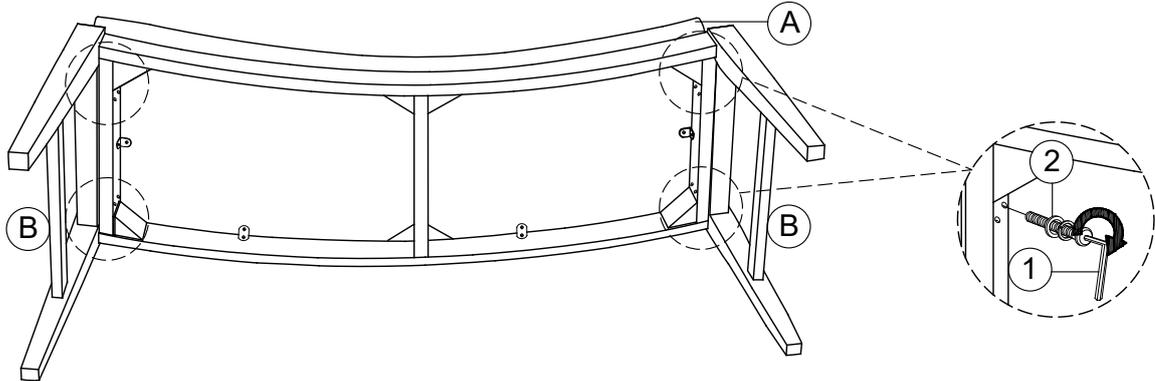

Attach Side Leg to Cushion Seat With Frame, with JCBC Bolt and Washers using Allen Wrench.


### STEP 2:

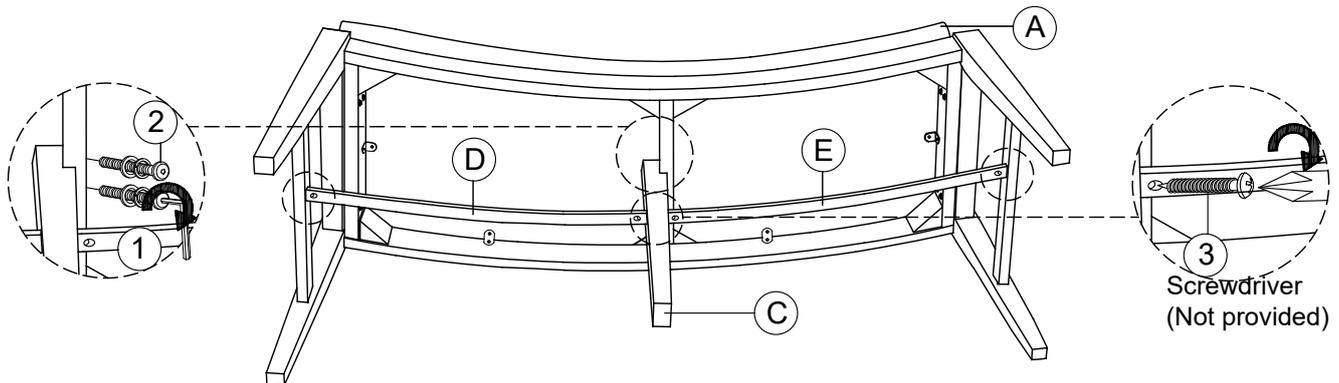

Attach Center Leg to Cushion Seat With Frame, with JCBC Bolt and Washers.

Attach Left and Right Stretchers to Side Leg and Center Leg, then use Chipwood Screws to lock the Stretchers in place. Finally, tighten all JCBC Bolts using Allen Wrench.

### STEP 3:

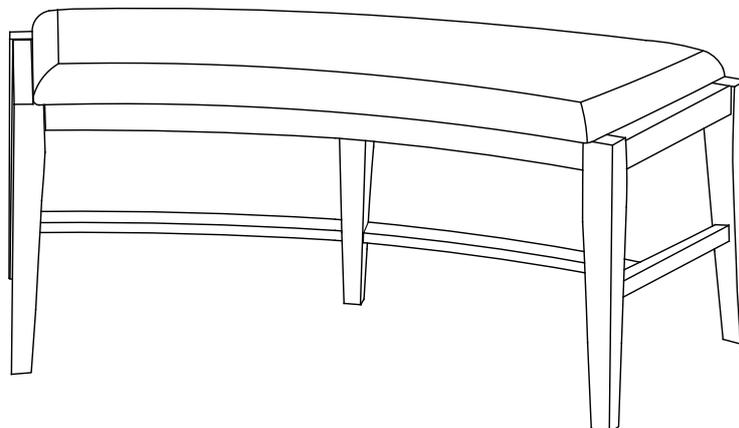

Turn the Bench to upright position carefully. Assembly completed.