

Manufactured for Rooms To Go


Assembly Instructions

HMIS D8586-13 WOODBACK SIDE CHAIR SKU # 42585868

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Code	Parts List				
1	Chair Back	A	1Pc		
2	Cushion Seat		1Pc		
3	Front Legs	0 D	2Pcs		

Step	Code	Hardware List		
		Allen Bolt - Ø5/16x18x85mm		4Pcs
2	Α	Flat washer - Ø5/16x19x1.5mm		4Pcs
		Lock washer - Ø5/16"		4Pcs
3	В	Allen Bolt - Ø1/4x20x38mm	- 🗪	1Pc
		Flat washer - Ø1/4x12x1.5mm		1Pc
		Lock washer - Ø1/4"		1Pc
1	С	Nut - Ø5/16"	9	4Pcs
	D	Flat washer - Ø5/16x19x1.5mm	٥	4Pcs
	Е	Lock washer - Ø5/16"	•	4Pcs
	F	Wrench - Ø5/16"	<i>[</i> **	1Pc
2+3	G	Allen Key - 4mm		1Pc

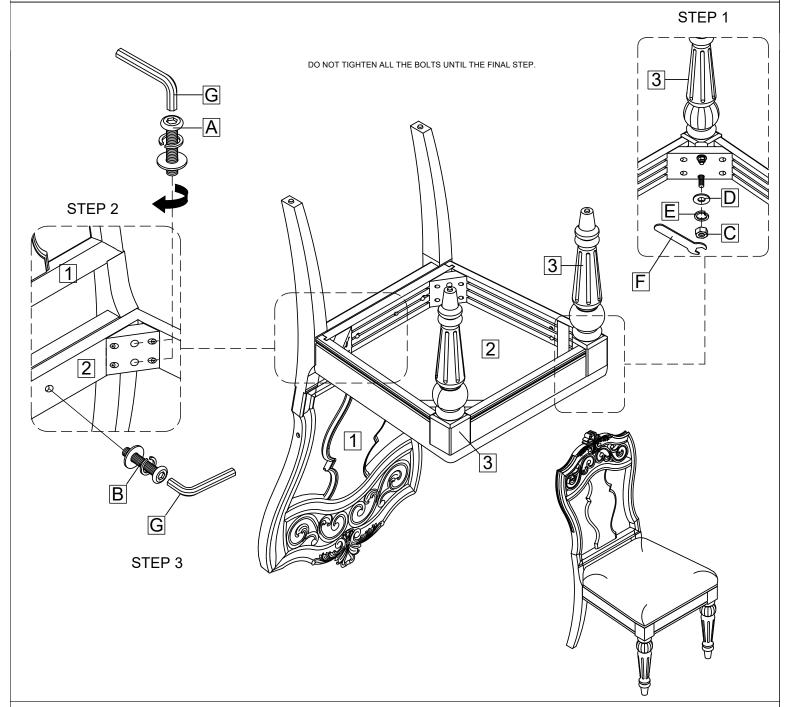

MADE IN VIETNAM 1 OF 1