

ASSEMBLY INSTRUCTIONS MODEL: 3277-6, 3278-6, 3279-6 UPH SIDE CHAIR


Manufactured by FFLA for Rooms To Go

SKU#42632770, 42632782, 42632794


Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

CAUTIONS:

- 1. Check contents against list for quantity.
- 2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
- 3. Do not over tightened the screws and bolts as it may damage the threads.
- 4. Keep all hardware parts out of the reach of children.
- 5. Please "LIFT UP & MOVE" the chair when ever you want to shift it.

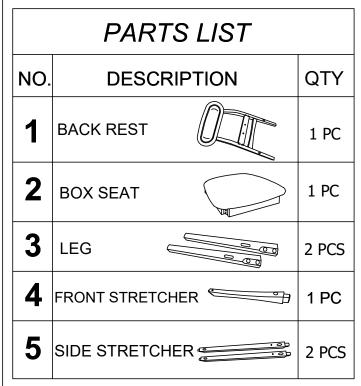

HARDWARE PACK LOCATION:

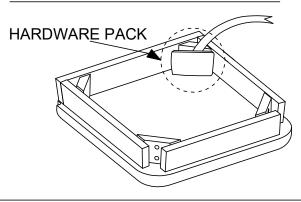

HARDWARE LIST			
NO.	DESCRIPTION		QTY
A	JCBB M8 x P1.25 x 70MM		4 PCS
	FLAT WASHER M8 x 22MM		4 PCS
	SPRING WASHER M8		4 PCS
В	JCBB M8 x P1.25 x 60MM	9	4 PCS
	FLAT WASHER M8 x 22MM		4 PCS
	SPRING WASHER M8		4 PCS
С	JCBB M8 x P1.25 x 35MM		2 PCS
	FLAT WASHER M8 x 22MM		2 PCS
	SPRING WASHER M8		2 PCS
D	CHIPBOARD SCREW M4 X 38MM	Samming.	6 PCS
E	ALLEN KEY M4		1 PC
F	PHILIPS HEAD SCREW DRIVER (NOT INCLUDED)		1 PC


PAGES 1 OF 3



ROOMS ASSEMBLY Insuructions MODEL: 3277-6, 3278-6, 3279-6 UPH SIDE CHAIR


anufactured by FFLA for Rooms To Go

SKU#42632770, 42632782, 42632794

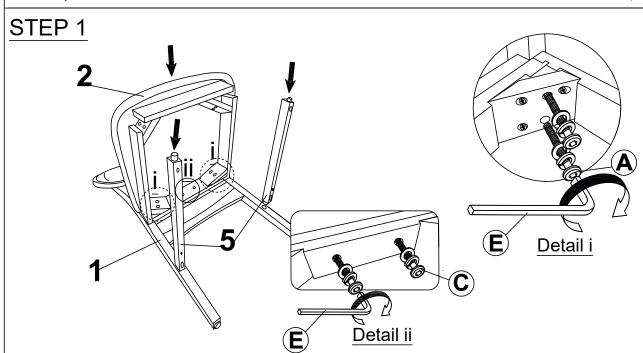

- a) Attached the box seat (2) to back rest (1) and use JCBB Bolt (A) to tighten the left & right holes on corner block of (2).
- b) Use JCBB Bolt (C) to tighten both of the center holes on bottom of (2) as shown.
- c) Insert the side stretcher (5) into the holes at bottom of (1).



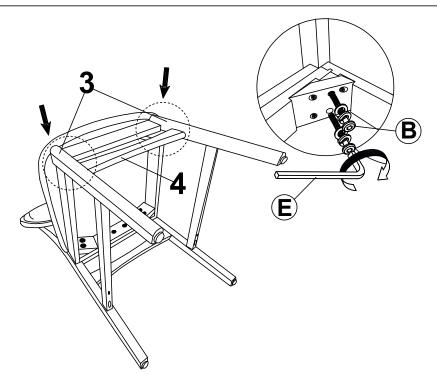

- a) Fit the front stretcher (4) into the holes between Left & Right front leg (3) as shown.
- b) Attach the (3) to the front of box seat, use JCBB Bolt (B) to tighten the left & right holes on corner block of (2).

PAGES 2 OF 3




MS ASSEMBLY INSTRUCTIONS MODEL: 3277-6, 3278-6, 3279-6 UPH SIDE CHAIR


Manufactured by FFLA for Rooms To Go

SKU#42632770, 42632782, 42632794

STEP 3

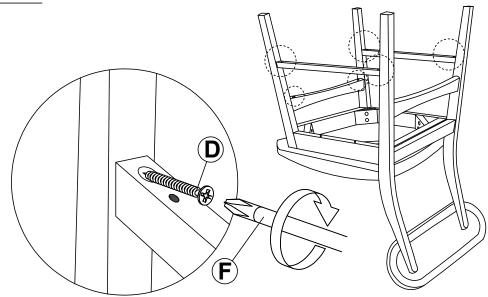

- a) Position the leg facing up as shown, use Chipboard Screw (D) to fasten all stretcher to the front legs and back legs.
- b) Set the chair right-side up.

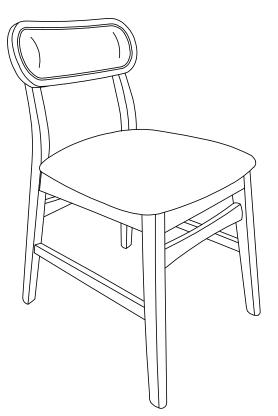

The assembly of chair is completely.

PAGES 3 OF 3