












This product is manufactured by CAVS for **Rooms To Go**


\*\*\* Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

\*\*\* Remark: DO NOT fully tighten all bolts until assembly is completed.

| Code | PARTS LIST :             |   |     |
|------|--------------------------|---|-----|
| A    | Chair back (Upholstered) |  | 1Pc |
| B    | Seat frame               |  | 1Pc |
| C    | Front leg (left)         |  | 1Pc |
| D    | Front leg (right)        |  | 1Pc |
| E    | Side Stretcher (left)    |  | 1Pc |
| F    | Side Stretcher (right)   |  | 1Pc |

| Code   | HARDWARE LIST                    |   |      |
|--|----------------------------------|---|------|
| 1  | Ø1/4" x 19*2mm Flat Washer       |            | 1Pc  |
|  | Ø1/4" Spring Washer              |   | 1Pc  |
|  | Ø1/4" x 20 x 2" Allen Head Bolt  |   | 1Pc  |
| 2  | Ø5/16" x 19*2mm Flat Washer      |            | 8Pcs |
|  | Ø5/16" Spring Washer             |   | 8Pcs |
|  | Ø5/16" x 18 x 3" Allen Head Bolt |   | 8Pcs |
| 3  | 4mm Allen Key                    |            | 1Pc  |
| 4  | #8 x 1-1/2" Screw                |  | 4Pcs |
| Tool Required (not provided)   |                                  |   |      |
|  |                                  | Phillip Screwdriver   |      |

## STEP 1

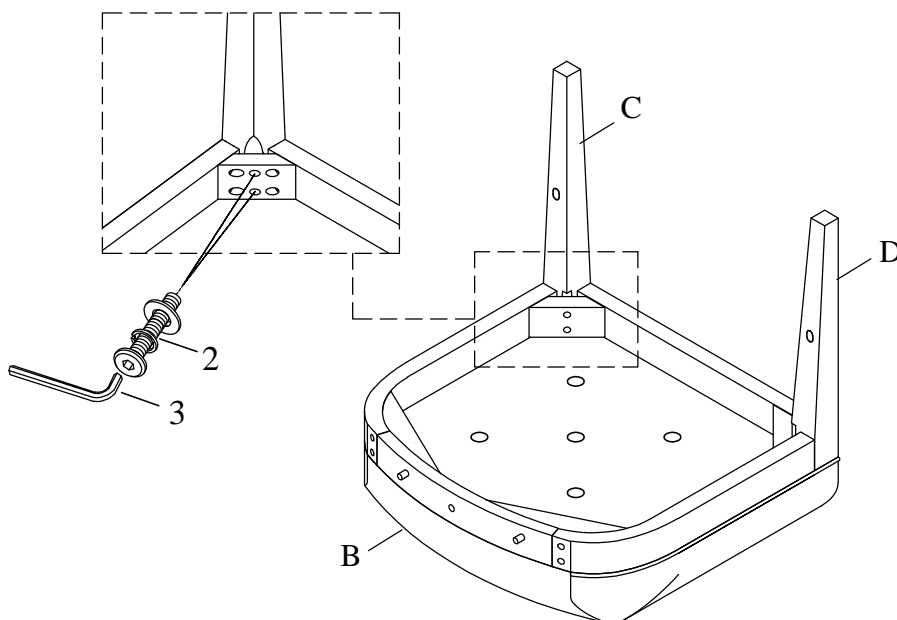

### Hardware Pack Location (s):


3770-274 - Upholstered Back Side Chair , SKU: 42637720

This product is manufactured by CAVS for **Rooms To Go**


\*\*\* Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

\*\*\* Remark: DO NOT fully tighten all bolts until assembly is completed.

## STEP 2

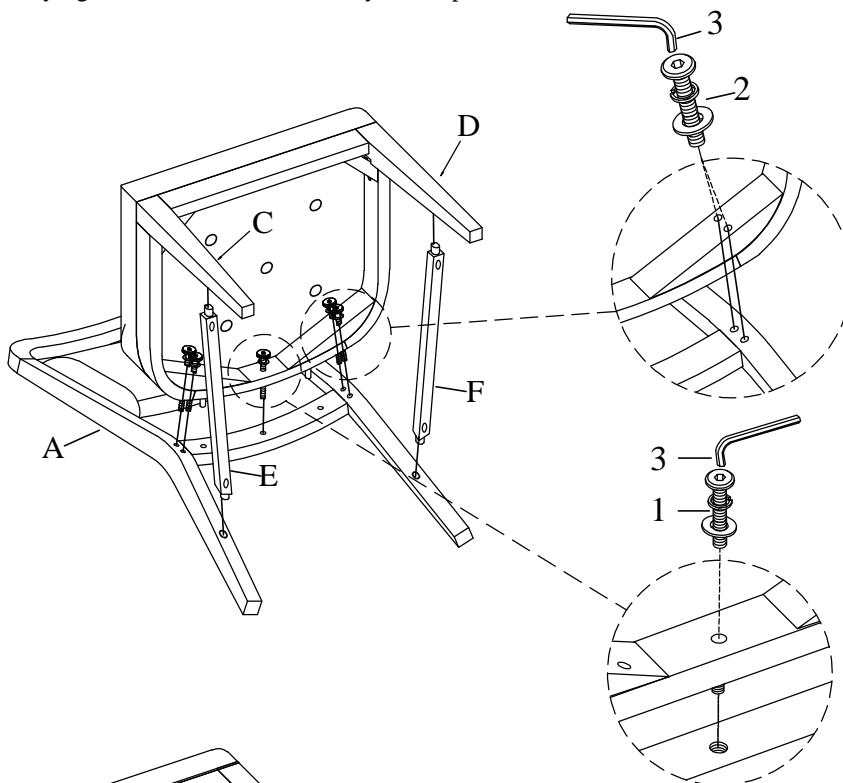

## STEP 3

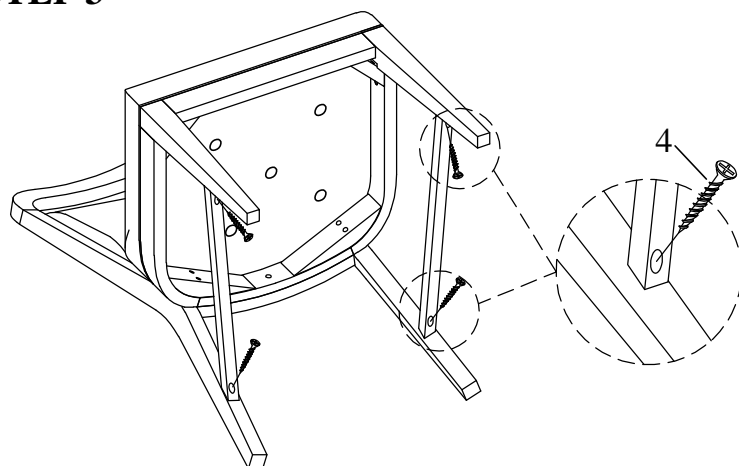

Complete

