Manufactured by (CRAM) for Rooms To Go


ASSEMBLY INSTRUCTION

CRAM 5265-01 SIDE CHAIR SKU42452653


CRAM 5265-03 SIDE CHAIR SKU42452657

NOTE:IN EACH STEP MAKE SURE TO HAND START ALL BOLTS BEFORE TIGHTENING.

STEP1

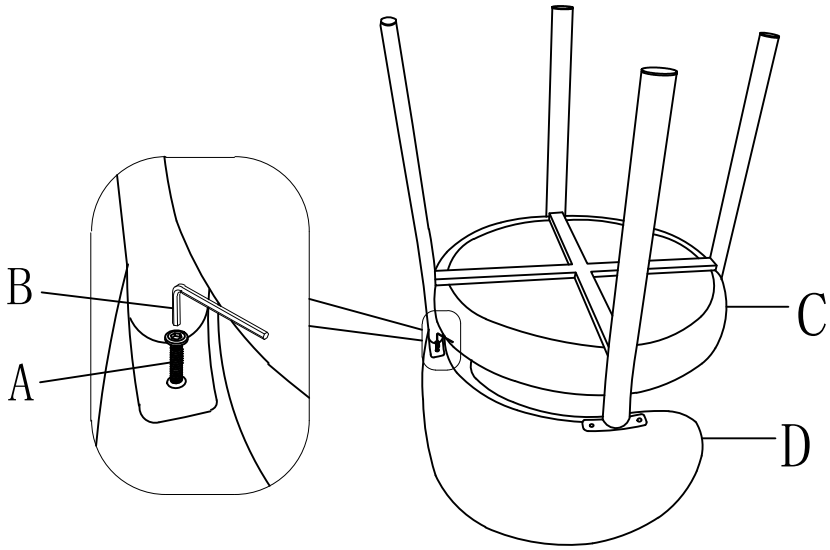

ATTACH THE BACK CUSHION
TO THE LEG FRAME WITH BOLT A AS PICTURED

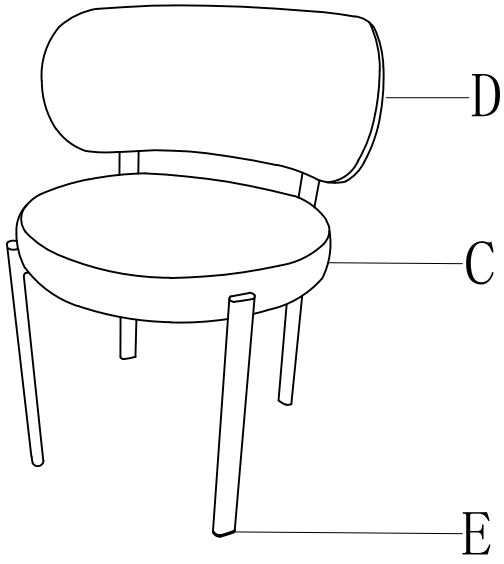

HARDWARE LIST

STEP	CODE	DESCRIPTION		QTY
1	A		Bolt M6*25	4pcs
2	B		Allen Wrench 4mm	1pc

PARTS LIST

NO	DESCRIPTION	SKETCH	QTY
C	LEG FEAME WITH CUSHION		1pc
D	BACKREST		1pc
E	GLIDE (size)	(20*40)	4pcs

HARDWARE PACK LOCATION : CRAM 5265-01 SIDECHAIR SKU42452653

HARDWARE PACK LOCATION : CRAM 5265-03 SIDECHAIR SKU42652657

Version 1#-Date Created:2026-4-20