



THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

| PARTS LIST | | | |
|-------------------|-------------------|---|-------|
| NO. | Description | Sketch | Q' TY |
| A | Chair Back |  | 1 pc. |
| B | Seat Cushion |  | 1 pc. |
| C | Front Leg (Left) |  | 1 pc. |
| D | Front Leg (Right) |  | 1 pc. |
| E | Stretcher (Left) |  | 1 pc. |
| F | Stretcher (Right) |  | 1 pc. |


| HARDWARE LIST | | | |
|---|---|---|---|
| NO. | Description | Sketch | Q' TY |
| 1 | Allen Head Bolt Spring Washer Flat Washer |  | 2 pcs. |
| 2 | Allen Head Bolt Spring Washer Flat Washer |  | 4 pcs. |
| 3 | Hex Nut Spring Washer Flat Washer |  | 4 pcs. |
| 4 | Wrench |  | 1 pc. |
| 5 | Allen Key |  | 1 pc. |
| 6 | Wood Screw |  | 4 pcs. |
| 7 | Upholstery Tack |  | 6 pcs. |
| Tool Required (Not provided) Phillips Screwdriver | | |  |

Remarks : DO NOT tighten all bolts and Screws until the assembly is completed

Step 1 : Install seat cushion (B) to chair back (A) by using the bolts (1) to attach

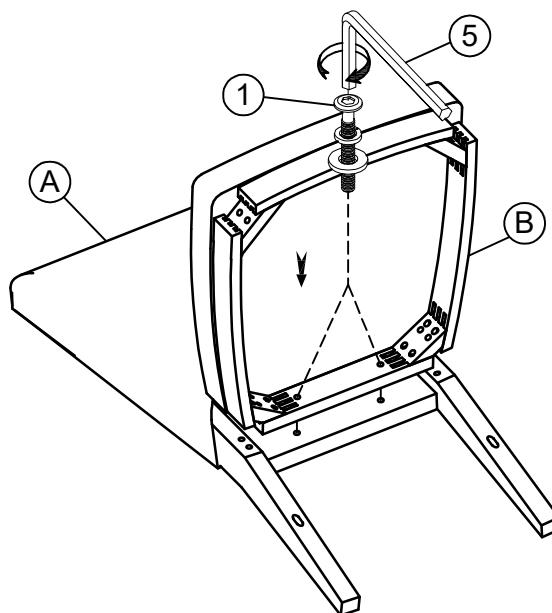

Step 2 : Install seat cushion (B) to chair back (A) by using the bolts (2) to attach

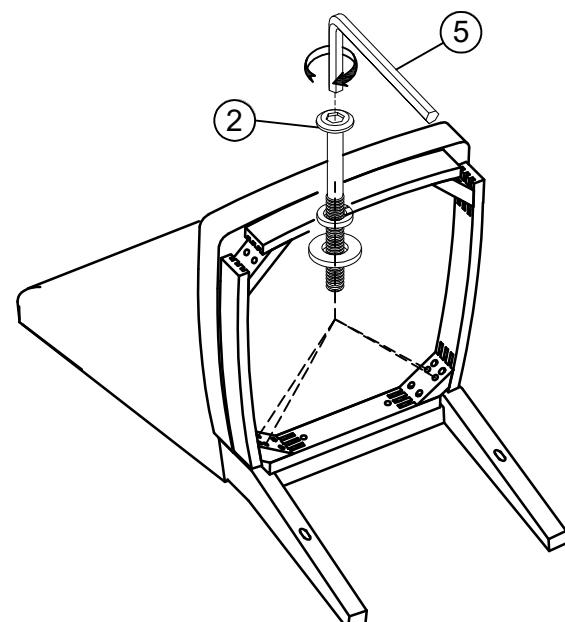


Hardware Pack Location:

Inside Box: RVID 9410-58: UPHOLSTERED SIDE CHAIR


SKU: 42694100

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

Step 3 : Install Stretcher (E & F) to chair back (A) by using Screws (6) to attach

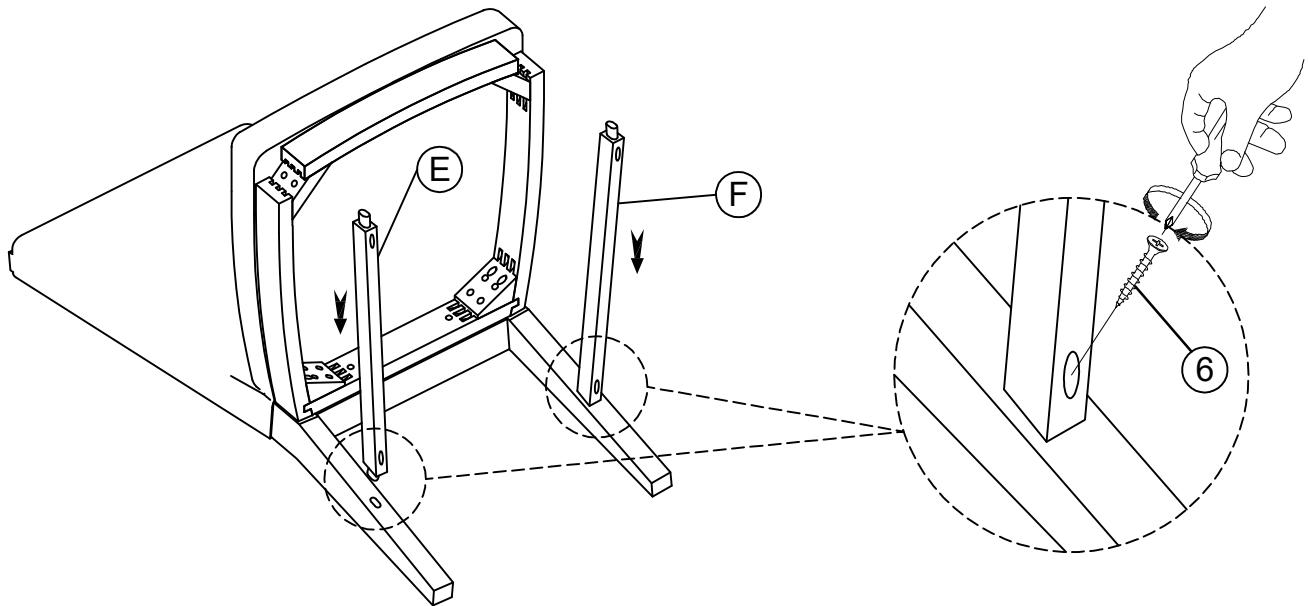

Step 4: Install front Legs (C & D) to Seat Cushion (B) by using Hex nut (3) and then attach the Stretcher (E & F) to front legs (C & D) by using Screws (6) to attach

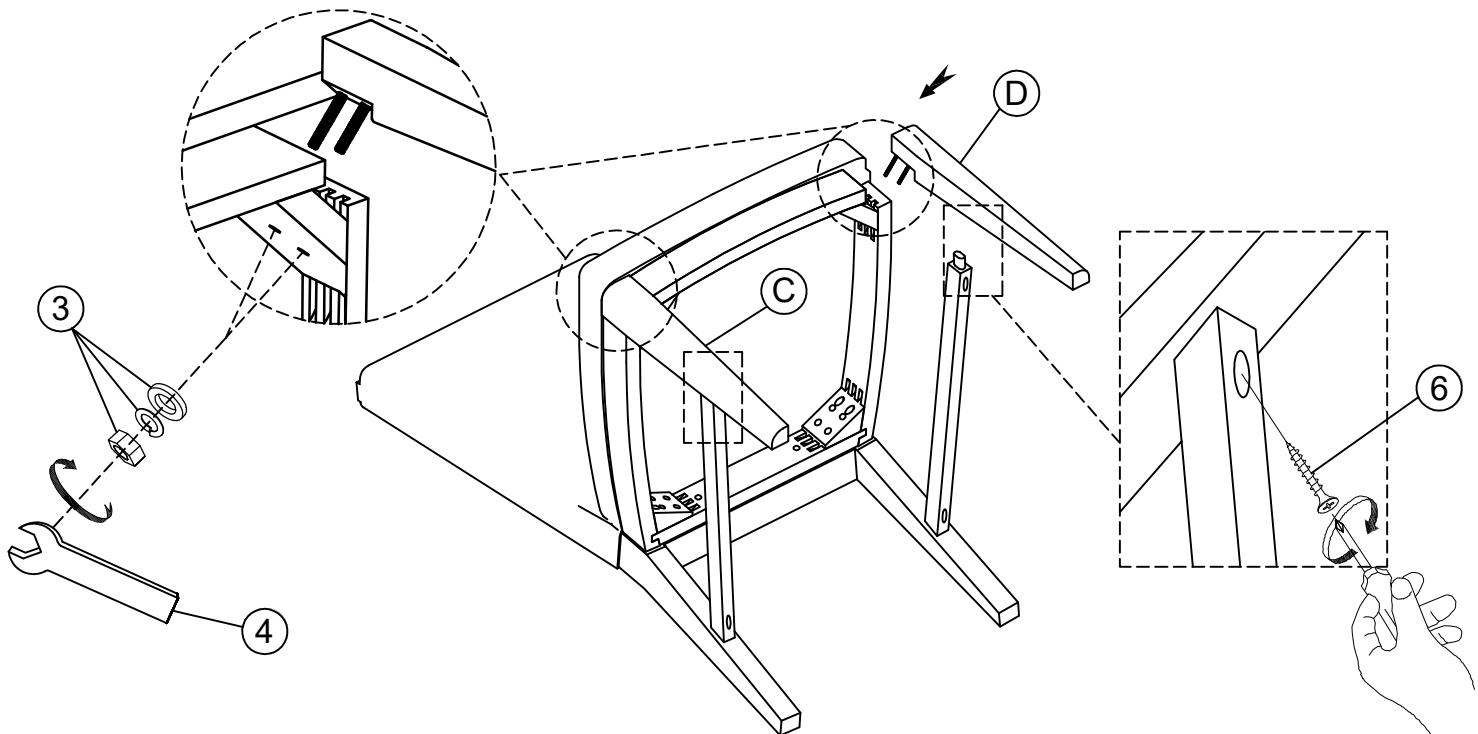


Hardware Pack Location:

Inside Box: RVID 9410-58: UPHOLSTERED SIDE CHAIR

SKU: 42694100

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

Completed

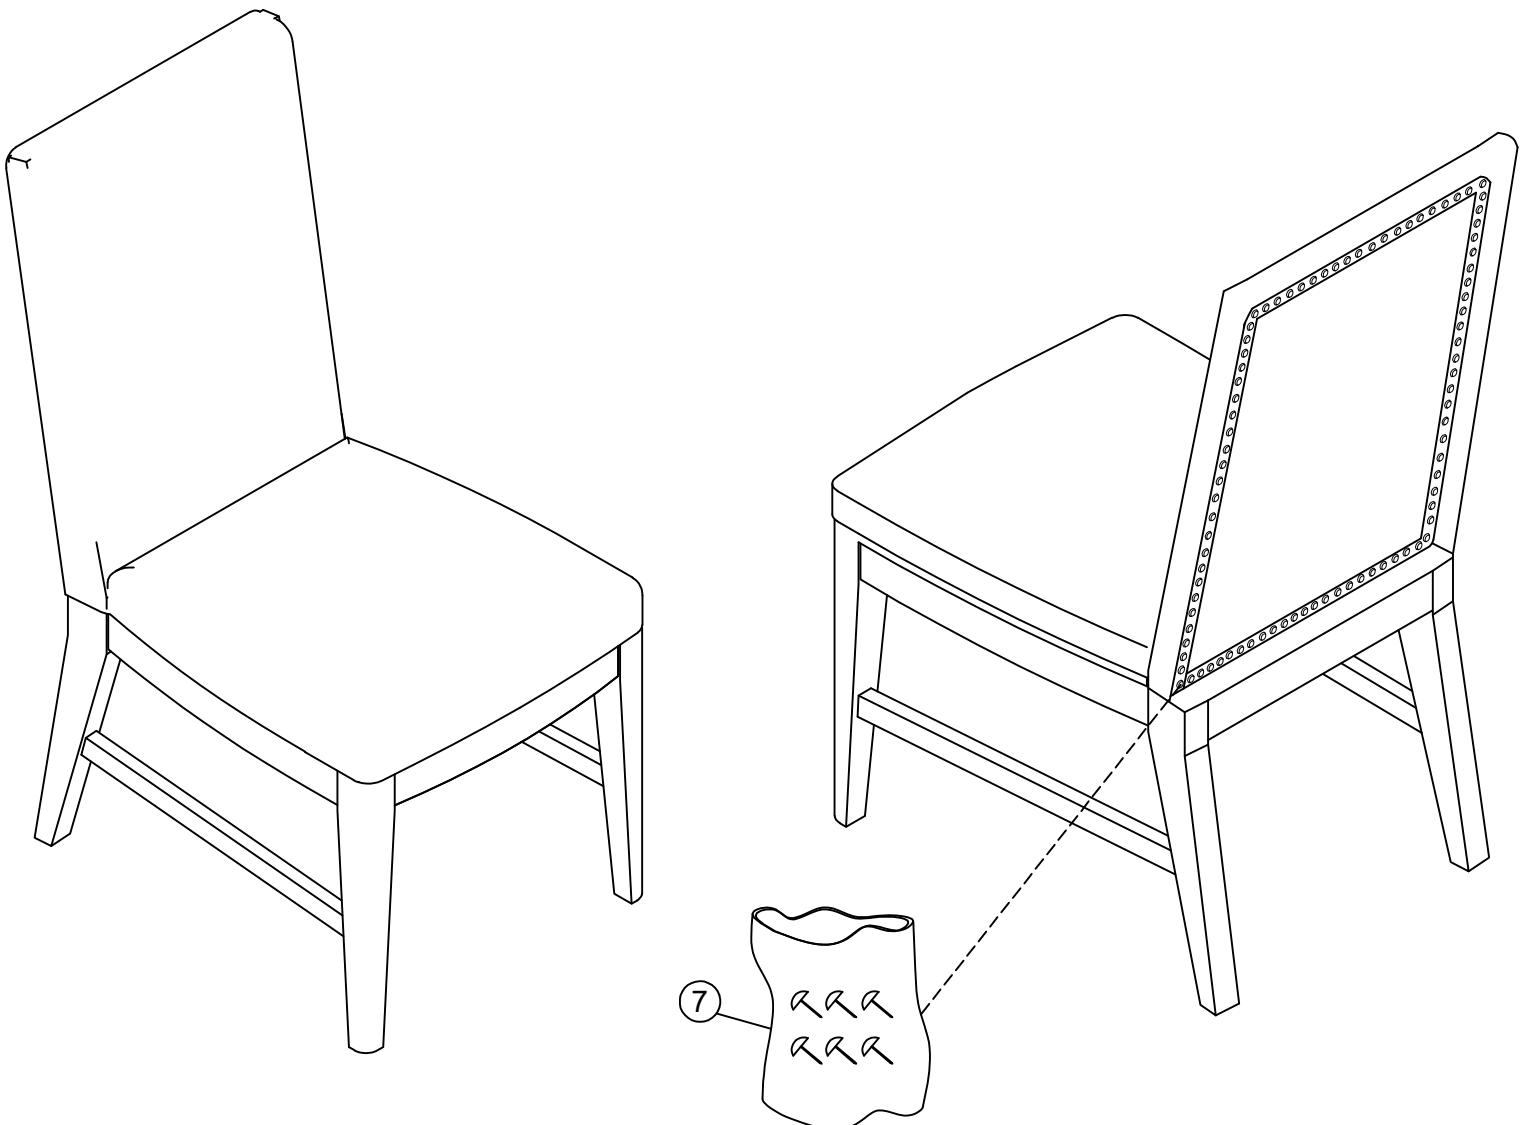

If a tack comes loose, use a hammer to tap it back into place or replace it with a new one.

Hardware Pack Location:**Inside Box: RVID 9410-58: UPHOLSTERED SIDE CHAIR****SKU: 42694100**