


Assembly Instructions


BFGP 339-524N

SIDE BOARD


SKU# 42903395

STEP	CODE	HARDWARE		Q'TY
1,2	A		Jcbc bolt 5/16"-18 * 2-1/2"	12PCS
			Lock washer 5/16"	12PCS
			Flat washer 5/16"x19mm*1mm	12PCS
1,2	B		Jcbc bolt 1/4"-20 * 1"	6PCS
			Lock washer 1/4"	6PCS
			Flat washer 1/4"x19mm*1mm	6PCS
	C		Allen key 4mm	1PC
4	D		Furniture Tipping Restraint (Not included screwdriver)	1SET


PART LISTS

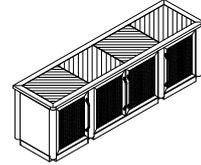


1. Side board - 1 PC

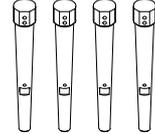

2. Legs-front/back - 4 PCS




3. Middle legs - 2 PCS

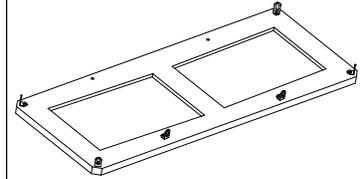

4. Shelf - 1 PC



5. Support legs - 2 PCS

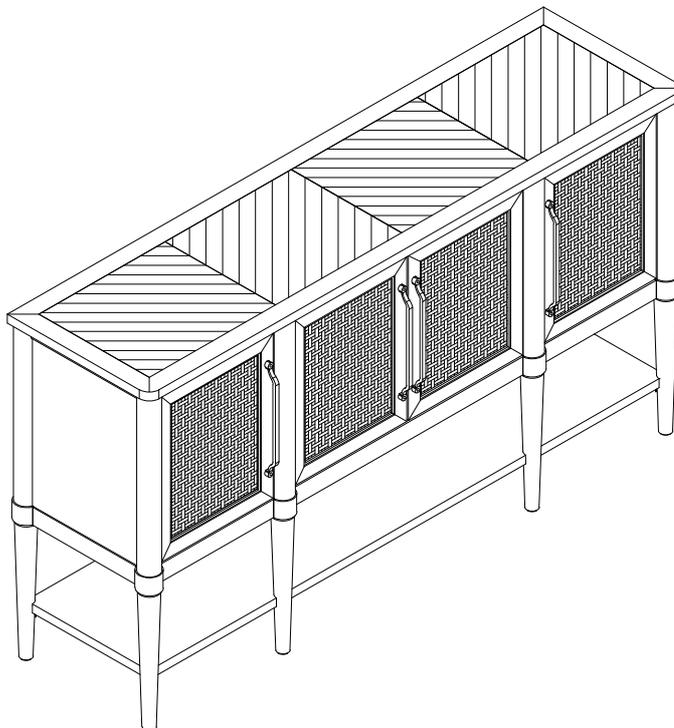

Hardware Pack Location(s):

BFGP 339-524N SIDE BOARD
SKU# 42903395

This product is manufactured by BFGP for

ROOMS TO GO ►

MADE IN VIETNAM

VERSIONS# 1 - 10/21/2023

1 OF 3

Assembly Instructions

BFGP 339-524N

SIDE BOARD


SKU# 42903395

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

STEP 1: Upside down Side board (1).

- 1.1: Attach Legs-front (2), Middle legs (3) to Side board (1) by using Bolt (A) with Allen Key (C).
- 1.2: Attach Shelf (4) to legs installed through metal bracket by using Bolt (B) with Allen Key (C).


NOTE: The metal bracket were pre-installed on the shelf.

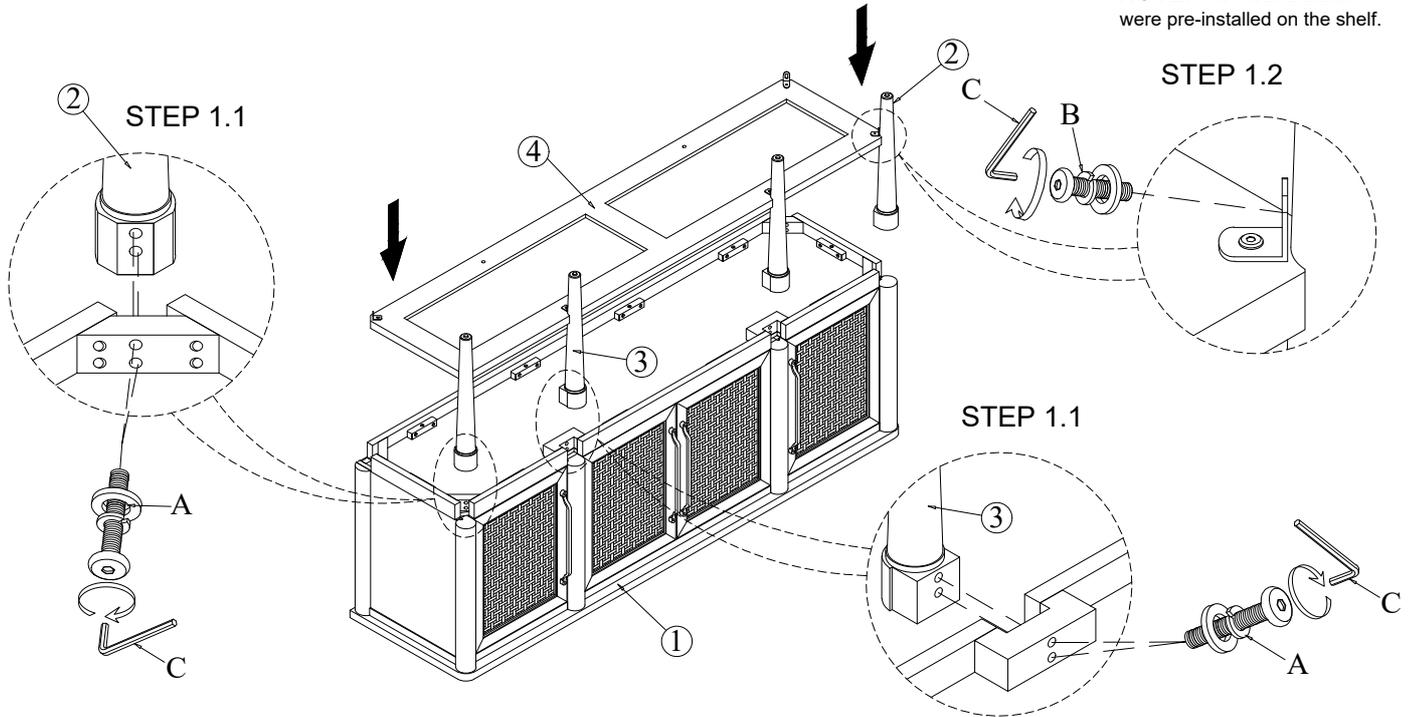

STEP 2:

- 2.1: Attach Legs-back (2) to Side board (1) by using Bolt (A) with Allen Key (C).
- 2.2: Attach Shelf (4) to legs installed through metal bracket by using Bolt (B) with Allen Key (C).
- 2.3: Assemble Support legs (5) to Shelf (4) as shown.

NOTE: The metal bracket were pre-installed on the shelf.

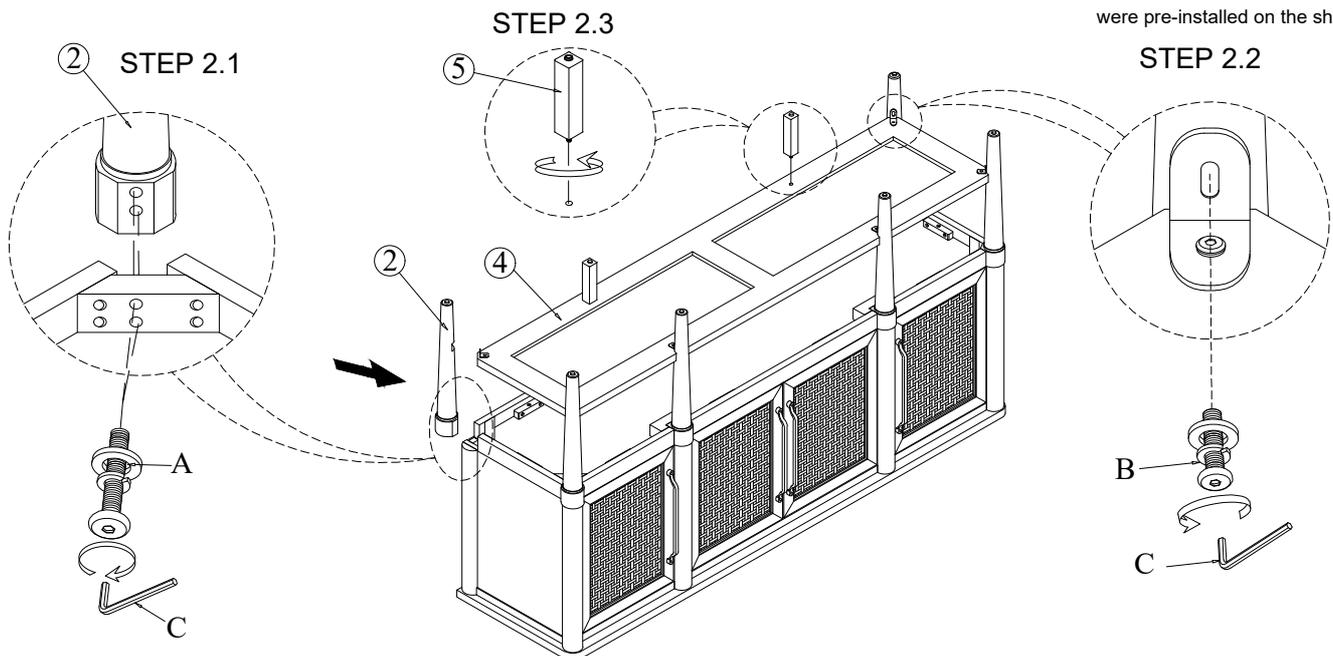

This product is manufactured by BFGP for

ROOMS TO GO

MADE IN VIETNAM

VERSIONS# 1 - 10/21/2023

2 OF 3

Assembly Instructions


BFGP 339-524N

SIDE BOARD

SKU# 42903395


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damage during the assembly.

STEP 3: Turn Side board to the upright position.

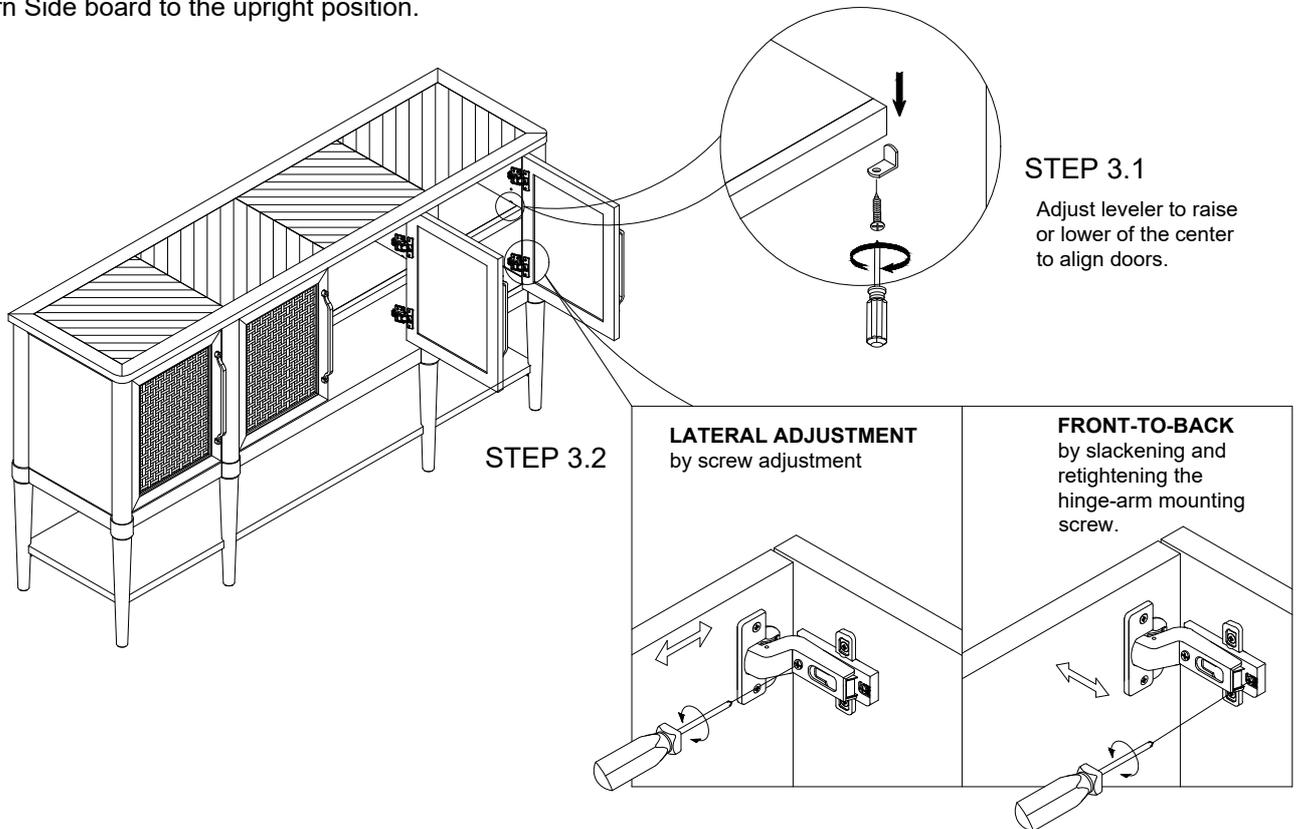

STEP 4: Move the Side board into final position and use tipping restraint attach to wall. Insert the screw (D) by using the screwdriver.

*Not included

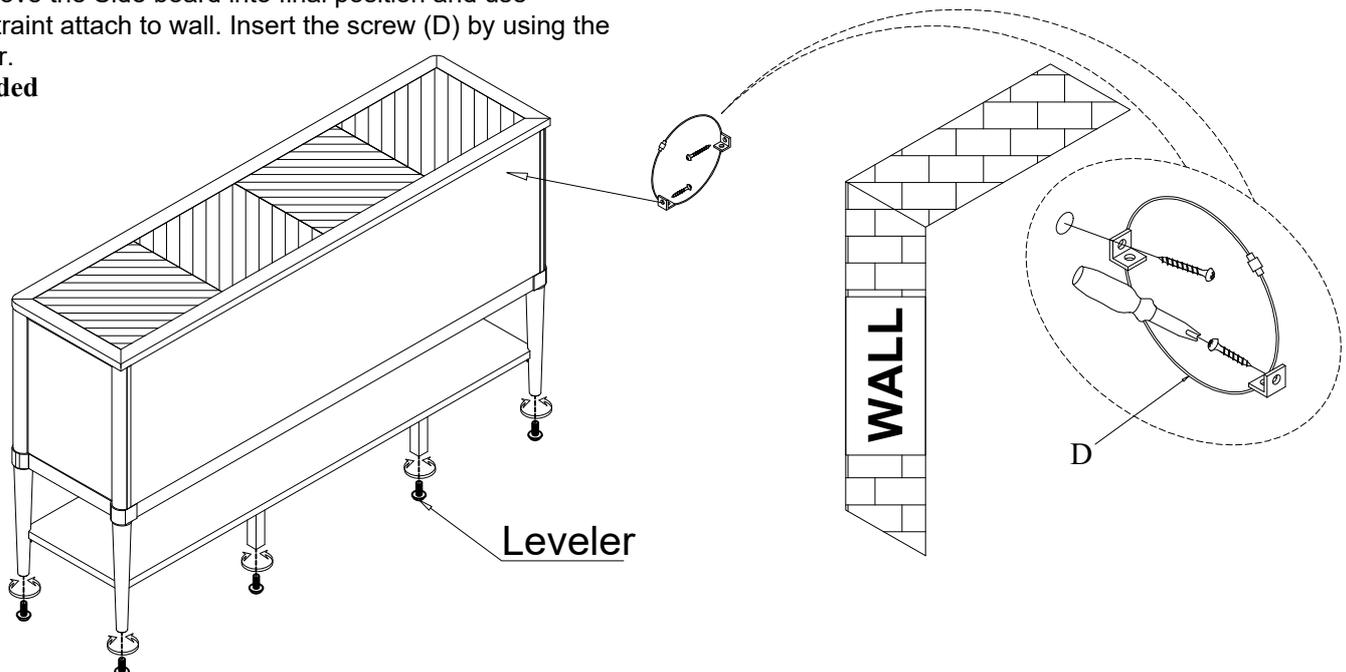

This product is manufactured by BFGP for

ROOMS TO GO

MADE IN VIETNAM

VERSIONS# 1 - 10/21/2023

3 OF 3